



GRL Platform Solutions

DP2.1 PHY CTS HBRx Sink MOI

[Note: In this MOI, the GRL-DP14-SINKAN Calibration and Test Software is used to automate the DisplayPort 2.1 PHY CTS HBRx Sink testing along with the Anritsu MP1900A BERT and Keysight/Tektronix scope.]

Published on 24 June 2026

DISCLAIMER

This document is provided "as is" with no warranties whatsoever, including any warranty of merchantability, no infringement, fitness for any particular purpose, or any warranty otherwise arising out of any proposal, specification, or sample. The GRL Platform Solutions disclaims all liability for infringement of proprietary rights, relating to use of information in this specification. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted herein.

All product names are trademarks, registered trademarks, or service marks of their respective owners.

In no event shall VESA™ or any member of VESA be liable for any direct, indirect, special, exemplary, punitive, or consequential damages, including, without limitation, lost profits, even if advised of the possibility of such damages.

This material is provided for reference only. VESA does not endorse any vendor's equipment including equipment outlined in this document.



Copyright © 2026 GRL Platform Solutions. All rights reserved.

TABLE OF CONTENTS

1	INTRODUCTION	9
2	RESOURCE REQUIREMENTS	10
2.1	EQUIPMENT REQUIREMENTS	10
3	GRL-DP14-SINKAN SOFTWARE SETUP	13
3.1	SETUP	13
3.1.1	Download GRL-DP14-SINKAN Software	13
3.1.2	Launch and Set Up GRL-DP14-SINKAN Software	13
3.2	CONFIGURING THE SOFTWARE BEFORE CALIBRATION AND TESTING	17
3.2.1	Session Info.....	17
3.2.2	Conditions for Testing and Calibration	17
3.2.3	Setup Configuration for Testing and Calibration	19
3.3	CALIBRATION/TEST SELECTION PAGE	25
3.4	CALIBRATION/TEST PARAMETERS CONFIGURATION PAGE	26
3.5	CALIBRATION TARGET CONFIGURATION PAGE.....	30
3.6	RUNNING CALIBRATION/TESTS	31
4	SINK CALIBRATION SETUPS	32
4.1	PRE-CALIBRATION/TEST PROCEDURES	32
4.2	CALIBRATION CONNECTION SETUPS.....	32
4.2.1	Calibration Setup at TP1	32
4.2.2	Calibration Steps at TP1.....	33
4.2.3	Calibration Setup at TP2/TP3.....	34
4.2.4	Calibration Steps at TP1, TP2 and TP3	35
4.3	SAVING CALIBRATED SIGNALS	37
5	SINK DUT COMPLIANCE TEST SETUPS	39
5.1	TEST CONNECTION SETUPS.....	39
5.1.1	DUT Jitter Tolerance Compliance Test Setup	39
5.1.2	Margin Testing.....	41
6	TEST RESULTS AND REPORTS USING GRL-DP14-SINKAN	43
6.1	TEST REPORT GENERATION	43
6.1.1	DUT Information	43
6.1.2	Summary Table.....	44
6.1.3	Test Results	44
6.1.4	Calibration Data Plots	44
6.1.5	Margin Test Plots.....	45
6.2	DELETING TEST REPORTS.....	45
7	SAVING AND LOADING TEST SESSIONS	46

8	APPENDIX A: MANUAL CTS SINK CALIBRATION AND TEST PROCEDURE	47
8.1	HBR3 SINK CALIBRATION/TEST SETUP	47
8.1.1	Calibration Setup and Procedure (at TP1)	47
8.1.2	Calibration Setup and Procedure (at TP3).....	50
8.1.3	DUT Test Setup and Procedure (at TP3).....	52
8.1.4	Calibration Procedure at TP2	53
8.2	HBR2, HBR, AND RBR SINK CALIBRATION/TEST SETUP	54
8.2.1	Calibration Setup and Procedure	54
8.2.2	DUT Test Setup and Procedure	74
9	APPENDIX B: CONNECTING KEYSIGHT OSCILLOSCOPE TO PC	77
10	APPENDIX C: ARTEK CLE1000-A2 INSTALLATION	79
10.1	INSTALL ISI GENERATOR DRIVER	79
10.2	INSTALL CLE1000 GUI	81
11	APPENDIX D: AUX CONTROLLER DRIVER INSTALLATION	82
11.1	INSTALL UNIGRAF DRIVER.....	82

List of Figures

Figure 1. Turn on Miscellaneous System	14
Figure 2. Select and Launch GRL Platform Solutions Framework	14
Figure 3. Start DisplayPort 2.1 PHY HBRx Sink Application	14
Figure 4. See License Details.....	15
Figure 5. Check License for Installed Application	15
Figure 6. Connect Instruments with GRL Platform Solutions Software.....	16
Figure 7. Session Info Page	17
Figure 8. Select Lane Under Tests.....	17
Figure 9. Compliance Test Conditions	18
Figure 10. Select Test Points.....	18
Figure 10. Select SSC Condition	18
Figure 11. Select Data Rates	19
Figure 12. Select SJ Frequencies	19
Figure 13. Select Test Mode	19
Figure 14. Select Aux Controller.....	20
Figure 15. UCD323 DP Source Console— #1.....	20
Figure 16. UCD323 DP Source Console— #2	21
Figure 17. UCD323 DP Source Console— #3	21
Figure 18. Detect Unigraf UCD-323 Aux Controller in Control PC.....	22
Figure 19. Open License Manager.....	22
Figure 20. UCD License Screen	23
Figure 21. Install DisplayPort Reference Source License.....	23
Figure 22. Select ISI Generator	24
Figure 23. Configure Test Settings.....	24
Figure 24. Configure Margin Test Parameters	24
Figure 25. Calibration Selection	25
Figure 26. Tests Selection	25
Figure 27. Parameters Configuration Page	26
Figure 28. Calibration Overwrite	30
Figure 29. Run Tests Page	31
Figure 30. Typical TP1 Sink Calibration Setup	32
Figure 31. Typical TP2/TP3 Sink Calibration Setup	34
Figure 32. Saved Calibration File Example	37
Figure 33. Calibration.cal File Example.....	38
Figure 34. Compliance Test Setup for DP Sink DUT Jitter Tolerance.....	39
Figure 35. Sink Test Pre-Verification Selection.....	40
Figure 36. Sink Compliance Test Selection.....	40
Figure 37. Test Parameters for BER Measurement.....	41
Figure 38. Margin Test Configuration	41

Figure 39. Sink Margin Test Selection.....	42
Figure 40. Generate Report Page	43
Figure 41. DUT Information.....	43
Figure 42. Summary Table	44
Figure 43. Compliance Test Results Page	44
Figure 44. Calibration Results Page.....	44
Figure 45. Margin Test Results Page	45
Figure 46. Test Report Deleted	45
Figure 47. Saving And Loading Calibration And Test Sessions.....	46
Figure 48. HBR3 Conceptual Setup for TP1 Calibration	47
Figure 49. HBR3 Conceptual Setup for TP3 Calibration	50
Figure 50. HBR3 Conceptual Setup for TP3 DUT Test	52
Figure 51. Conceptual Calibration Setup at TP1	54
Figure 52. Conceptual Calibration Setup at TP3/TP3_EQ (Standard Connection).....	55
Figure 53. turn on external jitter input(“ext”).....	56
Figure 54. Initial Jitter Setup.....	57
Figure 55. MP1900A 1100.txt Pattern.....	57
Figure 56. MP1900A RJ Adjustment.....	58
Figure 57. HBR3 RJ Measurement Example On Keysight Scope	59
Figure 58. HBR2 RJ Measurement Example on Tektronix Scope.....	59
Figure 59. MP1900A SJ_{FIXED} Setting for HBR3 and HBR2.....	60
Figure 60. DSG815 SJ_{FIXED} Adjustment Example for HBR3 and HBR2	60
Figure 61. HBR3 SJ_{FIXED} Measurement Example on Keysight Scope (Not Showing Target 80mUI).....	61
Figure 62. HBR2 SJ_{FIXED} Measurement Example on Tektronix Scope (Not Showing Target 80mUI).....	62
Figure 63. Jitter Component Settings from CTS.....	63
Figure 64. MP1900A SJ_{Sweep} Adjustment.....	63
Figure 65. HBR3 SJ_{Sweep} Measurement Example On Keysight Scope	64
Figure 66. HBR2 SJ_{Sweep} Measurement Example on Tektronix Scope.....	64
Figure 67. MP1900A HBR3 ISI Setup Example.....	66
Figure 68. HBR3 ISI Measurement Example on Keysight Scope	67
Figure 69. HBR2 ISI Measurement Example on Tektronix Scope.....	67
Figure 70. HBR3 Compliance Eye Pattern Setup Example	68
Figure 71. All Stresses Enabled except Crosstalk for HBR3.....	69
Figure 72. HBR3 Eye Height Adjustment Example	70
Figure 73. HBR3 Eye Height Measurement Example on Keysight Scope	71
Figure 74. HBR2 Eye Height Measurement Example on Tektronix Scope	71
Figure 75. Crosstalk pattern setting.....	72
Figure 76. HBR3 Eye Height Measurement with Crosstalk Adjustment.....	73
Figure 77. HBR3 Crosstalk Measurement on Keysight Scope	73

Figure 78. HBR2 Crosstalk Measurement on Tektronix Scope	74
Figure 79. Typical DUT Test Setup	75
Figure 80. Table of Test Times For Each Link Rate Per CTS	76
Figure 81. Keysight Connection Expert.....	77
Figure 82. Oscilloscope's VISA Address.....	77
Figure 83. Device Manager Window	79
Figure 84. Update Driver Window	80
Figure 85. Windows Security Window And Confirmation Window	80
Figure 86. Device Manager Window After Installation	80
Figure 87. CLE1000 GUI.....	81
Figure 88. Device Manager Window.....	82
Figure 89. Installation Dialog.....	83
Figure 90. DPT-200 Installation Completed	83

List of Tables

Table 1. Equipment Requirements – Systems.....	10
Table 2. Equipment Requirements – Accessories.....	11
Table 3. Calibration/Test Parameters Description.....	27

1 Introduction

[Note:

For HBRx (originally the DP1.4)

HBRx stands for HBR3(8.1G bps), HBR2(5.4G bps), HBR(2.7G bps), RBR(1.62G bps)]

This User Guide & MOI describes the step-by-step calibration and procedures to perform DisplayPort 2.1 PHY CTS HBRx Sink tests of the VESA DisplayPort Logo Compliance Program using the Anritsu MP1900A BERT and Keysight DSO V Series Real-Time Oscilloscopes or Tektronix DPO/MSO70000 Series Real-Time Oscilloscopes in conformance with the DisplayPort 2.1 PHY Compliance Test Specification (CTS). Sink tests are required to qualify a Sink product or silicon building block for Logo certification and listing on the DP Integrators List.

This User Guide & MOI also explains how to set up and use the GRL-DP14-SINKAN software to automate receiver calibration and compliance testing for DisplayPort 2.1 PHY CTS HBRx Sink conformance. The GRL-DP14-SINKAN software is used with the Anritsu MP1900A BERT for testing DisplayPort HBRx Sink receivers per the Jitter Tolerance requirements of the DisplayPort PHY CTS and DisplayPort over USB Type-C CTS respectively.

The GRL-DP14-SINKAN software automates stressed signal calibration and jitter tolerance testing at the following DisplayPort data rates– RBR (1.62 Gb/s), HBR (2.7 Gb/s), HBR2 (5.4 Gb/s), HBR3 (8.1 Gb/s) and supports USB Type-C and standard DisplayPort sink device-under-tests (DUT's). The GRL Platform Solutions software also supports variable ISI generation through the Artek CLE1000-A2 which enables calibration to be performed with minimum reconfiguration of the setup, allowing measurements to be more fully automated. For link training, compliance, and margin testing through DPCD registers, the software provides automation control using the Tektronix DP-AUX or Unigraf DPT-200 AUX controller for standard DisplayPort connectors and the GRL-USB-PD-C2-EPR USB Type-C Power Delivery Tester for USB Type-C connectors.

The following are the main topics covered by this User Guide & MOI:

1. Equipment required for calibration and testing.
2. GRL-DP14-SINKAN software setup for calibration and test automation.
3. Manual DisplayPort 2.1 PHY CTS HBRx Sink calibration and test methodology.

The MOI reduces the CTS test description to practice using the specified test equipment and procedures in an effort to standardize testing across ATC's and equipment manufacturers who perform their own certification measurements.

2 Resource Requirements

2.1 Equipment Requirements

TABLE 1. EQUIPMENT REQUIREMENTS – SYSTEMS

System	Qty.	Description	Key Specification Requirement
GRL-DP14-SINKAN	1	GRL Platform Solutions DisplayPort 2.1 PHY CTS HBRx Sink Compliance Calibration & Test Automation Software for the Anritsu MP1900A BERT – www.grlps.com – with Node Locked License to single Oscilloscope/PC OS	
Anritsu MP1900A BERT	1	MP1900A Signal Quality Analyzer, with following modules: - MU181000A/B 12.5 GHz Synthesizer - MU181500B Jitter Modulation Source - MU195020A 21G/32G bit/s SI Pulse Pattern Generator - MU195050A Noise Generator	- Option STR for stress generation - Proper test patterns ^[a]
Real-time Oscilloscope ^[b]	1	Keysight (InfiniiSim / EZ-JIT / Serial Data Analysis / Serial Data Equalization) Oscilloscope Or Tektronix DPO/MSO70000DX or 70000SX Series Oscilloscope with DPOJET (Jitter and Eye Analysis) software	≥ 13 GHz bandwidth (for HBR2 and below) > 16 GHz (for HBR3)
ISI Generator	1	Artek CLE1000-A2 ^[c]	For variable ISI generation
VISA (Virtual Instrument Software Architecture) API Software	1	VISA Software is required to be installed on the host PC running GRL-DP14-SINKAN software. GRL Platform Solutions' software framework has been tested to work with all three versions of VISA available on the Market: 1. NI-VISA: http://www.ni.com/download/ni-visa-17.0/6646/en/ 2. Keysight IO Libraries: www.keysight.com (Search on IO Libraries) 3. Tektronix TekVISA: www.tek.com (Downloads > Software > TekVisa)	
AUX Controller ^[d]	1	Unigraf DPT-200 or UCD-323	For link training and error detection
Computer	1	Laptop or desktop PC	For external automation control

^[a] MP1900A DisplayPort patterns are distributed with GRL-DP14-SINKAN software and are installed during installation process.

^[b] Infiniium / DPOJET setup files and SDLA filters are distributed with the GRL-DP14-SINKAN software and are installed during installation process.

^[c] If using the ARTEK CLE1000-A2 as the ISI generator, its USB driver software must be installed on the PC being used for testing and the ARTEK CLE1000-A2 must be connected to the PC via USB. The driver is available from the manufacturer. Refer to Appendix for the driver installation procedure.

^[d] The USB driver software for the AUX Controller being used must be installed on the PC being used for testing, and the AUX controller must be connected to the PC via USB. The driver for the AUX controller is available from the AUX controller manufacturer. Refer to Appendix for driver installation information for Unigraf AUX controllers.

TABLE 2. EQUIPMENT REQUIREMENTS – ACCESSORIES

Accessory	Qty.	Description	Key Specification Requirement
VESA-Approved DisplayPort Mated Adapter Fixture Pair	1	Standard DP, mDP, or USB Type-C plug-receptacle mated pair adapter (Wilder-Tech, LS-ICT) – <i>DUT connector type dependent</i>	Meets DP2.1 PHY CTS HBRx electrical requirements
SMA Torque Wrench	1	8 in-lb SMA	
DC Block	2	Anritsu K261 Precision DC Block or Weinchel Aeroflex Model 7006-1 20 GHz DC Block or equivalent	
TTC (Transition Time Converter)	2	For Data signals (TTC): HYPERLABS Model # HL9452-60 or equivalent	60 ps rise time, 5.83 GHz (10-90%)
	2	For Crosstalk signals: HYPERLABS Model # HL9452-150 or equivalent	150 ps rise time, 2.33 GHz (10-90%)
÷4 RF Splitter or ÷3 RF Splitter	2	Anritsu AN44182A 4-Way Power Divider or JFW Model 50PD-292 or equivalent	
SMA-Female to SMA-Female Adapter	4		
LAN Switch	1	Optional ^[a]	
LAN Cable	1 or 3	For Oscilloscope and MP1900A BERT ^[a]	
300 MHz Vector Signal Generator	1	As external SJ Fixed source (Rigol DSG815 recommended)	
RF Signal Generator	1	As external crosstalk source (Rigol DSG3000B Series recommended)	
6 dB Attenuator	1	For Vector Signal Generator to protect External Jitter Input (Anritsu 41KB-6 recommended if connector type is SMA)	Max 2 V
SMA-to-SMA Cable	1	Anritsu J1625A or equivalent	
Skew Matched Pair Cable	6 pairs	Anritsu J1550A 80 cm skew matched pair cable or equivalent	
N-SMA Adapter	1	Anritsu J1398A or equivalent	
50 Ohm SMA Terminator	15		

^[a] If the Scope OS is used for automation, one LAN cable can be connected directly from the Scope to the MP1900A BERT. If an external PC is used, two LAN cables will be required to connect to the network. (These cables are not shown in the connection diagrams in this document.)

3 GRL-DP14-SINKAN Software Setup

3.1 Setup

This section provides procedures for installing, configuring and verifying the operation of the GRL-DP14-SINKAN automation software. It also helps you familiarize yourself with the basic operation of the application.

The software installer automatically creates shortcuts in the Desktop and Start Menu.

To open the application, follow the procedure in the following section.

3.1.1 Download GRL-DP14-SINKAN Software

Download and install the GRL-DP14-SINKAN software on a PC or an oscilloscope (where GRL-DP14-SINKAN software is referred to as ‘Controller PC’ or ‘Scope’ respectively in this User Guide & MOI):

1. Install VISA (Virtual Instrument Software Architecture) on to the PC/Scope where GRL-DP14-SINKAN is to be used (see Section 2.1).
2. Download the **DPSinkTest14VX.XX.XX.zip** package from GRL Platform Solutions support site.
3. The ZIP file contains:
 - a) **DPSink14PatternFilesInstallation00xxxxxxxSetup.exe** – Run this on the MP1900A BERT to install the DisplayPort 2.1 HBRx test pattern setup files. This will place the DisplayPort Configuration and Pattern files on the MP1900A BERT in the ‘C:\Configurations\Anritsu DisplayPort Sink Test 1.4’ directory hierarchy.
 - b) **DPSinkTest14Application14xxxxxxxSetup.exe** – Run this on the Controller PC or Oscilloscope to install the GRL-DP14-SINKAN application. This application will create the ‘C:\GRL\Rx Test Solution\Applications\DPSinkTest14_AN’ directory hierarchy.
 - c) **DPSinkTest14ScopeSetupFilesInstallation00xxxxxxxSetup.exe** – Run this on the Oscilloscope to install the Infiniium setup files. This will place the DisplayPort Setup and Filter folders in the ‘C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4’ of the Keysight Scope or C:\TekApplications\DPOJET of the Tektronix Scope directory hierarchy.

3.1.2 Launch and Set Up GRL-DP14-SINKAN Software

3.1.2.1 On the MP1900A BERT

1. Launch the Signal Quality Analyzer-R Control Software.
2. Select the “Expert BERT” button to turn on the Miscellaneous System. This will allow you to remotely control the MP1900A BERT.

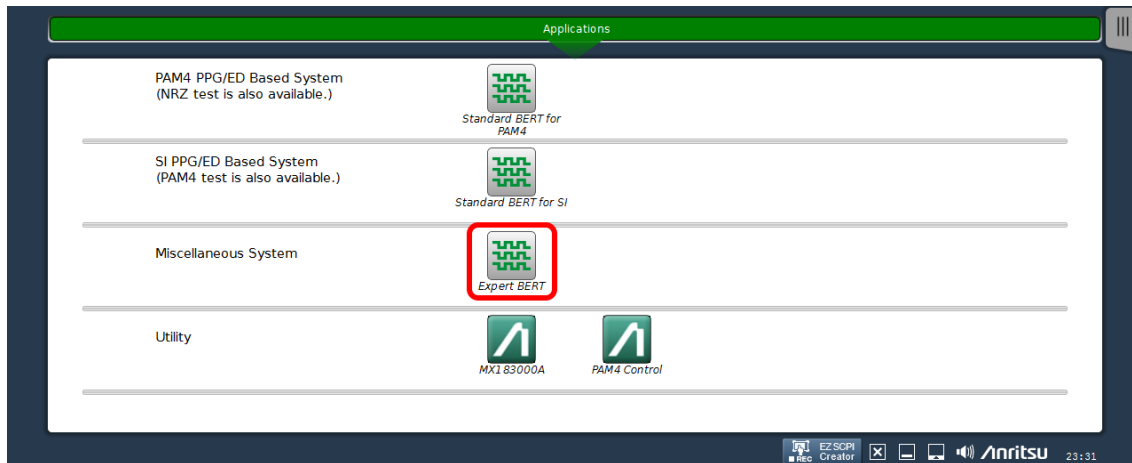


FIGURE 1. TURN ON MISCELLANEOUS SYSTEM

- Note the IP Address as it will be used to connect the MP1900A BERT with the GRL-DP14-SINKAN software.

3.1.2.2 On the PC Used for GRL Platform Solutions Framework Installation

- Open the GRL folder from the Windows Start menu. Click on **GRL – Automated Test Solutions** within the GRL folder to launch the GRL Platform Solutions software framework.

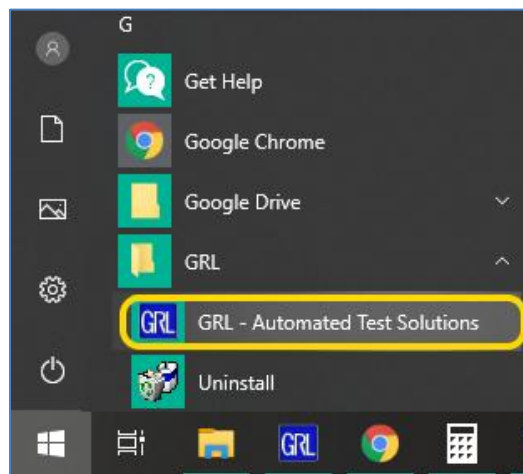


FIGURE 2. SELECT AND LAUNCH GRL PLATFORM SOLUTIONS FRAMEWORK

- From the Application → Rx Test Solution drop-down menu, select 'Anritsu DisplayPort Sink Test 1.4' to start the application. If the selection is grayed out, it means that your license has expired.

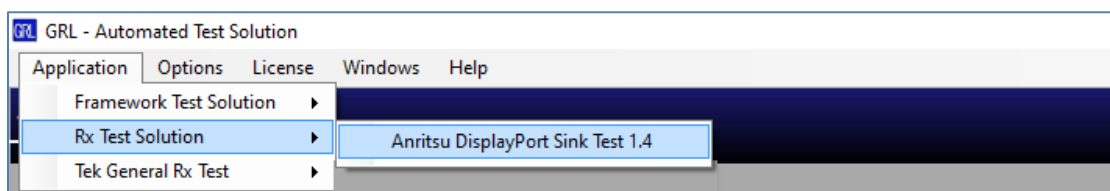


FIGURE 3. START DISPLAYPORT 2.1 PHY HBRX SINK APPLICATION

3. To enable license, go to License → License Info.

 


FIGURE 4. SEE LICENSE DETAILS

a) Check the license status for the installed application.

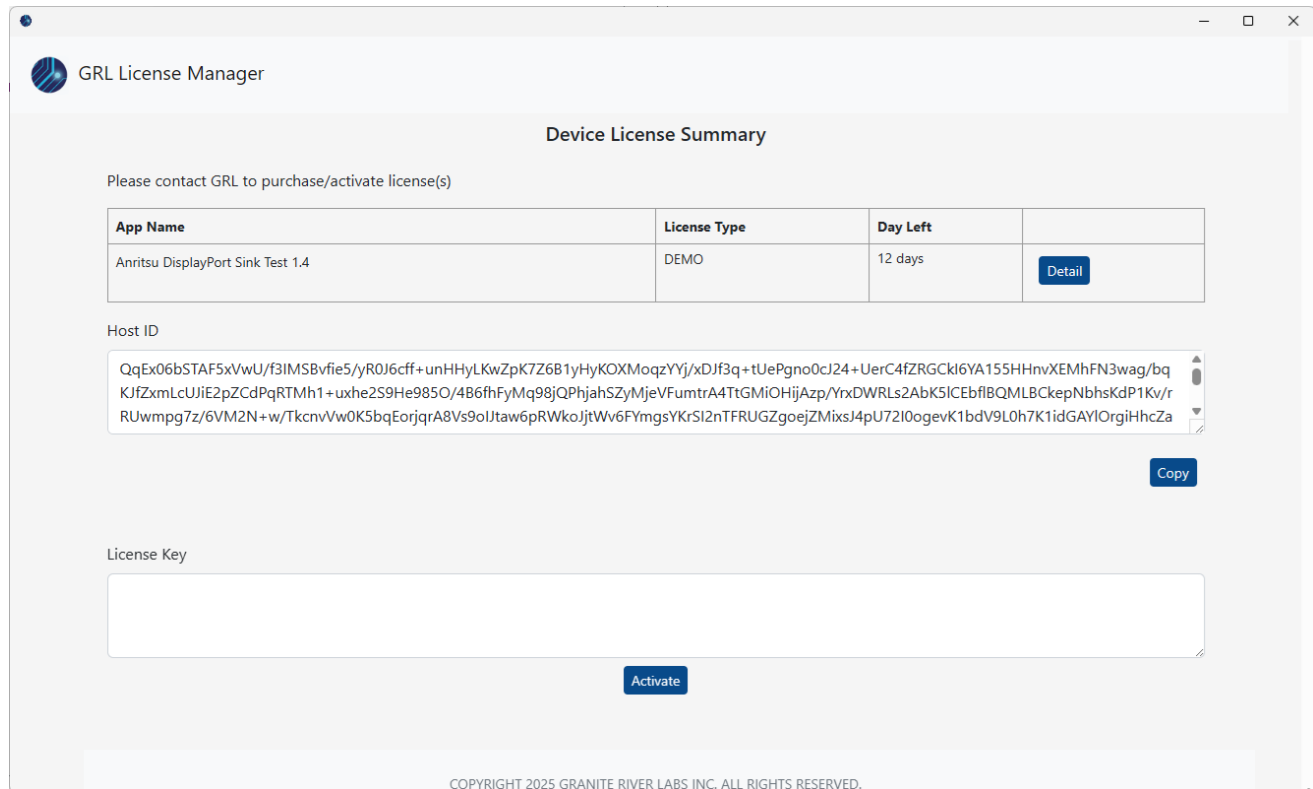


FIGURE 5. CHECK LICENSE FOR INSTALLED APPLICATION

4. Activate License:

- If you have an Activation Key, enter it in the **License Key** field provided and select **Activate**. The installed application is ready for use upon successful activation.
- If you do not have an Activation Key, close the above window to use a demo version of the application over a free 12-day trial period.

Note: Once the 12-day trial period ends, you will need to request an Activation Key to continue using the application on the same computer by contacting support@grlps.com.

5. Select the Equipment Setup icon  on the DisplayPort HBRx Sink Test 2.1 Application menu.
4. Connect the Anritsu MP1900A BERT via LAN to the GRL Platform Solutions automation control enabled Scope or PC. Enter the MP1900A IP address and Port number to match what is shown in the MP1900A *Remote Client* window in Section 3.1.2.1. For example, the BERT can be connected using a connection string in the following format: "TCPIP0::192.168.0.14::5001::SOCKET" or "192.168.0.14:5001". *Note the IP address*

listed is only an example and should be changed according to the actual network connection being used.

6. On the Scope or controller PC, obtain the network addresses for all the connected instruments from the device settings. Note these addresses as they will be used to connect the instruments to the GRL Platform Solutions automation software.

(Note: The Scope IP address can be obtained, if not known, by typing CMD → IPCONFIG on the Scope and observe the IP address listed. If the GRL Platform Solutions software is installed on the **Tektronix Scope**, ensure the Scope is connected via GPIB and type in the GPIB network address, for example “GPIB8::1::INSTR”.) If the GRL Platform Solutions software is installed on the PC to control the Scope, type in the Scope IP address, for example “TCPIP0::192.168.0.110::inst0::INSTR”. Note to **omit** the Port number from the address.)

7. Enter the COM address of the ISI Generator to be used.

8. Then select the “lightning” button () for each connected instrument.

The “lightning” button should turn green () once the GRL Platform Solutions software has successfully established connection with each instrument.

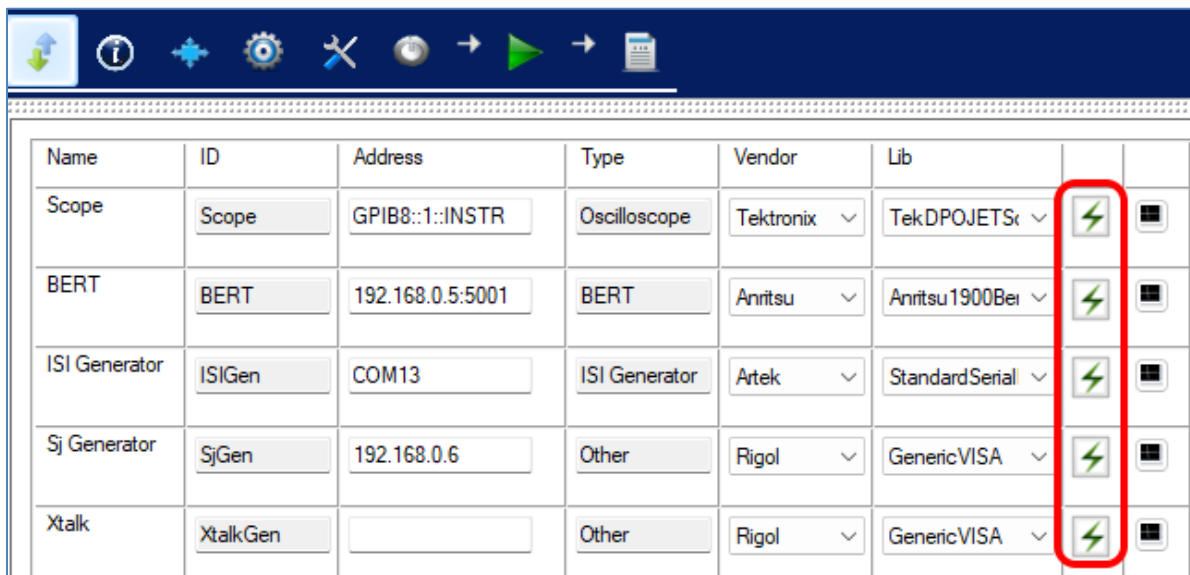


FIGURE 6. CONNECT INSTRUMENTS WITH GRL PLATFORM SOLUTIONS SOFTWARE

Additional notes:

- Further information for connecting the Keysight and Tektronix oscilloscopes to the PC is provided in the Appendix of this document.
- The USB driver software for the Artek ISI Generator must be installed on the PC being used for testing, and the ISI generator must be connected to the PC via USB. The driver for the ISI generator is available from the ISI generator manufacturer. Refer to Appendix for the driver installation information.

3.2 Configuring the Software Before Calibration and Testing

3.2.1 Session Info

Select  from the menu to access the **Session Info** page. Enter the information as required for the test session that is currently being run. The information provided will be included in the test report generated by the software once tests are completed.

- The fields under **DUT Info** and **Test Info** are defined by the user.
- The **Software Info** field is automatically populated by the software.

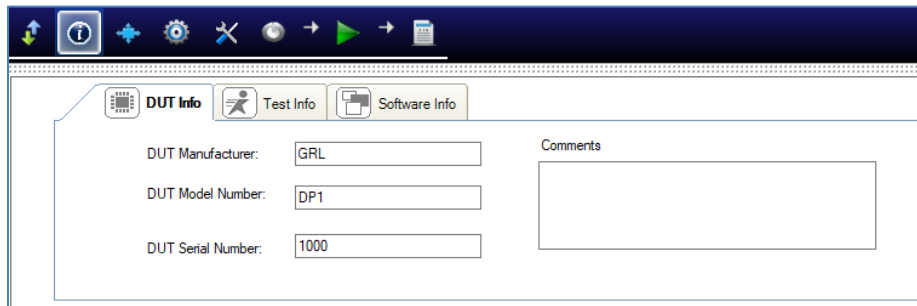


FIGURE 7. SESSION INFO PAGE

3.2.2 Conditions for Testing and Calibration

Select  from the menu to access the **Conditions** page to set the conditions for calibration and testing.

When calibrating, the application will calibrate for the selected Lanes, Test Points, Data Rates and Frequencies. The application will perform testing at these selected Lanes, Test Points, SSC Capabilities, Data Rates and Frequencies.

Recommended procedure:

- **Step 1:** When calibrating, select the desired conditions and perform the calibration tests.
- **Step 2:** When ready for testing, re-select the desired test conditions. For example, if required to test only one Lane at one Frequency for the RBR Data Rate, then select the appropriate conditions for testing.

a) **Lane tab:** Select the desired Lanes for calibration or testing.

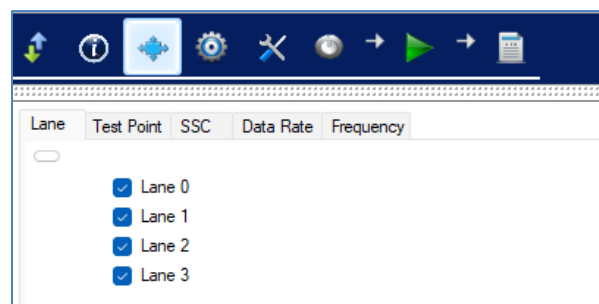


FIGURE 8. SELECT LANE UNDER TESTS

b) **Test Point tab:** Select the test points for calibration and testing.

Note:

- ‘TP2 CTLE Long’ and ‘TP2 CTLE Short’ represent the TP2_CTLE test points for Long and Short Channel measurements of the HBR3 Tethered cable respectively.
- For the DP Sink Device, select only the TP3 test point for the RBR, HBR and HBR2 data rates. For the HBR3 data rate, select the TP3, TP2 and TP2 CTLE Short test points.
- For the Tethered Device, select the TP2, TP2 CTLE Long and TP2 CTLE Short test points.

The following flowchart provides a clearer view of the test conditions:

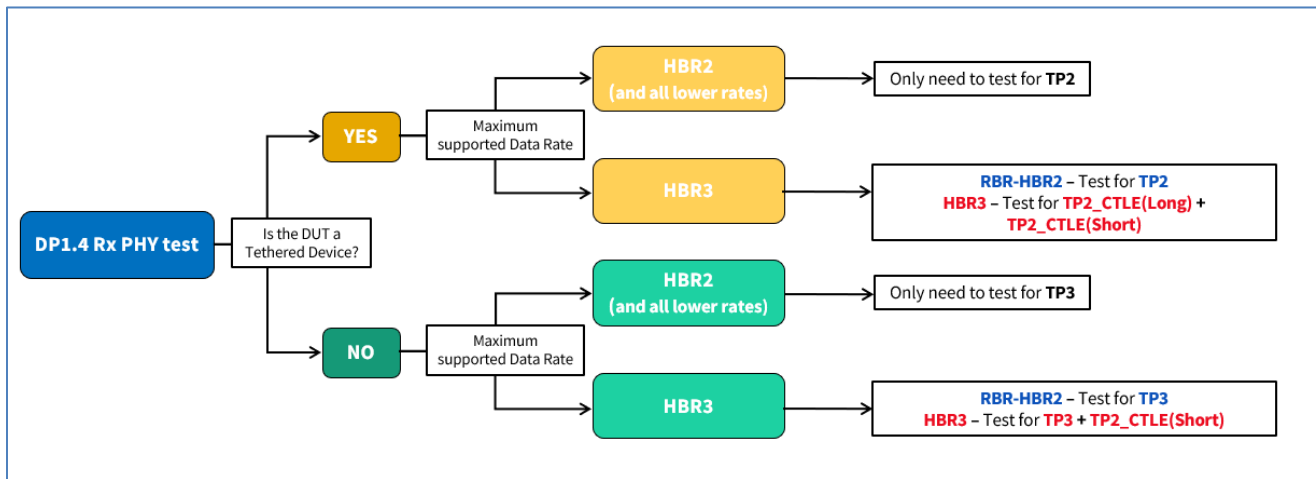


FIGURE 9. COMPLIANCE TEST CONDITIONS

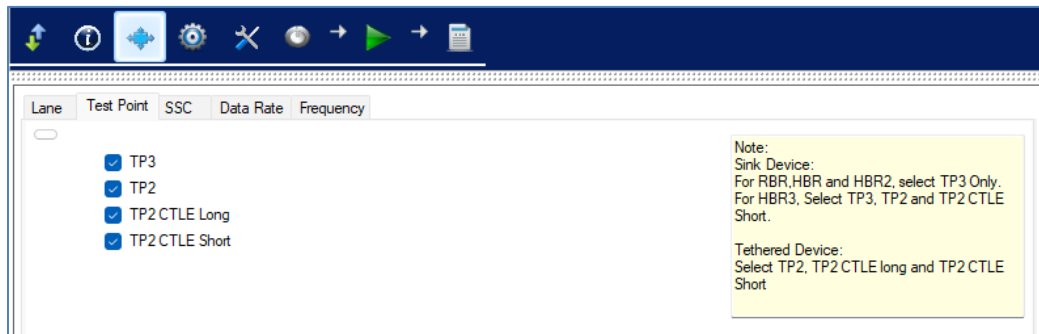


FIGURE 10. SELECT TEST POINTS

c) **SSC tab:** Select to enable or disable SSC Capability supported by the DUT for testing.

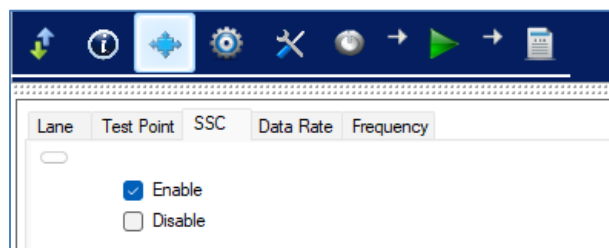


FIGURE 11. SELECT SSC CONDITION

d) **Data Rate tab:** Select the desired data rates for calibration or testing.

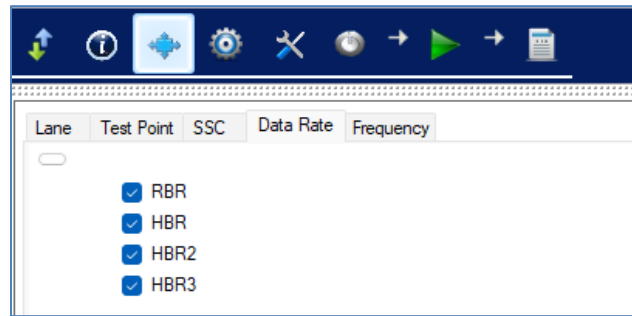


FIGURE 12. SELECT DATA RATES

e) **Frequency tab:** Select the desired SJ frequencies for calibration or testing.

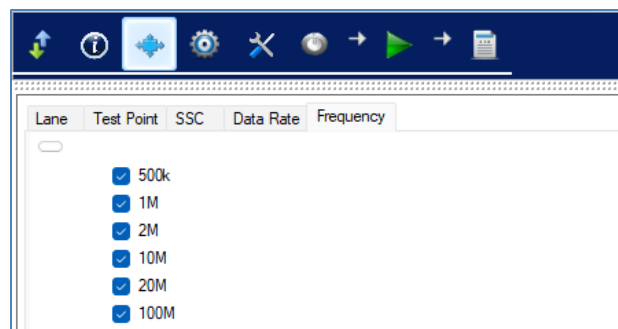


FIGURE 13. SELECT SJ FREQUENCIES

3.2.3 Setup Configuration for Testing and Calibration

Select  from the menu to access the Setup Configuration page to configure the necessary settings prior to running tests or calibration.

3.2.3.1 Test Mode Tab

Select to apply the Standard DisplayPort or 2+2 Alternate Mode test mode for calibration or testing.

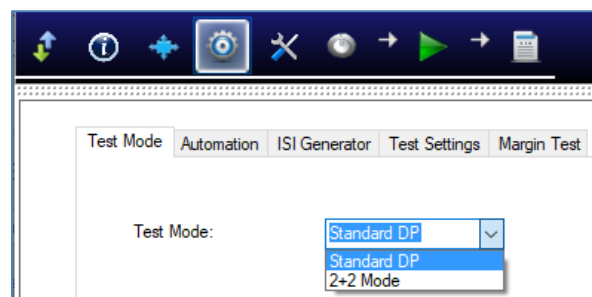


FIGURE 14. SELECT TEST MODE

3.2.3.2 Automation Tab

Select to use the Tektronix DP Aux Controller or Unigraf DPT-200 / UCD-323 Aux Controller in the calibration or test setup. Select 'None' if not using an Aux Controller. Then enter the COM port number of the connected Aux controller.

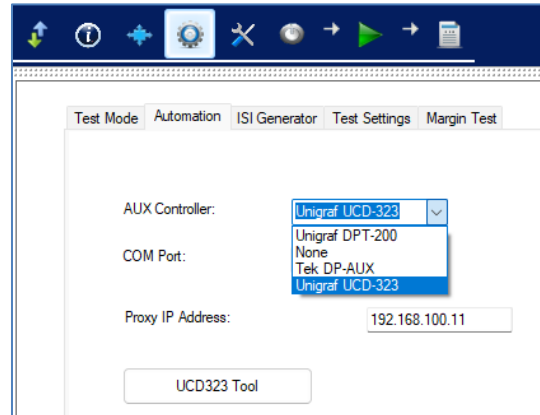


FIGURE 15. SELECT AUX CONTROLLER

If the Unigraf UCD-323 Aux Controller is selected, the GRL-DP14-SINKAN software allows the user to perform data read/write operations via the 'UCD323 DP Source Console'. *Note: This feature is available only after successful initialization and connection to the Unigraf UCD-323 Aux Controller.*

Connect the Unigraf UCD-323 AUX controller to the target equipment (such as the Anritsu MP1900A BERT) via USB. The equipment must have its proxy server enabled, and the equipment's IP address should be entered in the "Proxy IP Address" field on the Setup Configuration page. Then click on the "UCD323 Tool" button. The IP address will be automatically populated in the UCD323 DP Source Console as shown in the example below:

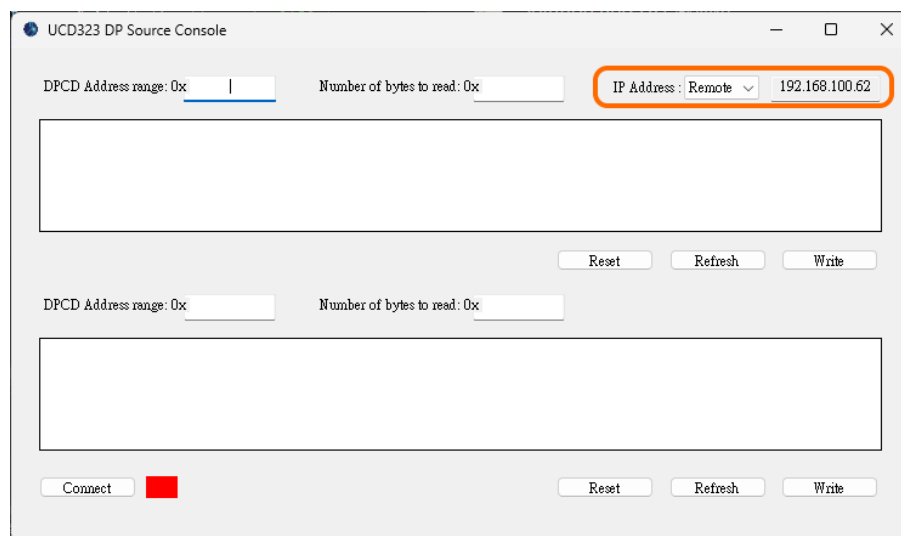


FIGURE 16. UCD323 DP SOURCE CONSOLE— #1

If initialization and connection to the Unigraf UCD-323 Aux Controller have not been performed, the "Connect" button will appear red. The button will turn green once

initialization is complete and the connection to the Unigraf UCD-323 Aux Controller is established as shown below:

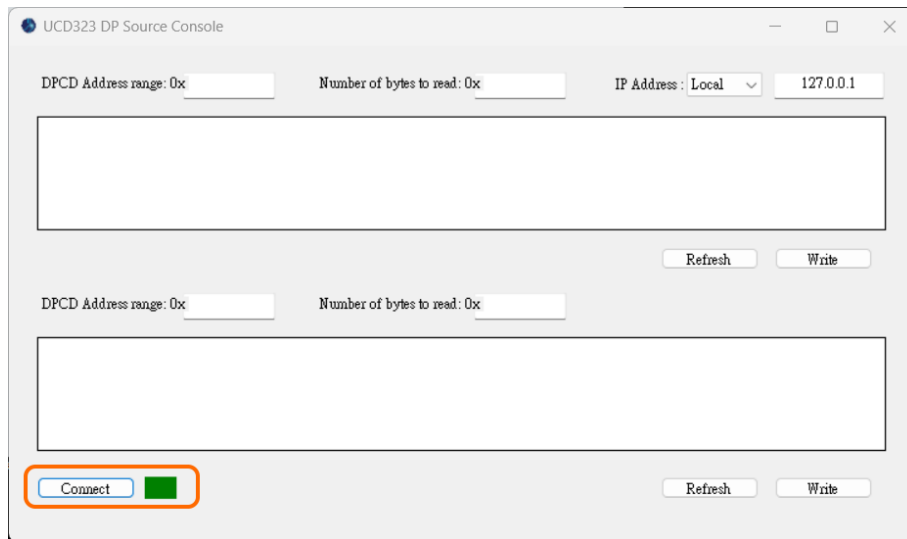


FIGURE 17. UCD323 DP SOURCE CONSOLE— #2

The “IP Address” field can be set to either “Local” or “Remote”. When Local mode is selected, the “IP Address” field will automatically populate with “127.0.0.1”.

To perform manual data read operations, enter the starting address and the number of bytes to read. Click on the “Refresh” button for the application to retrieve the data from the specified address range and display the corresponding values.

Click on the “Write” button for the application to write the specified values into the corresponding byte locations. See example below:

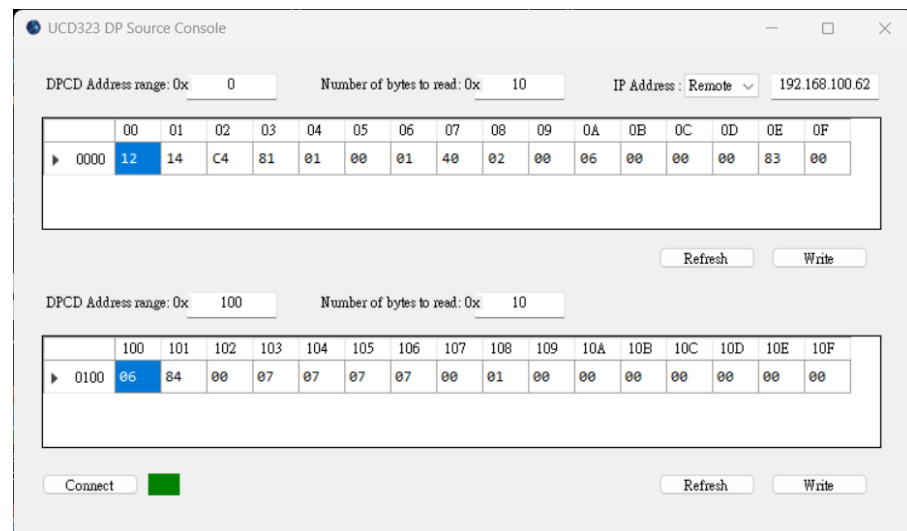


FIGURE 18. UCD323 DP SOURCE CONSOLE— #3

Note:

When the control PC detects the Unigraf UCD-323 Aux Controller, it should appear in the “Devices” list as shown in the example below. If it does not show up, select “Rescan” to search again.

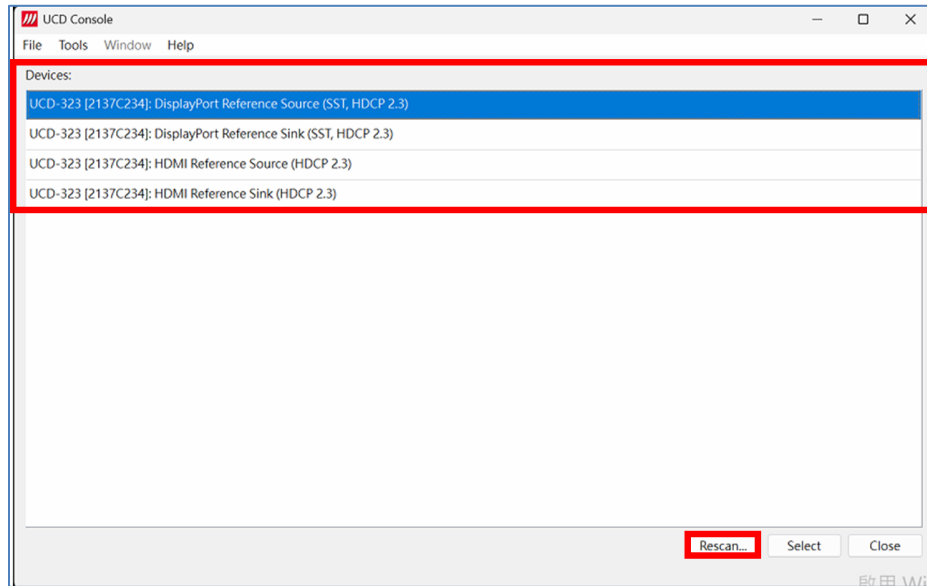


FIGURE 19. DETECT UNIGRAF UCD-323 AUX CONTROLLER IN CONTROL PC

To verify whether the Unigraf UCD-323 Aux Controller has the required license installed, follow these steps:

1. Open “License Manager” and go to “UCD License”.

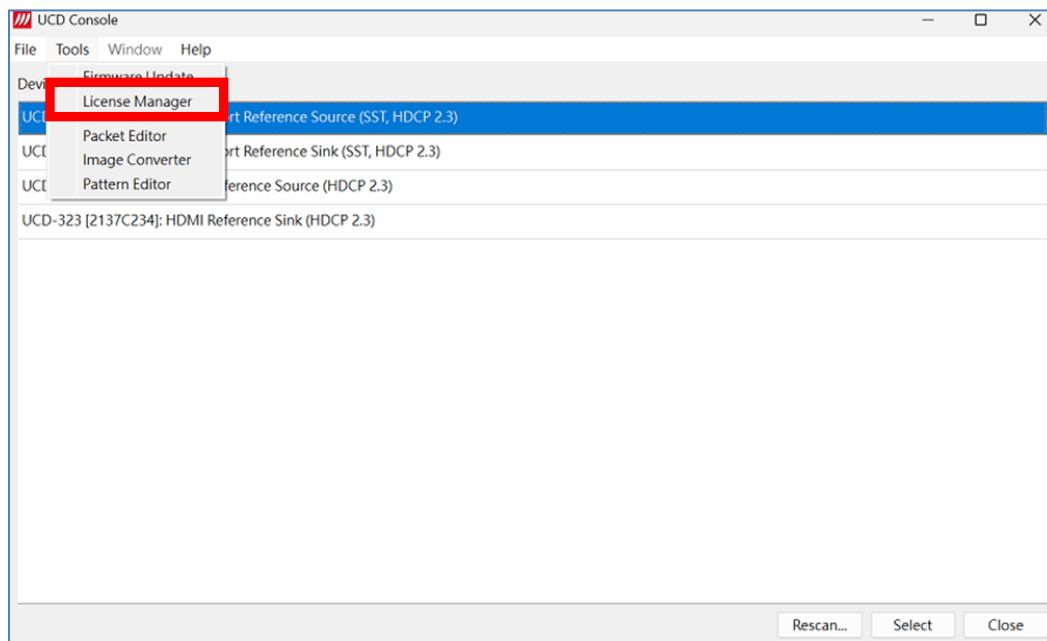


FIGURE 20. OPEN LICENSE MANAGER

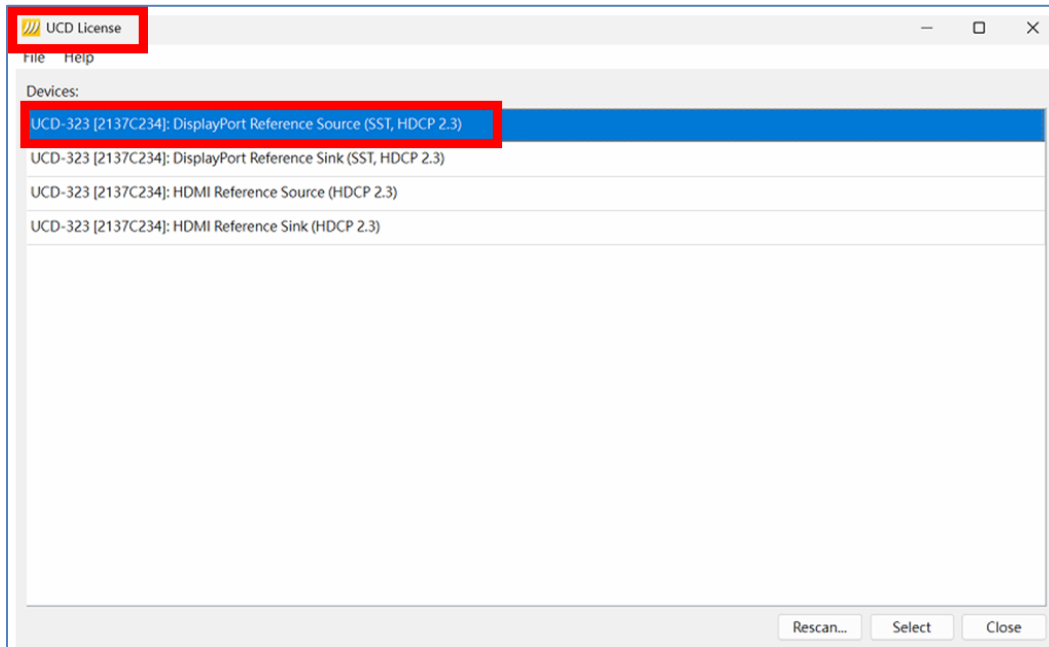


FIGURE 21. UCD LICENSE SCREEN

2. For Rx testing, the Unigraf UCD-323 Aux Controller requires the DisplayPort Reference Source License.
3. Enter the serial number of the Unigraf UCD-323 Aux Controller and click “Install”.

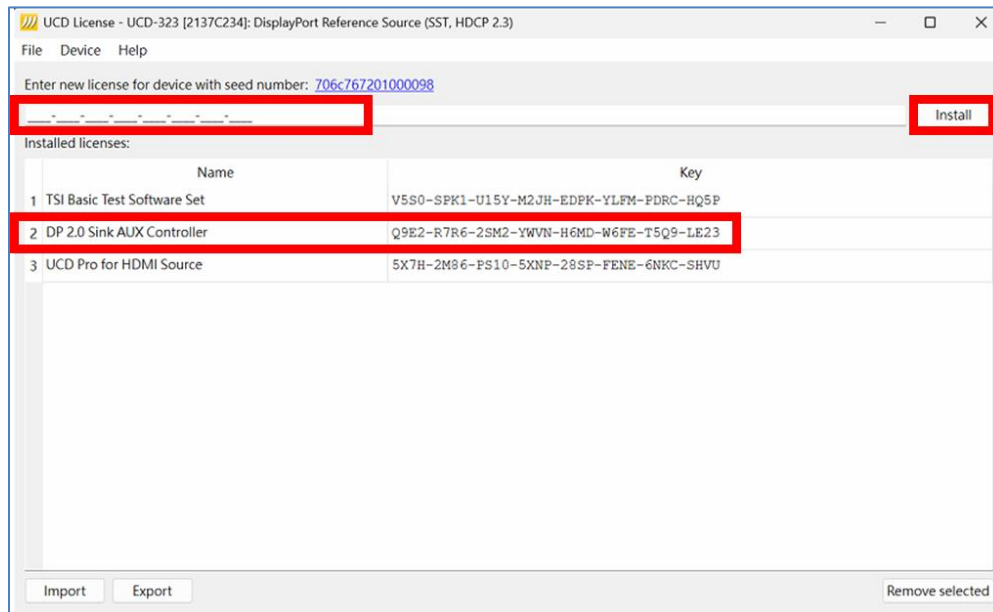


FIGURE 22. INSTALL DISPLAYPORT REFERENCE SOURCE LICENSE

4. After installation, the serial number will appear in the list.

3.2.3.3 ISI Generator Tab

Select the ISI Generator to be used in calibration or testing.

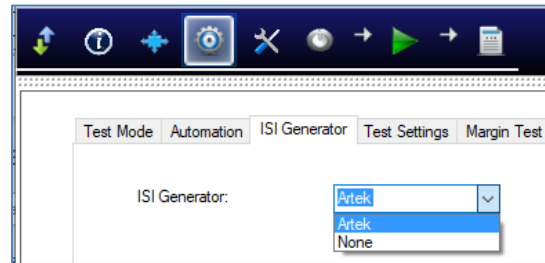


FIGURE 23. SELECT ISI GENERATOR

3.2.3.4 Test Settings Tab

Select the Symbol Lock Pattern. (Note: It is suggested to start with TPS2.) Also select the HBR2 Compliance Pattern and choose the option to enable the ESI Register.

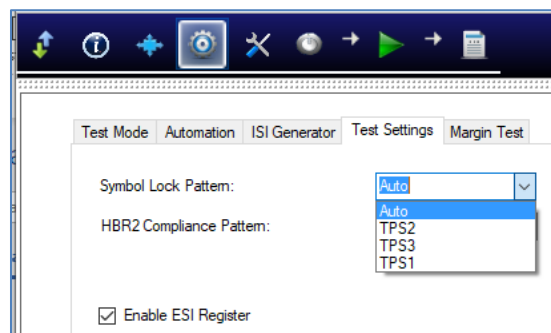


FIGURE 24. CONFIGURE TEST SETTINGS

3.2.3.5 Margin Test Tab

Configure the Search Mode Jitter Tolerance parameters for marginal testing. Also select the option to use binary search and/or receive prompts to reset the DUT as required during testing.

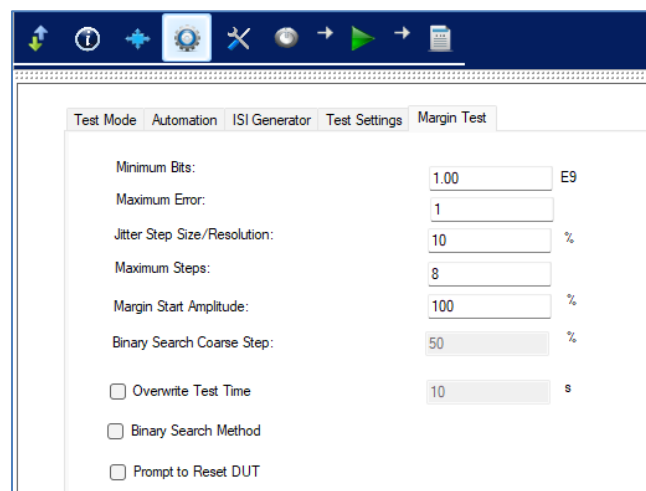


FIGURE 25. CONFIGURE MARGIN TEST PARAMETERS

3.3 Calibration/Test Selection Page

Go to the **Select Tests** page on the left of the screen to select the available calibration or tests to be performed. Select the check box(s) of the desired calibration/test.

Initially, when starting for the first time or changing anything in the setup, it is suggested to run Calibration first. If the calibration is not completed, the Sink Tests will show an error message.

Note: For calibration/testing, it is recommended to use a Variable ISI channel as it allows the channel to be more easily adjusted to meet the required specification. The application supports automated control of the ARTEK CLE1000-A2 variable ISI generator.

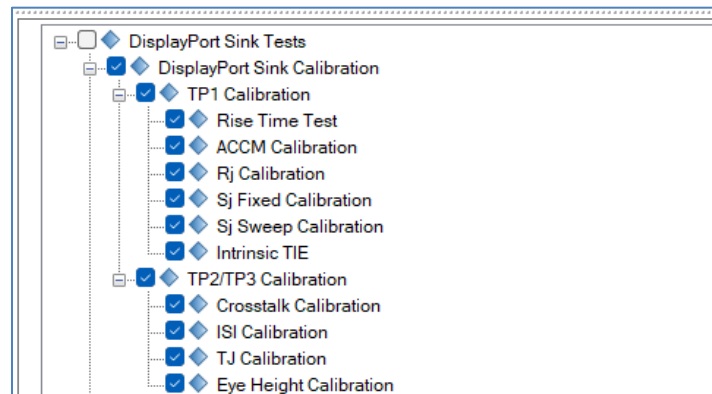


FIGURE 26. CALIBRATION SELECTION

Select the calibration groups to perform calibration for all DisplayPort Sink parameters. Note that while user can select individual calibration parameters, it is possible that a particular calibration may require the previous calibration to be completed before it can proceed. Thus, it is advisable to complete all previous calibration before going on to the next calibration.

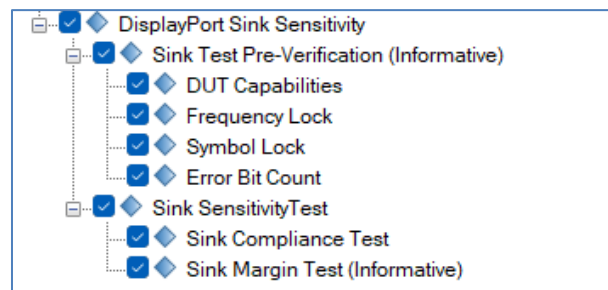


FIGURE 27. TESTS SELECTION

Select the test groups to perform DUT compliance tests for all DisplayPort Sink parameters.

Note: The Sink Test Pre-Verification group is optional which when selected, performs “pre-test” link training before running the actual tests. These pre-verification tests are carried out mainly for debugging purposes and will not include any jitter tolerance testing.

3.4 Calibration/Test Parameters Configuration Page

Select  from the menu to access the Configurations page. Set the required parameters for Sink calibration and testing as described in Table 3 below.

To return all parameters to their default values, select the 'Set Default' button.

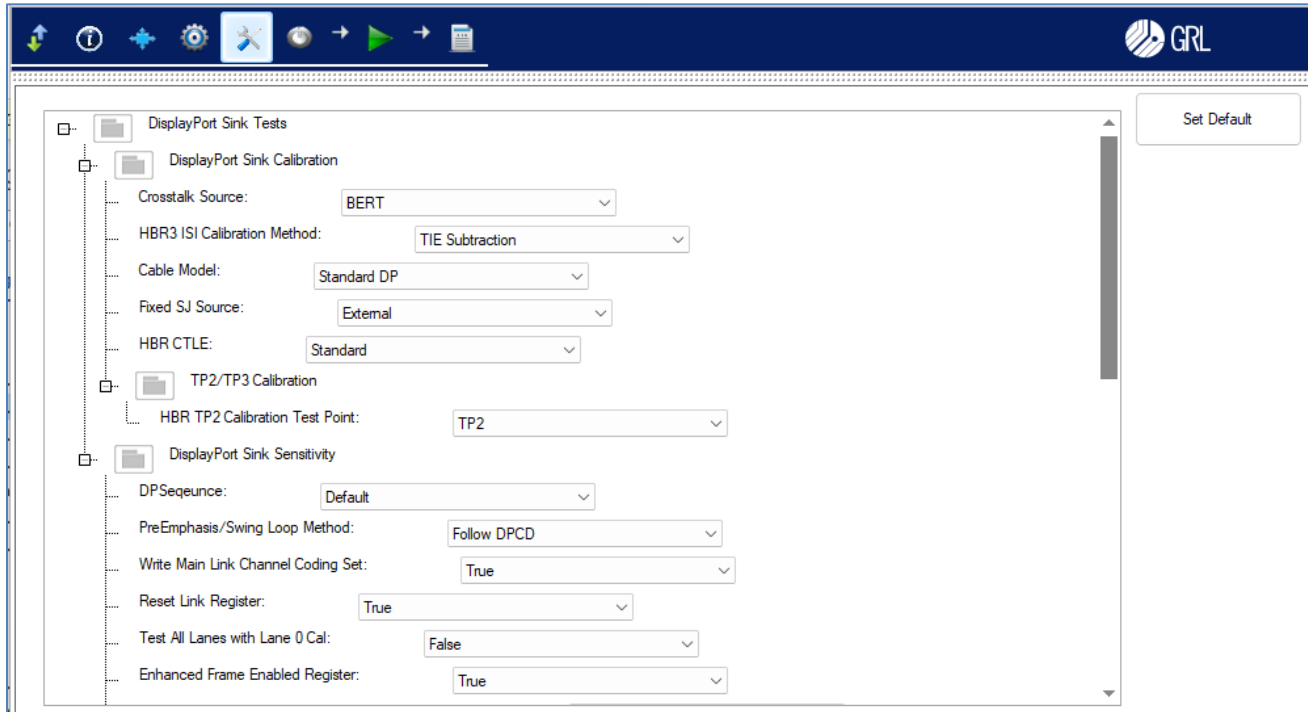


FIGURE 28. PARAMETERS CONFIGURATION PAGE

Note that the user can right-click on each parameter value to:

- display and copy the property variable,
- display the Hint property which will show contextual help about forms, controls and other screen objects,
- copy and paste the value (only applicable for the text input field), or
- set the value to default.

Examples as shown below:

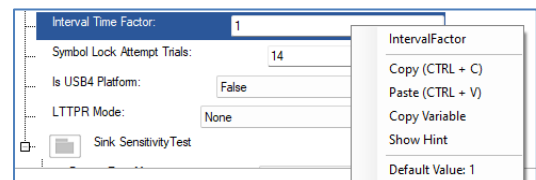
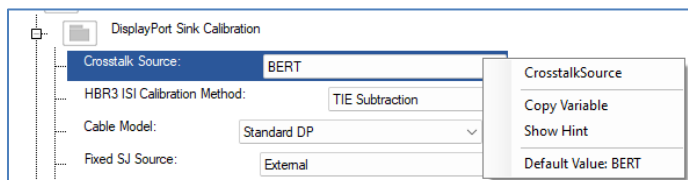


TABLE 3. CALIBRATION/TEST PARAMETERS DESCRIPTION

Parameter Name	Description
Crosstalk Source	Select whether to use the MP1900A BERT , Rigol RF Signal Generator or an External source to generate crosstalk.
HBR3 ISI Calibration Method	Select whether to use the TIE Subtraction or DDJ method to calibrate ISI for HBR3 data rate.
Cable Model	Select whether to use a Standard DisplayPort cable or a Type-C cable type for calibration.
Fixed SJ Source	Select whether to use Internal Fixed SJ source or External source or Manual inject jitter source for calibration.
HBR CTLE	Select whether to use the Standard HBR Reference EQ or Enhanced HBR CTLE EQ.
HBR TP2 Calibration Test Point	Select whether to use TP2 or TP3_EQ test point for calibrating for the HBR data rate.
DP Sequence	Select the DisplayPort version to be used.
PreEmphasis/Swing Loop Method	Select whether to use the Incremental or DisplayPort Configuration Data (DPCD) register method for adjusting the Pre-emphasis and Swing voltage.
Write Main Link Channel Coding Set	Set to True or False to write the signal coding of the main link lane channel configuration. If set to True , write 01h to 108h.
Reset Link Register	Set to True or False to perform link register reset during testing. If set to True , write 00h to 102h during the Error bit count stage. - For the “Freq/Symbol Lock Training Pattern Register” parameter (refer to the description in the subsequent row), if both addresses are set to be written, write 00h to 10Bh ~ 10Eh. - For the “Is USB4 Platform” parameter (refer to the description in the subsequent row), if set to False, write 00h to 10Bh ~ 10Eh.
Test All Lanes with Lane 0 Cal	Set to True or False to use the calibrated Lane 0 values to test for all lanes under test.
Enhanced Frame Enabled Register	Set to True or False to enable the Enhanced Frame bit in the DPCD register. Read 002h, if bit7 = 1, the DPRX supports Enhanced Frame. - If set to True, write 81h/82h/84h (based on MaxLaneCount (1/2/4)) to 101h. - If set to False, write 01h/02h/04h (based on MaxLaneCount (1/2/4)) to 101h.
TPS1/TPS2/TPS3/PRBS/CPAT Scrambling	Set to True or False to disable data symbol scrambling of the TPS1/TPS2/TPS3/PRBS/CPAT training pattern for D10.2, RBR,

Disable	HBR and HBR2 devices. • In the Frequency stage, if set to True, write 21h to 102h. If set to False, write 01h. • In the Symbol Lock stage: ○ TPS2 for RBR/HBR, if set to True, write 22h to 102h. If set to False, write 02h. ○ TPS3 for HBR2, if set to True, write 23h to 102h. If set to False, write 03h. ○ TPS4 for HBR3, if set to True, write 27h to 102h. If set to False, write 07h.
TPS4 Scrambling Disable	Set to True or False to disable data symbol scrambling of the TPS4 training pattern for HBR3 devices.
Freq/Symbol Lock Training Pattern Register	Write the training pattern value to TRAINING_PATTERN_SET or LINK_QUAL_PATTERN_SET or write both addresses. • In the Frequency stage: ○ If TRAINING_PATTERN_SET or Both is selected, if set to True for “TPS1/TPS2/TPS3/PRBS/CPAT Scrambling Disable”, write 21h to 102h. If set to False, write 01h to 102h. ○ If LINK_QUAL_PATTERN_SET or Both is selected, if set to True for “TPS1/TPS2/TPS3/PRBS/CPAT Scrambling Disable”, write 21h to 10Bh ~ 10Eh. If set to False, write 01h to 10Bh ~ 10Eh. • In the Symbol Lock stage: ○ If TRAINING_PATTERN_SET or Both is selected, if set to True for “TPS1/TPS2/TPS3/PRBS/CPAT Scrambling Disable”, write 22/23/27h to 102h depending on the Symbol lock test pattern. If set to False, write 02/03/07h. ○ If LINK_QUAL_PATTERN_SET or Both is selected, if set to True for “TPS1/TPS2/TPS3/PRBS/CPAT Scrambling Disable”, write 22/23/27h to 10Bh ~ 10Eh depending on the Symbol lock test pattern. If set to False, write 02/03/07h. • In the Error bit count stage: ○ If Both is selected and Reset Link Register is set to True, write 00h to 10Bh ~ 10Eh.
Training Pattern Select	Select the default or a specific training pattern type to be applied when testing a specific data rate.
Initialize Training Lane Set	Set to True to write swing and pre-emphasis values to 103h ~ 106h, according to read 206/ 207h as requested by the Sink.
Ignore Error Count Mismatch	Set to True or False to ignore any differences in the error counts obtained during testing.

RBR/HBR Test Pattern	Select the test pattern PRBS7 , TPS2 or TPS3 for testing with RBR and HBR data rate.
Invert PRBS7	Set to True or False to invert the PRBS7 test pattern.
Reset Training Pattern on Fail Error Count	Set to True or False to reset the training pattern when the “Error Count” of the Sink is determined to have failed the test. During the Error bit count stage, if Error count > 0: If “Reset Training Pattern on Fail Count” is set to True, write 00h to 10Bh ~ 10Eh.
Always Initialize BERT	Set to True or False to bypass BERT initialization during testing.
Skip Link Training When SJ Frequency Changed	Set to True or False to skip the loopback link training sequence when there is a change in the SJ frequency.
Skip Link Training When SJ Amplitude Changed	Set to True or False to skip the loopback link training sequence when there is a change in the SJ amplitude.
Interval Time Factor	Specify the factor value for bit errors to be counted over a specified time interval.
Symbol Lock Attempt Trials	Set the number of attempts to execute the symbol lock phase.
Is USB4 Platform	Set to True or False if the Sink DUT runs on a USB4 based platform. If set to True , write 01h to 10Bh ~ 10Eh.
LTTPR Mode	Select the Link-Training Tunable PHY Repeater (LTTPR) operating mode (Transparent or Non-Transparent) if supported by the Sink DUT. If the Transparent mode is selected, write 55h to F0003h. If the Non-Transparent mode is selected, write AAh to F0003h.
Link Qual Supersede	Read 0h, if the DPCD Revision is 1.2 or higher. - In the Frequency stage: - If Link Qual Supersede is set to “True”, write 01h to 10Bh ~ 10Eh, and finally write 00h to 103h ~ 106h. - In the Error Bit Count stage: - If Link Qual Supersede is set to “True”: - If BitRate is RBR or HBR: Write 03h to 10Bh ~ 10Eh. - If BitRate is HBR2: ✓ If the PRBS7 pattern is selected: Write 03h to 10Bh ~ 10Eh. ✓ If Pattern 1 is selected: Write 05h to 10Bh ~ 10Eh. ✓ If Pattern 2 is selected: Write 06h to 10Bh ~ 10Eh. ✓ For Others: Write 07h to 10Bh ~ 10Eh. - If BitRate is HBR3: Write 07h to 10Bh ~ 10Eh.
Skip Frequency Lock	“False” is usually the case. Set to “True” to skip frequency lock

	after performing link training for frequency.
Skip Symbol Lock	“False” is usually the case. Set to “True” to skip symbol lock during link training.
Force Skip All Init for Debug	“False” is usually the case. Set to “True” to skip all initialization settings and proceed directly to frequency testing. This option is for debugging purposes only; please use with caution.
Prompt Error Message	Set to True or False to enable or disable the GRL-DP14-SINKAN software to show error messages for failed or incomplete tests respectively.
BERT Type	Select whether the BERT supports NRZ (Non-Return-to-Zero) or PAM4 (Pulse Amplitude Modulation 4-level) signaling.

3.5 Calibration Target Configuration Page

For debugging purposes ONLY, the default calibration target values can be changed for

certain calibration. To do this, select  from the menu to access the Calibration Target page.

By default, the calibration target values are those defined in the specification. To change the values, un-select the ‘Use Default Value’ checkbox. In case the default values are required again, just select the checkbox to allow all existing values to be reset to default.

Note: The PID Control setting is used to adjust the step width for steps calculation if the target measurement cannot be met with the current step. To adjust, use a lower PID Control value to reduce the subsequent step or increase the control value to make the subsequent step bigger.

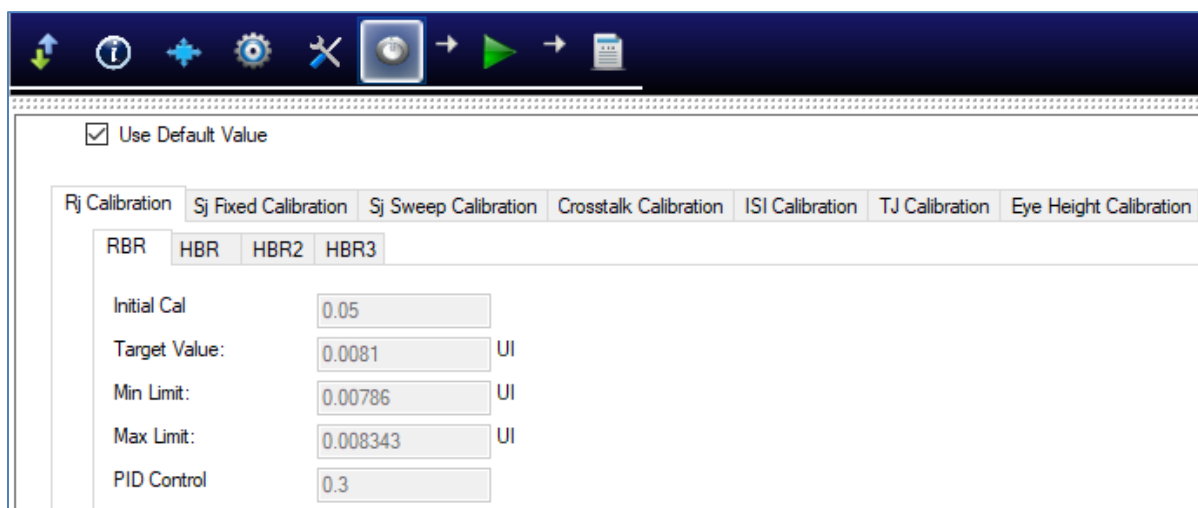


FIGURE 29. CALIBRATION OVERWRITE

3.6 Running Calibration/Tests

Select  from the menu to access the Run Tests page. The GRL Platform Solutions software automatically runs the selected calibration or tests when initiated.

Before running the calibration or tests, select the option to:

- **Skip Test if Result Exists** – If results from previous calibration/tests exist, the software will *skip* those calibration/tests.
- **Replace if Result Exists** – If results from previous calibration/tests exist, the software will *replace* those calibration/tests with new results.

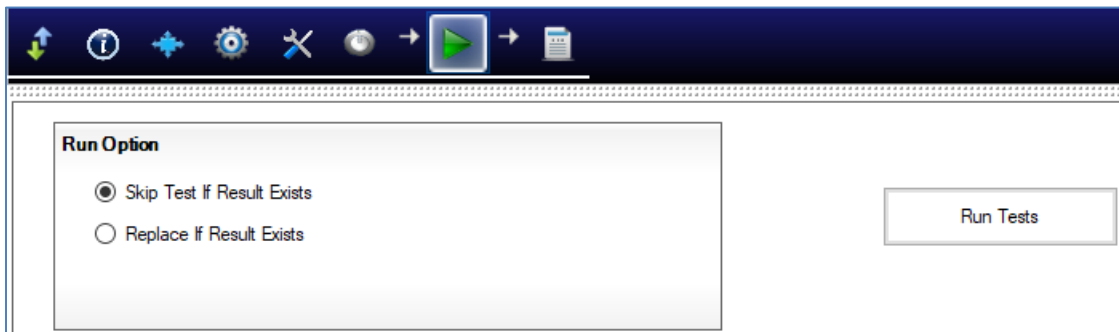


FIGURE 30. RUN TESTS PAGE

Select the **Run Tests** button to start running the selected calibration or tests. The connection diagram for the calibration or test being run will initially appear to allow the user to make sure that the calibration/test environment has been properly set up before calibration/test can proceed.

If you need to re-run only certain calibration or tests on certain conditions, please delete the calibration or tests from the Report page and Run with **Skip Test if Result Exists**. The GRL Platform Solutions software will keep track of the missing calibration or tests in the report and perform those calibration or tests only. See Section 6 for more information on Test Reports.

4 Sink Calibration Setups

This section shows the typical connection setups to perform automated Sink Test Calibration.

4.1 Pre-Calibration/Test Procedures

Prior to running any calibration or test, the following steps must be taken to assure accurate measurements:

1. Allow a minimum of 20 minutes warm-up time for the Oscilloscope and MP1900A BERT.
2. Run the Scope's SPC calibration routine. It is necessary to remove all probes from the Scope before running SPC.
3. Make sure you use a torque wrench with the proper torque specification to make all SMA connections.

4.2 Calibration Connection Setups

Note: Using a Variable ISI Generator enables calibration to be performed with minimum reconfiguration of the test setup, which allows testing to be more fully automated.

4.2.1 Calibration Setup at TP1

Figure 31 below shows the typical setup for Sink signal calibration at Test Point 1.

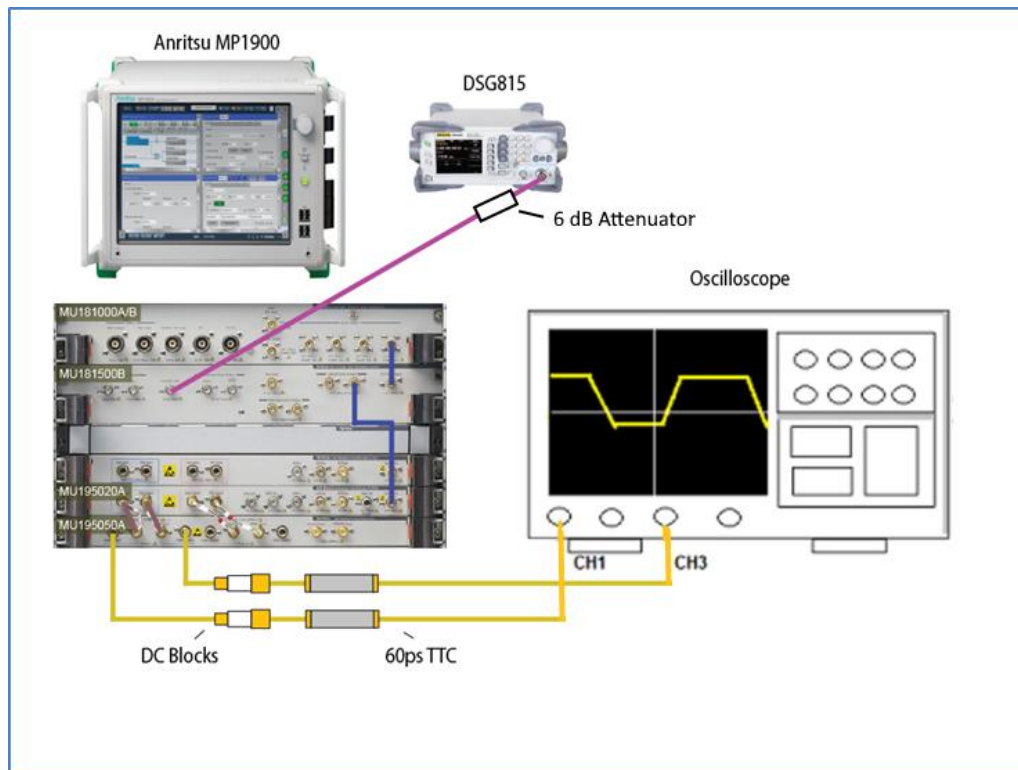


FIGURE 31. TYPICAL TP1 SINK CALIBRATION SETUP

Set up the equipment as shown in the above diagram. Connect the DATA Outputs of the MP1900A BERT to Channels 1 and 3 of the Oscilloscope.

4.2.2 Calibration Steps at TP1

The following table summarizes the DP2.1 PHY HBRx CTS steps and calibration target values for each data rate at TP1.

Calibration Step	Unit	HBR3	HBR2	HBR	RBR
Rise Time (20-80) ^[a]	ps	40	NA	NA	NA
TTC Value (10-90)	ps	60	60	60	60
Pattern		256 Bit Clock	NA	NA	NA
ACCM Calibration (pk-pk)	mV	100	NA	NA	NA
ACCM Pattern		Sine	NA	NA	NA
Frequency	MHz	400	NA	NA	NA
RJ Calibration (Amplitude RMS)	mUI	13	16.7	13.5	8.1
RJ Pattern		D24.3	D24.3	D24.3	D24.3
SJ Fixed Calibration (Amplitude pk-pk)	mUI	130	80	NA	NA
SJ Fixed Pattern		D24.3	D24.3	NA	NA
SJ Fixed Frequency	MHz	297	297	NA	NA
SJ Sweep Calibration					
SJ Sweep Pattern		D24.3	D24.3	D24.3	D24.3
0.5 MHz SJ (Amplitude pk-pk)	mUI	NA	NA	6951	13000
1 MHz SJ (Amplitude pk-pk)	mUI	NA	NA	1722	3751
2 MHz SJ (Amplitude pk-pk)	mUI	1013	505	904	981
10 MHz SJ (Amplitude pk-pk)	mUI	137	116	225	111
20 MHz SJ (Amplitude pk-pk)	mUI	109	104	182	80
100 MHz SJ (Amplitude pk-pk)	mUI	100	100	168	NA
SJ Sweep Calibration					
Intrinsic ISI Pattern		TPS4	NA	NA	NA
TP1 TJ Calibration	mUI	430	NA	NA	NA
TP1 Eye Height Calibration	mV	280	NA	NA	NA

^[a] If testing only bit rates HBR2 and lower, Rise/Fall time is not calibrated and 60 ps (10-90) TTC's are not required.

4.2.3 Calibration Setup at TP2/TP3

Figure 32 below shows the typical setup for Sink signal calibration at Test Point 2 or 3 using the MP1900A BERT as the crosstalk source.

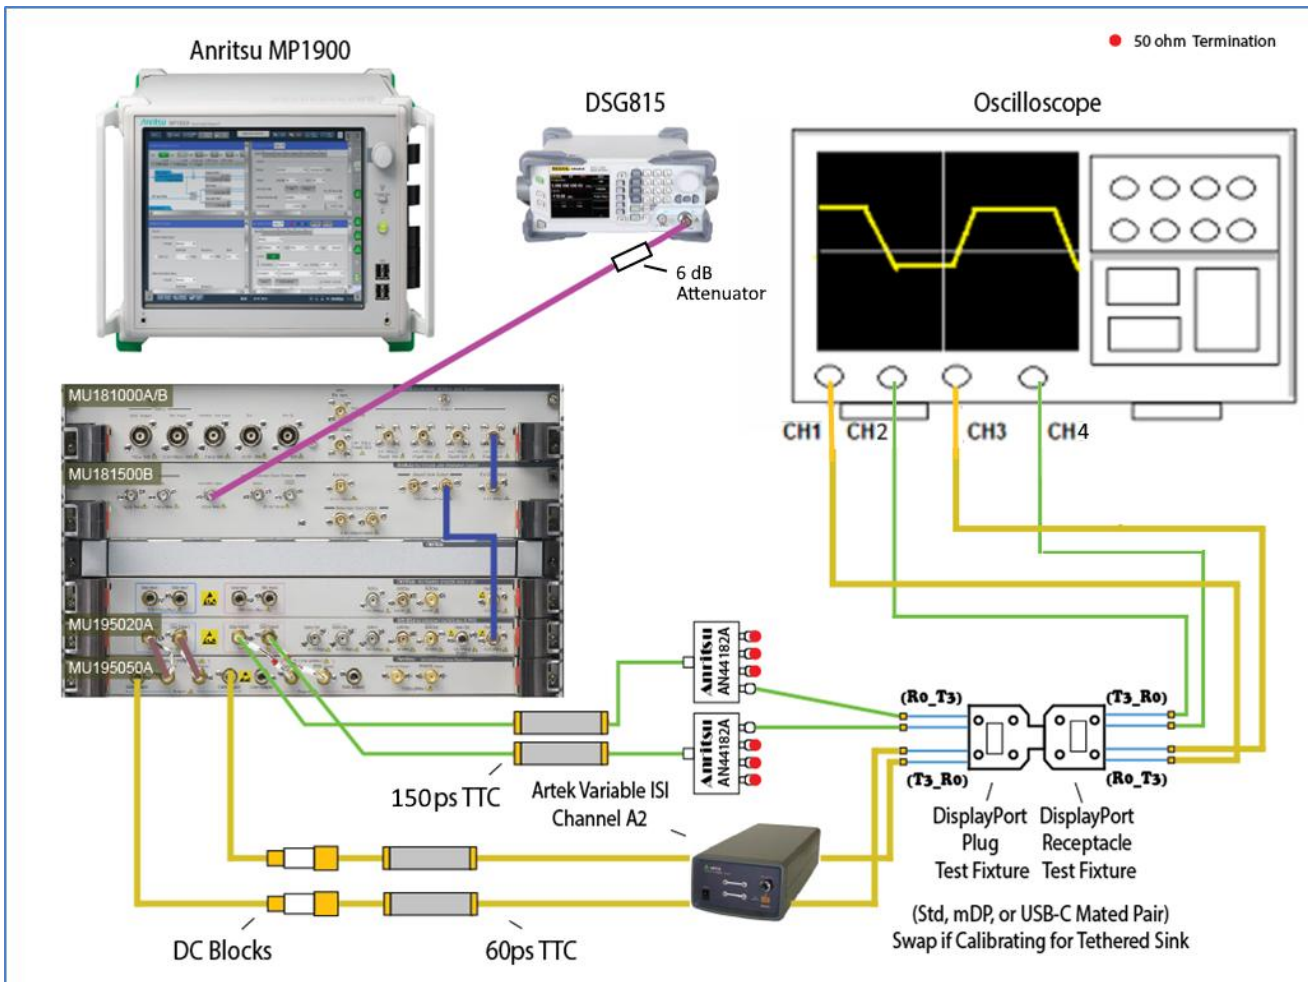


FIGURE 32. TYPICAL TP2/TP3 SINK CALIBRATION SETUP

Set up the equipment as shown in the above diagram. Connect the Clock Outputs of the MP1900A BERT to the DisplayPort fixture and Scope. Connect the ISI Output to the selected Lane of the DisplayPort fixture and Scope.

4.2.4 Calibration Steps at TP1, TP2 and TP3

The following table summarizes the DP2.1 PHY HBRx CTS steps and calibration target values for each data rate at TP1, TP2 and TP3.

Calibration Step	Unit	HBR3	HBR2	HBR	RBR
Crosstalk	mV	300	300	450	138
Pattern	-	D24.3	D24.3	D24.3	D24.3
TTC Value (10-90)	ps	150	150	150	150
ISI & TJ Data Pattern	-	TPS4	CP2520	PRBS7	PRBS7_X2
TP3 & TP3_EQ ISI Calibration	mUI	240	220	161	570
Specified Test Point ^[a]	-	TP3_CTLE	TP3_EQ	TP3_EQ	TP3
TP3_CTLE and TP3_EQ TJ Calibration ^[b]	mUI	600 ^[c]	600	471	NA
TP3_CTLE, TP3_EQ, and TP3 Eye Height Calibration	mV	50 ^[c]	100	150	56
TP2 ISI Calibration	mUI	120	NA	144	60
Specified Test Point ^[d]	-	TP2_CTLE	TP2	TP2	TP2
TP2_CTLE TJ Calibration	mUI	480	NA	NA	NA
TP2_CTLE Eye Height Calibration	mV	170 ^[c]	NA	NA	NA
TP2_CTLE Short Channel ^[e]	mVpp	250	NA	NA	NA
TP2_CTLE Long Channel ^[e]	mVpp	170	NA	NA	NA

^[a] Notes about TP3 ISI Calibration:

- RBR ISI is measured directly without equalizer function applied.
- HBR and HBR2 are measured at TP3 with equalizer function in the scope for single TP3_EQ function in the spec.
- HBR3: TP3_CTLE calibration shall be done using CTLE curve with -8 dB Adc. Physical measurement of the end-to-end ISI should be made to verify that it is within 22 to 24 dB insertion loss, including all cables, fixtures, and DC blocks.

^[b] HBR3: SJ_{FIXED} is adjusted during calibration to achieve target TJ. TJ measurement for HBR2, HBR, or RBR is not performed directly. It is achieved by summation of measured jitter components.


^[c] Eye Height Calibration target of 50 mV @TP3_CTLE or 250 mV @TP2_CTLE is achieved without crosstalk applied and will be reduced to approximately 40mV or 240mV respectively with crosstalk applied. HBR3 TJ is measured at TP3_CTLE after the PLL transfer function over 10^{-6} BER.


^[d] Notes about TP2 ISI Calibration:

- RBR and HBR ISI are measured directly at TP2 without equalizer function applied.
- HB2 is measured with embedded S-parameter of HBR2 WC cable in place of HW ISI. This results in proper ISI being calibrated at TP2 when calibration fixture is removed.
- HBR3: TP2_CTLE calibration shall be done using CTLE curve with -4dB Adc.

^[e] Notes about TP2_CTLE Short/Long Channel Eye Height Calibration:

- Only applicable for the HBR3 Tethered cable DP Sink Device to be measured at TP2_CTLE.
- Below shows the CTS illustrated typical test setups for both Long and Short Channels.
- The Long Channel receiver for a tethered DP Sink device is tested to determine if the receiver can operate correctly with reduced amplitude signals due to a lossy source channel.
- The Short Channel receiver for a tethered DP Sink device is tested to determine if the receiver can operate correctly with a larger amplitude signal presented to the system connector.

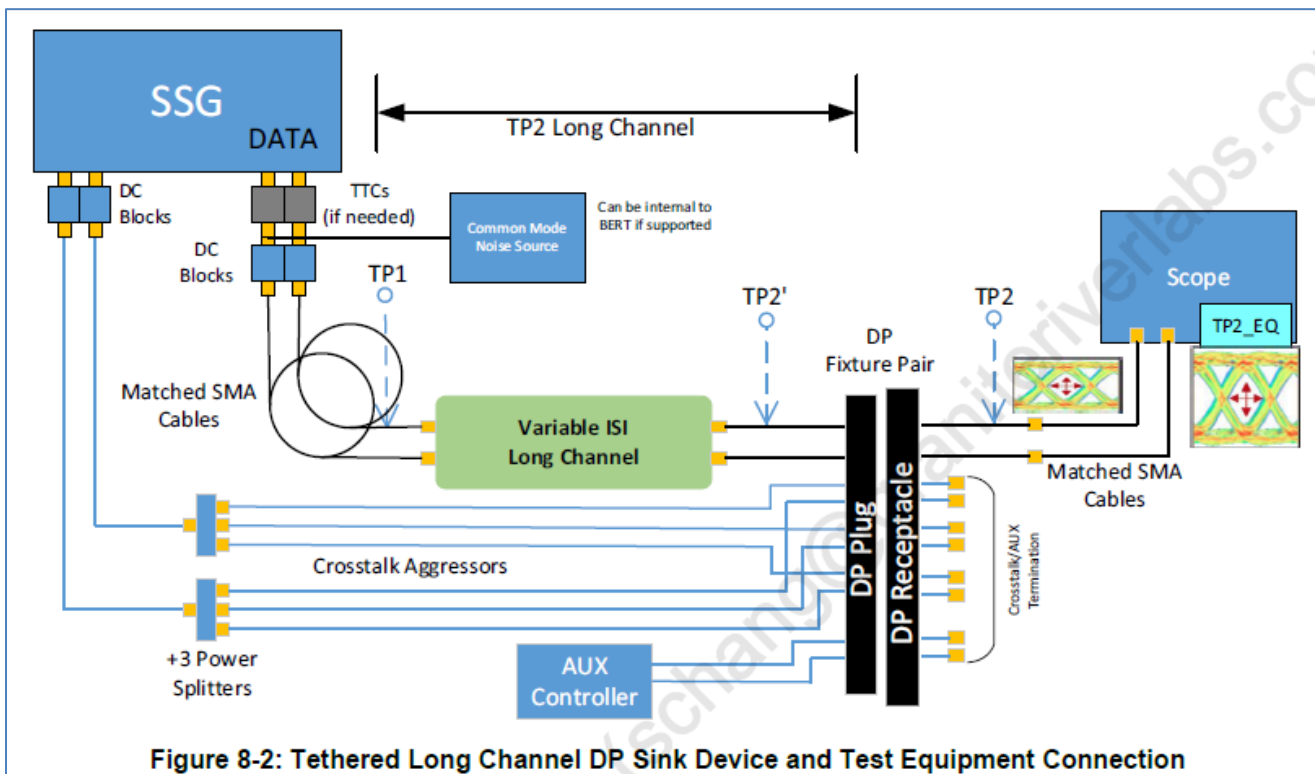

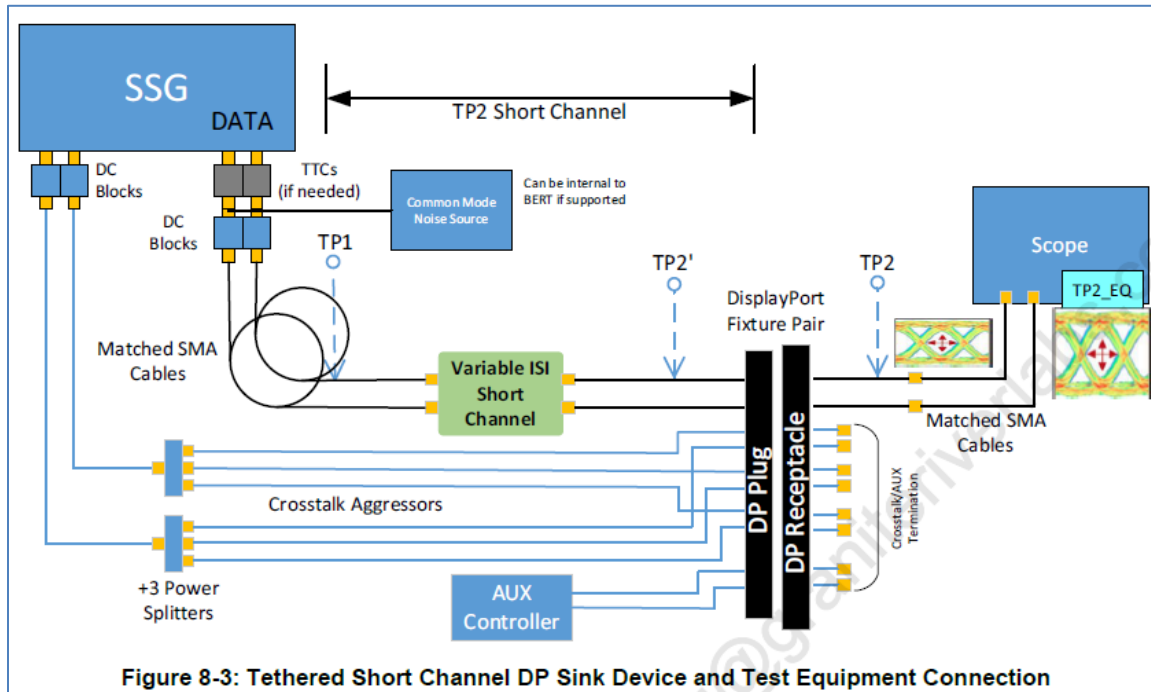

4.3 Saving Calibrated Signals

The application will save calibration files of calibrated stressed signals when running the calibration sequence. For example, on the MP1900A BERT, the application will save the final configuration for LANE0-HBR2 to a file called *EYEHEIGHTCALIBRATION_LANE0_HBR3.CND*.

This is the basic calibration file that will be recalled during testing.

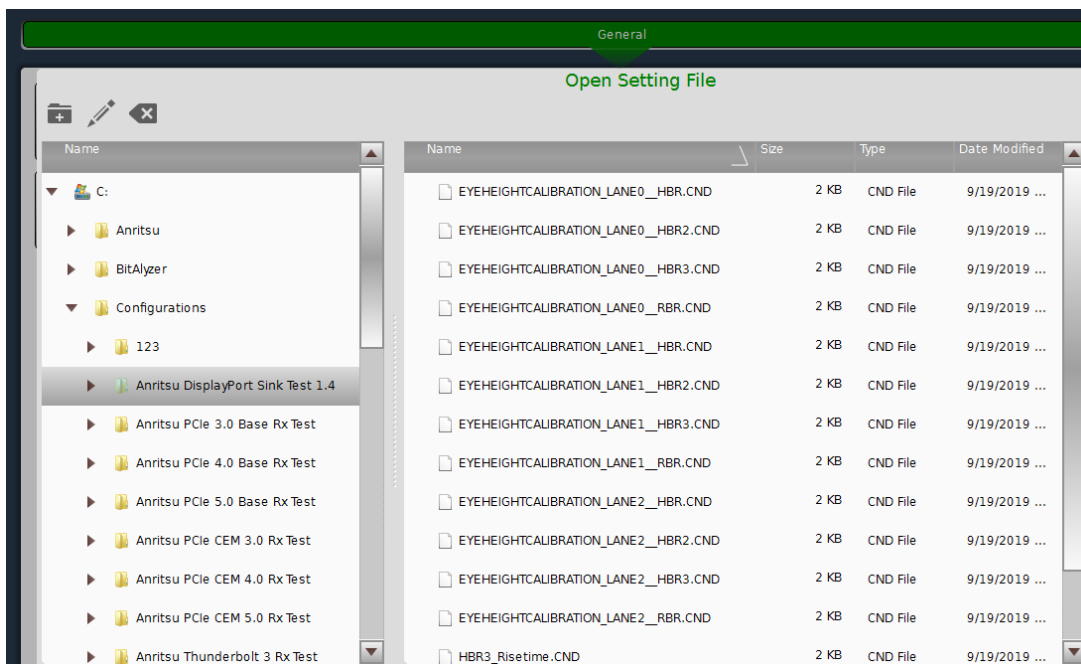


FIGURE 33. SAVED CALIBRATION FILE EXAMPLE

On the PC or Scope running the GRL Platform Solutions application, a *calibration.cal* file will be created that contains the stored calibration values for each frequency that was calibrated.

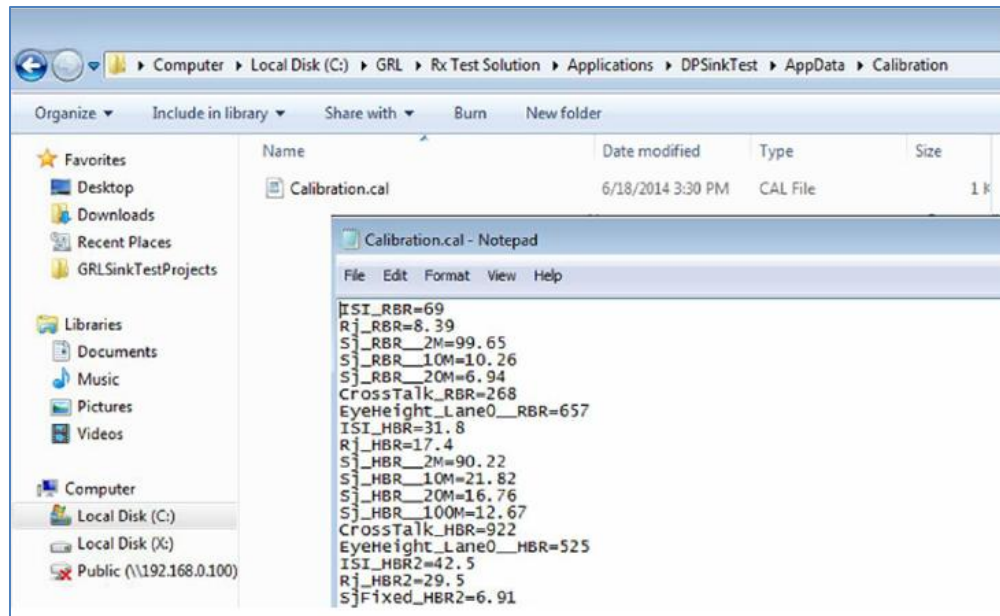


FIGURE 34. CALIBRATION.CAL FILE EXAMPLE

5 Sink DUT Compliance Test Setups

After calibration has completed, then testing the DisplayPort Sink DUT for CTS compliance can be performed. The GRL Platform Solutions application supports automated testing of a DisplayPort Sink device if the device supports standard DPCD through the AUX channel. *Note: The Aux controller is required for testing.*

5.1 Test Connection Setups

5.1.1 DUT Jitter Tolerance Compliance Test Setup

Figure 35 below shows the physical setup for the DisplayPort Sink DUT jitter tolerance test using the MP1900A BERT as the crosstalk source.

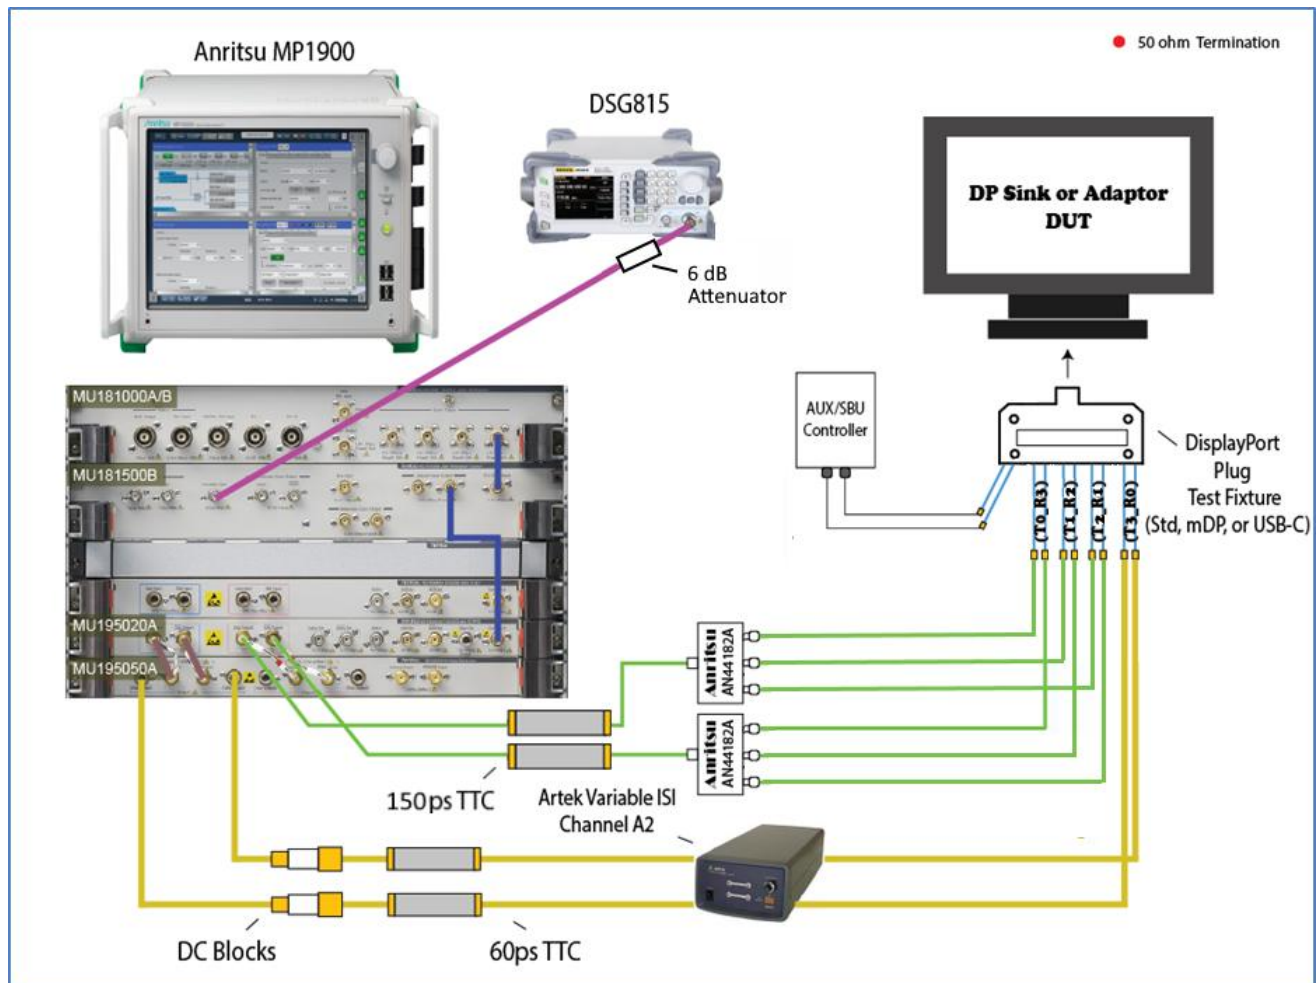


FIGURE 35. COMPLIANCE TEST SETUP FOR DP SINK DUT JITTER TOLERANCE

Set up the equipment as shown in the above diagram. Disconnect the 'P' (Plug) type adapter from the 'R' (Receptacle) calibration adapter and connect the 'P' type adapter to the DUT for testing. Change the connection from the ISI Output to the selected Lane under test of the DisplayPort fixture.

Note: If the Unigraf DPT-200 Aux controller is used, an additional DP-Cable to AUX-SMA adapter is required. The Tektronix DP-AUX is connected directly to the DUT via SMAs. Both

Aux control solutions have USB connection and drivers that need to be loaded on the Computer being used for the testing.

General procedure to perform testing using the application:

- a) Select the “Sink Test Pre-Verification” test group to perform pre-test link training on the DUT. The tests under this group will train the DUT into test mode for receiver testing. This is mainly performed for debugging purposes. *Note: Any individual test from the group is also allowed to be selected as desired.*

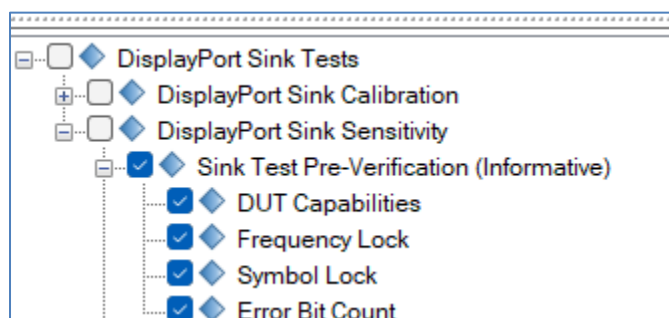


FIGURE 36. SINK TEST PRE-VERIFICATION SELECTION

DUT Capabilities	Lists the DUT capabilities in the Results window under the Report page.
Frequency Lock	Loads the Frequency Lock pattern on the MP1900A BERT and verifies the Frequency Lock.
Symbol Lock	Loads the Symbol Lock pattern on the MP1900A BERT and verifies the Symbol Lock.
Error Bit Count	Sends a random number of errors (1 to 5) from the MP1900A BERT to the DUT, which then checks the DUT’s error count registers and confirms that the error counter is working correctly.

- b) Select the “Sink Compliance Test”. The GRL Platform Solutions application will perform link training followed by running the jitter tolerance compliance test at selected frequencies.

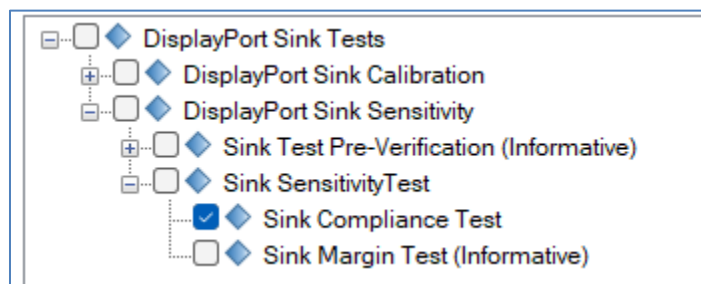


FIGURE 37. SINK COMPLIANCE TEST SELECTION

Note: If running only a specific test, select only that test, e.g., Sink Compliance Test. If other tests/calibration that come before the desired test are selected, the application will complete those tests first following the sequence before running the desired test.

c) Below shows the required test parameters for BER measurement from the CTS.

Table 4-3: BER Measurement Test Parameters

Jitter Frequency (MHz)	Number of Bits	Maximum Number of Allowable Bit Errors	Bit Rate	Observation Time (Seconds) ^a	Data Rate Offset
2	10 ¹²	1000	HBR3	123	0
			HBR2	185	
			HBR	370	
			RBR	620	
10	10 ¹¹	100	HBR3	13	+350ppm
			HBR2	19	
			HBR	37	
			RBR	62	
20	10 ¹¹	100	HBR3	13	0
			HBR2	19	
			HBR	37	
			RBR	62	
100	10 ¹¹	100	HBR3	13	0
			HBR2	19	
			HBR	37	

a. To evaluate, the number of bits shall be multiplied by the unit interval (UI) in picoseconds (e.g., for HBR, 10¹¹ bits at HBR = 370ps/UI × 10¹¹UI = 37 seconds).

FIGURE 38. TEST PARAMETERS FOR BER MEASUREMENT

d) Once testing is completed, repeat the test for each Lane supported by the DUT.

Note: The link width and highest supported Link Frequency are determined by selecting “DUT Capabilities” under Sink Test Pre-Verification and then running the test.

Note: As DUTs may behave differently during testing, it is recommended to always reset the DUT before each test sequence.

5.1.2 Margin Testing

While it is sufficient to perform the Compliance Test for each test condition to meet compliance specifications, it is also useful to determine how much Margin your design contains.

The Margin for each test condition can be verified as follows:

a) Under the Setup Configuration page, select the **Margin Test** tab.

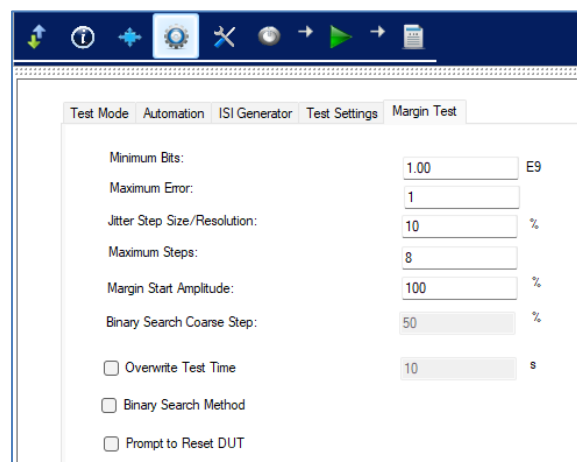


FIGURE 39. MARGIN TEST CONFIGURATION

- b) For the desired Link Rate and Frequency pair, configure the following parameters:
- **Minimum Bits:** Minimum number of bits tested at each SJ amplitude.
 - **Maximum Error:** Maximum number of errors allowed at each swept-SJ amplitude.
 - **Jitter Step Size/Resolution:** The swept-SJ amplitude will increase by the selected amplitude during testing. For example, if the initial swept-SJ is 100mUI, then the test points would be 100mUI, 120mUI, 140mUI, 160mUI, etc.
 - **Maximum Steps:** Maximum number of steps to be implemented for margin testing.
 - **Margin Start Amplitude:** Start amplitude for margin testing.
 - **Binary Search Coarse Step:** Select the “Binary Search Method” checkbox to set the coarse step value for binary search.
- c) Once configured, select and run the “Sink Margin Test” for the selected Link Rate/Frequency pair.

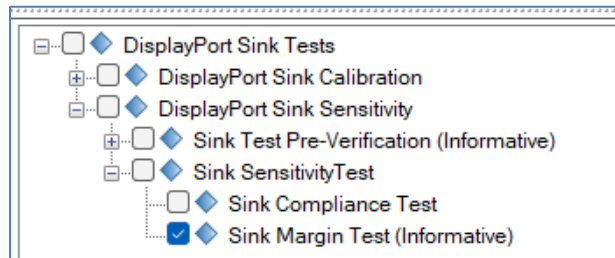


FIGURE 40. SINK MARGIN TEST SELECTION

Note: If running only a specific test, select only that test, e.g., Sink Margin Test. If other tests/calibration that come before the desired test are selected, the application will complete those tests first following the sequence before running the desired test.

6 Test Results and Reports Using GRL-DP14-SINKAN

When all calibration and test runs have completed from the previous section, the GRL-DP14-SINKAN software will automatically display the results on the **Report** page.

Select  from the menu to access the Report page for a quick view of all results.

If some of the results are not desired, they can be individually deleted by selecting the **Delete** button.

For detailed test report, select the **Generate report** button to generate a PDF report. To have the calibration data plotted in the report, select the **Plot Calibration Data** checkbox.

6.1 Test Report Generation

Click the **Generate report** button for the detailed calibration and tests report.

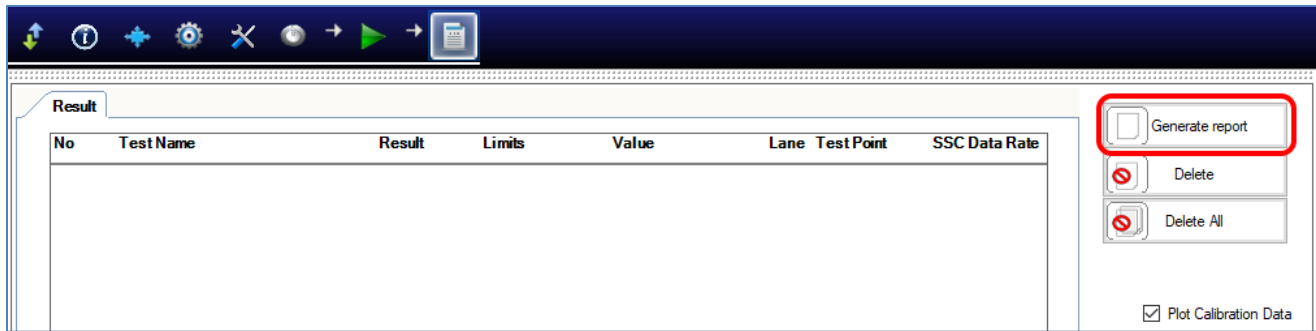


FIGURE 41. GENERATE REPORT PAGE

6.1.1 DUT Information

This portion is populated from the information in the DUT tab on the **Session Info** page.



Anritsu DisplayPort Sink Test 1.4 Report

DUT Information

DUT Manufacturer : GRL

DUT Model Number : DP1

DUT Serial Number : 1000

DUT Comments :

Test Information

Test Lab : Granite River Labs

Test Operator : David

Test Date : 28 July 2020

Software Version

Software Revision : 0.00.50

FIGURE 42. DUT INFORMATION

6.1.2 Summary Table

This portion is populated from the calibration and tests performed, which gives an overall view of all the results and test conditions.

No	TestName	Limits	Value	Results	Lane	Test Point	SSC	Data Rate	Frequency
1	Rise Time Test	True/False	True	Pass	Lane0	TP1		HBR2	2M
2	ACCM Calibration	True/False	True	Pass	Lane1	TP1		HBR3	2M
3	Rj Calibration	True/False	True	Pass	Lane0	TP1	SSC_ON	HBR2	10M
4	Sj Fixed Calibration	True/False	True	Pass	Lane0	TP1	SSC_ON	HBR3	100M

FIGURE 43. SUMMARY TABLE

6.1.3 Test Results

This portion is populated from each of the test results. Here the results are explained in depth with supporting data points and screenshots.

6.1.3.1 Compliance Test

This portion is populated from the results of all compliance tests performed.

Compliance Test(TP2,Enable,HBR2)

Sj Frequency	2M	10M	20M	100M
Lane0	PASS(0)	PASS(0)	PASS(0)	PASS(0)
Lane1	PASS(0)	PASS(0)	PASS(0)	PASS(0)
Lane2	PASS(0)	PASS(0)	PASS(0)	PASS(0)
Lane3	PASS(0)	PASS(0)	PASS(0)	PASS(0)

Compliance Test(TP2,Enable,HBR3)

Sj Frequency	2M	10M	20M	100M
Lane0	PASS(0)	PASS(0)	PASS(0)	PASS(0)
Lane1	PASS(0)	PASS(0)	PASS(0)	PASS(0)
Lane2	PASS(0)	PASS(0)	PASS(0)	PASS(0)
Lane3	PASS(0)	PASS(0)	PASS(0)	PASS(0)

FIGURE 44. COMPLIANCE TEST RESULTS PAGE

6.1.4 Calibration Data Plots

This portion is populated from each of the calibration steps. Below is an example of an ISI calibration plot showing the calibration points using the ARTEK CLE1000-A2.

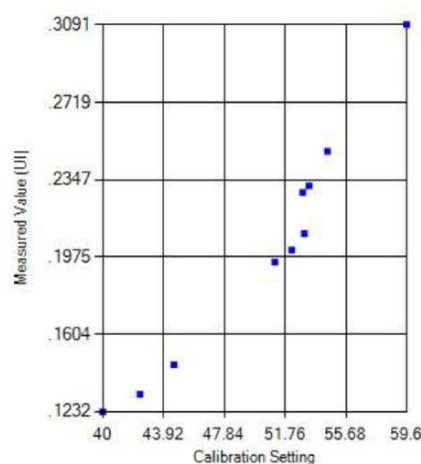


FIGURE 45. CALIBRATION RESULTS PAGE

6.1.5 Margin Test Plots

This portion is populated from the Margin Tests. Below is an example of a margin test plot showing pass results.

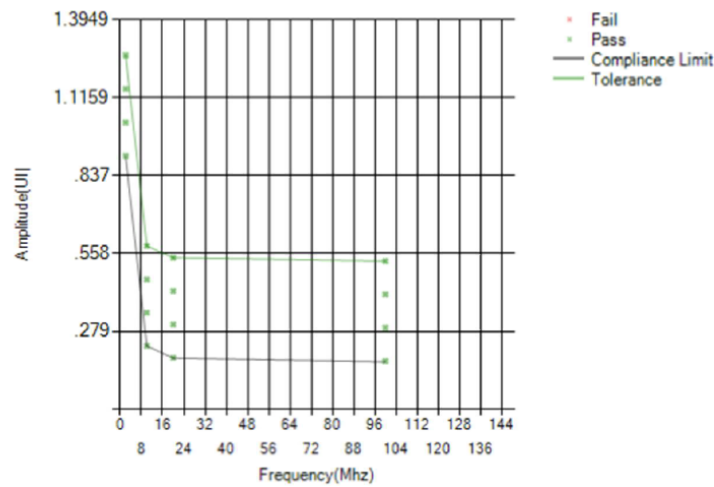


FIGURE 46. MARGIN TEST RESULTS PAGE

6.2 Deleting Test Reports

Click the **Delete** button to delete individual test results or **Delete All** to delete the entire test report.

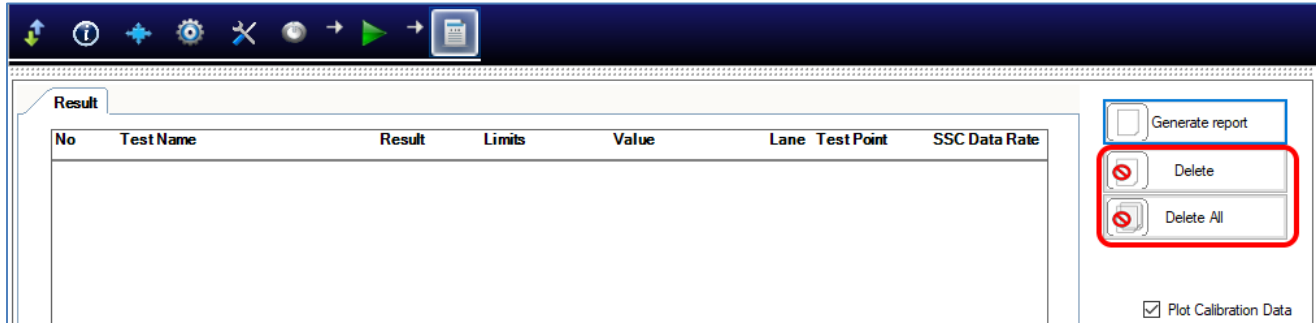


FIGURE 47. TEST REPORT DELETED

7 Saving and Loading Test Sessions

The usage model for the GRL-DP14-SINKAN software is that Calibration and Test Results are created and maintained as a 'Live Session' in the software. This allows you to Quit the software and return later to continue where you left off.

Save and Load Sessions are used to Save a Test Session that you may want to recall later. You can 'switch' between different sessions by Saving and Loading them when needed.

To Save a session, with all of the parameter information, test results, and any waveforms, select **Options** on the menu bar and select **Save Session**.

To Load a session back into the software, including the saved parameter settings, select **Options** on the menu bar and select **Load Session**.

To create a New session and return the software to the default configuration, select **Options** on the menu bar and select **New Session**.

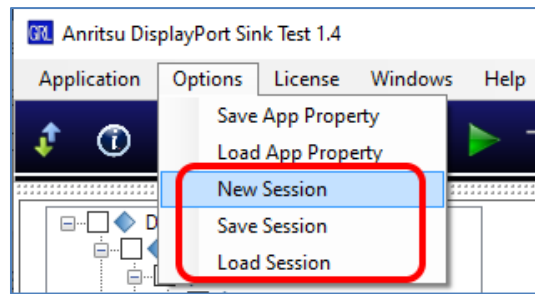


FIGURE 48. SAVING AND LOADING CALIBRATION AND TEST SESSIONS

The configuration and session results are saved in a file with the extension '.ses', which is a compressed zip-style file, containing a variety of information.

8 Appendix A: Manual CTS Sink Calibration and Test Procedure

The DisplayPort PHY CTS outlines the requirements for manual DisplayPort Sink Calibration and Testing in this section.

Note: See Section 2, Resource Requirements for equipment required in the following setups.

8.1 HBR3 Sink Calibration/Test Setup

The following methodology provides a typical example on how to calibrate and test the stressed impairments for HBR3 per the DP CTS. This method will be performed using the Anritsu MP1900A BERT as SSG (Stressed Signal Generator) and the Keysight or Tektronix high performance Oscilloscope ($\geq 16\text{GHz}$) as JMD (Jitter Measurement Device).

8.1.1 Calibration Setup and Procedure (at TP1)

Calibration for HBR3 will be performed at test points TP1, TP2, and TP3. The following figure shows the conceptual calibration setup at TP1.

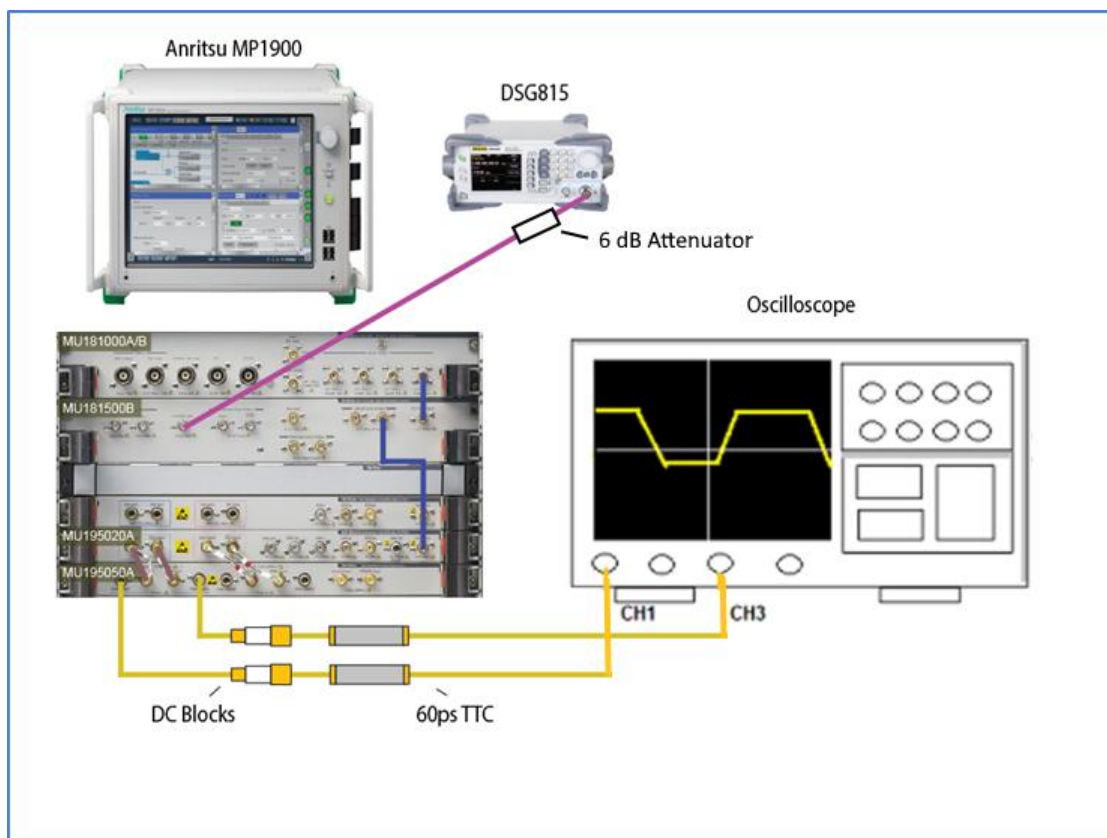


FIGURE 49. HBR3 CONCEPTUAL SETUP FOR TP1 CALIBRATION

1. Connect the equipment as shown in the above setup diagram.
2. Turn on Output of the MP1900A BERT.
3. Set up the MP1900A BERT to recall *HBR3_Risetime.CND* as follows:

- Bitrate: 8.1Gb/s
- Launch Amplitude: 1.4V Differential (700mV with divider) to provide a voltage that is found to be close to the final value when calibration is complete.
- Pattern: Clock/256
- Jitter Terms enabled and set to zero

Note: The HBR3_Risetime.CND MP1900A setup uses the Clock/256 pattern to provide a long run length in order to produce accurate rise time measurement when averaged.

4. Set up the Oscilloscope to recall *Risetime.set* as follows:

- Data: Ch1 – Ch3
- Crosstalk: Ch2 – Ch4 BW = 16GHz
- SR: 100GS/s (Ch1 – Ch3 or Ch2 – Ch4)
- 60mV/div Differential Math
- 20-80 Rise Time Measurement enabled
- Averaged to 16 acquisitions as set in the Acquisition Menu of the oscilloscope.

Note: The Risetime.set oscilloscope setup provides the Differential math signal which is optimized for swing of the MP1900A signal and averaged for accurate 20-80 rise time measurement.

5. On the MP1900A BERT, verify that the 20-80 rise time is between **40-60ps** (measured at the above BW).
6. Calibrate the AC Common Mode (**ACCM**) to **100mV pk-pk +/- 5% at 400MHz** as follows:
- a) On the Scope, recall *CM.set*:
 - Math1: (Ch1 + Ch3)/2
 - Averaged to 16 acquisitions
 - Measure Pk-Pk (Math1)
 - b) On the MP1900A BERT:
 - CM Control: On
 - CM Frequency: 400MHz
 - pk-pk Amplitude: 100mV
 - c) Calibrate the CM Amplitude to 100mV pk-pk +/- 5%.
 - d) Return the CM Amplitude to 0V, but leave the CM Source Enabled.
7. Calibrate **RJ** to **13mUI +/- 5% RMS (160mUI pk-pk)** and then return to zero as follows:
- a) On the MP1900A BERT, adjust RANDOM JITTER(RJ) (10MHz to 1GHz).
 - b) On the MP1900A BERT, recall *HBR3_RjPj.CND* using Pattern = D24.3 and 1100 Quarter Rate Clock.
Note: The Quarter Rate Clock is used to maintain 50% Edge Density.
 - c) On the Scope, recall *HBR3_RjPj.set* as follows:
 - EZJIT or DPOJET settings:
 - Clock Recovery: Mean
 - Pattern Length: 4UI
 - d) Calibrate to RJ = 13mUI +/- 5% RMS (160mUI pk-pk), measurement = RJ-DD.
 - e) Return the RJ Amplitude to zero on the MP1900A BERT, but leave it Enabled.
8. Calibrate **SJ_Fixed** to **130mUI pk-pk at 297MHz +/- 5%** as follows:

- a) Connect the DSG815 “RF output” to the MP1900A “Ext SJ” input, and turn on Ext SJ on the MP1900A BERT.

Warning: Do not output signal amplitude over 2Vp-p from the DSG815. It will damage the MP1900A “External Jitter Input”.


- b) Adjust the output level on the DSG815.
- c) Calibrate to SJ = 130mUI pk-pk, measurement = PJ1.
- d) Return the output level to -110dBm, but leave the Ext SJ Enabled.

9. Calibrate **SJ_Sweep** to **100mUI pk-pk at 100MHz +/- 5%** as follows:

- a) On the MP1900A BERT, adjust SINE JITTER.
- b) Calibrate to SJ = 100mUI +/- 5% pk-pk, measurement = PJ1.
- c) Repeat steps (a) and (b) above for:
 - 1013mUI pk-pk at 2MHz +/- 5%
 - 137mUI pk-pk at 10MHz +/- 5%
 - 109mUI pk-pk at 20MHz +/- 5%
- d) Return the SJ Sweep Amplitude to zero, but leave the SINE JITTER Enabled.

10. Measure **DATA TIE Reference** for ISI Measurement at TP1 as follows:

- a) On the Scope, change the EZJIT or DPOJET settings to:
 - Clock Recovery: 15MHz, Damping Factor = 1
 - Fixed Data Rate: 8.1GHz
 - Pattern Length: 4
 - Apply CTLE (fz = 806MHz, fp1 = 3.03GHz, fp2 = 5.6GHz) *(Note: This comes from worst case CTLE used in Tx testing — the -8dB curve from the below family of CTLEs.)*

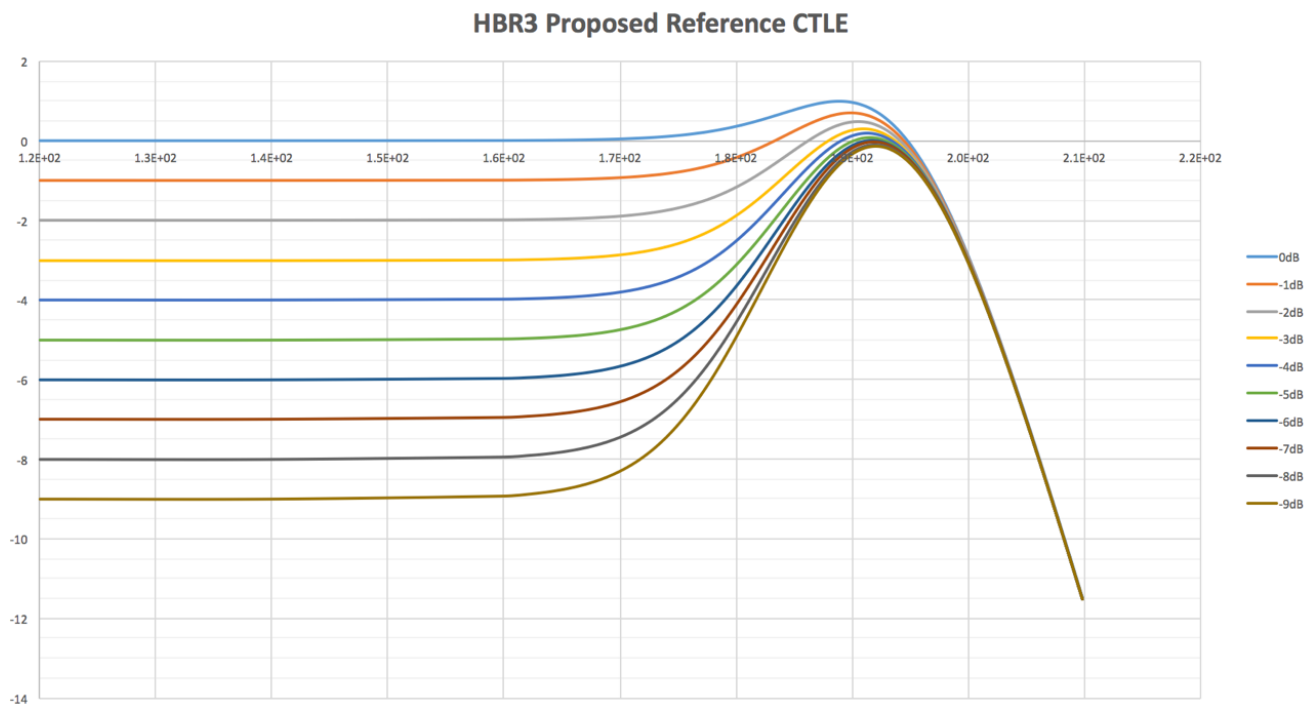

Measurement = DATA TIE_{pk-pk}(TP1)

Note: Instead of using the DDJ measurement on the Scope for ISI measurement, a relative TIE (pk-pk) measurement from TP1 to TP3_EQ is made. The reason is that if there is some non-zero ISI intrinsic from the Scope measurement, it will be calibrated out of the measurement. Here the same clock recovery and JTF is applied at TP3_EQ before adding the channel, and then the DATA TIE (pk-pk) is measured with a clock pattern applied. This is a baseline intrinsic value to subtract from the TIE (pk-pk) value, which will give a true ISI value after applying the channel.

8.1.2 Calibration Setup and Procedure (at TP3)

Figure 50 shows the conceptual calibration setup at TP3. This setup uses the Artek CLE1000-A2 as the variable ISI source and the MP1900A BERT as the crosstalk source.

Note: Using variable ISI generation enables calibration for all data rates to be performed using the same test setup. This only requires minimum reconfiguration of the test setup, which allows testing to be more fully automated.

Note: The following diagram shows an example of an equipment setup that provides adequate ISI. The actual ISI calibration results may vary depending on cables and adapters used. Additional cables and adapters may be needed to achieve a calibration value that is within +/-5% of the target value. It is up to the user to ensure that the ISI values in the DP CTS for ISI are achieved and measured. You should make sure to capture the screenshot of the ISI you calibrate to and keep it with your test results for future reference.

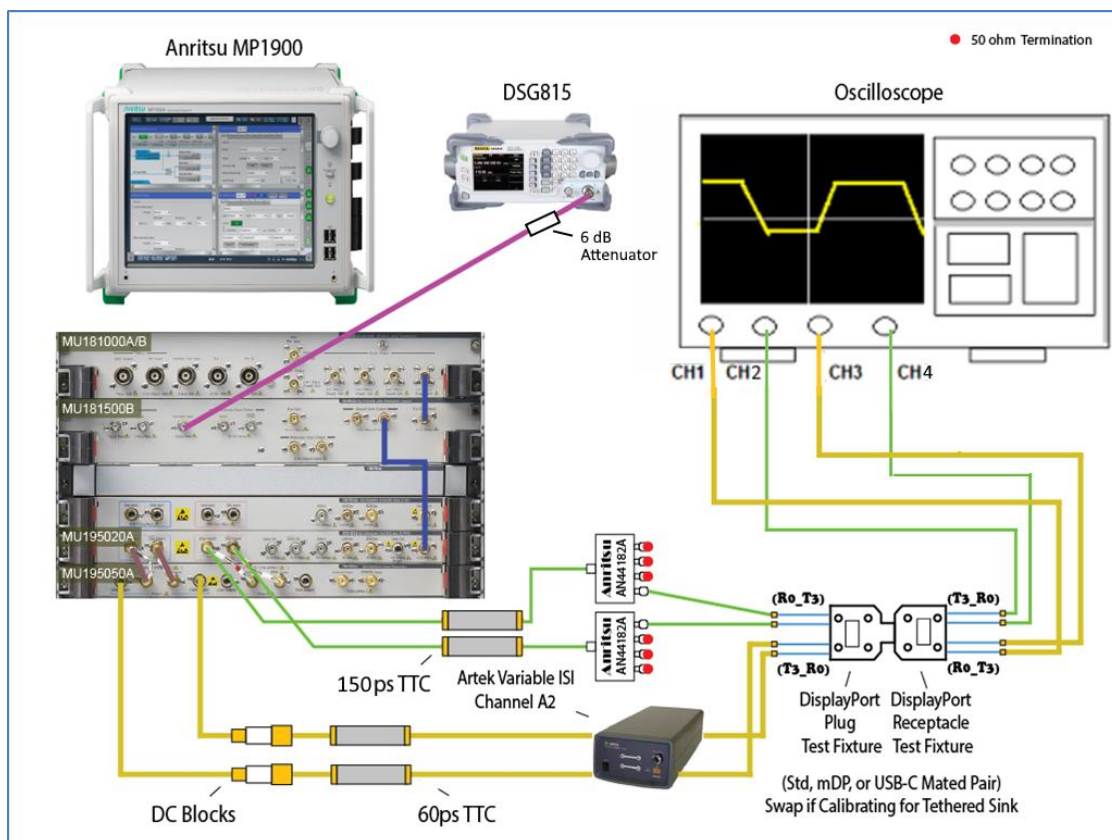


FIGURE 50. HBR3 CONCEPTUAL SETUP FOR TP3 CALIBRATION

1. Change the previous setup to the above setup.
2. Calibrate **ISI** = $[\text{DATA TIE}_{\text{pk-pk}}(\text{TP3_EQ}) - \text{DATA TIE}_{\text{pk-pk}}(\text{TP1})]$ to **240mUI +/- 5%** as follows:
 - a) On the Scope, measure $\text{DATA TIE}_{\text{pk-pk}}(\text{TP3_EQ})$:
 - Set up the Scope to recall *HBR3_TP3_EQ_Eye.set* as follows:
 - Use the same Horizontal settings from the TP1 calibration.
 - Set the Vertical channels to 30mV/div.
 - Set up EZJIT or DPOJET as follows:
 - Clock Recovery: 15MHz, Damping Factor = 1
 - Fixed Data Rate: 8.1GHz
 - Pattern Length: 2520
 - Apply CTLE ($f_z = 806\text{MHz}$, $f_{p1} = 3.03\text{GHz}$, $f_{p2} = 5.6\text{GHz}$)
 - Subtract the measurement in Step 2(a) from the measurement in Step 10(b) of the TP1 calibration.
 - Adjust ISI on the CLE1000-A2 until $[\text{DATA TIE}_{\text{pk-pk}}(\text{TP3_EQ}) - \text{DATA TIE}_{\text{pk-pk}}(\text{TP1})] = 240\text{mUI} \pm 5\%$.

Note: A physical measurement of the ISI channel and attached cables should be made with a VNA to verify it fits within 22-24dB Insertion Loss including all cables, mated pair fixture and DC Block.
3. Calibrate **Complete Stressed Eye** at each SJ Frequency:
 - Return Amplitude of CM, RJ, SJ_Fixed, and SJ_Sweep to add to the calibrated ISI.
 - Turn on SSC on the MP1900A and set Deviation to 5000ppm.
 - Set SSC Frequency to 33kHz.
 - Set SSC Type to Down.
4. Calibrate **TJ** to **600mUI +/- 5%** using SJ_Fixed as Calibration Knob:
 - Measure TJ at TP3_EQ.
 - Use Fixed RJ as the TJ method by fixing the RJ in the EZJIT Preference menu to be RJ measured in Step 7 from TP1.
 - $\text{TJ} = \text{DJ} + 12 \times \text{RJ}$; where RJ is the fixed value measured in Step 7 from TP1. This can be done by using TJ measurement in the EZJIT with the Fixed RJ Preference setting selected.
5. Repeat Step 4 to achieve **600mUI +/- 5%** for 2MHz, 10MHz, and 20MHz.
6. Calibrate **Eye Height** to **50mV -0%, +5%** by adjusting the MP1900A Amplitude at each SJ_Sweep Frequency. Measure Eye Height.
7. Measure or calibrate **Crosstalk** using the MP1900A Quarter Rate Clock Method as the crosstalk source as follows:
 - Connect the crosstalk source (Channel 2) to the fixture and Scope as shown in Figure 50.
 - Select 1100 pattern (D24.3 HBR3 Pattern) from the MP1900A Channel 2 Output.
 - Calibrate the Amplitude of the crosstalk signal to 500mV pk-pk at TP3.

8. Save the MP1900A configuration file for each SJ_Sweep Stressed Eye.

8.1.3 DUT Test Setup and Procedure (at TP3)

The following figure shows the conceptual setup for testing the DUT at TP3 which follows up from the previous TP3 calibration setup.

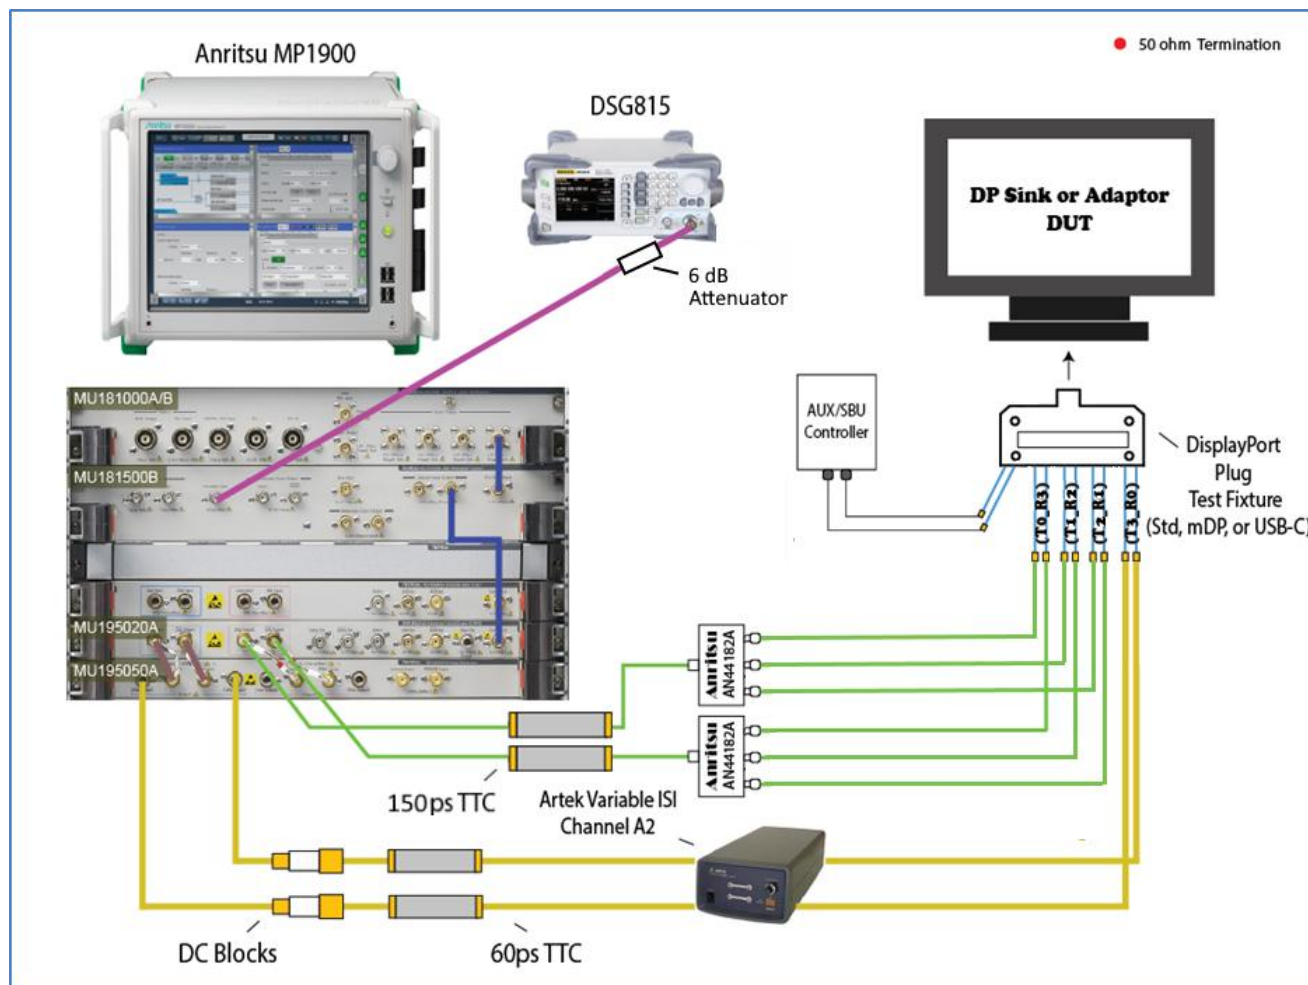


FIGURE 51. HBR3 CONCEPTUAL SETUP FOR TP3 DUT TEST

1. From the previous TP3 calibration setup, disconnect the 'P' (Plug) type adapter from the 'R' (Receptacle) calibration adapter and connect the 'P' type adapter to the DUT for testing.
2. Connect crosstalk lanes between the 'P' type adapter and crosstalk source.
3. Recall the MP1900A BERT setup for SJ_Sweep Stressed Eye at 100MHz.
4. Attach the Stressed Eye Signal to Lane 0 of the DUT.
5. If the DUT is a USB Type-C Sink, initiate the DP Alt Mode.
6. Test the DUT using the AUX/SBU Controller as follows:
 - Initiate the desired 'Alt Mode' if the DUT is a USB Type-C Sink.
 - Verify the Frequency Lock.
 - Verify the Symbol Lock.

- Inject Errors and verify the correct amount of errors is being detected using the TPS4 Signal.
- Test BER at the duration specified in the CTS.

7. Repeat Step 2 for 2MHz, 10MHz, and 20MHz SJ_Sweep Frequencies.
8. For a 4-Lane DUT, repeat Steps 3 to 6 for Lanes 1, 2, and 3.

8.1.4 Calibration Procedure at TP2

If running calibration at TP2, perform the following steps:

1. Calibrate to the ISI target value (120mUI) at TP2 (with CTLE applied) as specified in the DP2.1 and DP Over Type-C PHY HBRx CTS.
2. Calibrate to the target Eye Height (170mV) at TP2_CTLE in a similar way as described in the previous TP3 calibration.
3. Substitute the TP2_CTLE ISI value for TP3_EQ to obtain the final calibrated signal.
4. Capture the TP2 Eye Diagram to be included in the test report.

Notes:

- *The TP2 Eye Diagram is captured using the same CDR/JTF function as at TP3_EQ with CTLE applied.*
- *The final Eye Height at TP2 is established by TP34 Eye Height Calibration.*

8.2 HBR2, HBR, and RBR Sink Calibration/Test Setup

The following methodology describes how to calibrate the stressed impairments for HBR2, HBR, and RBR per the PHY CTS using the DisplayPort standard configuration at TP1 and TP3/TP3_EQ. The detailed example shown is for HBR2.

RBR calibration is very similar to HBR/HBR2 calibration except that RBR calibration is done at TP3 instead of TP3_EQ.

8.2.1 Calibration Setup and Procedure

The following diagrams show the conceptual setup at TP1 and TP3/TP3_EQ as described in the CTS.

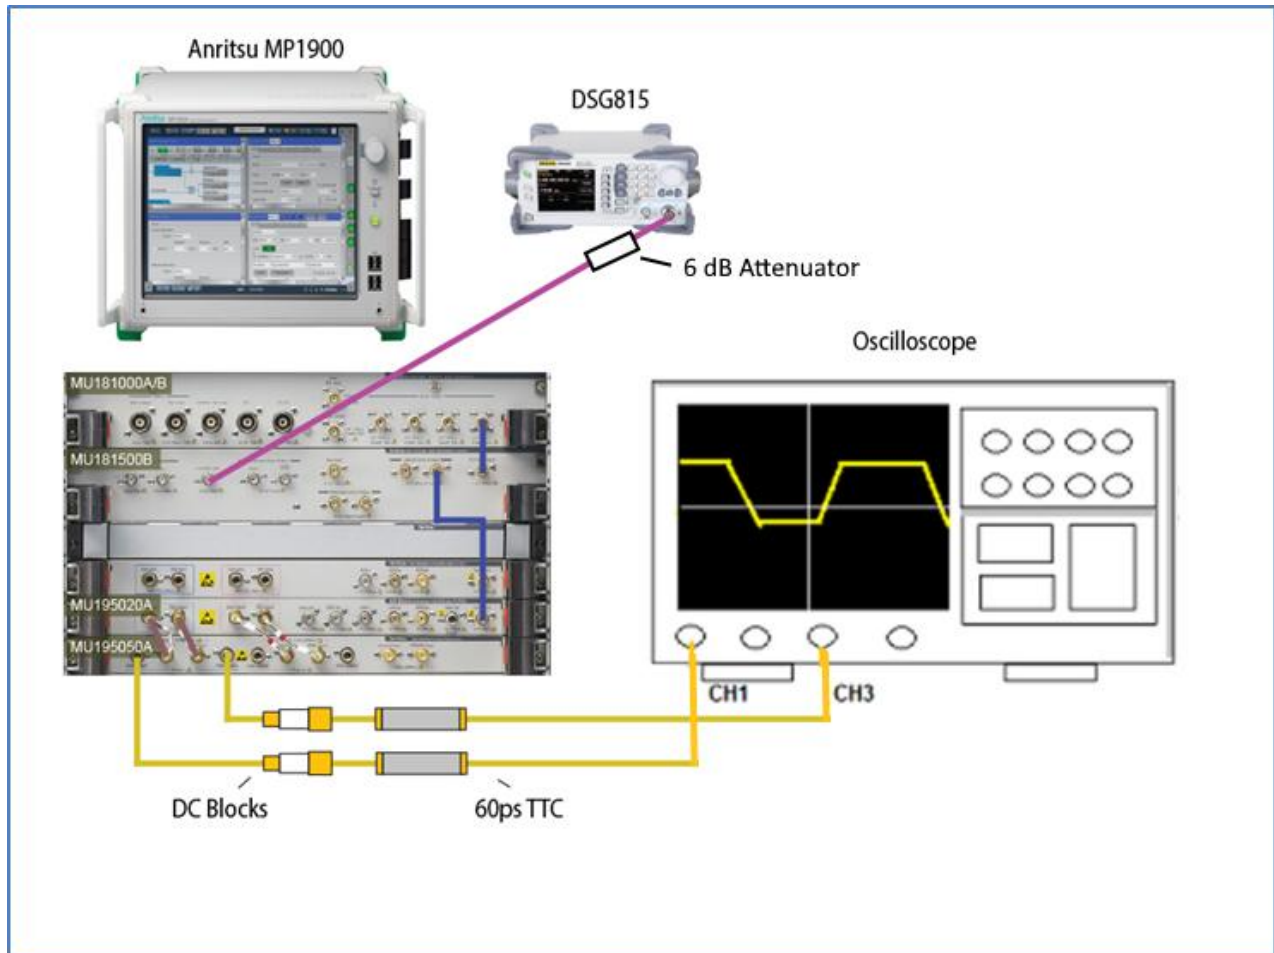


FIGURE 52. CONCEPTUAL CALIBRATION SETUP AT TP1

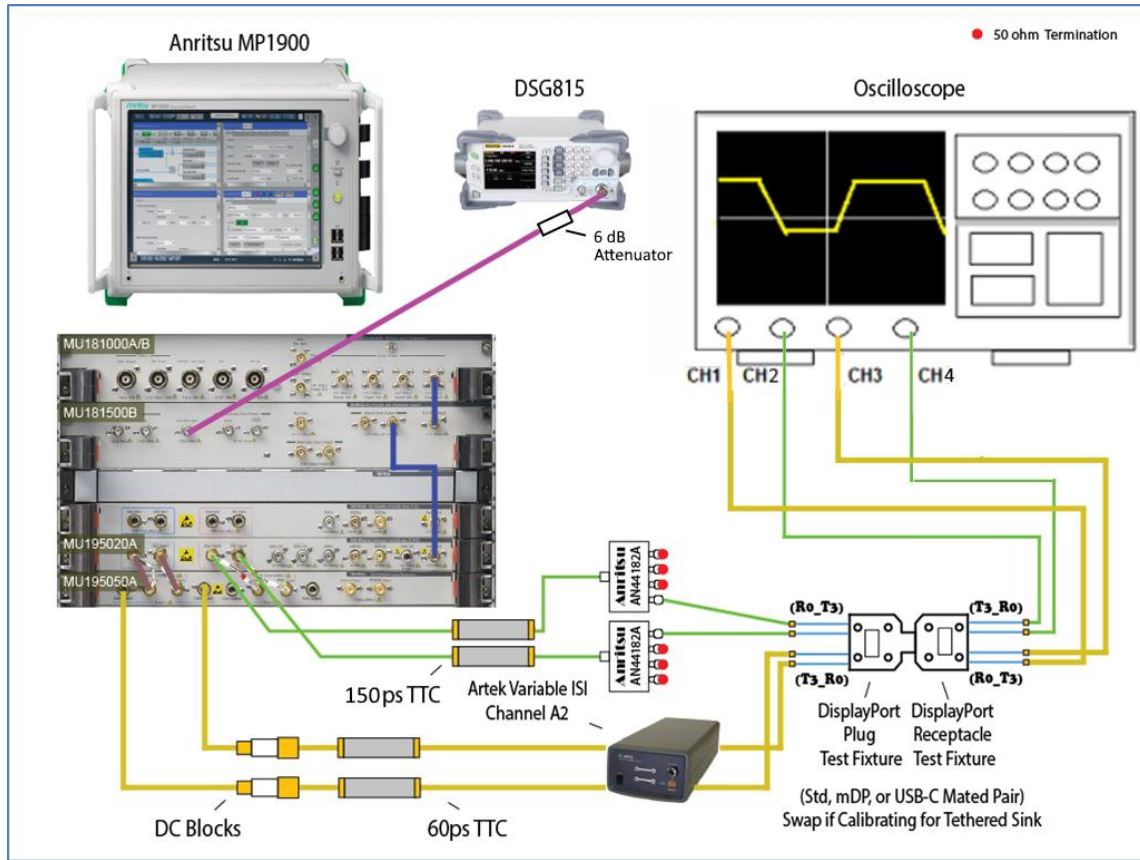


FIGURE 53. CONCEPTUAL CALIBRATION SETUP AT TP3/TP3_EQ (STANDARD CONNECTION)

1. Set up the equipment for TP1 calibration. Turn on the MP1900A BERT and apply Differential amplitude and AC coupling.
 - Ensure that pre-calibration/test procedure have been performed for the MP1900A BERT and Oscilloscope as described in Section 4.1.
 - On the MP1900A BERT, make sure the Outputs On/Off is set to Off while making connections.
 - Connect the DATA outputs of the MP1900A BERT directly to the Scope channels.
 - Set up the MP1900A BERT as follows:

RBR	HBR	HBR2	HBR3
MP1900A: SI PPG>Misc2: ▪ Data Rate: 3240.00MHz (1,620.00MHz Double Rate) ▪ Output: Ampl = 200mV (400mV Differential). ▪ Outputs On/Off: On	MP1900A: SI PPG>Misc2: ▪ Synthesizer: 2,700.00MHz ▪ DATA+: Ampl = 300mV (600mV Differential). ▪ Outputs On/Off: On	MP1900A: SI PPG>Misc2: ▪ Synthesizer: 5,400.00MHz ▪ DATA+: Ampl = 700mV (1.4V Differential). ▪ Outputs On/Off: On	MP1900A: SI PPG>Misc2: ▪ Synthesizer: 8,100.00MHz ▪ DATA+: Ampl = 700mV (1.4V Differential). ▪ Outputs On/Off: On

2. Perform RJ(rms) calibration at TP1. Apply the D24.3 user pattern and set constant clock for JMD.

Initialization of MP1900A BERT for Jitter Composition:

- a) On the MP1900A BERT, enable and set all jitter terms to zero before calibrating each term independently.
 - For HBR3 and HBR2 only, turn on “Ext” as shown below:

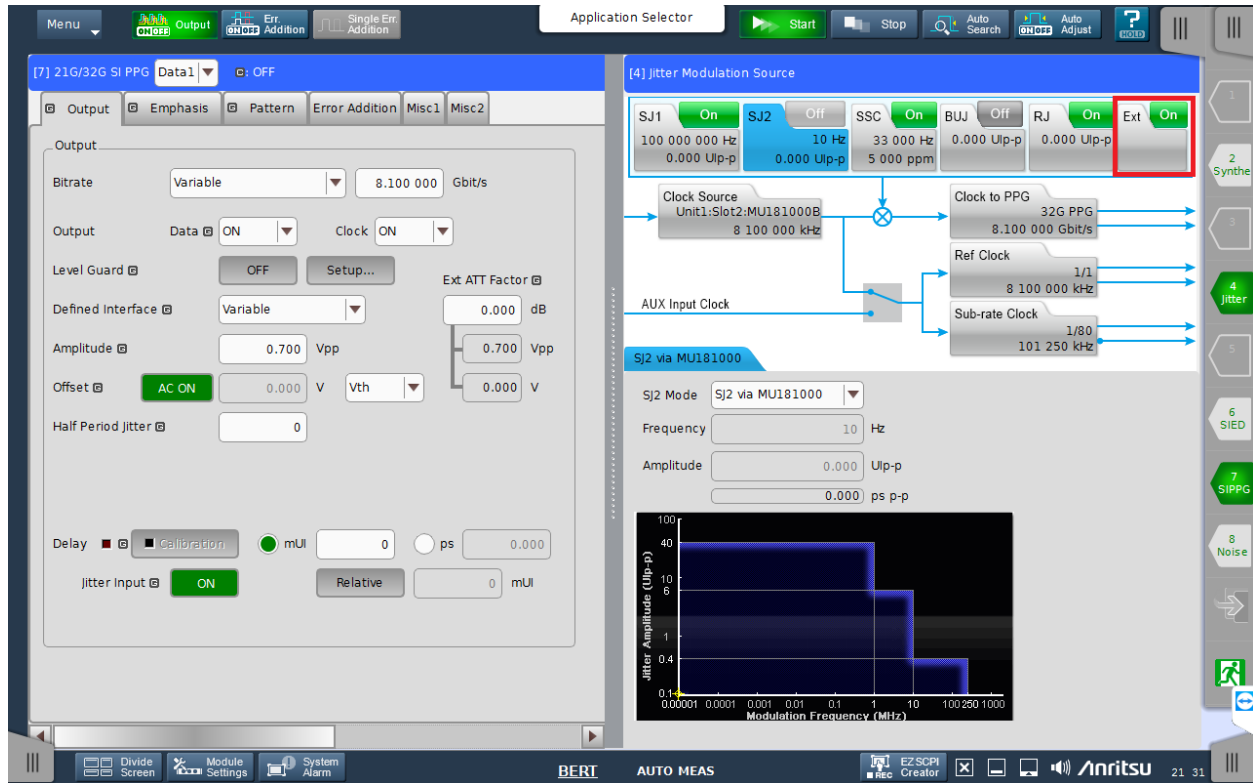


FIGURE 54. TURN ON EXTERNAL JITTER INPUT(“EXT”)

- Turn on SJ1 and set the frequency to 10MHz and amplitude to 0 Ulp-p.
- Turn on RJ and set the amplitude to 0 Ulp-p. *Note: It will default to Intrinsic Limit.*

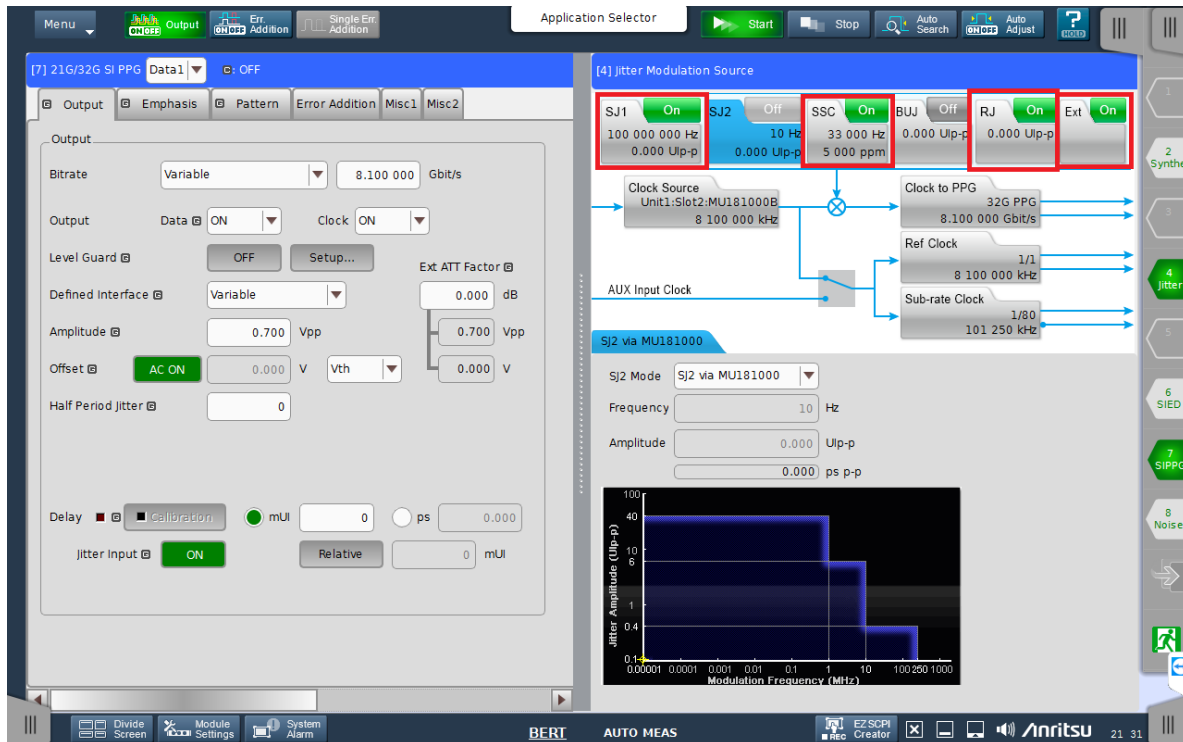


FIGURE 55. INITIAL JITTER SETUP

Random Jitter Calibration:

- b) On the MP1900A BERT, select SI PPG > RJ > "Test Pattern" to "Data". Select the User Pattern and import the 1100.txt pattern file.

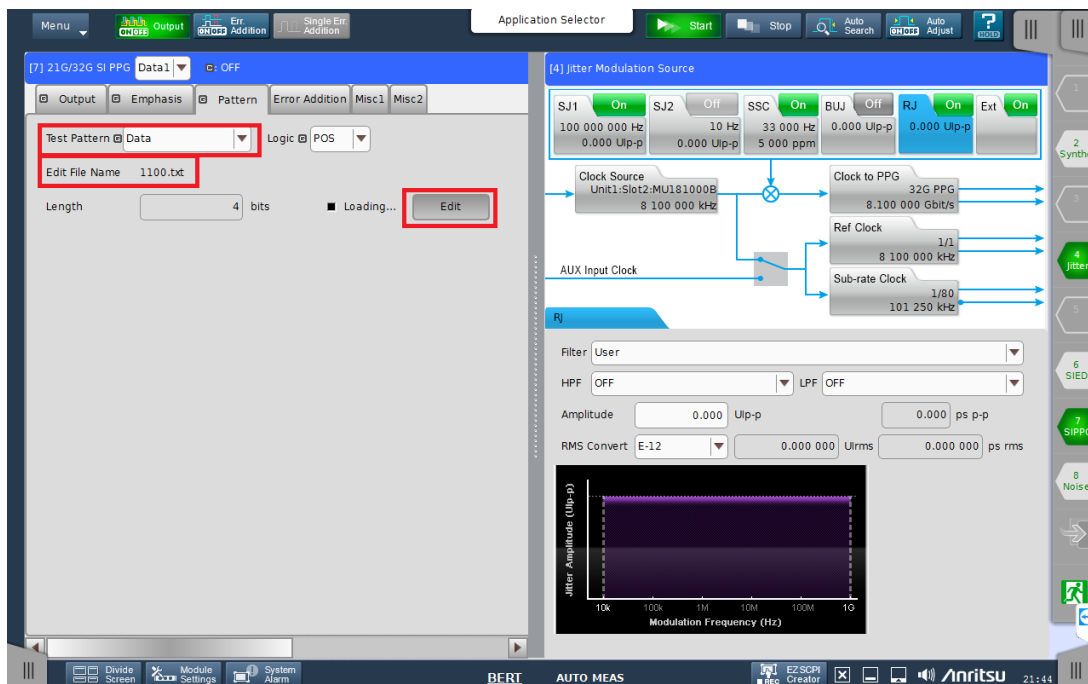


FIGURE 56. MP1900A 1100.TXT PATTERN

- c) On the MP1900A BERT, select Jitter Modulation Source > RJ.

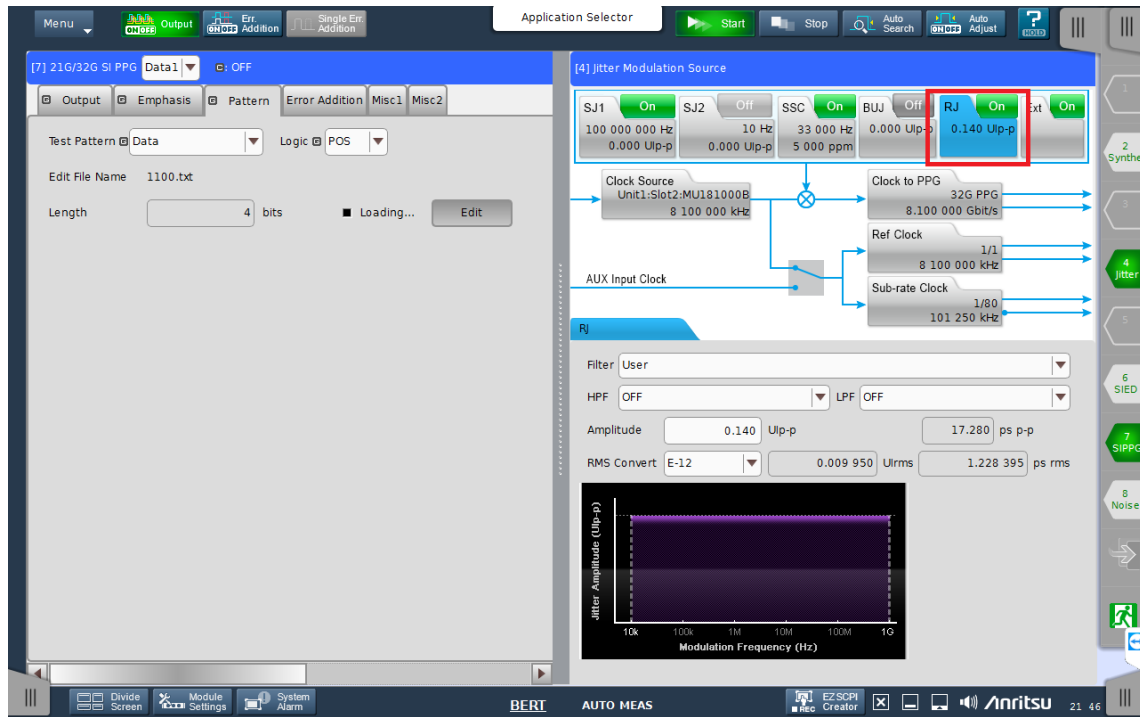


FIGURE 57. MP1900A RJ ADJUSTMENT

- d) On the Keysight Scope EZJIT or Tektronix DPOJET (Jitter and Eye Tools SW), calibrate Random Jitter for the desired data rate using the following setup files:

Keysight Scope EZJIT:

C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\HBR3_RjPj.set

C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\HBR2_RjPj.set

C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\HBR_RjPj.set

C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\RBR_RjPj.set

Tektronix Scope DPOJET (Jitter and Eye Tools SW):

C:\TekApplications\DPOJET\Setups\DisplayPort\HBR2_RjPj.set

C:\TekApplications\DPOJET\Setups\DisplayPort\HBR_RjPj.set

C:\TekApplications\DPOJET\Setups\DisplayPort\RBR_RjPj.set

- e) Adjust RJ on the MP1900A user interface while using the Single function on the EZJIT SW until RJ is calibrated to the following target values:

- RBR: **8.1mUI RMS**
- HBR: **13.5mUI RMS**
- HBR2: **16.7mUI RMS, 200mUI pk-pk (16.7 RMS x 12.0)**
- HBR3: **13mUI RMS, 123.5mUI pk-pk (13 RMS x 9.5)**



FIGURE 58. HBR3 RJ MEASUREMENT EXAMPLE ON KEYSIGHT SCOPE

Note: The RJ value in the above example is measured at 12.4mUI.

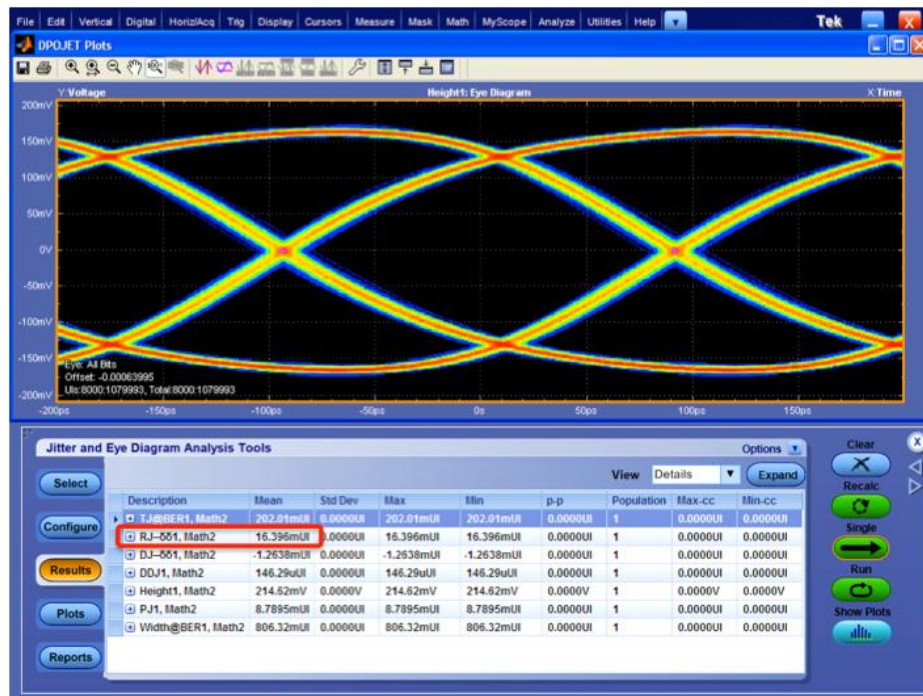


FIGURE 59. HBR2 RJ MEASUREMENT EXAMPLE ON TEKTRONIX SCOPE

Note: The RJ value in the above example is measured at 16.4mUI.

- f) Record the calibrated value for RJ.
 - g) Return the RJ value on the MP1900A BERT to zero (*Note: Intrinsic Jitter Limit will be displayed*). The value will be returned to the above calibrated value in Step 7.
3. Perform calibration for SJ_{FIXED} at TP1 for HBR3 and HBR2 only. Apply the 1100.txt user pattern and set constant clock for JMD.
- a) Turn on Ext on the MP1900A BERT.

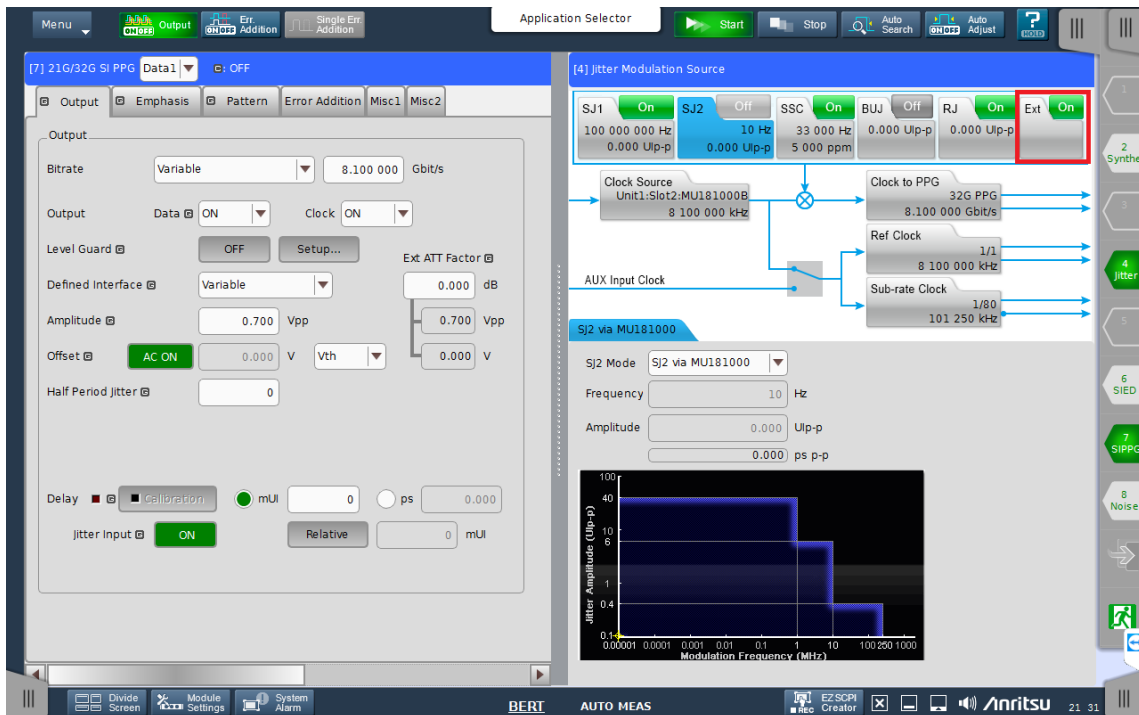


FIGURE 60. MP1900A SJ_{FIXED} SETTING FOR HBR3 AND HBR2

- b) Set the DSG815 Frequency to 297 MHz and Level to -110 dBm (Minimum amplitude output)



FIGURE 61. DSG815 SJ_{FIXED} ADJUSTMENT EXAMPLE FOR HBR3 AND HBR2

- c) On the Scope, use the *HBR2_RjPj.set* configuration to calibrate the Sinusoidal Jitter.

d) Adjust the HIGH FREQ SINE JITTER amplitude on the MP1900A BERT while using the Single function on the Scope SW to calibrate Pj to the following target values:

- RBR: **NA**
- HBR: **NA**
- HBR2: **80mUI**
- HBR3: **130mUI**



FIGURE 62. HBR3 SJ_{FIXED} MEASUREMENT EXAMPLE ON KEYSIGHT SCOPE (NOT SHOWING TARGET 80mUI)

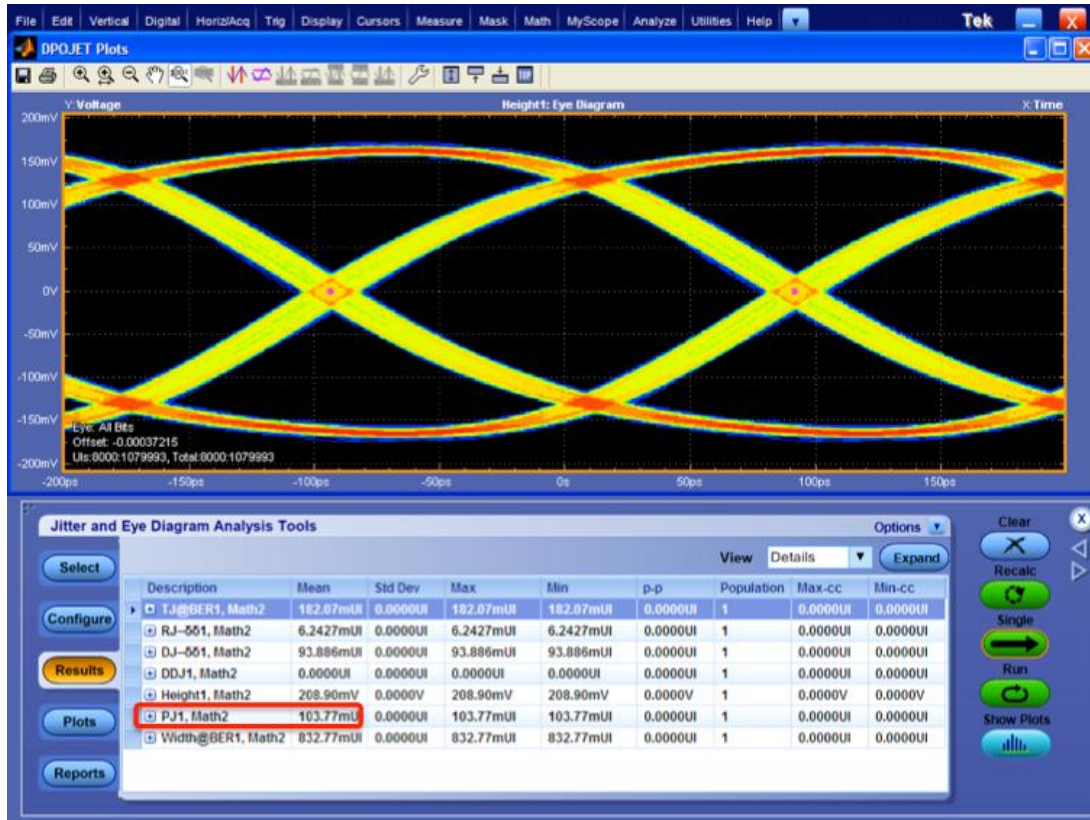


FIGURE 63. HBR2 SJ_{FIXED} MEASUREMENT EXAMPLE ON TEKTRONIX SCOPE (NOT SHOWING TARGET 80mUI)

- e) Record the calibrated value for SJ_{FIXED}.
- f) Return the Level value on the DSG815 to -110dBm. The value will be returned to the above calibrated value in Step 7.

4. Perform calibration for SJ_{SWEEP} for each frequency at TP1. Set constant clock for JMD.

Table 4-16: RBR TP3 Jitter Component Settings^{a b}

Frequency (SJ) (MHz)	TJ (mUI)	ISI (mUI)	RJ _{rms} (mUI)	Approximate SJ (mUI)
2	1648	570	8.1	981
10	778			111
20	747			80

a. See DP 1.4a, Figure 3-31.

b. This table does not account for crosstalk-injected jitter.

Table 4-11: HBR TP3_EQ Jitter Component Settings^a

Frequency (SJ) (MHz)	TJ (mUI)	ISI (mUI)	RJ _{rms} (mUI)	Approximate SJ _{SWEEP} (mUI)
2	1227	161	13.5	904
10	548			225
20	505			182
100	491			168

a. See DP 1.4a, Figure 3-30.

Table 4-9: HBR2 TP3_EQ Jitter Component Settings^a

Frequency (SJ) (MHz)	TJ (mUI)	ISI (mUI)	RJ _{rms} (mUI)	Approximate SJ _{SWEEP} (mUI)	SJ _{FIXED} at 297MHz (mUI)	Crosstalk ^b (mUI)
2	1026	220	16.7	505	80	20
10	636			116		
20	624			104		
100	620			100		

a. See DP 1.4a, Figure 3-29.

b. Crosstalk jitter of 20mUI is assumed (not calibrated on the test fixture) to be generated from the fixed-amount aggressors.

Table 4-6: HBR3 TP3_CTL Jitter Component Settings^a

Frequency (SJ) (MHz)	TJ (mUI)	ISI ^b (mUI)	RJ _{rms} (mUI)	Approximate SJ _{SWEEP} (mUI)	SJ _{FIXED} at 297MHz ^c (mUI)	Crosstalk ^d (mUI)
2	620	240	13	1013	130	20
10				137		
20				109		
100				100		

FIGURE 64. JITTER COMPONENT SETTINGS FROM CTS

a) On the MP1900A BERT, turn on SINE JITTER.

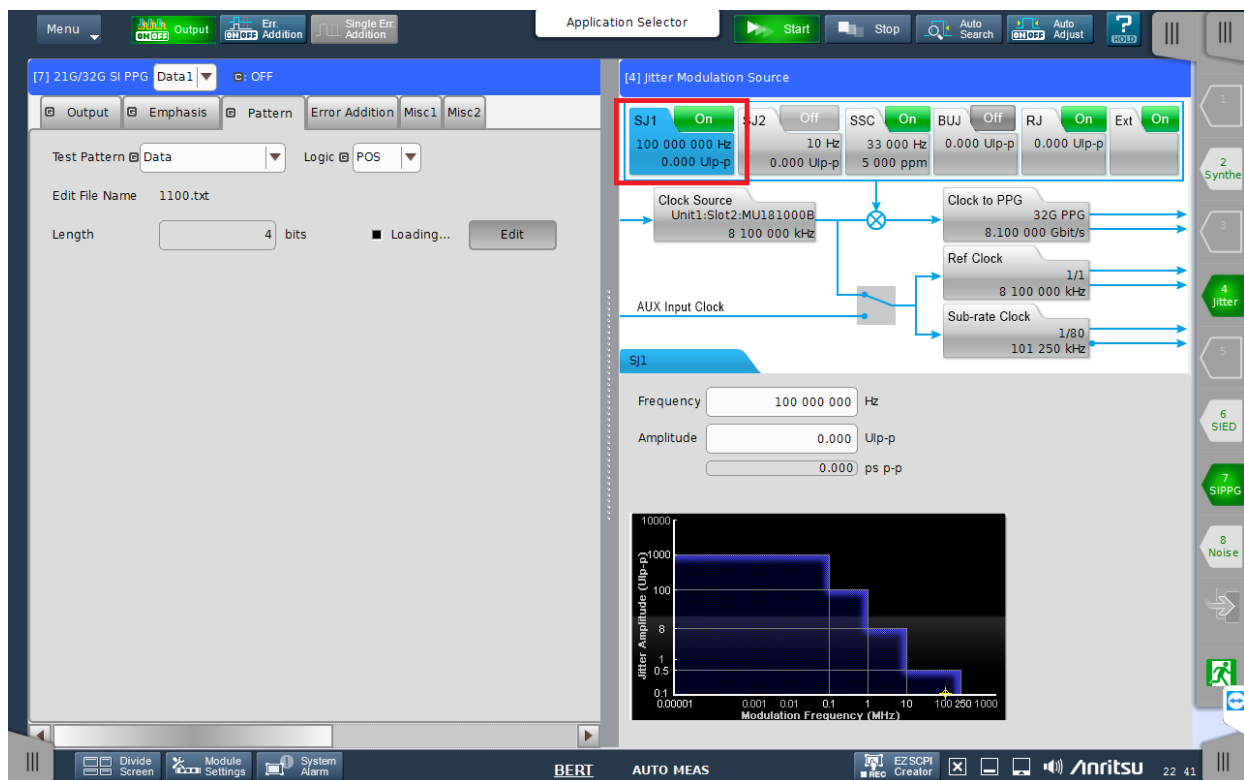


FIGURE 65. MP1900A SJ_{SWEEP} ADJUSTMENT

b) Adjust the SINE JITTER amplitude on the MP1900A BERT while using the Single function on the Scope SW to calibrate Pj to the target values.



FIGURE 66. HBR3 SJ_{SWEEP} MEASUREMENT EXAMPLE ON KEYSIGHT SCOPE

Note: In the above example, PJ is measured at 143.3mUI.

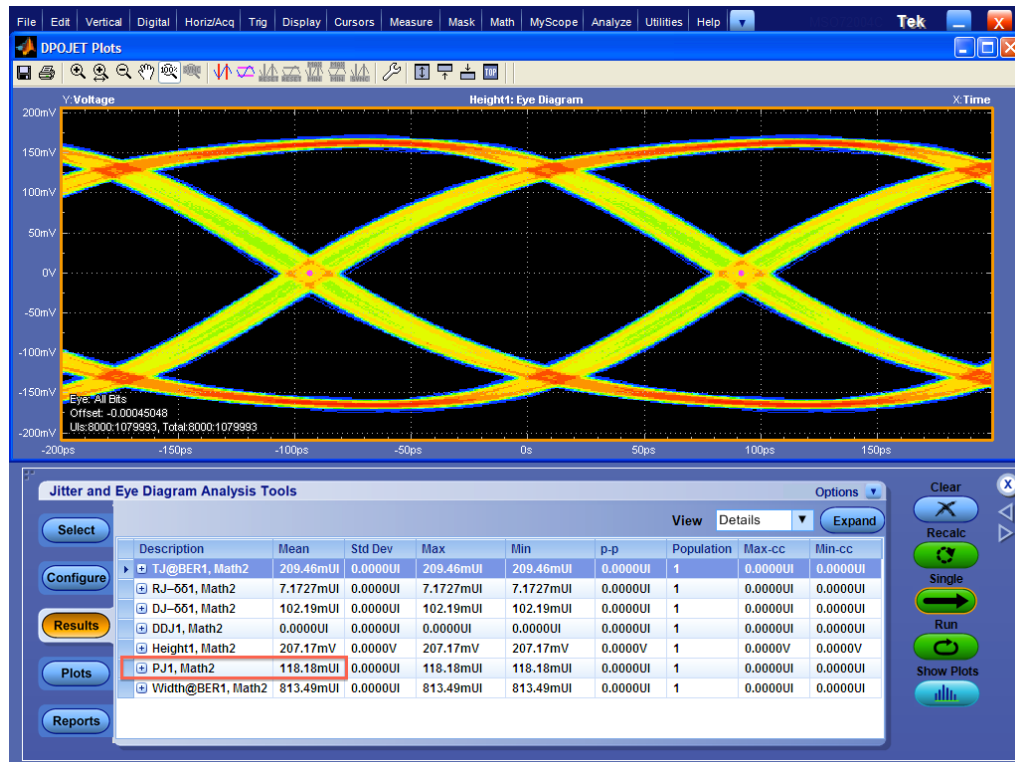


FIGURE 67. HBR2 SJ_{SWEEP} MEASUREMENT EXAMPLE ON TEKTRONIX SCOPE

Note: In the above example, PJ is measured at 118.2mUI.

5. Set up the equipment for TP3 calibration. Measure the ISI at TP3_EQ to the target ISI values specified in the CTS for HBR, HBR2 and HBR3 respectively. Apply the PRBS7 test pattern for HBR, CP2520 for HBR2 or TPS4 for HBR3. Set the clock recovery of the JMD to 2nd Order as described in the CTS. For RBR, apply the PRBS7_X2 test pattern and calibrate the ISI at TP3 without equalization.

Note: Ensure that adequate ISI at TP3_EQ (for HBR, HBR2 and HBR3) or TP3 (for RBR) is achieved by the ISI generator being used as required in the CTS.

Note: Actual ISI calibration results may vary depending on cables and adapters used in the physical setup. Additional cables and adapters may be needed to achieve a calibration value that is within +/-5% of the target value. It is recommended to capture the screenshot of the calibrated ISI and keep it with the test results for future reference.

RBR ISI Procedure	HBR ISI Procedure	HBR2 ISI Procedure	HBR3 ISI Procedure
On MP1900A > SI PPG > Pattern: - Pattern = PRBS7_X2 (Double Pattern) - Outputs On/Off: On On Scope: - Recall Scope setup file to make DDJ measurements: For KS Scope: <C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\RBR_PLL_Eye.set> - For Tek Scope: <C:\TekApplications\DPOJET\Setups\DisplayPort\RBR_PLL_Eye.set> - For Tek Scope: DPOJET Sequence menu: Single - Measure ISI = 570mUI +/- 5%	On MP1900A > SI PPG > Pattern: - Pattern = PRBS7 - Outputs On/Off: On On Scope: - Recall Scope setup file to apply TP3_EQ filter and make DDJ measurements: For KS Scope: <C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\HBR_PLL_Eye.set> - For Tek Scope: <C:\TekApplications\DPOJET\Setups\DisplayPort\HBR_PLL_Eye.set> - For Tek Scope: DPOJET Sequence menu: Single - Measure ISI = 161mUI +/- 5%	On MP1900A > SI PPG > Pattern: - Pattern = Data File = Anritsu DisplayPort Sink Test 1.4/HBR2_Compliance_2520bits_Pattern1.txt. - Outputs On/Off: On On Scope: - Recall Scope setup file to apply TP3_EQ filter and make DDJ measurements: For KS Scope: <C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\HBR2_PLL_Eye.set> - For Tek Scope: <C:\TekApplications\DPOJET\Setups\DisplayPort\HBR2_PLL_Eye.set> - For Tek Scope: DPOJET Sequence	On MP1900A > SI PPG > Pattern: - Pattern = Data File = Anritsu DisplayPort Sink Test 1.4/HBR3_TPS4.txt. - Outputs On/Off: On On Scope: - Recall Scope setup file to apply TP3_EQ filter and make DDJ measurements: For KS Scope: <C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\HBR3_PLL_Eye.set> - For Tek Scope: <C:\TekApplications\DPOJET\Setups\DisplayPort\HBR3_PLL_Eye.set> - For Tek Scope: DPOJET Sequence menu: Single

▪ Capture and save scope screenshot for compliance records	▪ Capture and save scope screenshot for compliance records	menu: Single ▪ Measure ISI = 220mUI +/-5% ▪ Capture and save scope screenshot for compliance records	▪ Measure ISI = 240mUI +/-5% ▪ Capture and save scope screenshot for compliance records
--	--	---	---

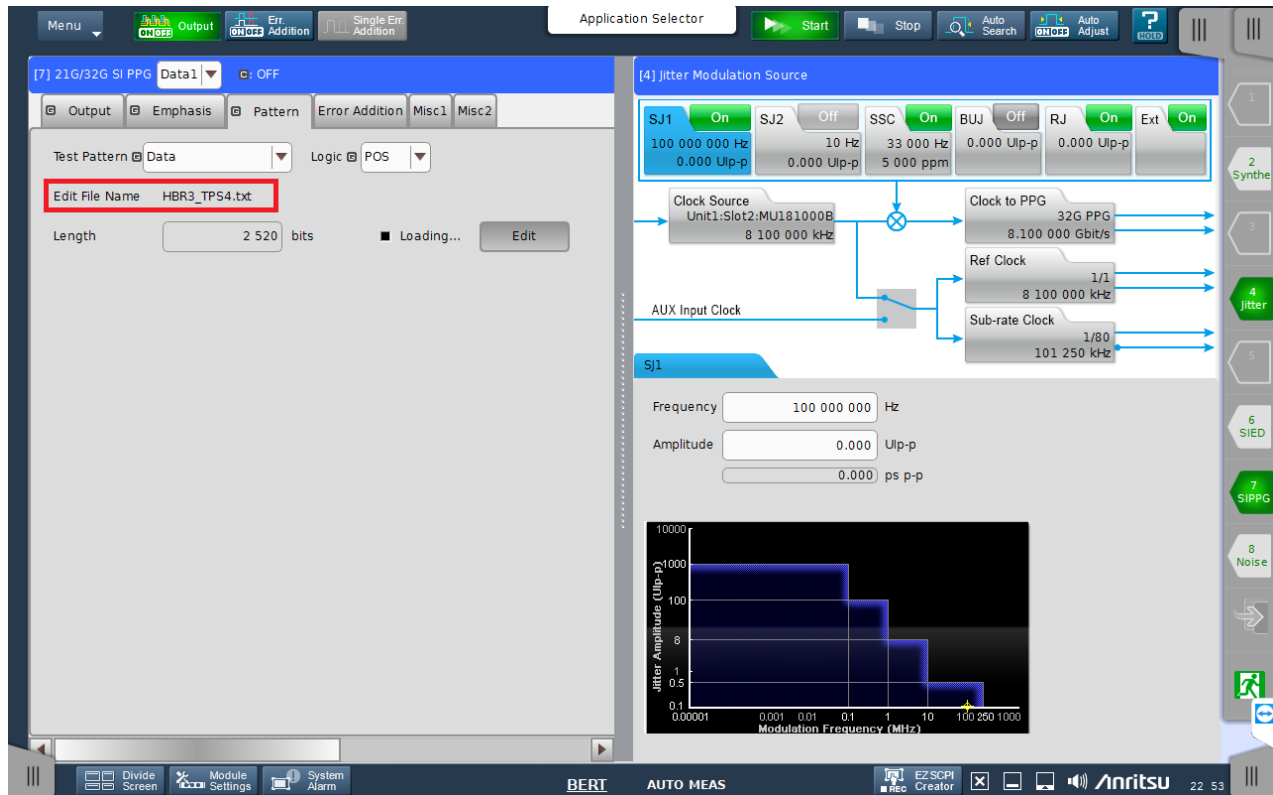


FIGURE 68. MP1900A HBR3 ISI SETUP EXAMPLE



FIGURE 69. HBR3 ISI MEASUREMENT EXAMPLE ON KEYSIGHT SCOPE

Note: The ISI value in the above example is measured at 69.2mUI.

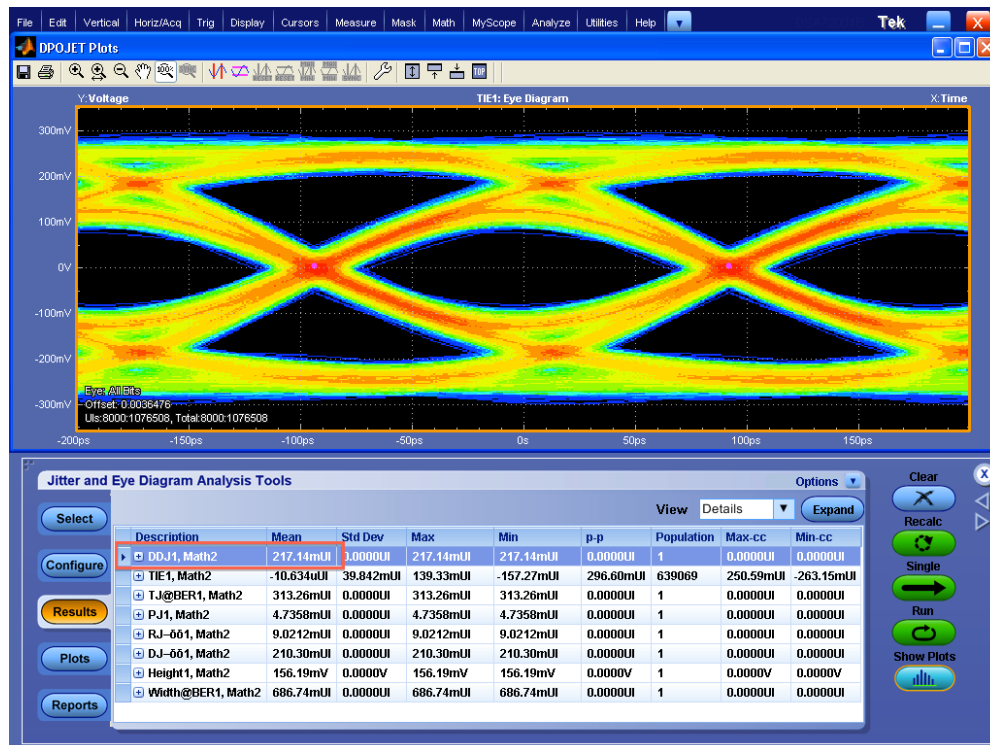


FIGURE 70. HBR2 ISI MEASUREMENT EXAMPLE ON TEKTRONIX SCOPE

Note: The ISI value in the above example is measured at 217mUI.

Note: It is recommended to capture and save the screenshot of the scope measurement to demonstrate that the proper value has been achieved.

Note: To achieve the best measurements on the scope, ensure that its vertical signals are properly scaled without clipping before applying the Ch1-Ch3 function and Equalization.

6. On the MP1900A BERT, make sure that the test pattern is set to PRBS7_X2 (Double Pattern for RBR), PRBS7 (for HBR), CP2520 (for HBR2) and TPS4 (for HBR3) from the previous step. In case the pattern has been changed, re-select as follows:
 - a) For HBR3, select the User Pattern and import *HBR3_TPS4.txt* from the DisplayPort folder. For RBR, select PRBS7_X2, while for HBR, select PRBS7 and for HBR2 select *HBR2_Compliance_2520bits_Pattern1.txt* from the Pattern menu.

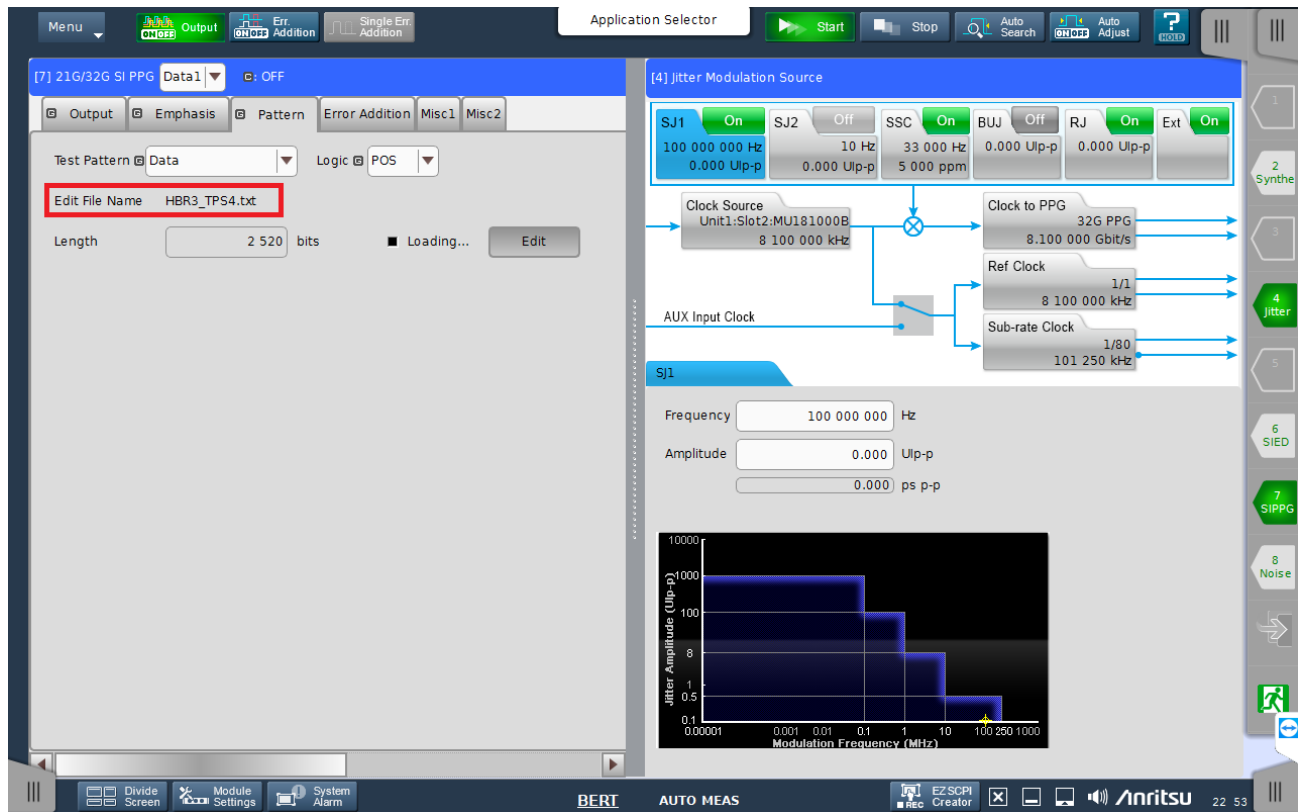


FIGURE 71. HBR3 COMPLIANCE EYE PATTERN SETUP EXAMPLE

7. On the MP1900A BERT, enable ISI, RJ, SJ_{FIXED} , SJ_{SWEEP} , and SSC.
 - a) ISI is achieved in Step 5.
 - b) Return the Amplitude of RJ (RANDOM JITTER) to the value calibrated in Step 2.
 - c) For HBR2, return the Amplitude of SJ_{FIXED} (HIGH FREQ SINE JITTER) to the value calibrated in Step 3.
 - d) Turn on SJ_{SWEEP} (SINE JITTER) as calibrated in Step 4.
 - e) Turn on SSC with 33kHz frequency and 5000ppm with a triangle profile.

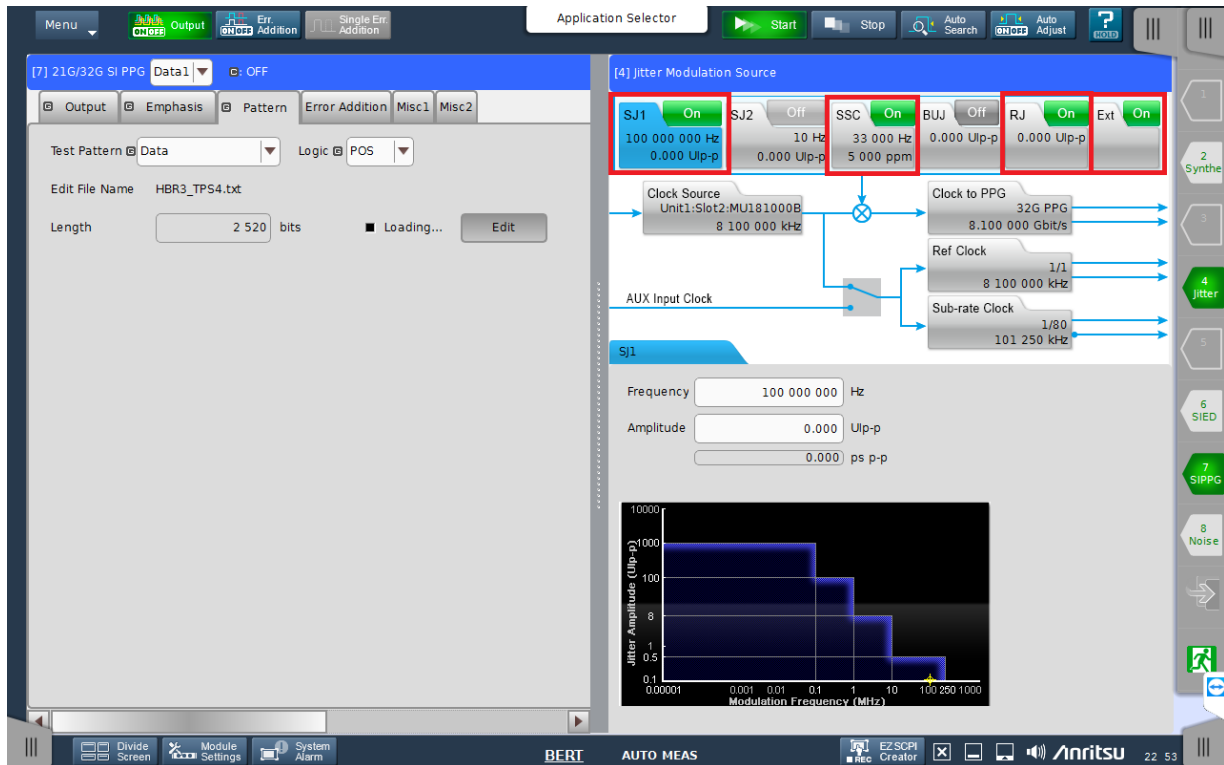


FIGURE 72. ALL STRESSES ENABLED EXCEPT CROSSTALK FOR HBR3

8. Perform calibration at TP3_EQ for the MP1900A Amplitude to reach the target Eye Height of 150mV for HBR, 100.0mV without crosstalk for HBR2 or 50mV without crosstalk for HBR3. Set the 2nd order clock recovery function for JMD as described in the DP specification.
 - a) On the Keysight or Tektronix Scope, acquire and analyze the signal using the following setup files for each data rate:
 For Keysight Scope:
 - C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\HBR3_RjPj.set
 - C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\HBR2_RjPj.set
 - C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\HBR_RjPj.set
 - C:\GRL\Agilent\Setup\Anritsu DisplayPort Sink Test 1.4\RBR_RjPj.set
 For Tektronix Scope:
 - C:\TekApplications\DPOJET\Setups\DisplayPort\HBR2_PLL_Eye.set
 - C:\TekApplications\DPOJET\Setups\DisplayPort\HBR_PLL_Eye.set
 - C:\TekApplications\DPOJET\Setups\DisplayPort\RBR_PLL_Eye.set
 - b) Select SI PPG > Output on the MP1900A BERT and adjust the DATA Amplitude while using the Single function on the Infiniium Software to measure the Eye Height to the following target values:
 - RBR: **56mV (+/- 3%)**

- HBR: **160mV (+/- 3%)**
- HBR2: **100mV (+/- 3%)**
- HBR3: **50mV (+/- 3%)**

Note: To achieve a repeatable Eye Opening measurement, capture a minimum of 2mUI with the JMD. Measure the vertical Eye Height as described in the CTS.

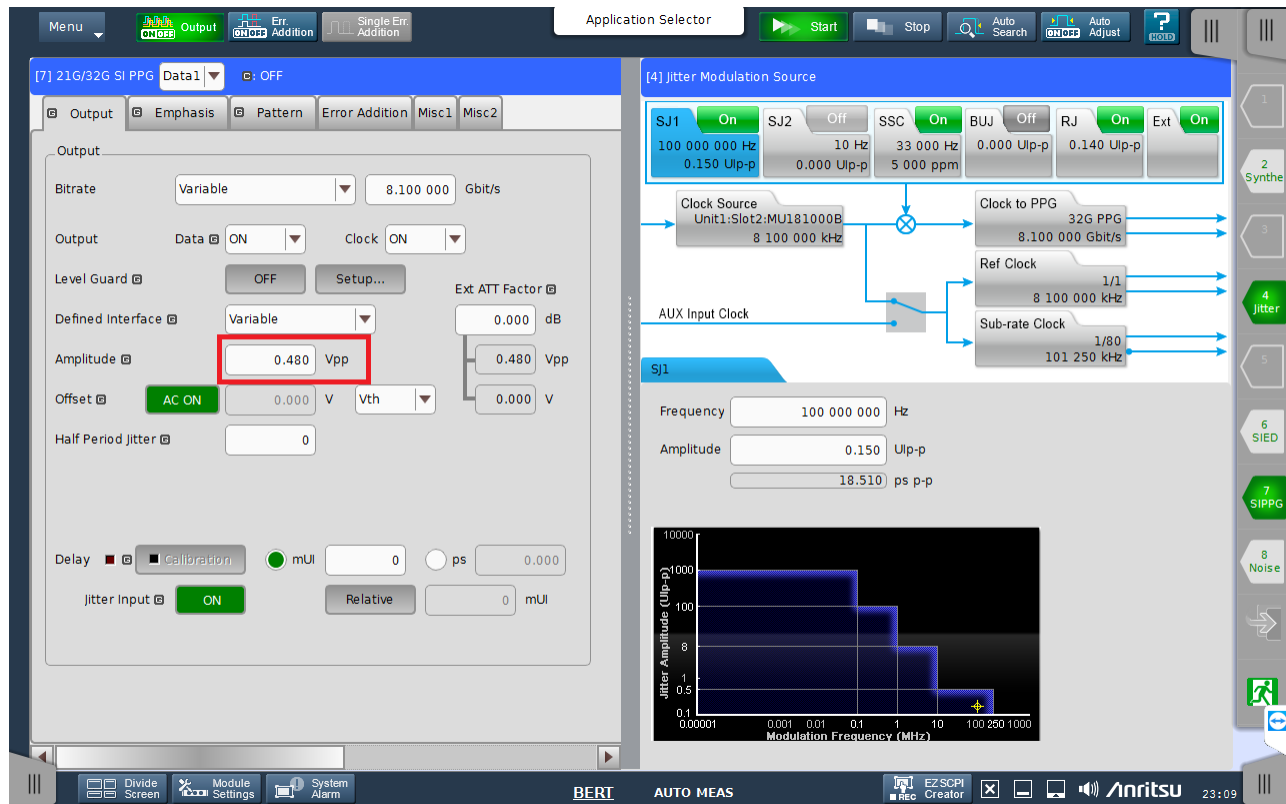


FIGURE 73. HBR3 EYE HEIGHT ADJUSTMENT EXAMPLE

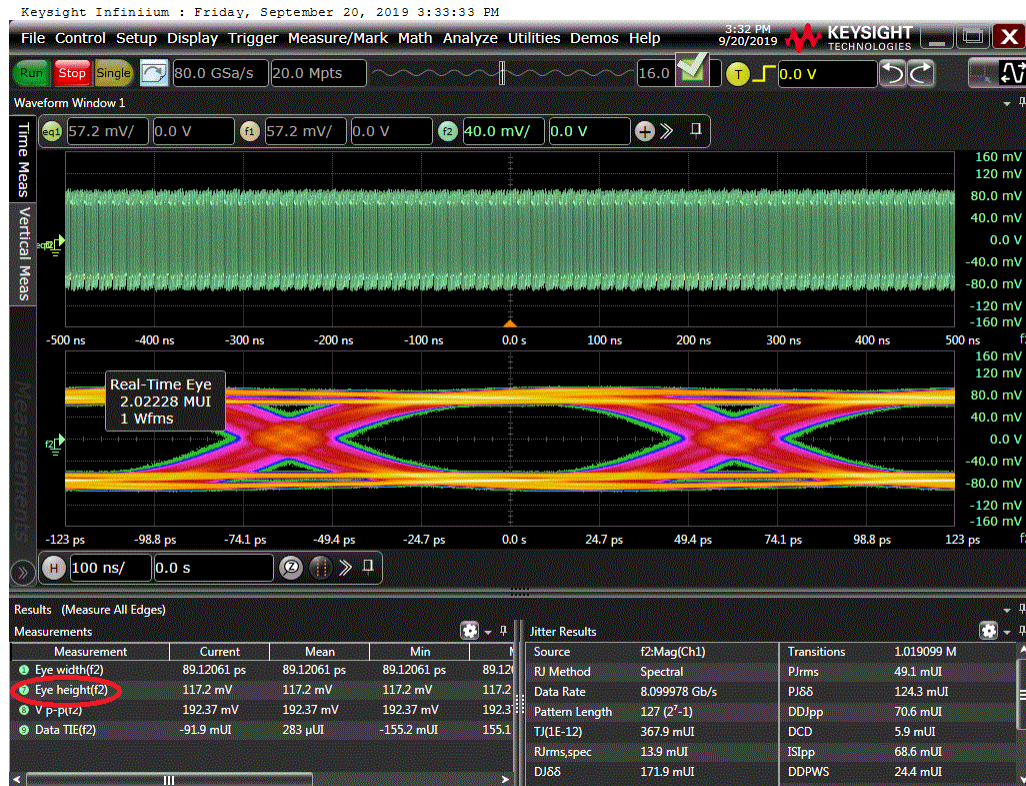


FIGURE 74. HBR3 EYE HEIGHT MEASUREMENT EXAMPLE ON KEYSIGHT SCOPE

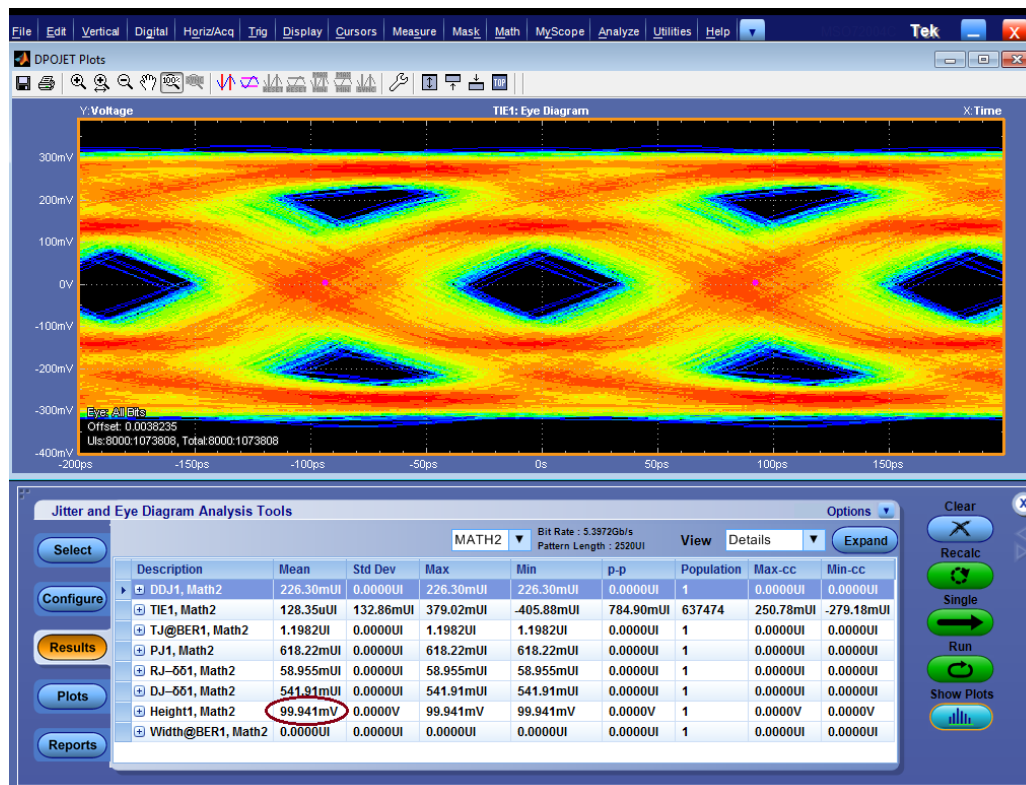


FIGURE 75. HBR2 EYE HEIGHT MEASUREMENT EXAMPLE ON TEKTRONIX SCOPE

9. On the Scope, apply a non-phase aligned crosstalk aggressor signal to Ch2-Ch4 for all data rates. Use the D24.3 pattern and set the Differential amplitude to 800mV for the crosstalk signal. Adjust the crosstalk signal Amplitude to reach the target value for the appropriate link rate.

Note: The Edge rate of the crosstalk signal is set to 130ps (20/80) measured at TP3.

Note: Crosstalk amplitude is dependent on the receptacle fixture being used. Refer to the respective manufacturer for details.

- a) Select SI PPG > Data2 (Second channel) on the MP1900A BERT and set the test pattern as 1100.txt.

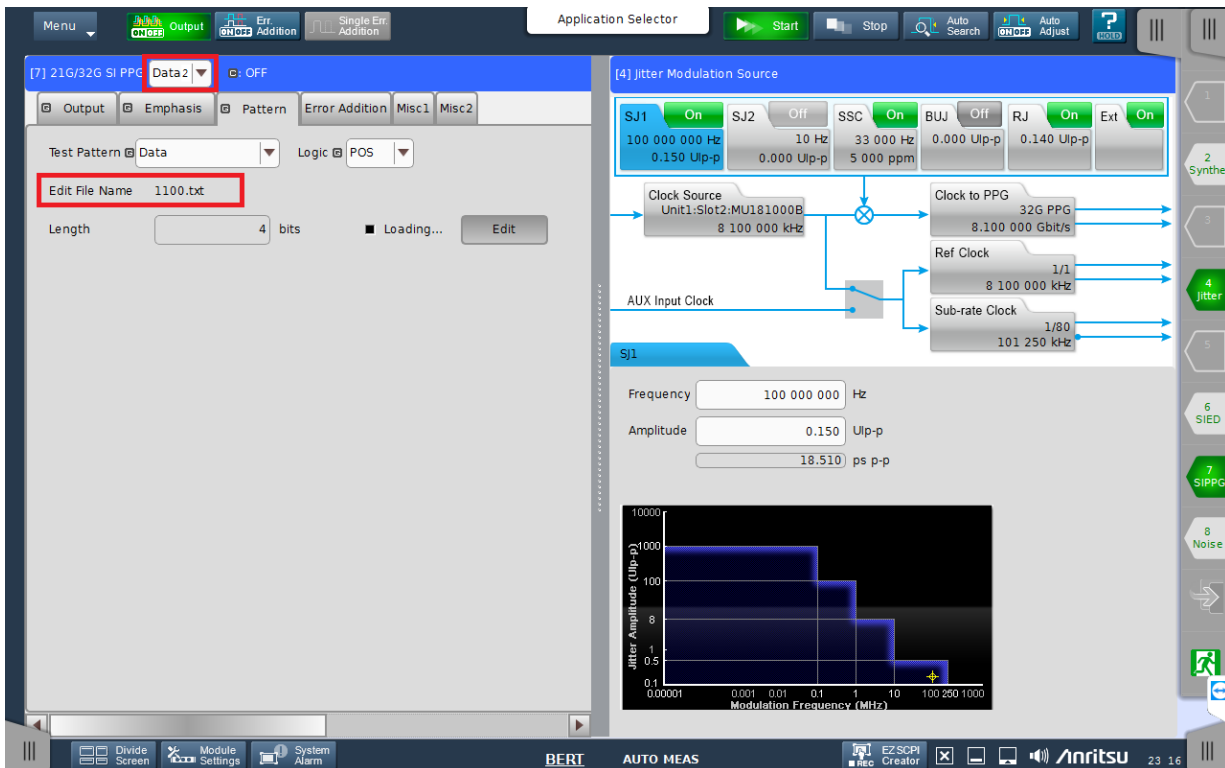


FIGURE 76. CROSSTALK PATTERN SETTING

- b) Adjust the DATA Amplitude while using the Single function on the Infiniium software to measure Voltage pk-pk to the following target values:

- RBR: **138mV +/- 2%**
- HBR: **450mV +/- 2%**
- HBR2: **300mV +/- 2%**
- HBR3: **300mV +/- 2%**

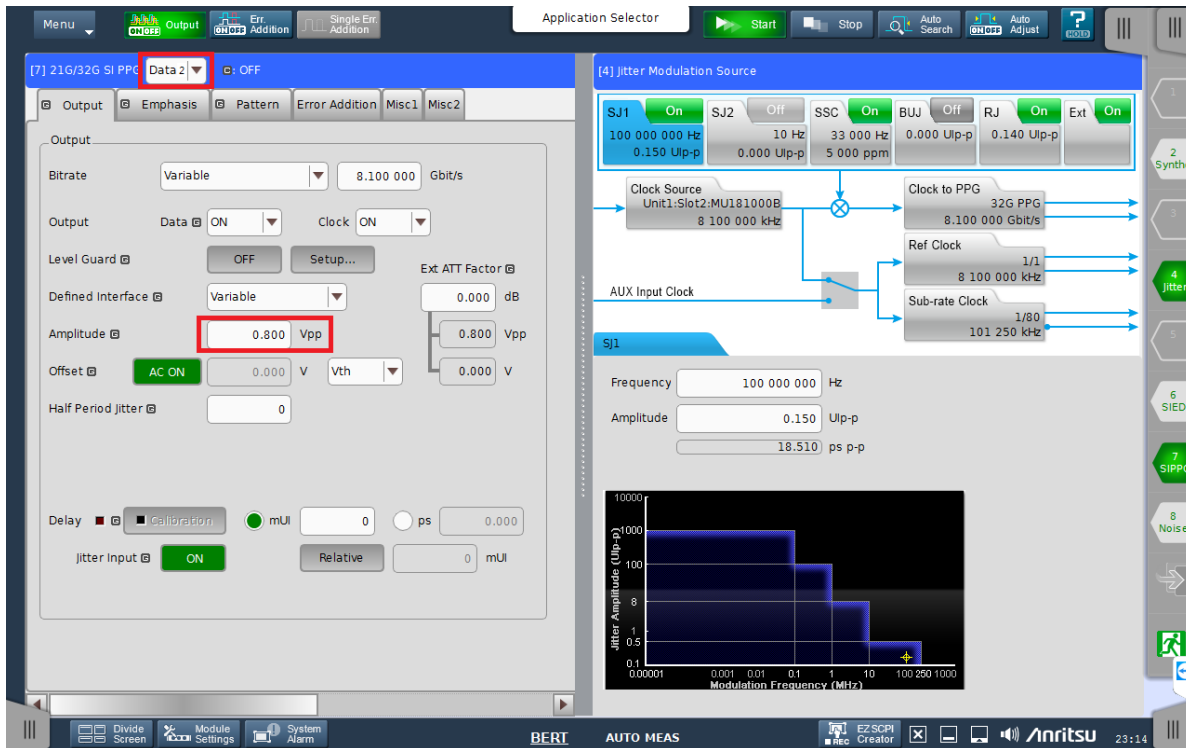


FIGURE 77. HBR3 EYE HEIGHT MEASUREMENT WITH CROSSTALK ADJUSTMENT

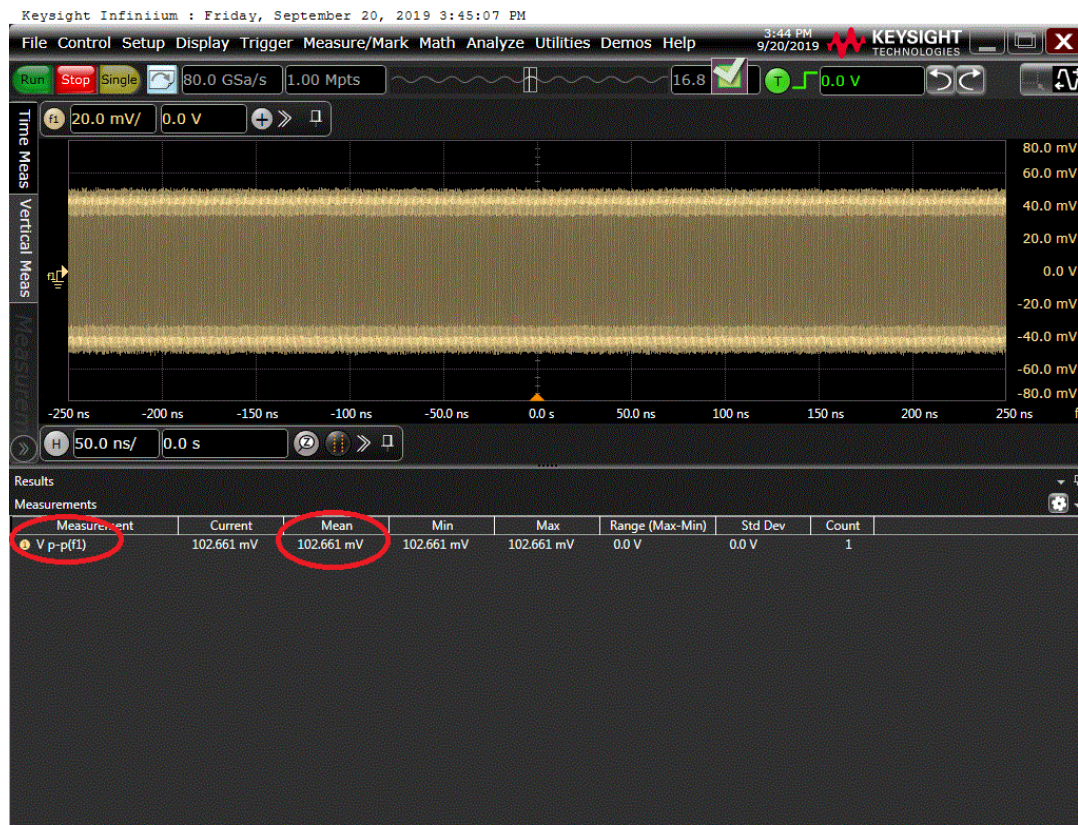


FIGURE 78. HBR3 CROSSTALK MEASUREMENT ON KEYSIGHT SCOPE

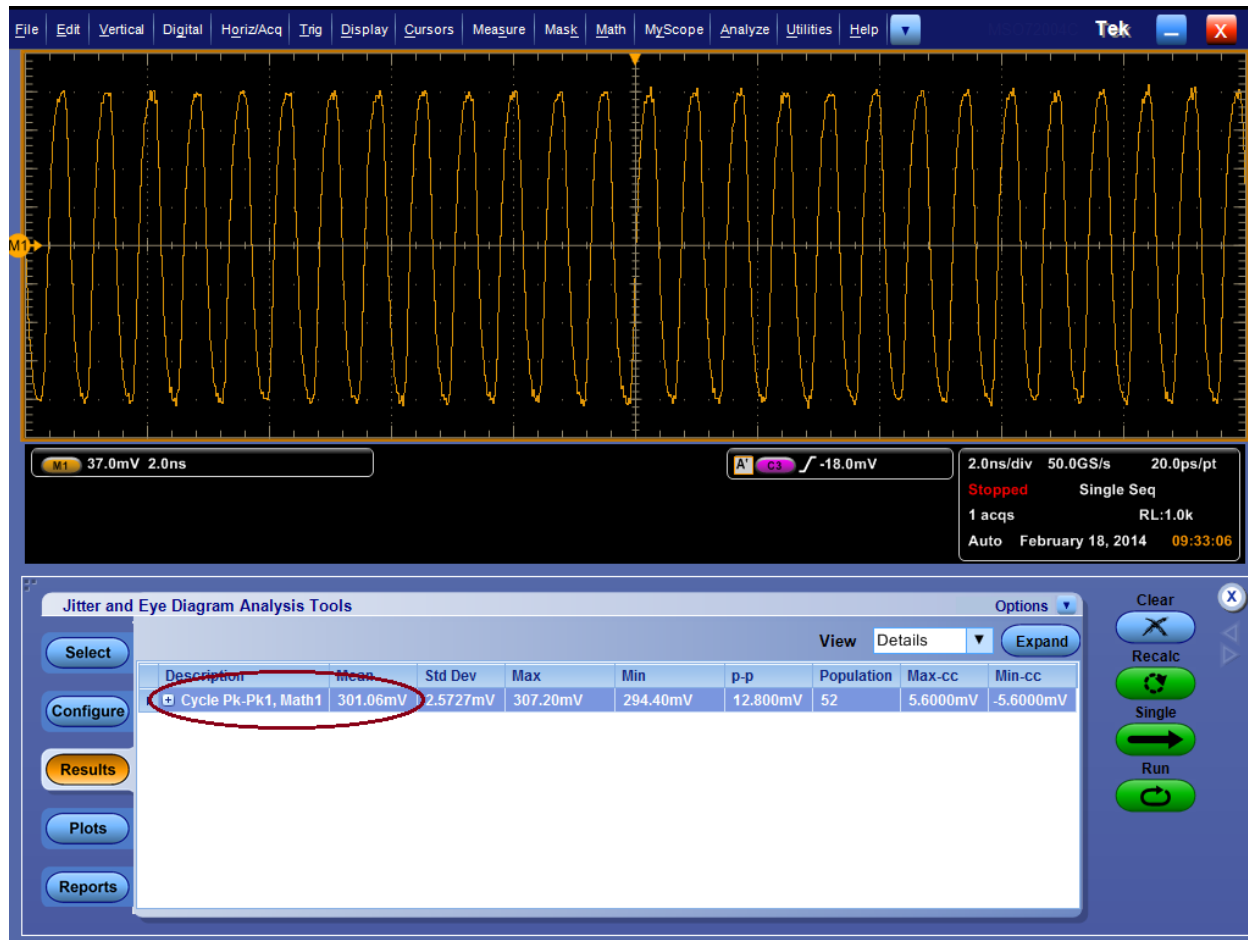


FIGURE 79. HBR2 CROSSTALK MEASUREMENT ON TEKTRONIX SCOPE

8.2.2 DUT Test Setup and Procedure

The following diagram shows the typical setup for testing the DUT. At TP3, disconnect the 'P' (Plug) type adapter from the 'R' (Receptacle) calibration adapter and connect the 'P' type adapter to the DUT for testing. Connect crosstalk lanes between the 'P' type adapter and crosstalk source.

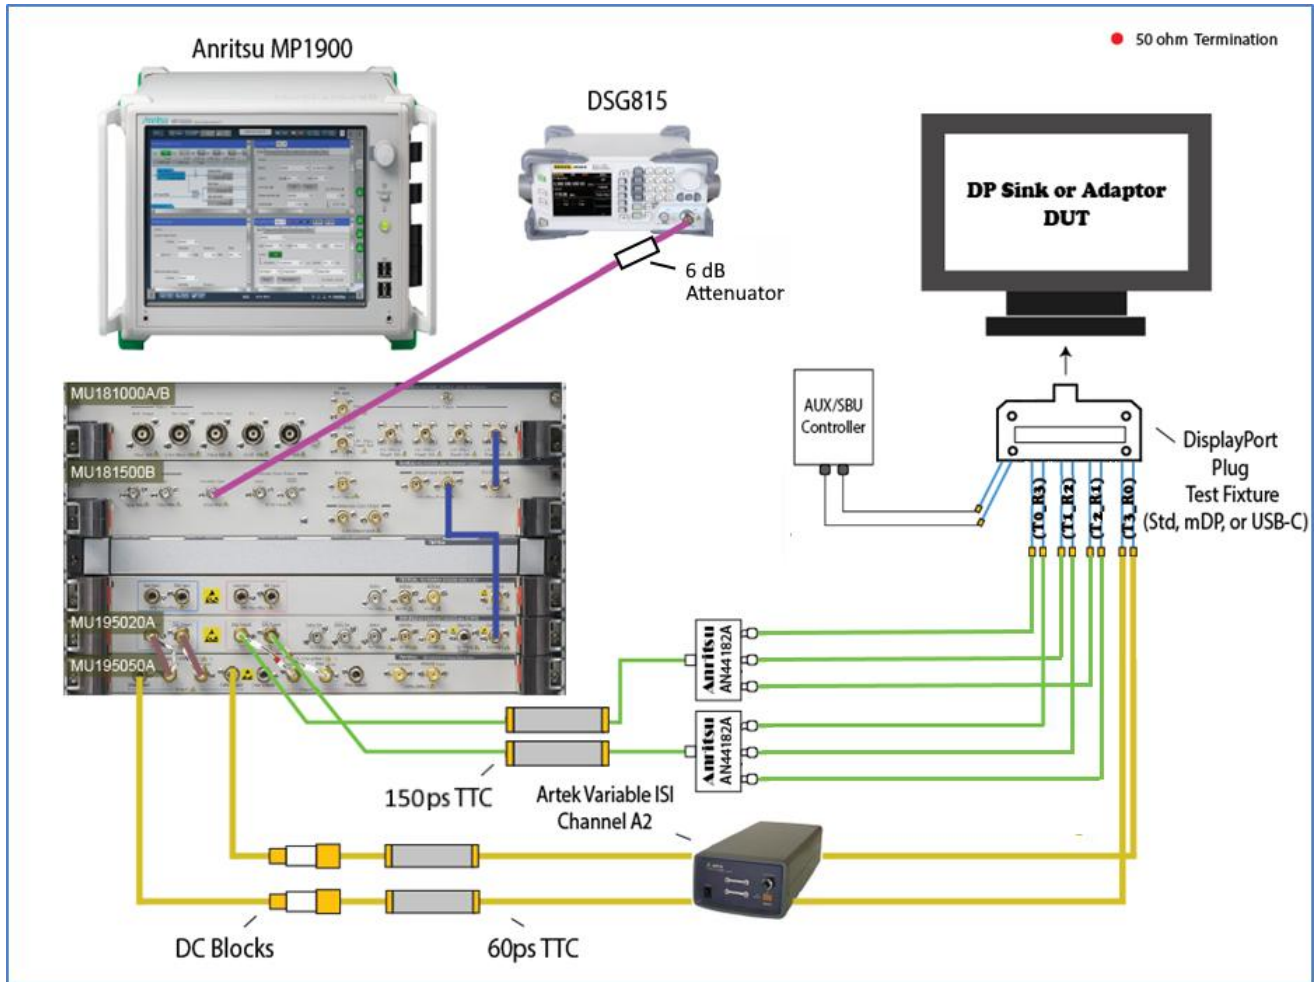


FIGURE 80. TYPICAL DUT TEST SETUP

Test the DUT for each frequency as follows:

1. Verify Frequency Lock using the D10.2 clock pattern for each data rate.
2. Verify Symbol Lock using the Symbol Lock pattern for each data rate and each frequency.
3. Inject Errors with the PRBS7_X2 pattern (for RBR) or PRBS7 pattern (for HBR) or CP2520 Compliance Eye Pattern (for HBR2) and confirm the correct number of errors is being detected.
4. Test the DUT at each data rate and duration as described in Table 4-3 of the CTS.

Table 4-3: BER Measurement Test Parameters

Jitter Frequency (MHz)	Number of Bits	Maximum Number of Allowable Bit Errors	Bit Rate	Observation Time (Seconds) ^a	Data Rate Offset
2	10 ¹²	1000	HBR3	123	0
			HBR2	185	
			HBR	370	
			RBR	620	
10	10 ¹¹	100	HBR3	13	+350ppm
			HBR2	19	
			HBR	37	
			RBR	62	
20	10 ¹¹	100	HBR3	13	0
			HBR2	19	
			HBR	37	
			RBR	62	
100	10 ¹¹	100	HBR3	13	0
			HBR2	19	
			HBR	37	

a. To evaluate, the number of bits shall be multiplied by the unit interval (UI) in picoseconds (e.g., for HBR, 10¹¹ bits at HBR = 370ps/UI × 10¹¹UI = 37 seconds).

FIGURE 81. TABLE OF TEST TIMES FOR EACH LINK RATE PER CTS

9 Appendix B: Connecting Keysight Oscilloscope to PC

If using a Keysight oscilloscope, refer to the following procedure on how to connect the Scope to be used with a PC. The Keysight Scope can be connected to the PC through GPIB, USB, or LAN.

1. Download the latest version of the Keysight IO Libraries Suite software from the Keysight website and install on the PC.
2. When installed successfully, the IO icon () will appear in the taskbar notification area of the PC.
3. Select the IO icon to launch the **Keysight Connection Expert**.
4. Click Rescan.

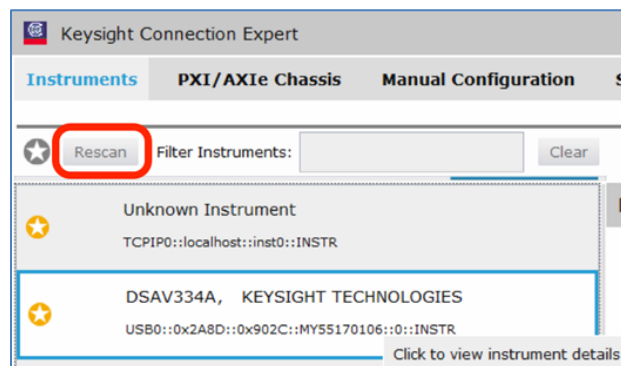


FIGURE 82. KEYSIGHT CONNECTION EXPERT

5. Refresh the system. The Keysight Scope is shown on the left pane and the VISA address is shown on the right pane.

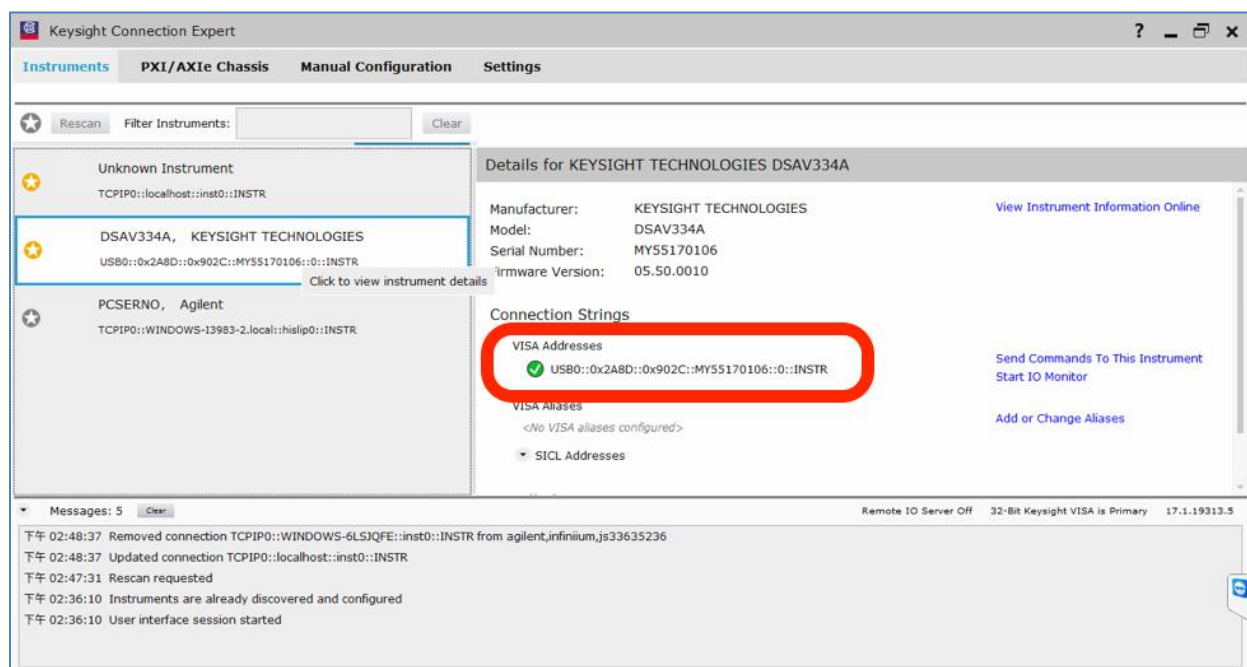


FIGURE 83. OSCILLOSCOPE'S VISA ADDRESS

6. When connecting the Keysight Scope to the PC through GPIB/USB, type in the VISA address into the 'Address' field on the Equipment Setup page of the GRL-DP14-SINKAN Test Application. If connected via LAN, type in the Scope IP address, for example "TCPIP0::192.168.0.110::inst0::INSTR". Note to **omit** the Port number from the address.

10 Appendix C: Artek CLE1000-A2 Installation

10.1 Install ISI Generator Driver

If using the Artek CLE1000-A2 for Variable ISI Calibration, follow these steps to install the ISI generator driver before selecting it as an ISI channel in the GRL Platform Solutions software.

1. Connect the CLE1000-A2 to a controller PC using a USB 2.0 cable.
2. Turn on the front panel power switch on the CLE1000-A2.
3. Right-click on **My Computer > Manage > Device Manager**. If no software for the CLE1000-A2 has been installed, you will see a 'bang' in the Device Manager.

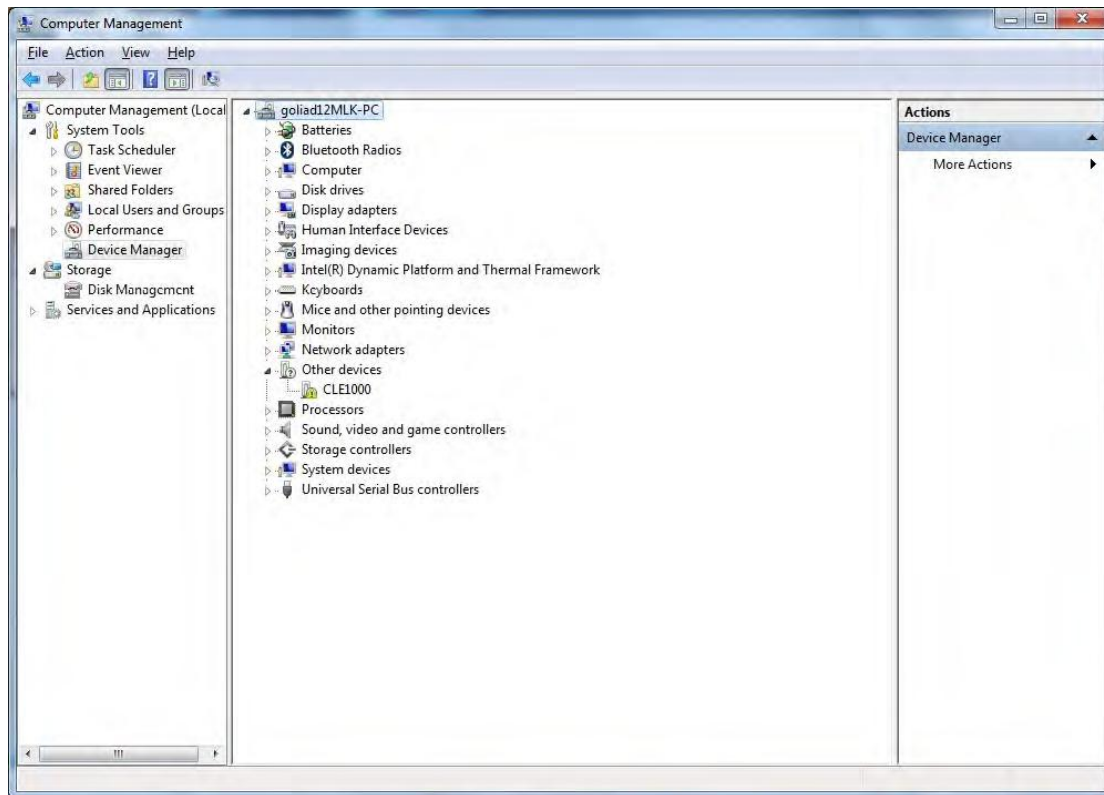


FIGURE 84. DEVICE MANAGER WINDOW

4. To install the CLE1000-A2, go to <http://www.aceunitech.com/support.html> and download the Control Software package for the CLE1000.
5. Unpack the CLE1000 Software .zip file.
6. Install the CLE1000 Driver:
 - a) In Device Manager, right-click on **CLE1000 > Update Driver**.
 - b) Select **Browse My Computer for Driver** from Windows dialog. See Figure 85.
 - c) Browse to the root directory of the unzipped CLE1000 Software folder.
 - d) Click **Next**. You will be asked to confirm your request to install a driver. See Figure 86.
 - e) Click **Install**. The driver software will complete the installation.
7. Once installation has completed, the CLE1000 should appear in Device Manager as shown in Figure 87.



FIGURE 85. UPDATE DRIVER WINDOW

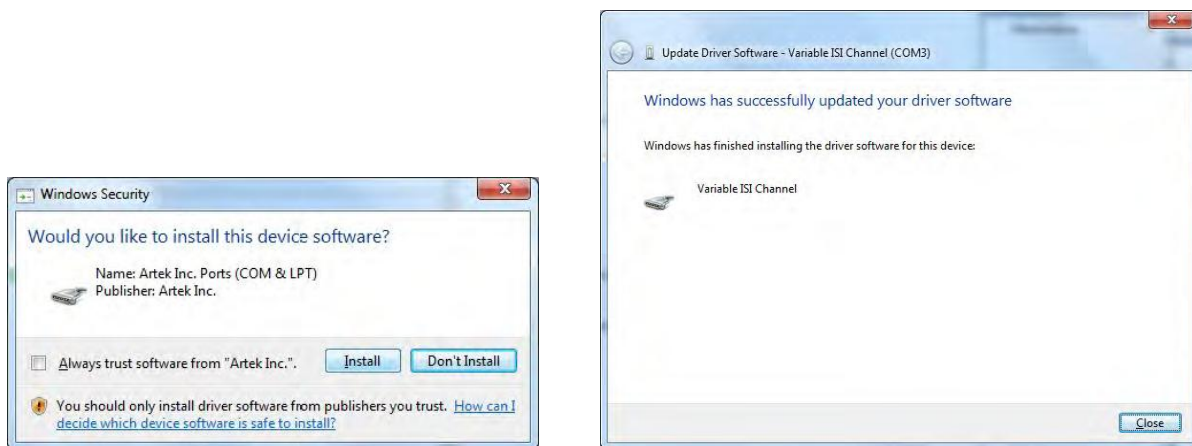


FIGURE 86. WINDOWS SECURITY WINDOW AND CONFIRMATION WINDOW

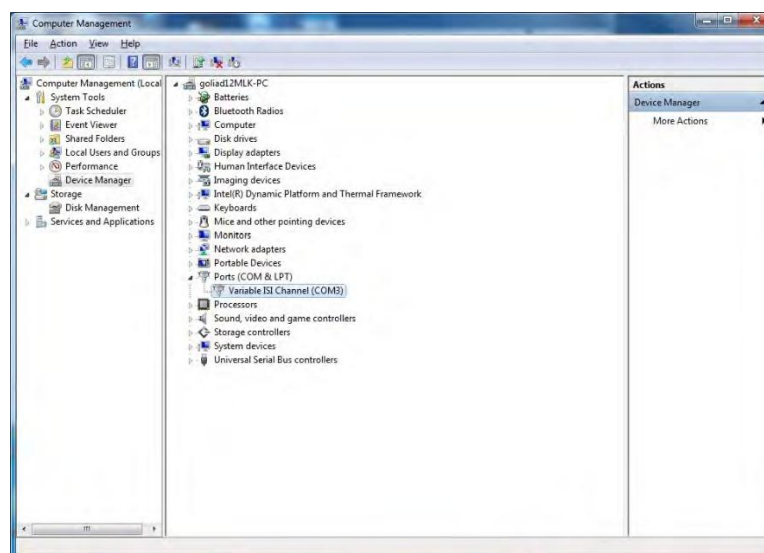


FIGURE 87. DEVICE MANAGER WINDOW AFTER INSTALLATION

The CLE1000 software driver is now installed and the CLE1000-A2 can now be selected for use remotely using the GRL Platform Solutions software.

10.2 Install CLE1000 GUI

It may also be useful to install the CLE1000 GUI, so that the ISI channel can also be controlled manually from the controller PC. To install the software, do the following:

1. In the CLE1000 SW folder, click on the Setup.exe file. Once installed successfully, the following GUI will appear on the desktop.
2. You can now close the GUI if you do not want to have manual control.

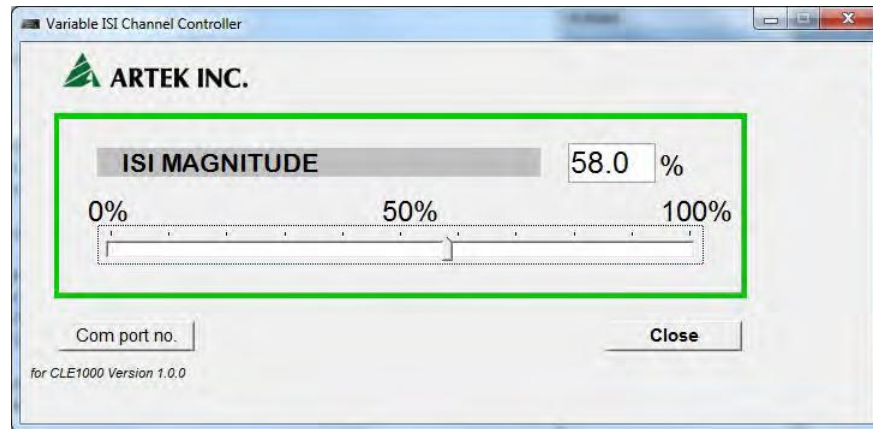


FIGURE 88. CLE1000 GUI

11 Appendix D: AUX Controller Driver Installation

11.1 Install Unigraf Driver

If the Unigraf DPT-200 or UCD-323 is being used as the AUX controller, you will need to install the respective driver before selecting it as the AUX controller in the GRL Platform Solutions software. *Note: The following steps describe the Unigraf DPT-200 driver installation as an example:*

1. Attach the Unigraf DPT-200 to a USB port on the oscilloscope.
2. On the scope, right-click on **My Computer > Manage > Device Manager**. If the DPT-200 driver has not been installed, it will appear as follows:

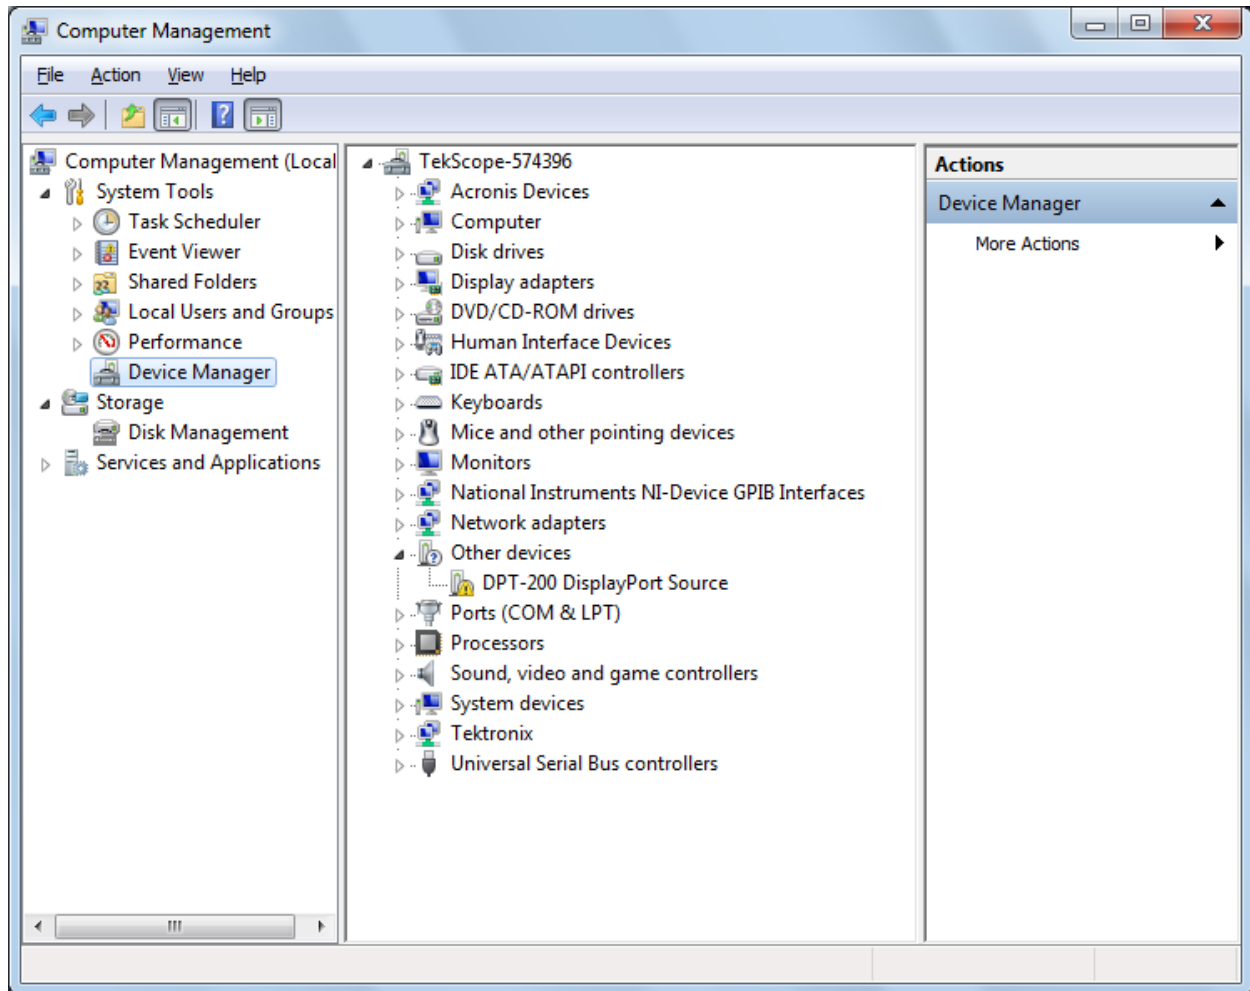


FIGURE 89. DEVICE MANAGER WINDOW

3. To install the DPT-200 driver software, go to <https://www.unigraf.fi/downloads/> and download the specific Installer package to the hard drive of your PC.
4. Open the Installer package .zip file and install the DPT-200 driver:
 - a) Run the setup installer file to start the installation and follow the instructions on the screen.

- b) During installation, the following dialog will appear. Select 'Install this driver software anyway' to proceed.

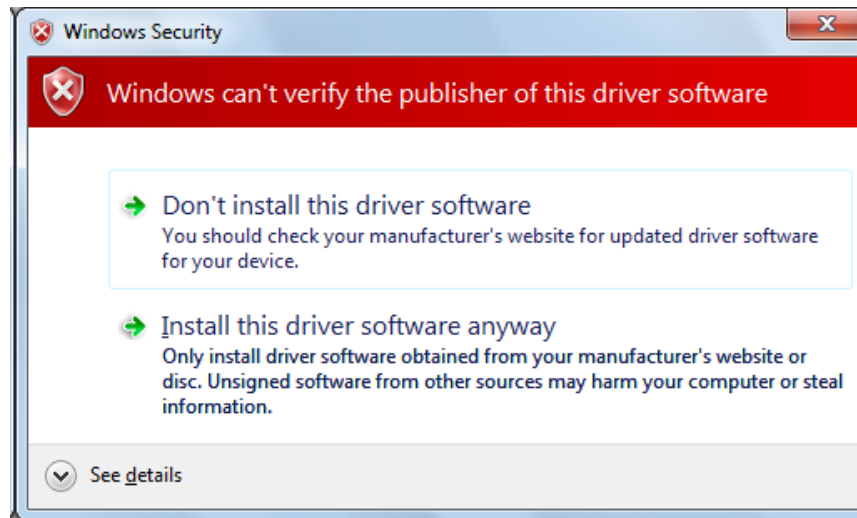


FIGURE 90. INSTALLATION DIALOG

- c) Once installation has completed, the DPT-200 will appear in Device Manager as follows:

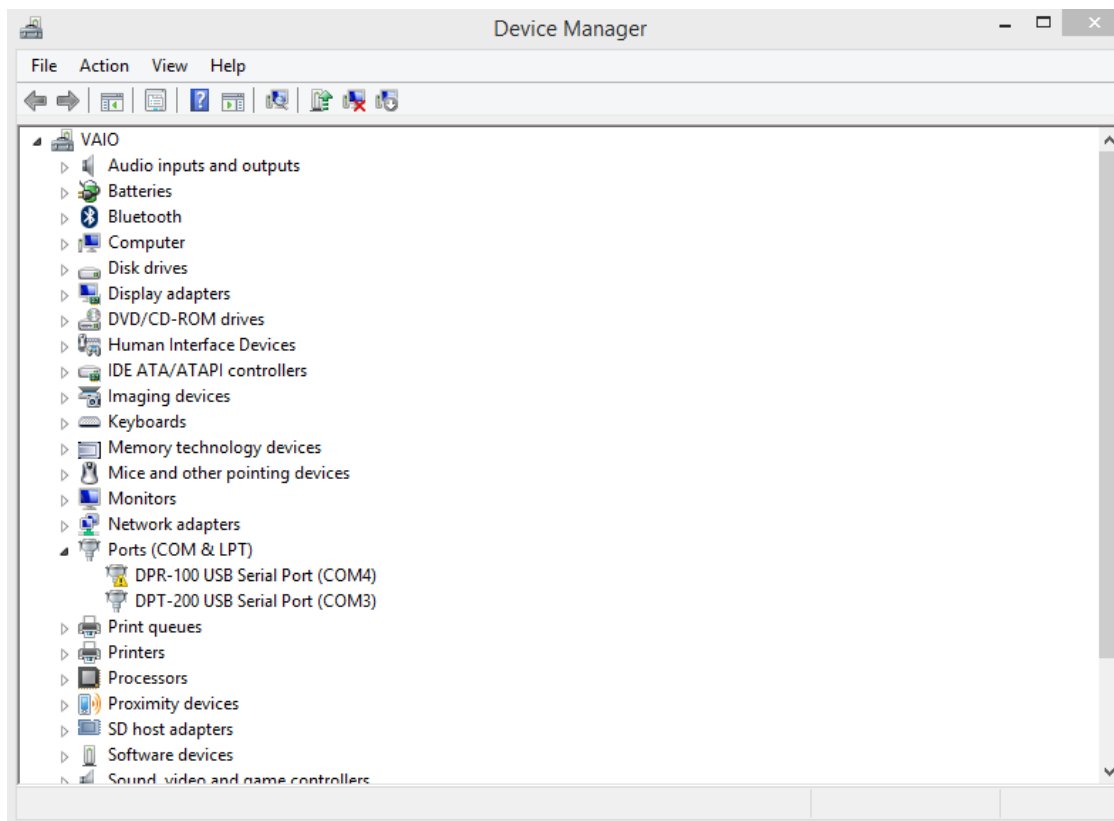


FIGURE 91. DPT-200 INSTALLATION COMPLETED

END_OF_DOCUMENT