



GRL Platform Solutions

**PCI Express® 5.0 Base Specification (Version 1.0)
Receiver Test Method of Implementation (MOI)
for Anritsu 32Gbps Physical Layer Test Suite
Using Anritsu MP1900A BERT,
High Performance Real-Time Oscilloscope,
and GRL-PXE5-BASE-RXA Calibration and Test Software**



Published on 17 July 2026

DISCLAIMER

This document is provided “as is” with no warranties whatsoever, including any warranty of merchantability, no infringement, fitness for any particular purpose, or any warranty otherwise arising out of any proposal, specification, or sample. The GRL Platform Solutions disclaims all liability for infringement of proprietary rights, relating to use of information in this specification. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted herein.

All product names are trademarks, registered trademarks, or service marks of their respective owners.



Copyright © 2026 GRL Platform Solutions. All rights reserved.

TABLE OF CONTENTS

1	INTRODUCTION	7
1.1	GLOSSARY.....	8
1.2	REFERENCE DOCUMENTS	8
2	RESOURCE REQUIREMENTS	9
2.1	EQUIPMENT REQUIREMENTS	9
2.2	SOFTWARE REQUIREMENTS	11
3	SETTING UP GRL-PXE5-BASE-RXA SOFTWARE	12
3.1	DOWNLOAD AND SET UP GRL-PXE5-BASE-RXA SOFTWARE	12
3.1.1	Connection Configuration.....	14
3.1.2	Launch and Set Up GRL-PXE5-BASE-RXA Software (on the Scope or Controller PC).....	14
3.2	CONFIGURING THE GRL-PXE5-BASE-RXA SOFTWARE BEFORE CALIBRATION	15
3.2.1	Enter Test Session Information.....	15
3.2.2	Set Measurement Conditions.....	16
3.2.3	Set Up Measurement Requirements.....	17
4	CALIBRATING USING GRL-PXE5-BASE-RXA SOFTWARE	22
4.1	CALIBRATION FOR TP1 (OUTPUT OF BERT GENERATOR)	23
4.1.1	Setup for TP1 Calibration	23
4.1.2	Select Calibration.....	24
4.1.3	Configure Calibration Parameters	26
4.1.4	Run Calibration at TP1	27
4.2	CALIBRATION FOR TP2 (OUTPUT OF LONG CHANNEL).....	28
4.2.1	Setup for TP2 Calibration	28
4.2.2	Run Calibration Steps at TP2.....	29
4.3	CONFIGURE CALIBRATION TARGET VALUES.....	30
5	TESTING USING GRL-PXE5-BASE-RXA SOFTWARE	31
5.1	RECEIVER DUT COMPLIANCE TEST SETUP.....	31
5.1.1	Test Setup	31
5.1.2	Receiver Compliance Tests	33
5.1.3	Receiver Tolerance Tests.....	34
5.1.4	Configure Receiver Test & Receiver Tolerance Test Parameters	34
5.1.5	Apply Calibrated Values for Testing	36
5.2	ENABLE LOOPBACK BER TEST	37
6	INTERPRETING TEST REPORT	38
6.1	DUT INFORMATION.....	38
6.2	SUMMARY TABLE.....	39
6.3	CALIBRATION DATA RESULTS.....	40

6.4	COMPLIANCE TEST RESULTS.....	41
6.5	MARGIN TEST RESULTS	42
7	SAVING AND LOADING TEST SESSIONS	43
8	APPENDIX A: METHOD OF IMPLEMENTATION (MOI) USING AUTOMATION	44
8.1	PERFORM CALIBRATION AT TP1.....	44
8.1.1	Pre-shoot Calibration	44
8.1.2	De-emphasis Calibration	44
8.1.3	Launch Amplitude Calibration	45
8.1.4	RJ Calibration	45
8.1.5	SJ Calibration.....	46
8.1.6	SJ Tone Calibration.....	46
8.2	PERFORM CALIBRATION AT TP2	47
8.2.1	ISI Calibration (CEM Connector Channel + Replica Channel) <i>[Applicable only if CTS version '1.0' is being used as the measurement reference method AND supported ISI Generator of either PCIe ISI Board or Artek is used.]</i>	47
8.2.2	Common Mode (CM) Sinusoidal Interference Calibration	47
8.2.3	Differential Mode (DM) Sinusoidal Interference Calibration	48
8.2.4	Stress Jitter Voltage Eye Calibration	48
9	APPENDIX B: ARTEK CLE MODEL SERIES INSTALLATION	50
9.1	ISI GENERATOR DRIVER INSTALLATION	50
9.2	CLE SERIES GUI INSTALLATION	52
10	APPENDIX C: CONNECTING KEYSIGHT OSCILLOSCOPE TO PC	53
11	APPENDIX D: CONNECTING TEKTRONIX OSCILLOSCOPE TO PC	55

List of Figures

Figure 1. Select and Launch GRL Platform Solutions Framework	12
Figure 2. Start PCIe 5.0 Base Rx Test Application	13
Figure 3. See License Details.....	13
Figure 4. Check License for Installed Applications	13
Figure 5. Connect Instruments with GRL-PXE5-BASE-RXA Software	15
Figure 6. Session Info Page	15
Figure 7. Select SJ Frequencies.....	16
Figure 8. User SJ Frequencies Setting.....	17
Figure 9. Rx Package Settings.....	17
Figure 10. Seasim Settings	18
Figure 11. DM and CM Calibration Settings.....	18
Figure 12. SSC and Refclk Setup.....	18
Figure 13. Connection Setup	19
Figure 14. Preset Settings.....	19
Figure 15. BER Loopback Test Method.....	19
Figure 16. Loopback Mode Setup	20
Figure 17. BER Test Setup.....	20
Figure 18. Compliance BER and Maximum Errors Setup	20
Figure 19. Margin Search Parameters Setup	21
Figure 20. Rx Calibration/Test Schematic Overview from the PCIe 5.0 Base Specification	22
Figure 21. Typical Setup for TP1 Calibration.....	23
Figure 22. Recommended Setup for TP1 Calibration Using Tektronix ATI Scope	23
Figure 23. Calibration Selection	25
Figure 24. Calibration Parameters Configuration Page	26
Figure 25. Run Tests.....	27
Figure 26. TP1 Connection Diagram Dialog Example	28
Figure 27. Typical Setup for TP2 Calibration	28
Figure 28. Recommended Setup for TP2 Calibration Using Tektronix ATI Scope.....	29
Figure 29. Final Calibrated Stressed Eye Diagram Example.....	30
Figure 30. Calibration Target Overwrite Page	30
Figure 31. Typical Receiver DUT Test Setup.....	31
Figure 32. Typical Receiver Test Setup for System DUT SRIS Refclk Architecture.....	32
Figure 33. Typical Receiver Test Setup for Add-In Card DUT SRIS Refclk Architecture	33
Figure 34. Selecting Receiver Compliance Tests	33
Figure 35. Selecting Receiver Margin Tests.....	34
Figure 36. Receiver Test & Receiver Tolerance Test Parameters Configuration Page.....	34
Figure 37. Selecting To Apply Calibration Values	36
Figure 38. Connect Equipment for Loopback BER Test	37
Figure 39. Select BER Loopback Test Method	37

Figure 40. Report Results Page	38
Figure 41. DUT Information.....	38
Figure 42. Summary Table	39
Figure 43. Calibration Results Example.....	40
Figure 44. Compliance Test Results Example	41
Figure 45. Margin Test Results Example	42
Figure 46. Saving and Loading Calibration and Test Sessions	43
Figure 47. De-emphasis Calibration Caltable Graph	45
FIGURE 48. DEVICE MANAGER WINDOW	50
Figure 49. Update Driver Window	51
Figure 50. Windows Security Window And Confirmation Window	51
Figure 51. Device Manager Window After Installation	51
FIGURE 52. CLE SERIES GUI	52
Figure 53. Keysight Connection Expert.....	53
Figure 54. Oscilloscope's VISA Address.....	54
Figure 55. OpenChoice Instrument Manager In Start Menu.....	55
Figure 56. OpenChoice Instrument Manager Menu	56

1 Introduction

This User Guide & MOI describes the procedures for receiver (Rx) calibration and jitter tolerance testing based on the PCIe Base 5.0 (ASIC) Specification (for 32 GT/s), using the GRL-PXE5-BASE-RXA PCIe 5.0 Base Specification Receiver Calibration and Test Software to automate the Anritsu BERT Model (MP1900A) and a high performance real-time oscilloscope to calibrate the stressed eye opening and test receiver conformance and jitter tolerance. The GRL-PXE5-BASE-RXA software uses Seasim statistical data eye simulator to establish the calibrated test channel DDJ. The final calibrated eye diagram uses the Seasim software to achieve the final stressed eye calibration.

The BERT and appropriate accessories provide the necessary test patterns with jitter, ISI, and crosstalk. Additionally, the BERT is used to add the required transmitter (Tx) equalization. The receiver jitter tolerance test includes various Differential Mode Sinusoidal Interference, minimum transmitter voltage amplitude, and jitter which includes random jitter and a sinusoidal periodic jitter component that is swept across specific frequency intervals.

Once the stressed receiver eye opening has been calibrated, the receiver jitter tolerance and margin testing can then be performed on the device under test (DUT). The BERT is used to transmit a modified compliance pattern to the receiver DUT and monitors that the loopback pattern conforms to a Bit Error Ratio (BER) that is less than 10^{-12} with a confidence level of 95%.

In summary, this User Guide & MOI basically describes using the GRL-PXE5-BASE-RXA software to:

1. Calibrate the stressed eye at the receiver of the DUT.
 - This includes calibrating Voltage Swing, Random Jitter (RJ), Sinusoidal Jitter (SJ), Insertion Loss (ISI), Differential Mode Noise, Common Mode Noise, Tx Equalization and Eye Height & Width.
2. Test the receiver using Bit Error Ratio (BER) as a metric. The receiver path is tested with worst case eye to ensure a BER of less than 10^{-12} can be achieved.

Note: Important information detailing method of implementation using automation, oscilloscope and cable calibration, as well as other setup information are included in Appendixes of this document. It is highly recommended to thoroughly review these information prior to performing any testing or data collection.

The GRL-PXE5-BASE-RXA software is designed to work with the Anritsu BERT as a signal source and error detector for automation of the PCIe Gen 5.0 Base Receiver calibration and testing. Details on how to set up and configure the GRL Platform Solutions software are provided in this document.

1.1 Glossary

SJ	Sinusoidal Jitter
ISI	Inter Symbol Interference
RJ	Random Jitter
CTLE	Continuous Time Linear Equalization
DFE	Decision Feedback Equalization
CDR	Clock / Data Recovery
BER	Bit Error Rate
BERT	Bit Error Rate Tester
EH	Eye Height
EW	Eye Width
DPP	Digital Pre-emphasis Processor
Upstream	Reference to Host Test Setup (Calibrated with Device Channel)
Downstream	Reference to Device Test Setup (Calibrated with Host Channel)
DUT	Device Under Test

1.2 Reference Documents

- [1] PCI Express® Base Specification Rev. 5.0; Version 1.0; May, 2019
- [2] PCI Express Card Electromechanical Specification, Revision 4.0
- [3] PCI Express to PCI/PCI-X Bridge Specification, Revision 1.0
- [4] PCI Express Mini Card Electromechanical Specification, Revision 2.1
- [5] PCI Express OCuLink Specification, Revision 1.0
- [6] PCI Express M.2 Specification, Revision 1.1
- [7] PCI Express External Cabling Specification, Revision 2.0
- [8] PCI Express ExpressModule Electromechanical Specification, Revision 1.0
- [9] PCI-X Addendum to the PCI Local Bus Specification, Revision 2.0
- [10] PCI Hot-Plug Specification, Revision 1.1
- [11] PCI Standard Hot-Plug Controller and Subsystem Specification, Revision 1.0
- [12] PCI Code and ID Assignment Specification, Revision 1.9 (or later)
- [13] PCI Firmware Specification, Revision 3.2
- [14] Advanced Configuration and Power Interface Specification, Revision 6.2
- [15] Unified Extensible Firmware Interface (UEFI) Specification Version 2.7 Errata A
- [16] Guidelines for 64-bit Global Identifier (EUI-64) Registration Authority
- [17] Multi-Root I/O Virtualization and Sharing Specification, Revision 1.0

The most current versions of above documents and ECNs are available to PCI-SIG Working Group members at: <http://www.pcisig.com/specifications/pciexpress/>.

2 Resource Requirements

2.1 Equipment Requirements

TABLE 1. EQUIPMENT REQUIREMENTS – SYSTEMS AND ACCESSORIES

Equipment	Qty.	Description	Key Specification Requirement
Keysight/Tektronix Oscilloscope	1	High Performance Real-time Oscilloscope	≥ 50 GHz bandwidth with Windows 7+ OS ^[a] - Scope measurement software, e.g. Keysight InfiniiSim for Keysight scope or Tektronix DPOJET for Tektronix scope
Anritsu MP1900A BERT	1	MP1900A Signal Quality Analyzer, with following modules: - MU181000A/B 12.5 GHz Synthesizer - MU181500B Jitter Modulation Source - MU195020A 21G/32G bit/s SI Pulse Pattern Generator, or MU196020A 64.2G bit/s or 64.2G baud PAM4 Pulse Pattern Generator ^[b] - MU195040A/B 21G/32G bit/s Error Detector, or MU196040B 58G baud PAM4 Error Detector - MU196060A 32G baud NRZ/PAM4 Re-Driver - MU195050A Noise Generator	
ISI Generator	1	PCIe Gen 5 Base Spec compliant Fixed or Variable ISI Channel ^[c]	
External Refclk Source	1	Required for Receiver DUT testing in the SRIS (independent Refclk) mode	
<i>V(m) - K(f) Adapter</i>	2	<i>34VKF50A Coaxial Adapter, only required if using a PAM4 Pulse Pattern Generator</i>	
Computer/PC (laptop or desktop)	1	For automation control Minimum requirements: - Windows 10+ OS - Intel Core i5 processor 120GB SSD storage 16GB RAM - Gigabit Ethernet Recommended requirements: - Windows 10+ OS - Intel Core i7+ processor 200GB SSD storage 32GB RAM - Gigabit Ethernet	

^[a] Oscilloscope with scope bandwidth as specified in vendor specific MOI's.

^[b] The GRL-PXE5-BASE-RXA software supports the NRZ or PAM4 signal.

^[c] The Artek CLE Model Series is supported for variable ISI generation. Refer to Appendix of this document for the Artek CLE Series driver installation procedure.

Note: Cable connector type and length requirements may vary according to the lab setup and the dimensions of the DUT board. Table below is a recommended list. Please also refer to the respective manufacturer for detailed cabling recommendations related to PCI Express.

TABLE 2. EQUIPMENT REQUIREMENTS – CABLES

Cable	Qty.	Key Specification Requirement
Anritsu J1508A BNC to SMA cable pair	1 pair	For MU181000A/B to MU181500B
Anritsu J1624A SMA-SMA cable	3	30cm
Anritsu J1625A SMA-SMA cable	4	100cm
Anritsu J1551A or Huber Suhner 0130-314-00 K-K phase matched cable pair	3 pairs	3ft
Anritsu J1746A K-K cable set	1	For MU195050A output connections
J1917A coaxial semi-rigid cable	1	To connect between MU196060A clock output and MU196040B clock input
J1932A coaxial skew matched cable pair	1	0.8m, V connector To connect between MU196060A data outputs and MU196040B data inputs
Rosenberger L71-456-102 or Rosenberger RNA 0111 603841, phase matched SMA-SMP adapters	2 pairs	

2.2 Software Requirements

TABLE 3. SOFTWARE REQUIREMENTS

Software	Source
GRL-PXE5-BASE-RXA	GRL Platform Solutions PCIe® 5.0 (32 GT/s) Base Specification Receiver Calibration and Test Automation Software – www.grlps.com Included with Node Locked License to single oscilloscope or PC OS
VISA (Virtual Instrument Software Architecture) API Software	VISA Software is required to be installed on the controller PC running GRL-PXE5-BASE-RXA software. GRL Platform Solutions' software framework has been tested to work with all three versions of VISA available on the Market: 1. NI-VISA: http://www.ni.com/download/ni-visa-17.0/6646/en/ 2. Keysight IO Libraries: www.keysight.com (Search on IO Libraries) 3. Tektronix TekVISA: www.tek.com (Downloads > Software > TekVisa)
Seasim	Seasim tool for post-process analysis of the captured waveform (Eye Opening simulation software at TP2P) – www.pcisig.com
MX183000A	Anritsu High-Speed Serial Data Test Software – For loopback BER testing of the PCIe Gen 5 Base Rx DUT. This software is located on the BERT.

3 Setting Up GRL-PXE5-BASE-RXA Software

This section provides procedures for installing, configuring and verifying the operation of the GRL-PXE5-BASE-RXA PCIe 5.0 Base Receiver Test software at 32 GT/s. It also helps you familiarize yourself with the basic operation of the software.

The GRL Platform Solutions software installer automatically creates shortcuts in the Desktop and Start Menu.

To open the software, follow the procedure in the following section.

3.1 Download and Set Up GRL-PXE5-BASE-RXA Software

Install, launch and set up the GRL-PXE5-BASE-RXA software:

1. If the GRL-PXE5-BASE-RXA software is to be installed on a PC (where it is referred to as 'controller PC'), install VISA (Virtual Instrument Software Architecture) on to the PC where the GRL Platform Solutions software is to be used (see Section 2.2).
2. Download the software ZIP file package from the GRL Platform Solutions support site.
3. The zip file contains:
 - a) **PCIe5_0_BaseANPatternFilesInstallationxxxxxxxxxxSetup.exe** – Run this on the Anritsu Signal Quality Analyzer to install the test pattern setup files.
 - b) **PCIeGen5ANBaseSpecTestApplicationxxxxxxxxxxSetup.exe** – Run this on the controller PC or oscilloscope to install the GRL-PXE5-BASE-RXA application.
 - c) **PCIe5_0_BaseANRxTestScopeSetupFilesInstallationxxxxxxxxxxSetup.exe** – Run this on the oscilloscope to install the scope setup files.
4. Launch and set up the software as follows:
 - a) Open the GRL folder from the Windows Start menu. Click on **GRL – Automated Test Solutions** within the GRL folder to launch the GRL Platform Solutions software framework.

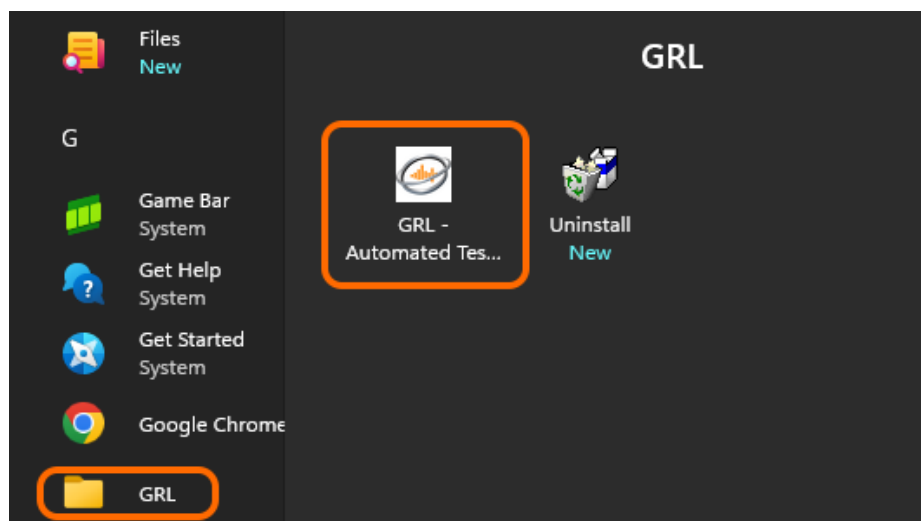


FIGURE 1. SELECT AND LAUNCH GRL PLATFORM SOLUTIONS FRAMEWORK

- b) From the Application → Rx Test Solution drop-down menu, select “Anritsu PCIe 5.0 Base Rx Test” to start the PCIe 5.0 Base Rx Test Application. If the selection is grayed out, it means that your license has expired.

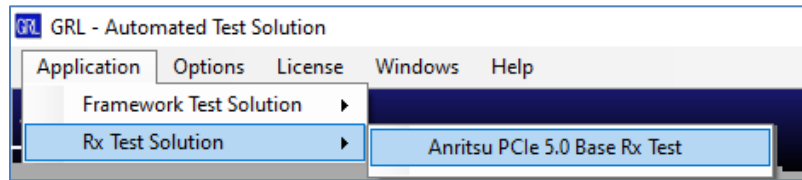


FIGURE 2. START PCIe 5.0 BASE RX TEST APPLICATION

- i) To enable license, go to License → License Info.

 


FIGURE 3. SEE LICENSE DETAILS

- ii) Check the license status for the installed application.

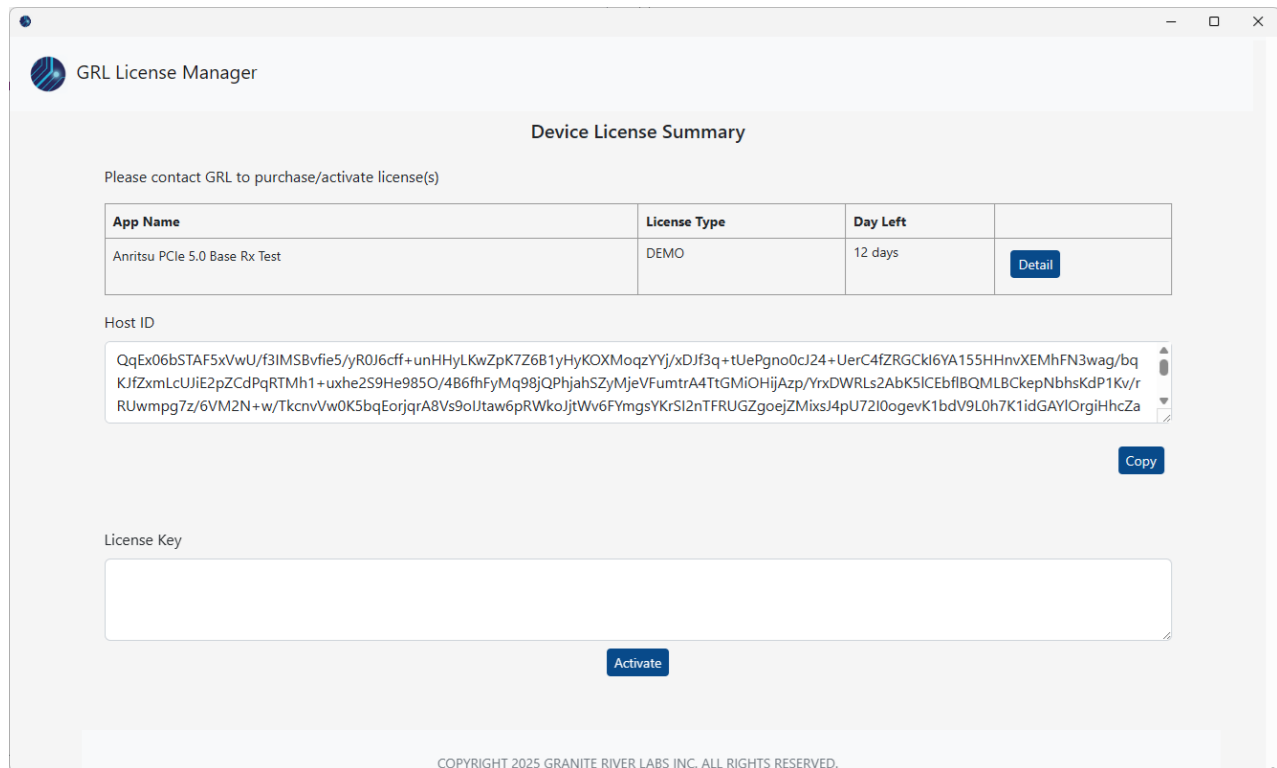


FIGURE 4. CHECK LICENSE FOR INSTALLED APPLICATIONS

- iii) Activate a License:

- If you have an Activation Key, enter it in the **License Key** field provided and select **Activate**. The installed application is ready for use upon successful activation.
- If you do not have an Activation Key, close the above window to use a demo version of the application over a free 12-day trial period.

Note: Once the 12-day trial period ends, you will need to request an Activation Key to continue using the application on the same computer by contacting support@grlps.com.

3.1.1 Connection Configuration

- Connect the Anritsu MP1900A BERT via LAN to the GRL Platform Solutions automation control enabled Scope or PC. The BERT and MX183000A software can be connected using connection string formats similar to the following examples:
 - BERT: “TCPIP0::192.168.0.14::5001::SOCKET” or “192.168.0.14:5001”
 - MX183000A: “TCPIP0::192.168.0.14::5000::SOCKET” or “192.168.0.14:5000”

Note the IP addresses listed above are only examples and should be changed according to the actual network connection being used..

- Connect the Artek ISI Generator (if used) via USB to the GRL Platform Solutions automation control enabled Scope or PC. (Note: The USB driver software for the ISI Generator must be installed on the controller Scope or PC. The driver is available from the ISI Generator manufacturer. Refer to Appendix of this MOI for driver installation information.)
- Connect the oscilloscope with the controller PC through either GPIB, USB or LAN. (Note: Additional information for connecting the Keysight and Tektronix oscilloscopes to the controller PC is provided in the Appendix of this MOI.)

3.1.2 Launch and Set Up GRL-PXE5-BASE-RXA Software (on the Scope or Controller PC)

1. Launch the GRL Platform Solutions Host Application from “Start Menu → GRL → GRL – Automated Test Solutions”.
2. Select “Application → Rx Test Solution → Anritsu PCIe 5.0 Base Rx Test Application”.
3. On the Scope or controller PC, obtain the network addresses for all the connected instruments from the device settings. Note these addresses as they will be used to connect the instruments to the GRL-PXE5-BASE-RXA software.
4. On the Equipment Setup  page of the PCIe 5.0 Base Rx Test Application, type in the address of each connected instrument into the ‘Address’ field.


(Note: If the GRL Platform Solutions software is installed on the **Tektronix Scope**, ensure the Scope is connected via GPIB and type in the GPIB network address, for example “GPIB8::1::INSTR”.)

If the GRL Platform Solutions software is installed on the PC to control the Scope, type in the Scope IP address, for example “TCPIP0::192.168.0.110::inst0::INSTR”. Note to **omit** the Port number from the address.

(Note: If the GRL Platform Solutions software is installed on the **Keysight Scope**, and if there is error in connection, type in the Scope IP address as “TCPIP0::192.168.0.4::5025::SOCKET”.)

5. Then select the “lightning” button () for each connected instrument.

The “lightning” button should turn green () once the software has successfully established connection with each instrument.

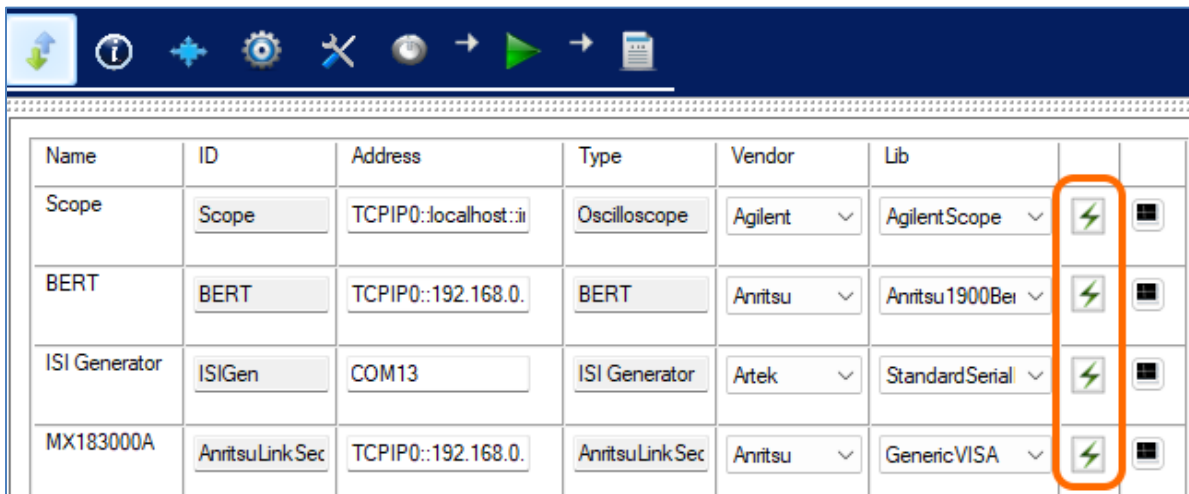

Name	ID	Address	Type	Vendor	Lib	
Scope	Scope	TCPIP0::localhost::ii	Oscilloscope	Agilent	AgilentScope	
BERT	BERT	TCPIP0::192.168.0.	BERT	Anritsu	Anritsu1900Bei	
ISI Generator	ISIGen	COM13	ISI Generator	Artek	StandardSerial	
MX183000A	AnritsuLinkSec	TCPIP0::192.168.0.	AnritsuLinkSec	Anritsu	GenericVISA	

FIGURE 5. CONNECT INSTRUMENTS WITH GRL-PXE5-BASE-RXA SOFTWARE

(Note: Additional information for connecting the Keysight and Tektronix oscilloscopes to the PC is provided in the Appendix of this User Guide & MOI.)


3.2 Configuring the GRL-PXE5-BASE-RXA Software Before Calibration

Once all equipment is successfully connected from the previous section, proceed to set up the preliminary settings before going to the advanced measurement setup.

3.2.1 Enter Test Session Information

Select  from the menu to access the **Session Info** page. Enter the information as required for the test session that is currently being run. The information provided will be included in the test report generated by the software once tests are completed.

- The fields under **DUT Info** and **Test Info** are defined by the user.
- The **Software Info** field is automatically populated by the software.

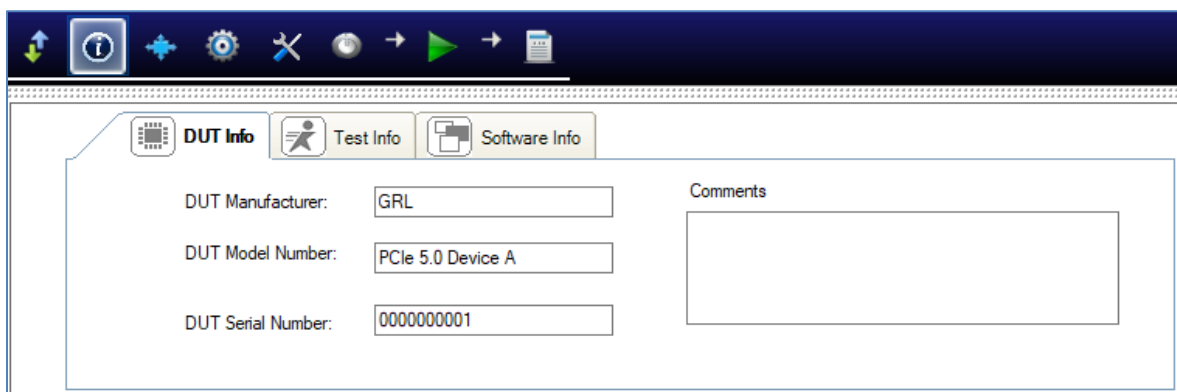











DUT Info


Test Info


Software Info

DUT Manufacturer:

DUT Model Number:

DUT Serial Number:

Comments

FIGURE 6. SESSION INFO PAGE

3.2.2 Set Measurement Conditions

Select  from the menu to access the **Conditions** page to set the conditions for calibration and testing.

Recommended procedure:

- *Step 1:* When calibrating, select all required conditions and perform the calibration.
- *Step 2:* Once calibration is completed and ready for testing, re-select the conditions that will be used for specific tests.

SJ tab: Select SJ Frequencies as defined by the Specification for calibration or testing.

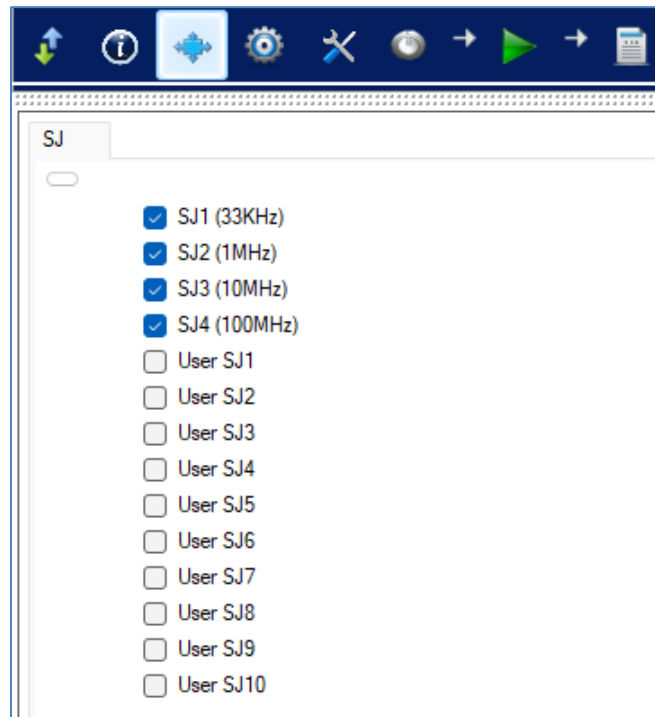



FIGURE 7. SELECT SJ FREQUENCIES

3.2.3 Set Up Measurement Requirements

Select  from the menu to access the **Setup Configuration** page. Use this page to configure the necessary measurement-related settings prior to running calibration and tests.

3.2.3.1 User SJ Frequencies Setting

Set custom SJ frequencies to test for condition setup on the Conditions page.

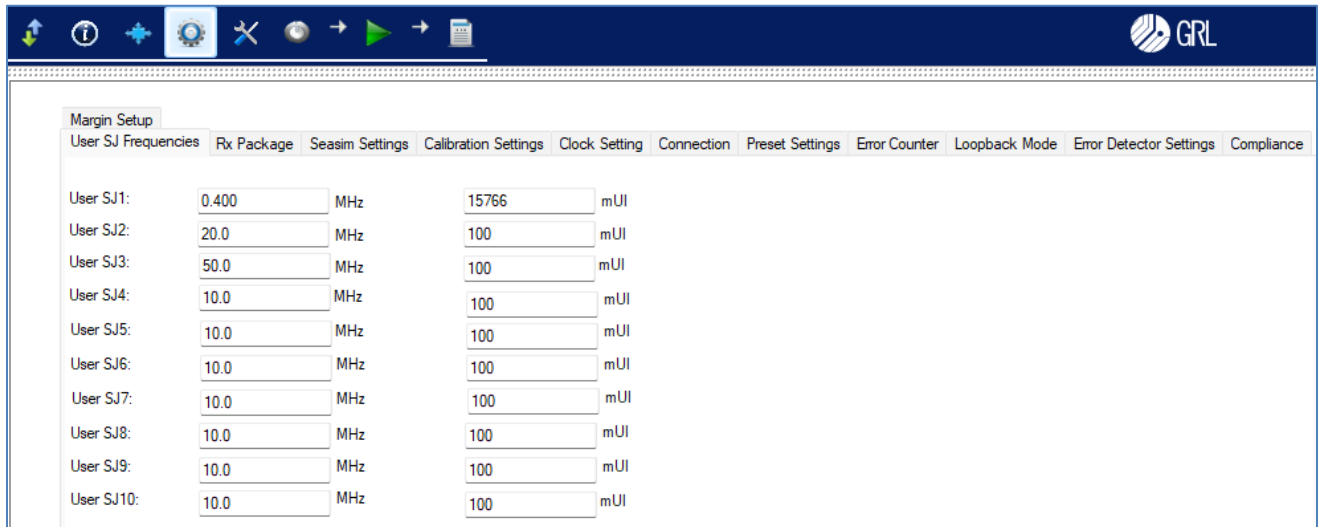


User SJ	Frequency (MHz)	Margin (mUI)
User SJ1:	0.400	15766
User SJ2:	20.0	100
User SJ3:	50.0	100
User SJ4:	10.0	100
User SJ5:	10.0	100
User SJ6:	10.0	100
User SJ7:	10.0	100
User SJ8:	10.0	100
User SJ9:	10.0	100
User SJ10:	10.0	100

FIGURE 8. USER SJ FREQUENCIES SETTING

3.2.3.2 Rx Package Settings

Set up user-defined Rx Behavioral package to be applied during post processing analysis for the Eye Height and Eye Width Calibration.

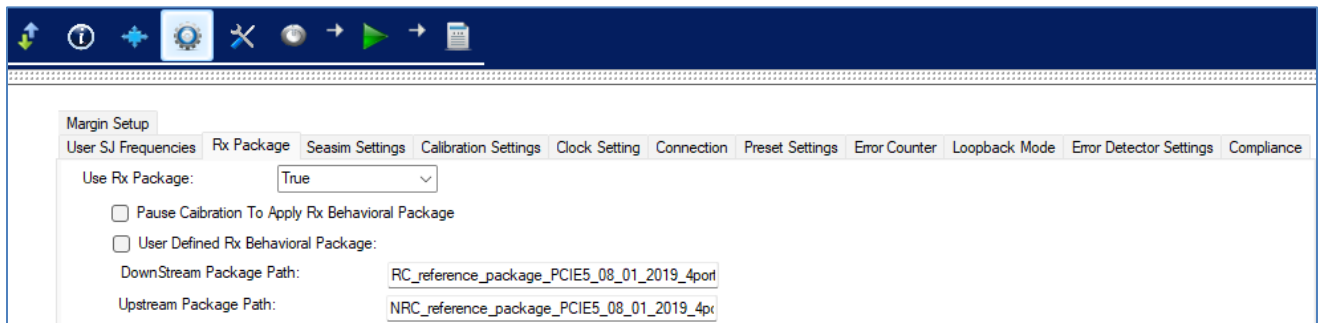

Use Rx Package: True

☐ Pause Calibration To Apply Rx Behavioral Package

☒ User Defined Rx Behavioral Package:

DownStream Package Path: RC_reference_package_PCIE5_08_01_2019_4port

Upstream Package Path: NRC_reference_package_PCIE5_08_01_2019_4port

FIGURE 9. RX PACKAGE SETTINGS

3.2.3.3 Seasim Settings

Set the intrinsic noise and jitter (if required) to be used in the Seasim calculation. Select the checkbox to automatically measure the pulse width jitter (PWJ).

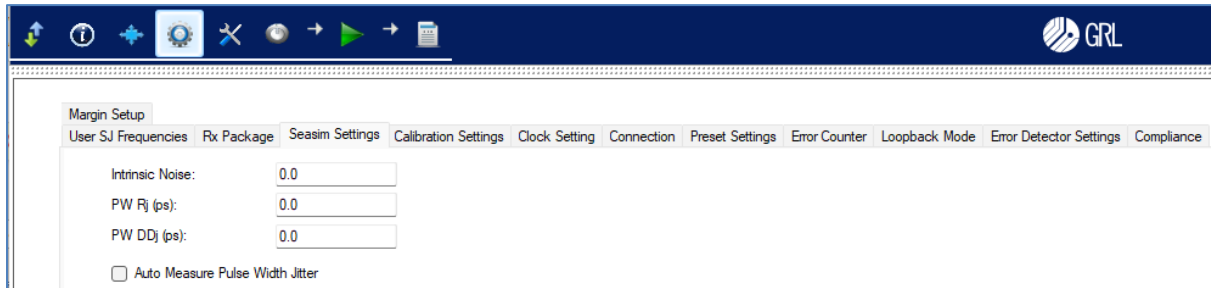


FIGURE 10. SEASIM SETTINGS

3.2.3.4 DM and CM Calibration Settings

Specify or use the default frequency values for Differential Mode (DM) and Common Mode (CM) calibration.



FIGURE 11. DM AND CM CALIBRATION SETTINGS

3.2.3.5 Clock Setup

Select the checkbox to enable Spread Spectrum Clock (SSC) capabilities for calibration and receiver testing (if supported by the DUT) for informative purpose. Set the Frequency and Deviation values for SSC.

Select the type of Rx Reference Clock architecture/mode to be used when testing the Rx DUT (depending on which clock mode is supported by the DUT). For the Common Clock (CC) Refclk mode, a single Refclk source is applied for both the BERT signal generator and the DUT along with SSC and SJ mask. For the Independent Refclk (IR) mode, or in this case “Separate” Refclk mode, two Refclk sources are applied for both the BERT signal generator and the DUT along with independent SSC and SJ mask.

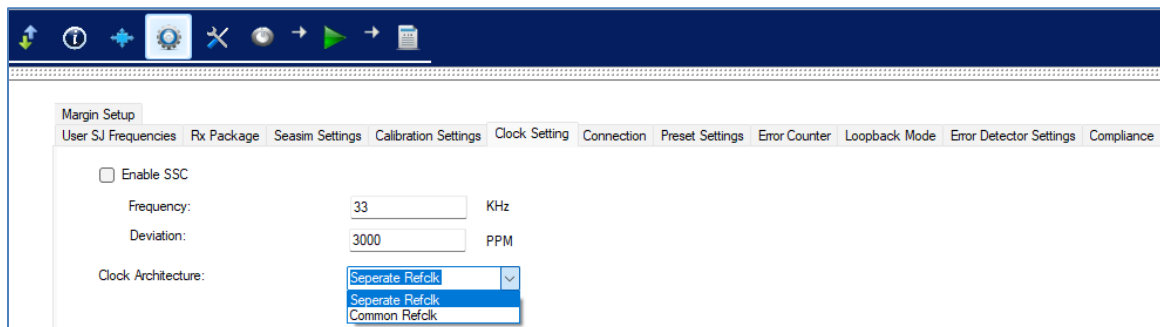


FIGURE 12. SSC AND REFCLK SETUP

3.2.3.6 Connection Setup

Set to use Real Edge connection for test setup on the Oscilloscope. *Note: This setting is only applicable for the Keysight Scope and will be disabled when the Tektronix Scope is used.*

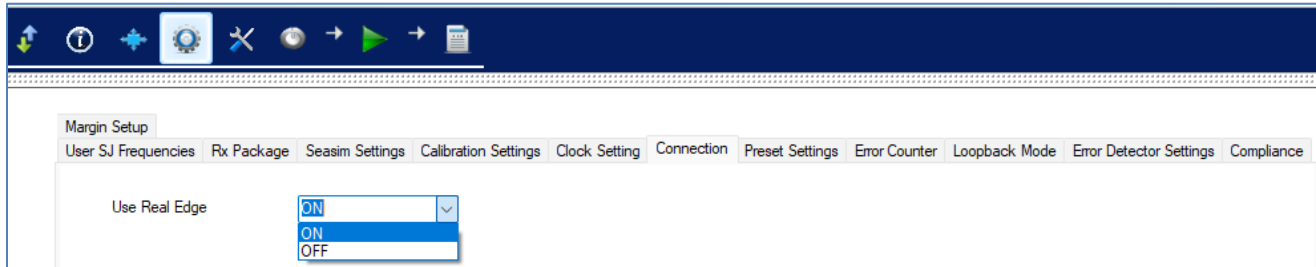


FIGURE 13. CONNECTION SETUP

3.2.3.7 Preset Settings

Select the preset to use, and optionally custom Pre-shoot and De-emphasis settings.

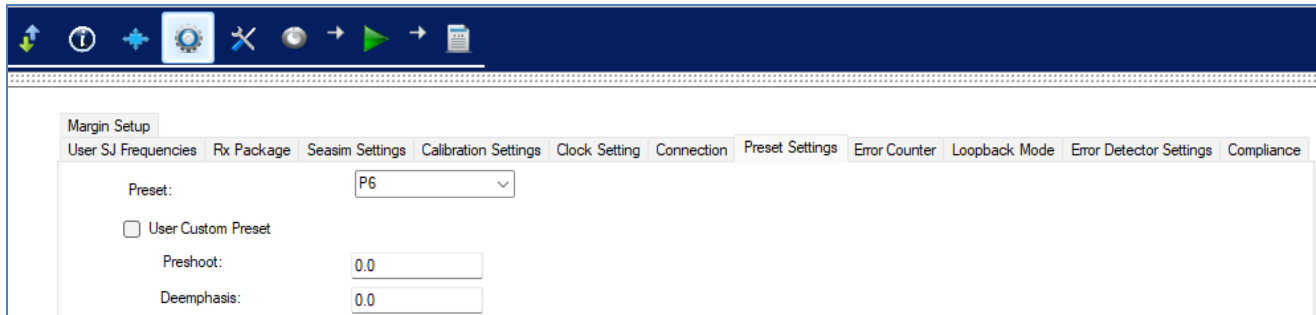


FIGURE 14. PRESET SETTINGS

3.2.3.8 Error Counter Setup

Enable loopback test mode for the Rx base DUT for error detection. If the DUT can be configured to loopback mode, select 'LoopBack', if not select 'Manual'.

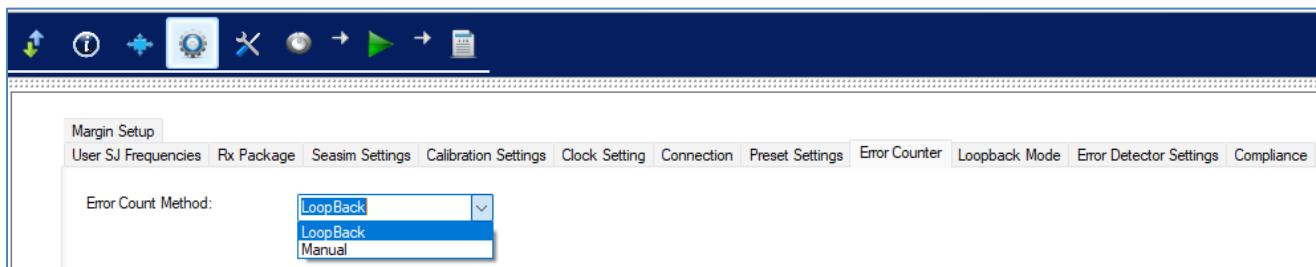


FIGURE 15. BER LOOPBACK TEST METHOD

3.2.3.9 Loopback Mode Setup

If "LoopBack" has been selected from the Error Counter tab, then select "Clock Recovery" in the Clock Recovery Method drop-down on the Loopback Mode tab. *Other options on the Clock Recovery Method drop-down are not yet supported.* Select to apply the default

Jitter Tolerance loop bandwidth type or manually define the loop bandwidth values for the clock recovery.

If a Custom Pattern is to be used for error detection analysis, select the checkbox and then select the test pattern type. If the checkbox is not selected, a default test pattern will be used.

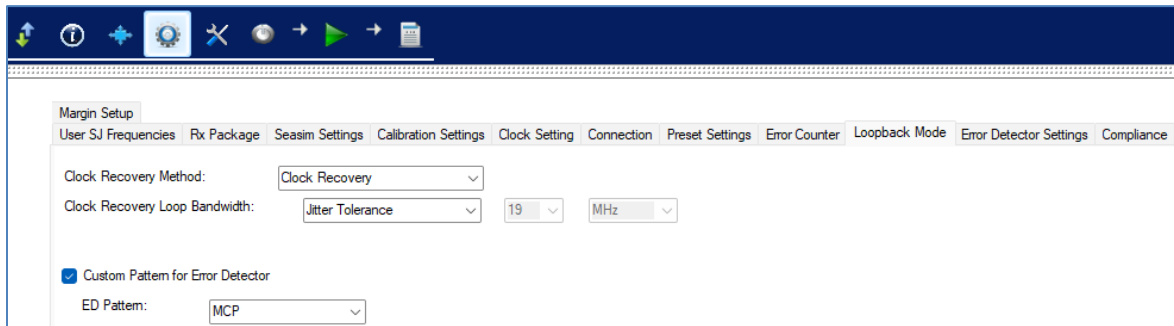


FIGURE 16. LOOPBACK MODE SETUP

3.2.3.10 Error Detector Setup

Enable or disable CTLE and Skip Ordered Set (SKP OS) symbol filtering for BER testing.

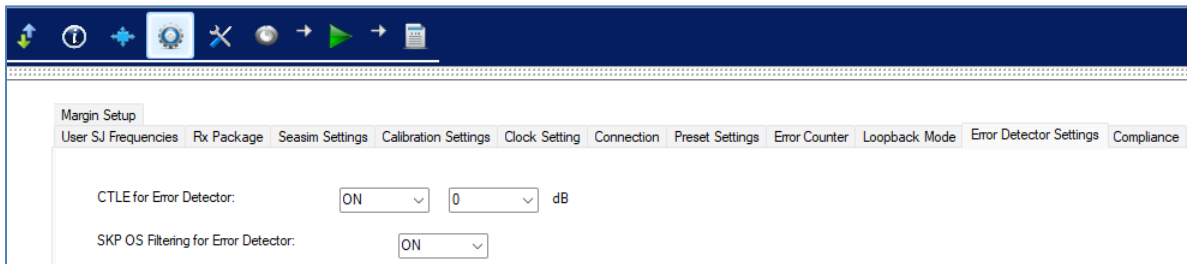


FIGURE 17. BER TEST SETUP

3.2.3.11 Compliance BER Setup

Set the allowable BER and Maximum Error limits to be tested for compliance. By default, these limits are set to Specification, but can be defined by the user. The syntax '1e-12' indicates 1×10^{-12} , and is the only syntax supported in this field. In normal circumstances, any error count above one constitutes a fail. If there is a need to pause the compliance test while it is running, select the "Pause Compliance Test" checkbox.


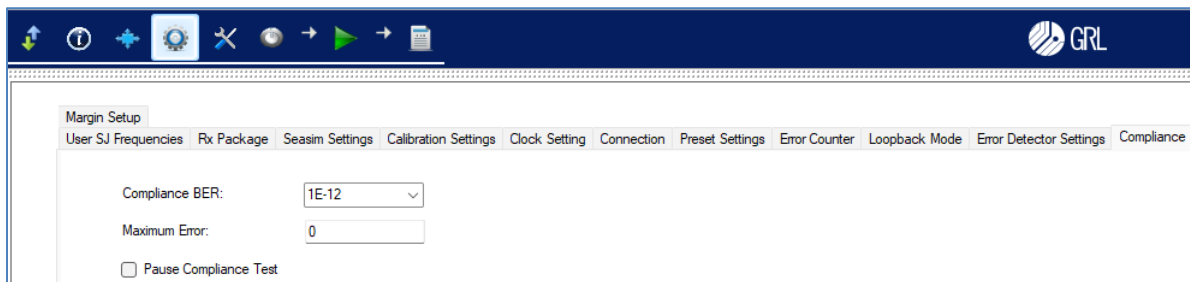


FIGURE 18. COMPLIANCE BER AND MAXIMUM ERRORS SETUP

3.2.3.12 Margin Setup

Select the target BER, step size, and limits to be applied during marginal testing.

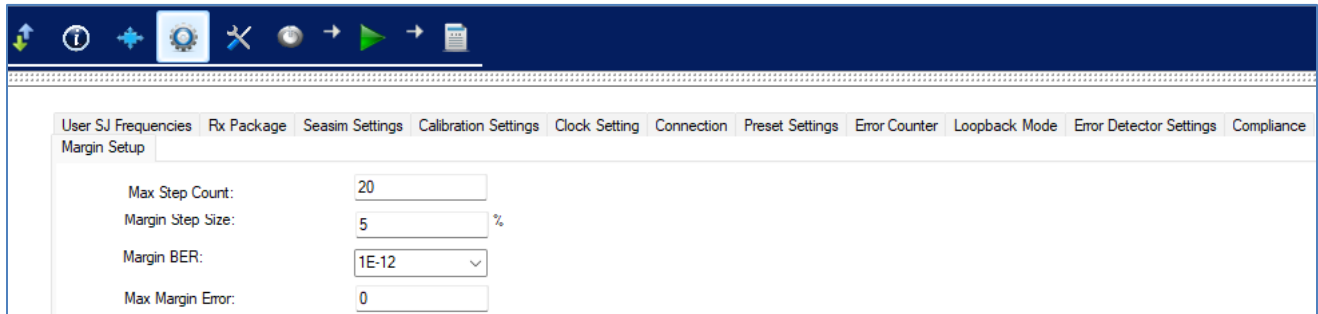

Parameter	Value
Max Step Count:	20
Margin Step Size:	5 %
Margin BER:	1E-12
Max Margin Error:	0

FIGURE 19. MARGIN SEARCH PARAMETERS SETUP

4 Calibrating Using GRL-PXE5-BASE-RXA Software

Calibration for PCI Express 5.0 Base Specification are performed at two physical test points – TP1 and TP2. TP1 is a physical test point for calibration without the effect of a channel. An adjustable calibration channel is defined that is to be used along with the replica channel for stressed eye calibration. After calibration the signal source will go through the breakout channel to the DUT for Rx compliance testing. TP2 is a physical test point that will affect the eye opening due to trace length. Post processing analysis of the signal is performed at the TP2P test point using the Seasim application to simulate the stressed eye opening after applying Rx Behavioral package, Rx CTLE, and DFE (if required).

To calibrate the stressed eye at TP2, the calibration channel shall receive signals with appropriate test patterns generated by the signal source. After calibration the signal source shall be used for testing Rx DUT compliance.

Note: Calibration for the differential voltage swing and Tx equalization of the signal source are performed at the TP3 test point. Overall calibration channel loss shall be determined after the TP3 test point.

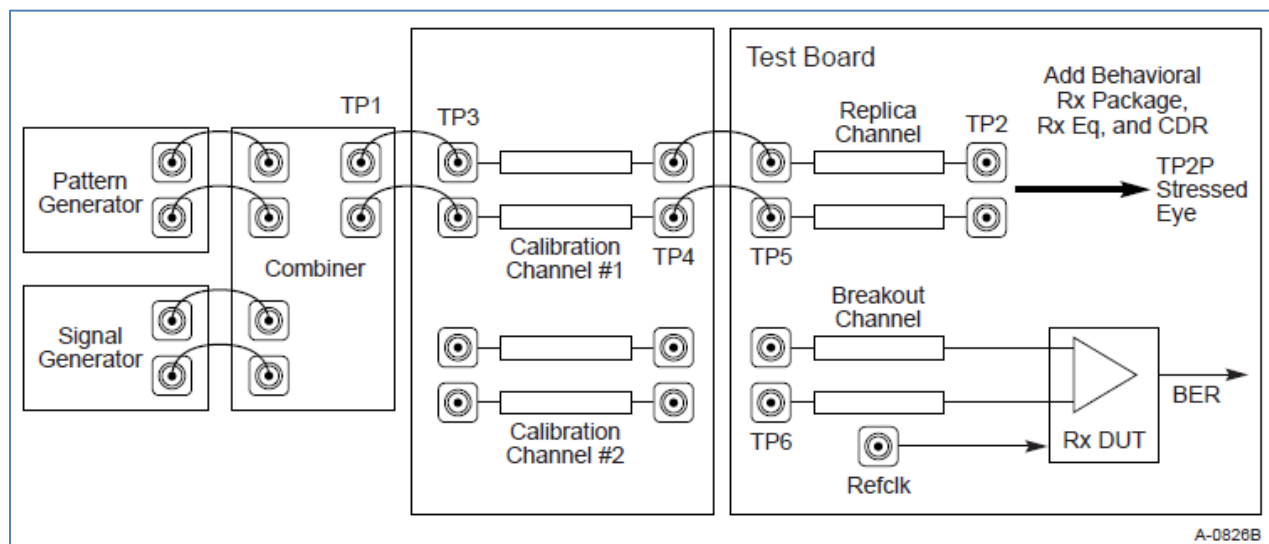


FIGURE 20. RX CALIBRATION/TEST SCHEMATIC OVERVIEW FROM THE PCIe 5.0 BASE SPECIFICATION

4.1 Calibration for TP1 (Output of BERT Generator)

4.1.1 Setup for TP1 Calibration

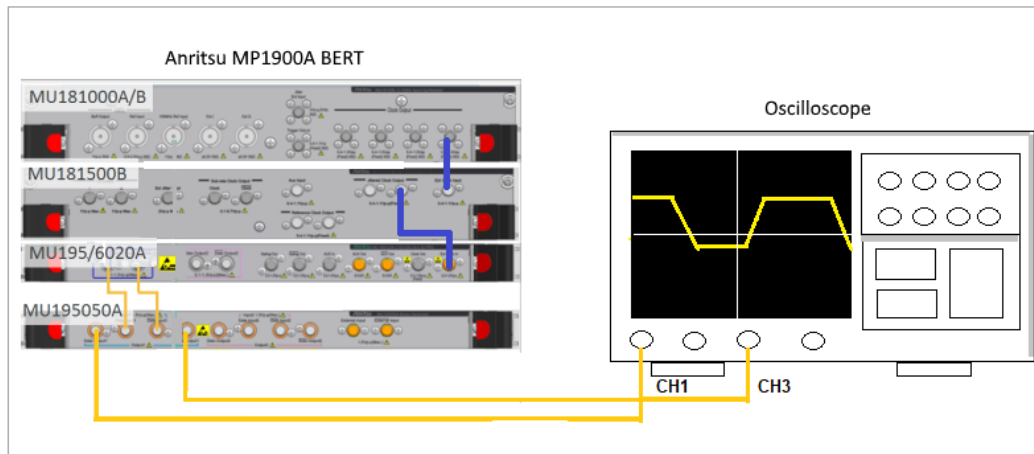


FIGURE 21. TYPICAL SETUP FOR TP1 CALIBRATION

Connection Steps:

1. Using a SMA-SMA short cable, connect the MU181000A/B clock output to the MU181500B Ext clock input.
2. Using a SMA-SMA short cable, connect the MU181500B jittered clock output to the MU195020A/MU196020A Ext clock input.
3. Using coaxial cables, connect the MU195020A/MU196020A data outputs to the MU195050A data inputs.
4. Using phase matched K-K coaxial cables, connect the MU195050A data outputs to Channels 1 and 3 on the oscilloscope.

4.1.1.1 TP1 Calibration Setup with Tektronix ATI Based Oscilloscope

If the Tektronix ATI based oscilloscope is being used, proceed with the following TP1 calibration setup.

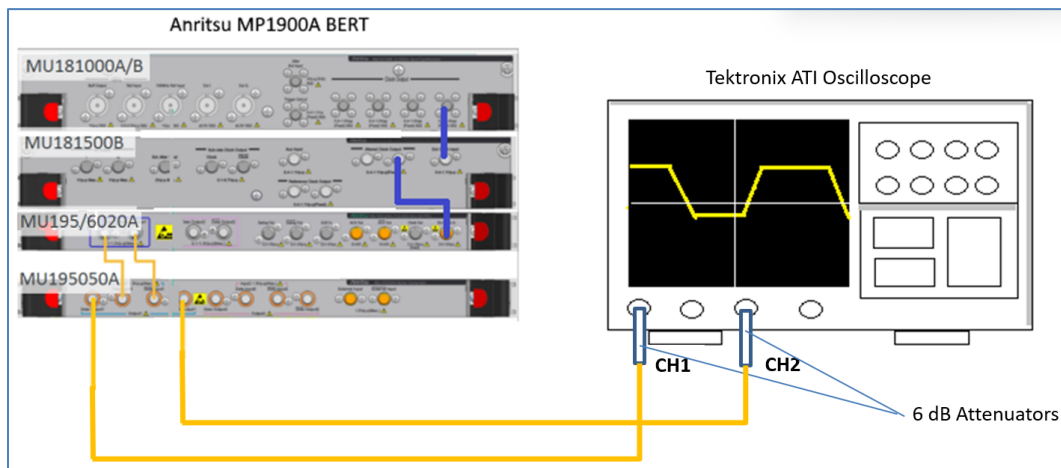


FIGURE 22. RECOMMENDED SETUP FOR TP1 CALIBRATION USING TEKTRONIX ATI SCOPE

*Note: Make sure that the “Tektronix Scope Configuration” is set to **Dual ATI** in the Configurations page (see Section 4.1.3).*

1. Follow back the same connections from step 1 to 3 in Section 4.1.1 above.
2. Then using phase matched K-K coaxial cables, connect the MU195050A data outputs to Channels 1 and 2 on the Tektronix ATI based oscilloscope through 6 dB attenuators.

4.1.2 Select Calibration

The following calibration are defined at TP1 and TP2 Test Points.

Calibration at TP1:

1. Preset 4 Calibration
2. Pre-shoot Calibration
3. De-emphasis Calibration
4. Launch Amplitude Calibration
5. Output Jitter Measurement
6. RJ Calibration
7. SJ Calibration
8. SJ Tone Calibration

Calibration at TP2, can be Downstream (for Host) or Upstream (for Device):

9. Downstream or Upstream:
 - a. Common Mode (CM) Sinusoidal Interference Calibration
 - b. Differential Mode (DM) Sinusoidal Interference Calibration (Achieves Calibrated Eye Height)
 - c. Stressed Jitter Voltage Calibration (Final stressed voltage and jitter eye adjustment to achieve Calibrated Eye Width using the Seasim calibration method)

The GRL-PXE5-BASE-RXA software automatically calibrates these parameters when initiated. See Appendix for an implementation method with automation for the above calibration.

The test selection panel allows the calibration/tests that need to be performed to be selected. Initially, when starting for the first time or changing anything in the setup, it is suggested to run calibration first. If the calibration is not completed, the Rx DUT tests will throw an error when initiated.


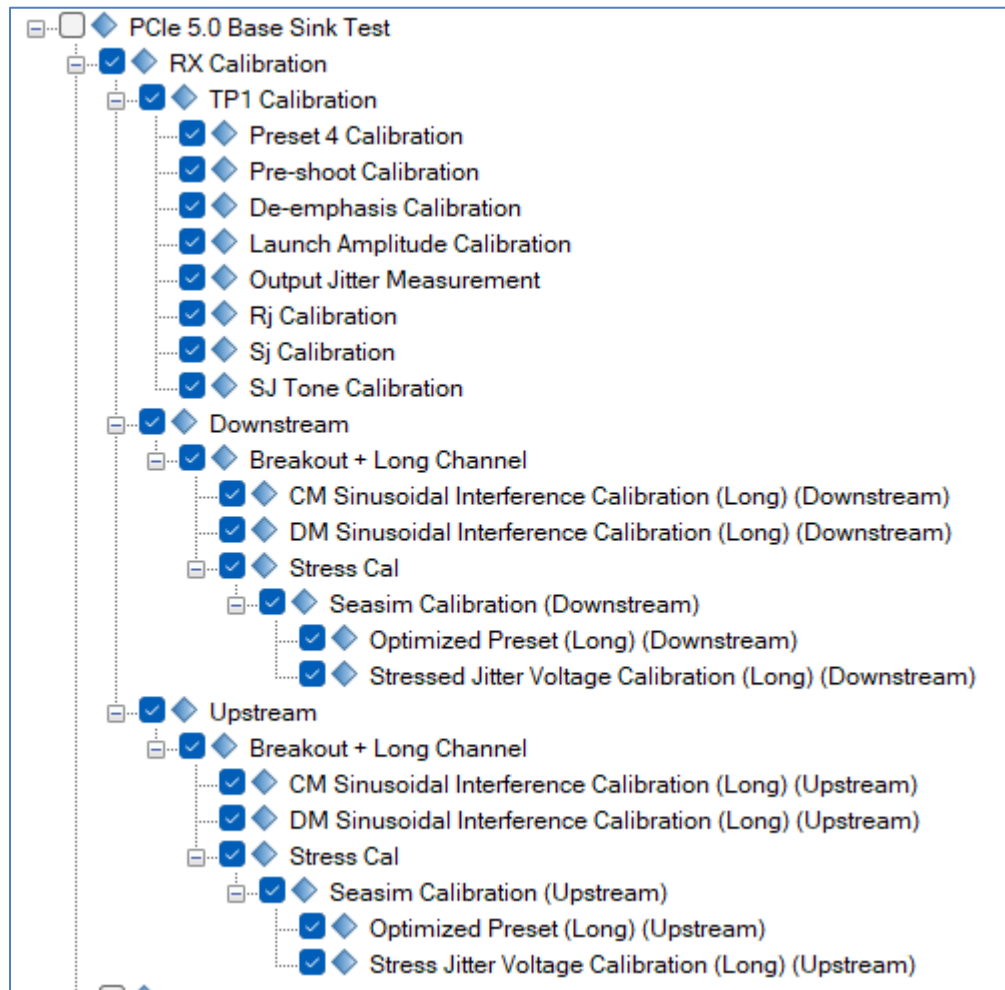


FIGURE 23. CALIBRATION SELECTION

4.1.3 Configure Calibration Parameters

After selecting the desired calibration, the user can select  from the menu to access the **Configurations** page. Set the required parameters for calibration as described below. To return all parameters to their default values, select the ‘Set Default’ button.

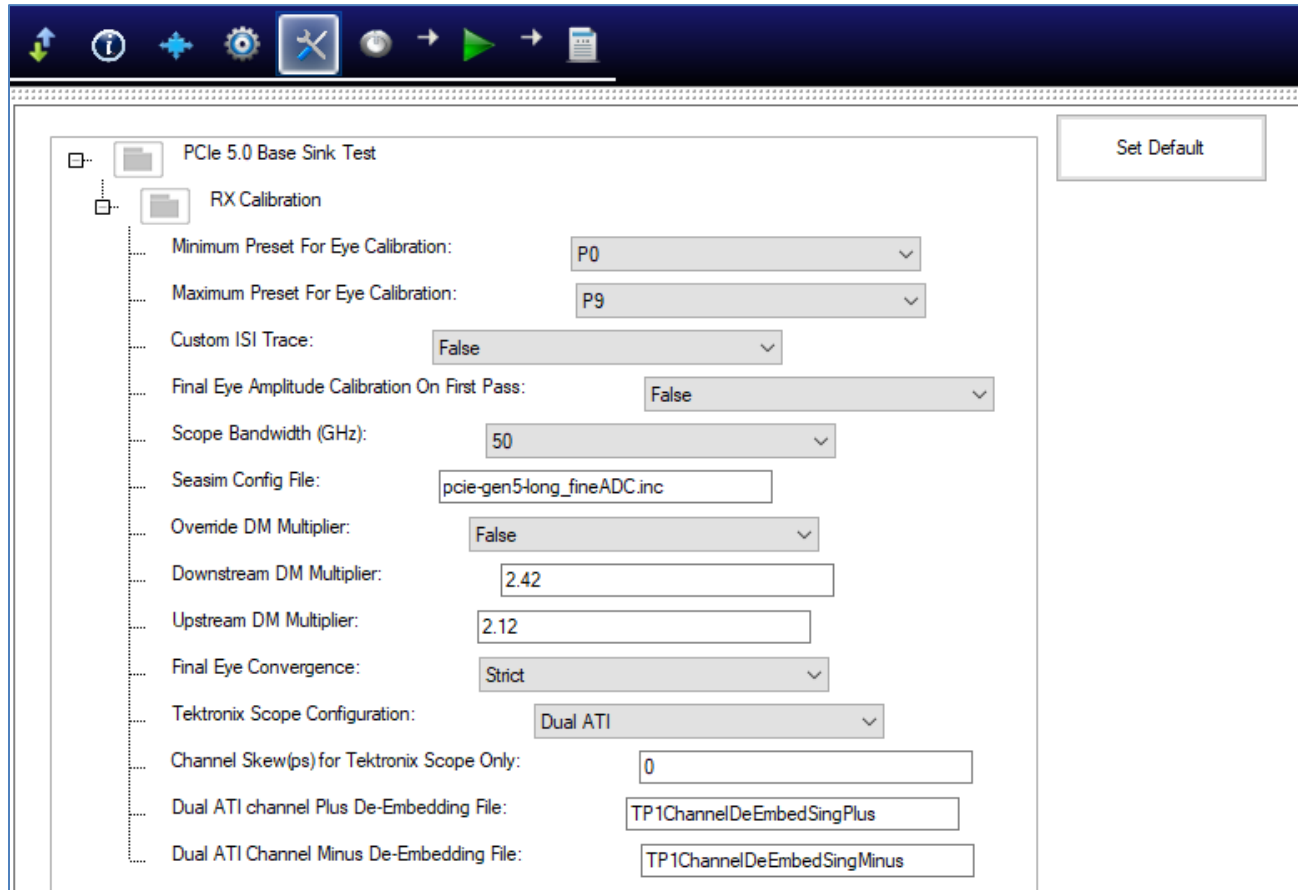

The screenshot displays the 'RX Calibration' configuration page. The parameters and their current values are as follows:

- Minimum Preset For Eye Calibration: P0
- Maximum Preset For Eye Calibration: P9
- Custom ISI Trace: False
- Final Eye Amplitude Calibration On First Pass: False
- Scope Bandwidth (GHz): 50
- Seasim Config File: pcie-gen5-long_fineADC.inc
- Override DM Multiplier: False
- Downstream DM Multiplier: 2.42
- Upstream DM Multiplier: 2.12
- Final Eye Convergence: Strict
- Tektronix Scope Configuration: Dual ATI
- Channel Skew(ps) for Tektronix Scope Only: 0
- Dual ATI channel Plus De-Embedding File: TP1ChannelDeEmbedSingPlus
- Dual ATI Channel Minus De-Embedding File: TP1ChannelDeEmbedSingMinus

FIGURE 24. CALIBRATION PARAMETERS CONFIGURATION PAGE

TABLE 4. CALIBRATION PARAMETERS DESCRIPTION

Parameter	Description
Minimum & Maximum Preset for Eye Calibration	Select the range of presets to be applied for stressed eye calibration.
Custom ISI Trace	Select ‘True’ to enable generating custom ISI trace for ISI calibration.
Final Eye Amplitude Calibration On First Pass	Select ‘True’ to allow the final stressed voltage/jitter eye to be calibrated over the first attempt of calibration run.
Scope Bandwidth (GHz)	Select the bandwidth supported by the oscilloscope in use.
Seasim Config File	Enter the specific Seasim configuration template file to be used for Seasim measurements.
Override DM Multiplier	Select ‘True’ to use the upstream/downstream multiplier

	value for estimation of Differential Mode (DM) at TP2.
Downstream & Upstream DM Multiplier	Enter the multiplier value for conversion of DM at TP2P to TP2 for downstream and upstream devices.
Final Eye Convergence	Select 'Strict' to ensure that final eye width and height from eye calibration converge within specification beyond prediction curve.
Tektronix Scope Configuration	If the Tektronix Scope is to be used for measurements, select either the Single-shot based Scope or the Tektronix' owned Dual Asynchronous Time Interleaving (Dual ATI) based Scope.
Channel Skew (ps) for Tektronix Scope Only	If the Tektronix ATI based Scope is to be used for measurements, enter the channel skew or timing to perform alignment of the Scope channels.
Dual ATI Channel Plus & Minus De-Embedding File	If the Tektronix ATI based Scope is to be used for measurements, specify the file name for de-embedding on the respective Scope channel.

4.1.4 Run Calibration at TP1

Select  from the menu to select the following run options and then start running the selected calibration.

- **Skip Test if Result Exists**– If previous calibration results exist, the GRL Platform Solutions software will *skip* the calibration steps that have existing reports.
- **Replace if Result Exists**– If previous calibration results exist, the GRL Platform Solutions software will *replace* each step in the calibration with new results.

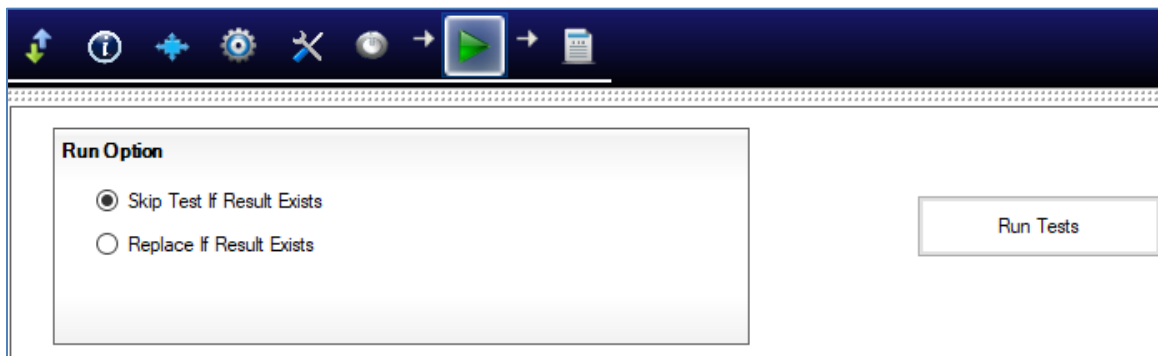


FIGURE 25. RUN TESTS

Select the **Run Tests** button to start running calibration.

When running calibration at TP1, the GRL Platform Solutions software will display the connection diagram as a first step to help the user make sure all connections are proper before calibration is performed. Example as below:

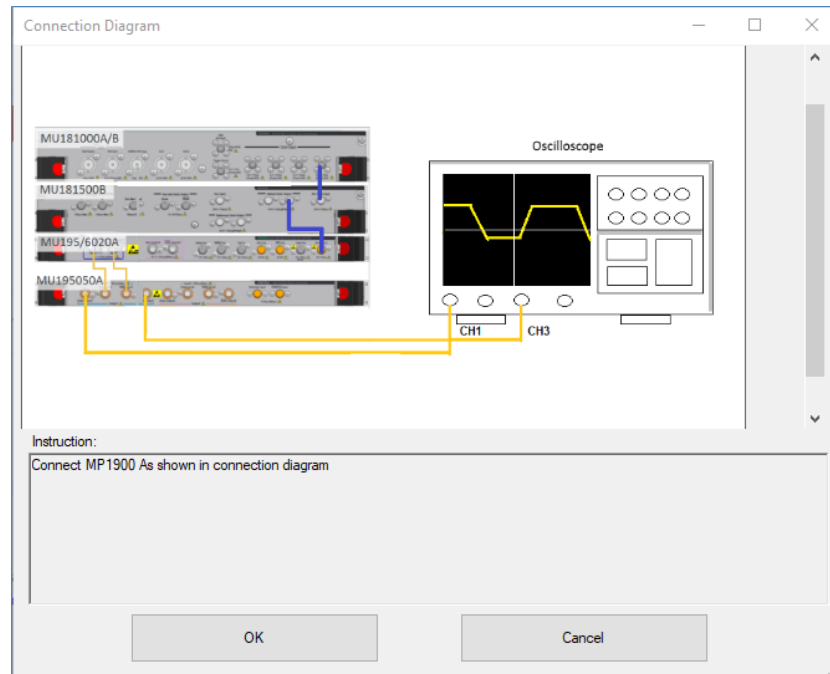


FIGURE 26. TP1 CONNECTION DIAGRAM DIALOG EXAMPLE

4.2 Calibration for TP2 (Output of Long Channel)

4.2.1 Setup for TP2 Calibration

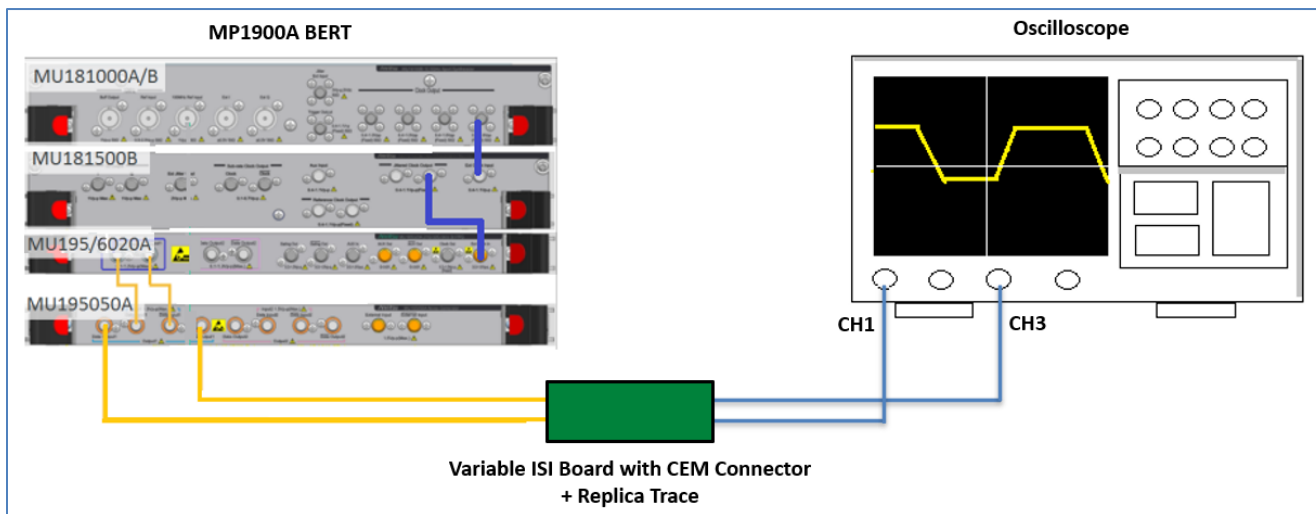


FIGURE 27. TYPICAL SETUP FOR TP2 CALIBRATION

Connection Steps:

1. Using back the same BERT connections from the TP1 calibration, disconnect the MU195050A data outputs from the oscilloscope channels.
2. Connect the MU195050A data outputs to the variable ISI board (with CEM connector and replica trace).
3. Connect the variable ISI board to Channels 1 and 3 on the oscilloscope.

4.2.1.1 TP2 Calibration Setup with Tektronix ATI Based Oscilloscope

If the Tektronix ATI based oscilloscope is being used, proceed with the following TP2 calibration setup.

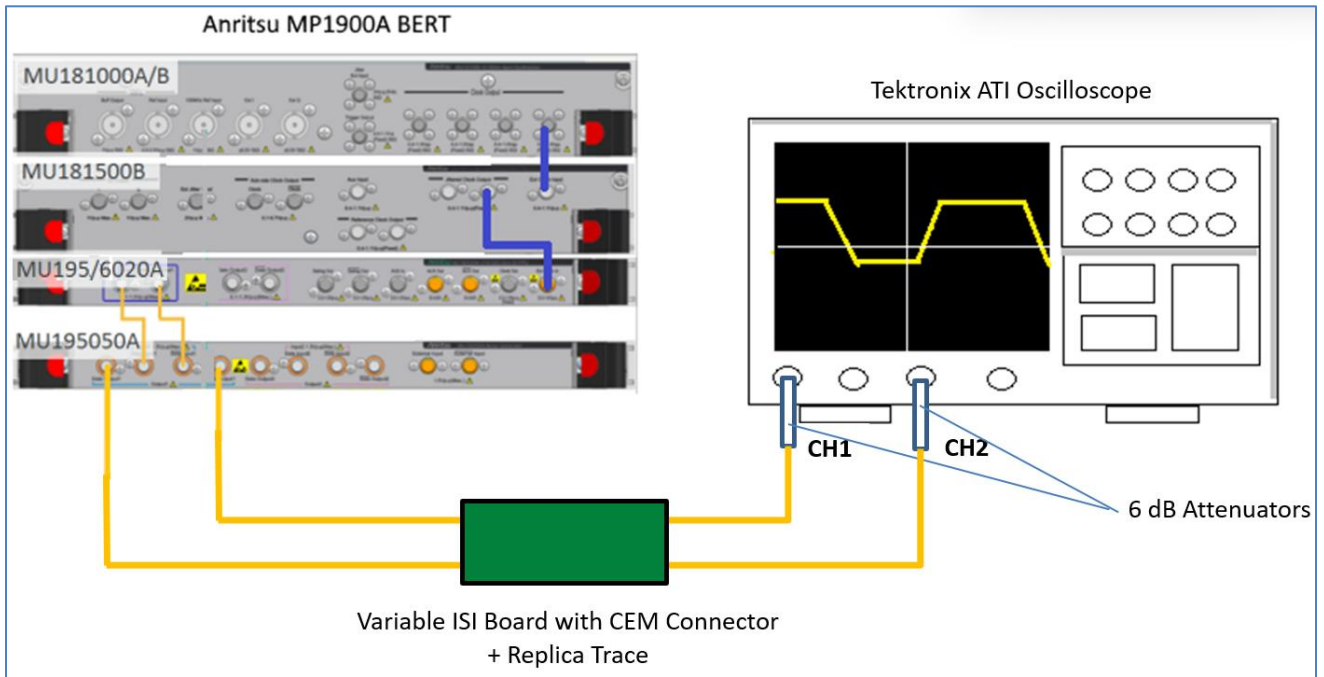


FIGURE 28. RECOMMENDED SETUP FOR TP2 CALIBRATION USING TEKTRONIX ATI SCOPE

*Note: Make sure that the “Tektronix Scope Configuration” is set to **Dual ATI** in the Configurations page (see Section 4.1.3).*

1. Using back the same BERT connections from the TP1 calibration in Section 4.1.1.1, disconnect the MU195050A data outputs from the oscilloscope channels.
2. Connect the MU195050A data outputs to the variable ISI board (with CEM connector and replica trace).
3. Then connect the variable ISI board to Channels 1 and 2 on the Tektronix ATI based oscilloscope through 6 dB attenuators.

4.2.2 Run Calibration Steps at TP2

Repeat Section 4.1.2 to complete the selected calibration steps at TP2.

After calibrating the loss profile to be used by adjustment of de-emphasis, ISI measurement, CM Sinusoidal Interference, DM Sinusoidal Interference, Final ISI and SJ adjustments to achieve calibrated eye height and width, the final calibrated stressed Eye diagram is calculated by Seasim and should look similar to the following example.

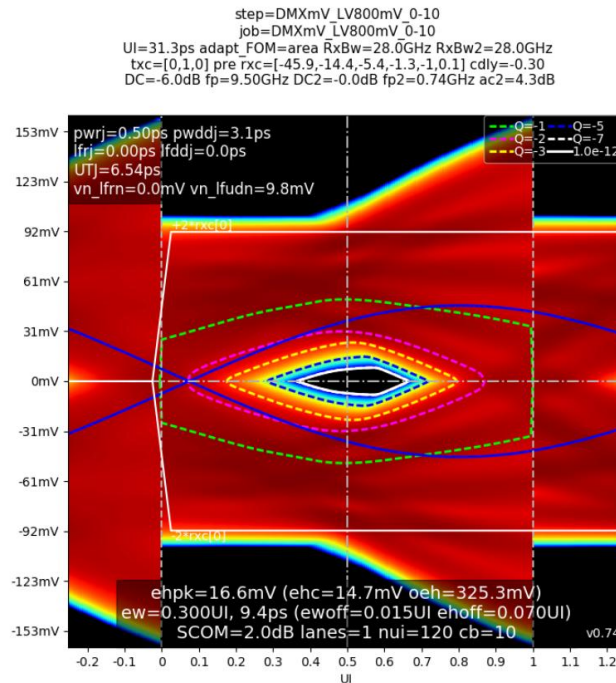


FIGURE 29. FINAL CALIBRATED STRESSED EYE DIAGRAM EXAMPLE

4.3 Configure Calibration Target Values

For debugging purposes ONLY, the default calibration target values can be changed for

the RJ and CM calibration. To do this, select  from the menu to access the Calibration page.

By default, the calibration target values are those defined in the specification. To change the values, un-select the Use Default Value checkbox. In case the default values are required again, just select the checkbox to allow all existing values to be reset to default.

Note: The PID Control setting is used to adjust the step width for steps calculation if the target measurement cannot be met with the current step. To adjust, use a lower PID Control value to reduce the subsequent step or increase the control value to make the subsequent step bigger.

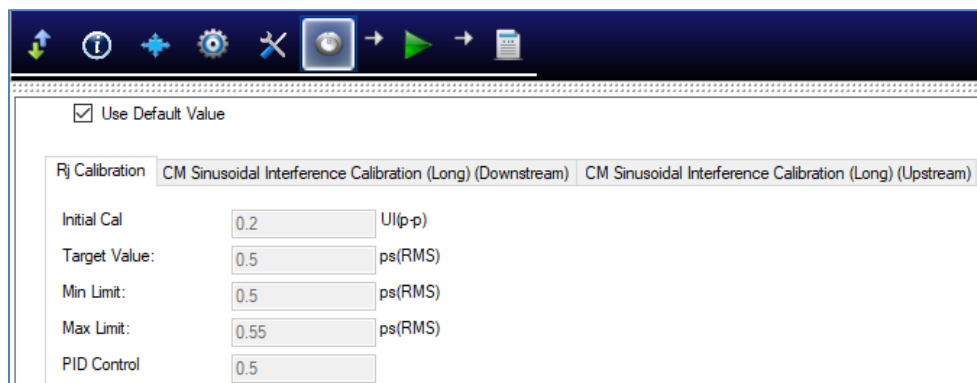


FIGURE 30. CALIBRATION TARGET OVERWRITE PAGE

5 Testing Using GRL-PXE5-BASE-RXA Software

Once the final stressed eye has been calibrated successfully, receiver stress jitter voltage tolerance and margin testing can then be performed on the device under test (DUT). The DUT should have a Replica Channel of the same Insertion Loss as the Replica Channel used for calibration. The Replica Channel is removed when performing the DUT tests.

The GRL-PXE5-BASE-RXA software automates the receiver compliance and jitter tolerance testing, at the spec-defined or user-defined jitter frequency steps. The GRL Platform Solutions software also supports nested loop testing of multiple parameters to facilitate silicon PVT testing or testing across multiple test conditions. When testing is completed, the results will be logged in an aggregated test report which can be generated into a PDF format.

Receiver device compliance ensures the receiver DUT is able to correctly interpret data from a received signal with valid voltage and timing characteristics by achieving an acceptable bit error ratio (BER) of less than 1E-12. The signal used for verifying receiver tolerance must contain the maximum allowable jitter, noise and signal loss. The stressed receiver tolerance test should include various differential mode sinusoidal interference, minimum transmitter voltage amplitude and jitter which includes random jitter and a sinusoidal periodic jitter component that is swept across specific frequency intervals.

Once the stressed receiver tolerance test setup has been calibrated, the BERT will transmit a modified compliance pattern to the receiver and monitor the loopback pattern has a BER that is less than 1E-12.

5.1 Receiver DUT Compliance Test Setup

5.1.1 Test Setup

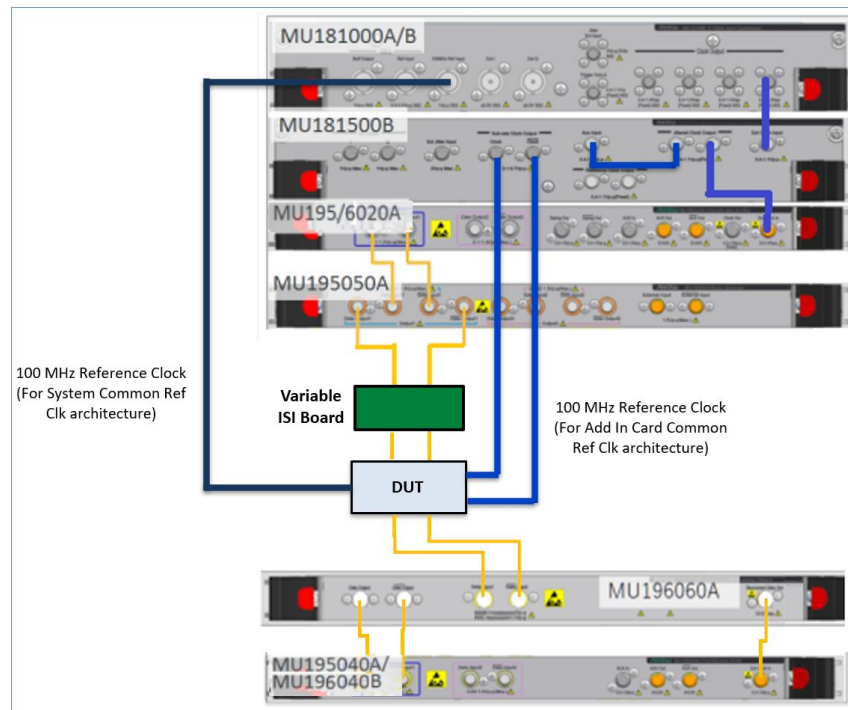


FIGURE 31. TYPICAL RECEIVER DUT TEST SETUP

Connection Steps:

1. Using back the same BERT connections from calibration, remove the oscilloscope connections from the variable ISI board.
2. Connect the jittered clock output to the Aux input on the MU181500B using a SMA-SMA short cable.
3. Using phase matched K-K coaxial cables, connect the variable ISI board to the DUT Rx inputs.
4. **If using an Add-in card DUT**, connect the MU181500B sub-rate clock outputs to the Ref Clk+/- of the DUT using coaxial cables.
5. **If using a System DUT**, connect the Ref Clk of the DUT to the 100 MHz Ref Input on the MU181000A/B with a BNC cable.
6. Using phase matched K-K coaxial cables, connect the DUT Tx outputs to the MU196060A Re-Driver data inputs.
7. Connect the MU196060A Re-Driver data outputs to the MU195040A (or MU196040B if using a PAM4 Error Detector) data inputs for loopback error detection.
8. Connect the MU196060A Re-Driver clock output to the MU195040A (or MU196040B if using a PAM4 Error Detector) Ext Clock in.

5.1.1.1 Independent Refclk Mode (for System DUT SRIS Refclk Architecture)

The following receiver compliance test setup for the System DUT is similar to the above but uses an external Refclk source for testing in the IR Refclk mode.

Using back the same setup from Figure 31, remove the connection of the DUT's Ref Clk to the 100 MHz Ref Input on the MU181000A/B. The BERT will use its own internal Refclk which mimics an external Refclk source in this mode.

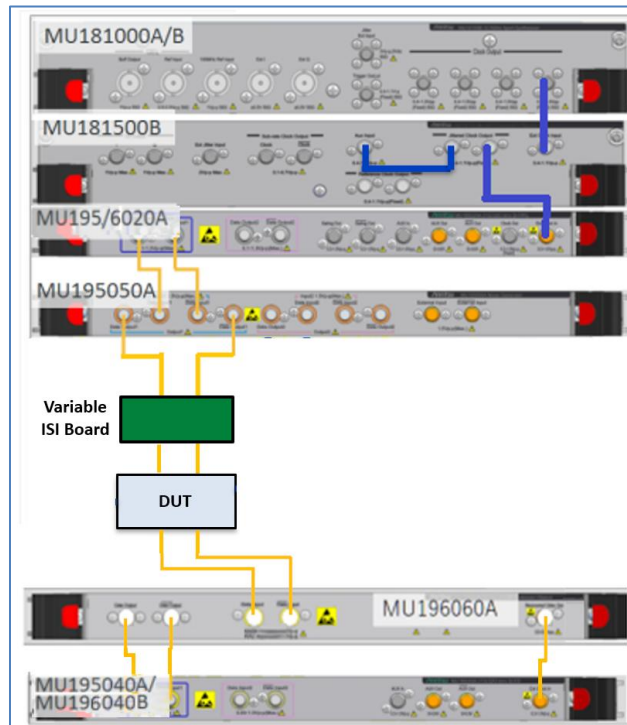


FIGURE 32. TYPICAL RECEIVER TEST SETUP FOR SYSTEM DUT SRIS REFCLK ARCHITECTURE

5.1.1.2 Independent Refclk Mode (for Add-In Card DUT SRIS Refclk Architecture)

The following receiver compliance test setup for the Add-in card DUT is similar to the above but uses an external Refclk source for testing in the IR Refclk mode.

Using back the same setup from Figure 31, remove the connections of the MU181500B sub-rate clock outputs to the Ref Clk+/- of the DUT. The user can choose to connect an external Refclk source to the Ref Clk+/- of the DUT or use the Board Refclk source from the DUT.

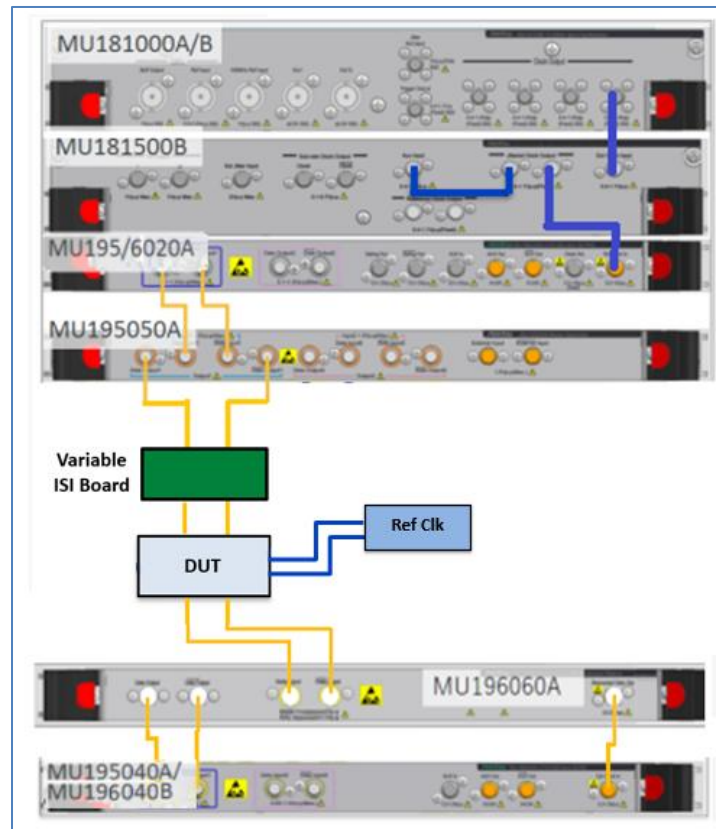


FIGURE 33. TYPICAL RECEIVER TEST SETUP FOR ADD-IN CARD DUT SRIS REFCLK ARCHITECTURE

5.1.2 Receiver Compliance Tests

In the following diagram, **Stress Jitter Voltage** tests are selected if tests at the Compliance Jitter Limits are to be performed.

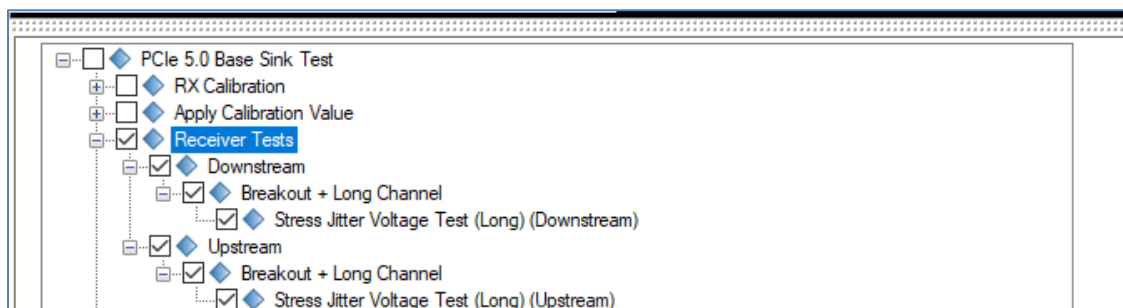


FIGURE 34. SELECTING RECEIVER COMPLIANCE TESTS

The stress jitter voltage tests are run from the same screen as shown in Figure 25.

5.1.3 Receiver Tolerance Tests

In the following diagram, **Stress Jitter Voltage Margin** tests are selected if Jitter Margin testing is to be performed.



FIGURE 35. SELECTING RECEIVER MARGIN TESTS

The marginal tests are run from the same screen as shown in Figure 25.

5.1.4 Configure Receiver Test & Receiver Tolerance Test Parameters

Select  from the menu to access the **Configurations** page. Set the required parameters for DUT Rx testing as described below.

To return all parameters to their default values, select the 'Set Default' button.

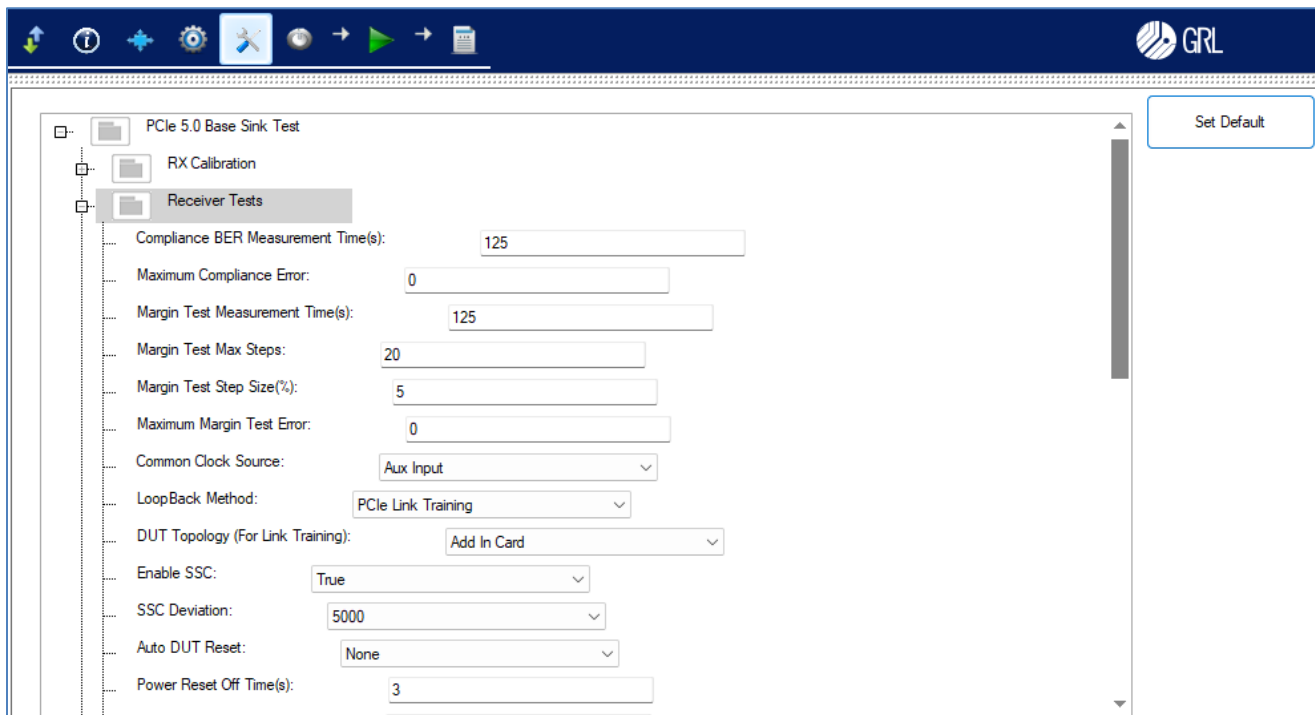


FIGURE 36. RECEIVER TEST & RECEIVER TOLERANCE TEST PARAMETERS CONFIGURATION PAGE

TABLE 5. RECEIVER TEST PARAMETERS DESCRIPTION

Parameter	Description
Compliance BER Measurement Time(s)	Set the duration in seconds to complete the Rx compliance testing to measure Bit Error Ratio (BER).

Maximum Compliance Error	Set the maximum error count for error checking during Rx compliance test runs.
Margin Test Measurement Time(s)	Set the duration in seconds to complete the Rx margin search testing.
Margin Test Max Steps	Set the maximum number of steps for stepping through margins during the margin search test.
Margin Test Step Size (%)	Set the step size in percentage for stepping through margins during the margin search test.
Maximum Margin Test Error	Set the maximum error count for error checking during the margin search test.
Common Clock Source	Select the Aux input (from the MU181500B) or the MU181000A/B to be used as the common Ref Clk source.
LoopBack Method	Select 'PCIe Link Training' to perform BER measurements using the Anritsu PCIe Link Sequencer software loopback method or select 'Self Configuration' to use a vendor-specific test mode for loopback testing.
DUT Topology (For Link Training)	Select the 'Add-In Card' (Endpoint) or 'Root Complex' (Host) as the DUT. If the DUT is a PCIe Gen4 Add-In Card, the link training partner should be a Root Complex. If the DUT is a PCIe Gen4 Root Complex, the link training partner should be an Endpoint.
Enable SSC	Select 'True' to enable Spread Spectrum Clock (SSC) capabilities for receiver testing (if supported by the DUT).
SSC Deviation	If 'True' is selected from the ' Enable SSC ' field, select the Deviation values for SSC.
Auto DUT Reset	Select which controller device connected with the GRL Platform Solutions software to be used to perform auto reset for the DUT as required during test runs.
Power Reset Off Time (s)	Set the duration in seconds to reset the power for the system under test when internal power reset mechanism is used.
Power Cycle Off Time (s)	Set the duration in seconds to cycle the power for the system under test when internal power cycle mechanism is used.
Post Reset Wait Time (s)	Set the delay/buffer in seconds after power is reset for the system under test.
Link Training Wait Time (s)	Set the delay/buffer in seconds before initiation of each link training step.
Link Training CTLE Gain Enable	Select 'True' to enable the CTLE gain for the BERT error detector.
Link Training CTLE Gain Value	If 'True' is selected from the ' Link Training CTLE Gain Enable ' field, set the value of the CTLE gain.
Log Link Training	Select 'True' to enable logging for the link training steps.

Prompt Before Link EQ Training	Select 'True' to enable a prompt to come up prior to start running Rx link equalization tests.
Ignore Failed Link Training	Select 'True' to ignore tests that have failed when running the PCIe loopback link training sequence.
Retrain When SJ Frequency Changed	Select 'True' to re-send link training sequence when there is a change in the SJ frequency.
Default Link Training Sequence	Select 'Yes' to enable the default sequence for link training to be used.
Loopback Mode	Select 'Recovery' (recommended) or 'Configuration' to be used as the link training method for placing the DUT in the loopback state.
PPG Start Preset (Link Training)	Select the preset co-efficient to be used at the start of link training.
DUT Initial Preset (Link Training)	Select the initial preset co-efficient for the DUT to be applied during Rx compliance test runs.
DUT Final Preset (Link Training)	Select the preset co-efficient for the DUT to be used after link training is successful for the final BER test.
PCIe Host Test	Set to "True" to perform Downstream receiver tests for the Host DUT.

TABLE 6. RECEIVER TOLERANCE TEST PARAMETERS DESCRIPTION

Parameter	Description
Reset BERT Params on Next Iteration	Set to "True" to reset the BERT parameters on the next test cycle for margin search.
Skip Iteration For	Select to skip the margin test iteration for the next change in amplitude or SJ & amplitude.

5.1.5 Apply Calibrated Values for Testing

Calibrated values from the stressed jitter voltage calibration can be used in the DUT Rx tests. To apply these values, select **Apply Stress Voltage Param**.


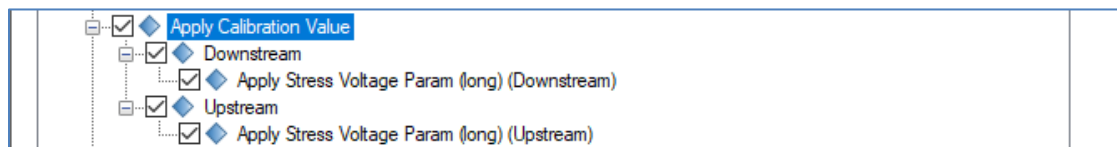


FIGURE 37. SELECTING TO APPLY CALIBRATION VALUES

5.2 Enable Loopback BER Test

Make sure that the Rx DUT is capable of supporting loopback mechanism for BER measurements.


To set up the GRL Platform Solutions software to automate loopback testing for error detection, go to the Equipment Setup  page and type in the VISA address that connects to the Anritsu MX183000A High-Speed Serial Data Test Software.

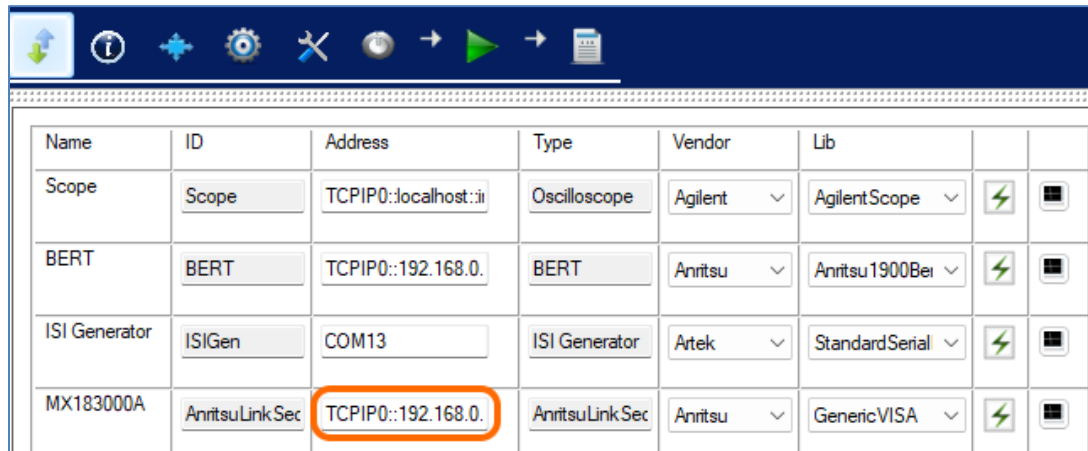

Name	ID	Address	Type	Vendor	Lib		
Scope	Scope	TCPIP0::localhost::ii	Oscilloscope	Agilent	AgilentScope		
BERT	BERT	TCPIP0::192.168.0.	BERT	Anritsu	Anritsu1900Bei		
ISI Generator	ISIGen	COM13	ISI Generator	Artek	StandardSerial		
MX183000A	AnritsuLinkSec	TCPIP0::192.168.0.	AnritsuLinkSec	Anritsu	GenericVISA		

FIGURE 38. CONNECT EQUIPMENT FOR LOOPBACK BER TEST

On the Configurations  page, select the 'LoopBack Method' as **PCIe Link Training** to enable the Anritsu PCIe Link Sequencer software loopback mode. Additional configurations can also be made through this page.

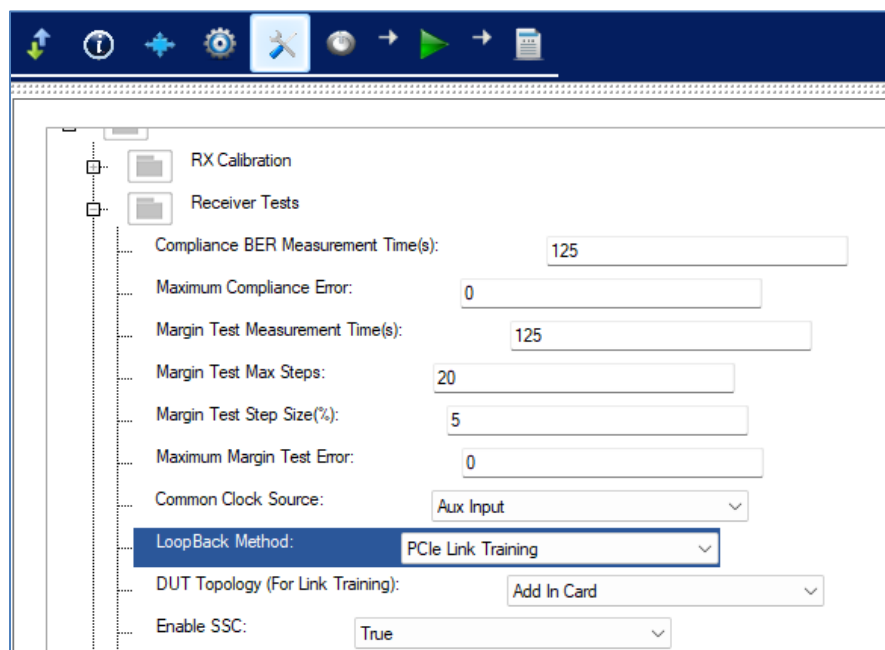

RX Calibration
 Receiver Tests
 Compliance BER Measurement Time(s): 125
 Maximum Compliance Error: 0
 Margin Test Measurement Time(s): 125
 Margin Test Max Steps: 20
 Margin Test Step Size(%): 5
 Maximum Margin Test Error: 0
 Common Clock Source: Aux Input
 LoopBack Method: **PCIe Link Training**
 DUT Topology (For Link Training): Add In Card
 Enable SSC: True

FIGURE 39. SELECT BER LOOPBACK TEST METHOD

6 Interpreting Test Report

The **Report** page has all the results from all the test runs displayed. If some of the results are not desired, they can be individually deleted by using the **Delete** button. Also for a PDF report, select the **Generate report** button. To have the calibration data plotted in the report, make sure the **Plot Calibration Data** box is checked.

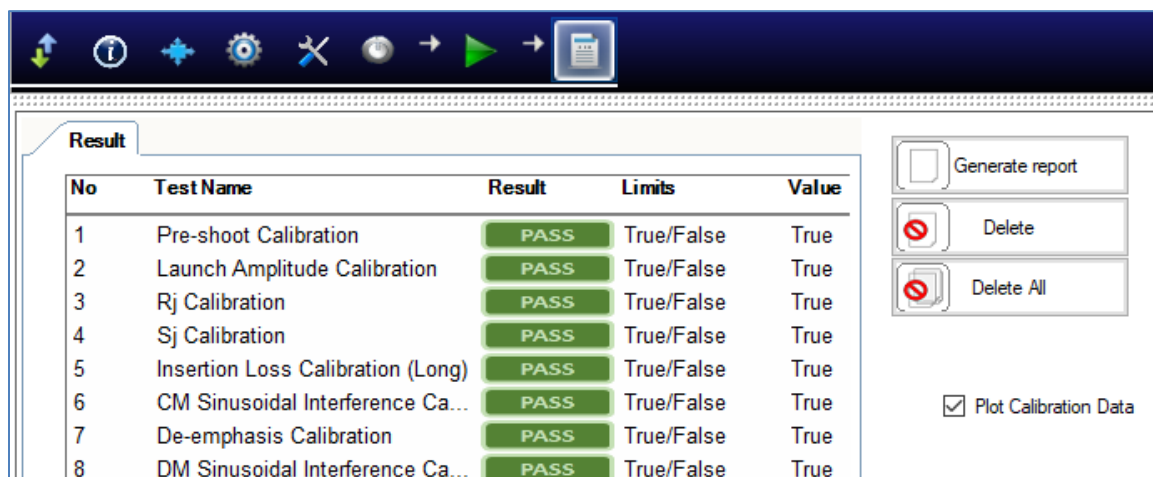


FIGURE 40. REPORT RESULTS PAGE

6.1 DUT Information

This portion is populated from the information in the DUT tab from the **Session Info** tab.

Anritsu PCIe 5.0 Base Rx Test Report	
DUT Information	
DUT Manufacturer	: GRL
DUT Model Number	: PCIe 5.0 Device A
DUT Serial Number	: 0000000001
DUT Comments	:
Test Information	
Test Lab	: Granite River Labs
Test Operator	: David
Test Date	: 2 Jul 2019
Software Version	
Software Revision	: 0.00.15

FIGURE 41. DUT INFORMATION

6.2 Summary Table

This portion is populated from the tests performed and its results. This gives an overall view of all the results and its test conditions.

No	TestName	Limits	Value	Results	SJ
1	Pre-shoot Calibration	N/A	N/A	Pass	
2	De-emphasis Calibration	N/A	N/A	Pass	
3	Launch Amplitude Calibration	N/A	N/A	Pass	
4	Rj Calibration	N/A	N/A	Pass	
5	Sj Calibration	N/A	N/A	Pass	SJLF_1
6	Sj Calibration	N/A	N/A	Pass	SJLF_2
7	Sj Calibration	N/A	N/A	Pass	SJLF_3
8	Sj Calibration	N/A	N/A	Pass	SJLF_4
9	SJ Tone Calibration	N/A	N/A	Pass	
10	ISI Calibration (Long) (Downstream)	N/A	N/A	Fail	
11	CM Sinusoidal Interference Calibration (Long) (Downstream)	N/A	N/A	Pass	
12	DM Sinusoidal Interference Calibration (Long) (Downstream)	N/A	N/A	Pass	
13	Stressed Jitter Voltage Calibration (Long) (Downstream)	N/A	N/A	Pass	
14	ISI Calibration (Long) (Upstream)	N/A	N/A	Pass	
15	CM Sinusoidal Interference Calibration (Long) (Upstream)	N/A	N/A	Pass	
16	DM Sinusoidal Interference Calibration (Long) (Upstream)	N/A	N/A	Pass	
17	Stress Jitter Voltage Calibration (Long) (Upstream)	N/A	N/A	Pass	
18	Apply Stress Voltage Param (long) (Downstream)	N/A	N/A	Pass	
19	Stress Jitter Voltage Test (Long) (Downstream)	N/A	N/A	Fail	SJLF_1
20	Stress Jitter Voltage Test (Long) (Downstream)	N/A	N/A	Fail	SJLF_2
21	Stress Jitter Voltage Test (Long) (Downstream)	N/A	N/A	Fail	SJLF_3
22	Stress Jitter Voltage Test (Long) (Upstream)	N/A	N/A	Fail	SJLF_1
23	Stress Jitter Voltage Test (Long) (Upstream)	N/A	N/A	Fail	SJLF_2
24	Stress Jitter Voltage Margin Test (Long) (Downstream)	N/A	N/A	Fail	SJLF_1
25	Stress Jitter Voltage Margin Test (Long) (Downstream)	N/A	N/A	Fail	SJLF_2

FIGURE 42. SUMMARY TABLE

6.3 Calibration Data Results

If Plot Calibration Data checkbox is checked, then the plots are shown in this part of the report.

3. Launch Amplitude Calibration

Pass/Fail Stats : Pass
Cal Parameter : LaunchVoltage
Target : 800mV
Test completed time : 19 Jun 2019 15:09:53

PCIEBaseGeneratorLaunchVoltageCal Plot

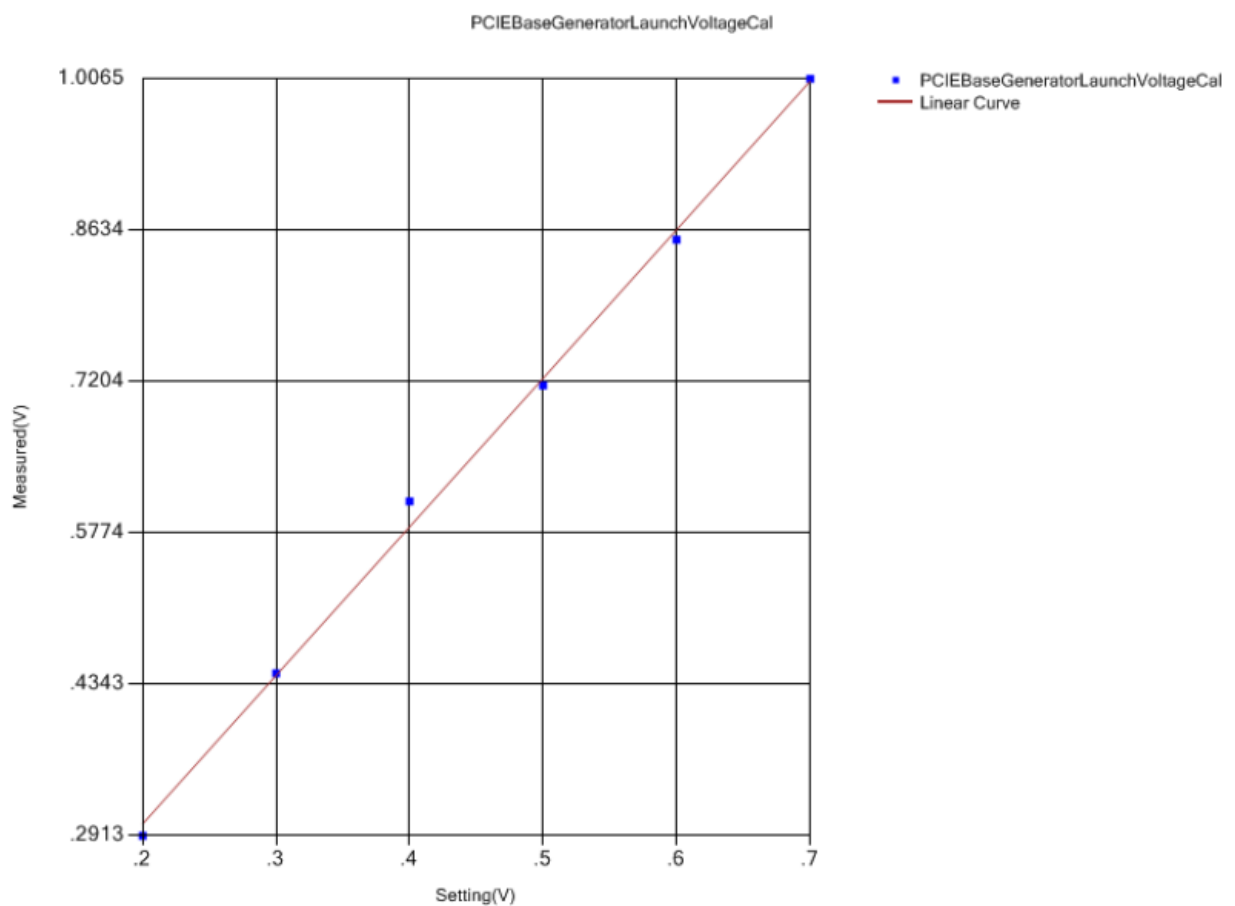


FIGURE 43. CALIBRATION RESULTS EXAMPLE

6.4 Compliance Test Results

22. Stress Jitter Voltage Test (Long) (Upstream) [SJLF_1]	
Pass/Fail Stats	: Fail
Test Frequency	: 30 KHz
ISI Generator	: PCIE ISI Board
Preshoot (dB)	: 0 (0.26)
DeEmphasis (dB)	: -6 (-6.74)
RJ (ps RMS)	: 0.5 (0.188)
SJ (ps)	: 31.25 (1)
Amplitude (mV)	: 740 (510)
DMSI Freq (GHz)	: 2.1
DMSI (mV)	: 13.46 (21.17)
CM Freq (MHz)	: 120.0
CMSI (mV)	: 150 (170.390)
SJ Tone Freq (MHz)	: 210
SJ Tone (ps)	: 4.44E-16 (0)
Max Error Allowed	: 0
Error Counts	: 234
Test completed time	: 10 7 2019 7:57:20

FIGURE 44. COMPLIANCE TEST RESULTS EXAMPLE

6.5 Margin Test Results

24. Stress Jitter Voltage Margin Test (Long) (Downstream) [SJLF_1]

Pass/Fail Stats	: Fail
Preshoot (dB)	: 0 (0.26)
DeEmphasis (dB)	: -6 (-6.74)
RJ (ps RMS)	: 1 (0.54)
Amplitude (mV)	: 800 (550)
DMSI Freq (GHz)	: 2.1
DMSI (mV)	: 5 (7.69)
CM Freq (MHz)	: 120.0
CMSI (mV)	: 150 (170.724)
ISI Generator	: PCIE ISI Board
SJ Tone Freq (MHz)	: 210
SJ Tone (ps)	: 4.440E-16 (0)
Sj Specs	: 31.25 ps
Max Error Allowed	: 0
Last Passing Sj	: 31.2500 ps
Test completed time	: 10 7 2019 8:53:15

FIGURE 45. MARGIN TEST RESULTS EXAMPLE

7 Saving and Loading Test Sessions

The GRL-PXE5-BASE-RXA software enables calibration and test results to be created and maintained as a 'Live Session' in the application. This allows the user to quit the application and return later to continue where the user left off.

Save and Load Sessions are used to save a test Session that the user may want to recall later. The user can 'switch' between different sessions by saving and loading them when needed.

- To save a session, with all of the parameter information, the test results, and any waveforms, select the "Options" drop-down menu, then the "Save Session" option.
- To load a session back into the software, including the saved parameter settings, select the "Options" drop-down menu, then the "Load Session" option.
- To create a New session and return the application back to a default configuration, select the "Options" drop-down menu, then the "New Session" option.

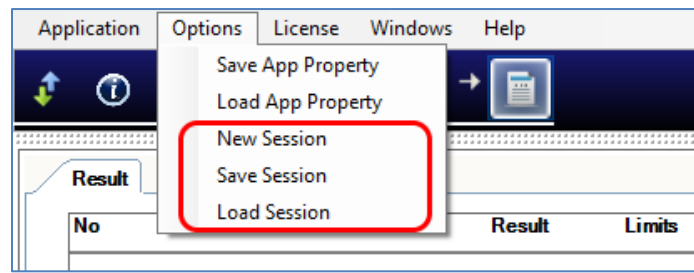


FIGURE 46. SAVING AND LOADING CALIBRATION AND TEST SESSIONS

The configuration and session results are saved in a file with the extension '.ses', which is a compressed zip-style file, containing a variety of information.

8 Appendix A: Method of Implementation (MOI) Using Automation

This section provides sample methodology to automate PCIe Gen 5 Base Rx calibration using GRL-PXE5-BASE-RXA software at 32 GT/s. This procedure will ensure Receiver Impairment adjustments on the MP1900A BERT are accurate before running DUT compliance tests.

8.1 Perform Calibration at TP1

8.1.1 Pre-shoot Calibration

The **Caltable** method is used to calibrate pre-shoot:

1. Set 800mV (p-p) amplitude on BERT.
2. Set 0dB for De-emphasis on BERT.
3. Measure:
1dB at BERT, then measure Pre-shoot, record
2dB at BERT, measure again, record
3dB at BERT, measure again, record
.....
5dB at BERT, measure again, record.
4. Plot a Caltable graph.
5. Passing criteria is to obtain measured Pre-shoot at 1dB Min and Max 4dB.

8.1.2 De-emphasis Calibration

The Caltable method is used to calibrate De-emphasis:

1. Set 800mV (p-p) amplitude on BERT.
2. Set 0dB for Pre-shoot on BERT.
3. Measure:
-8dB at BERT, then measure De-emphasis, record
-7dB at BERT, measure again
-6dB at BERT, measure again
.....
0dB.
4. Plot a Caltable graph.
5. Passing criteria is to obtain measured De-emphasis at -1dB Min and Max -6dB.

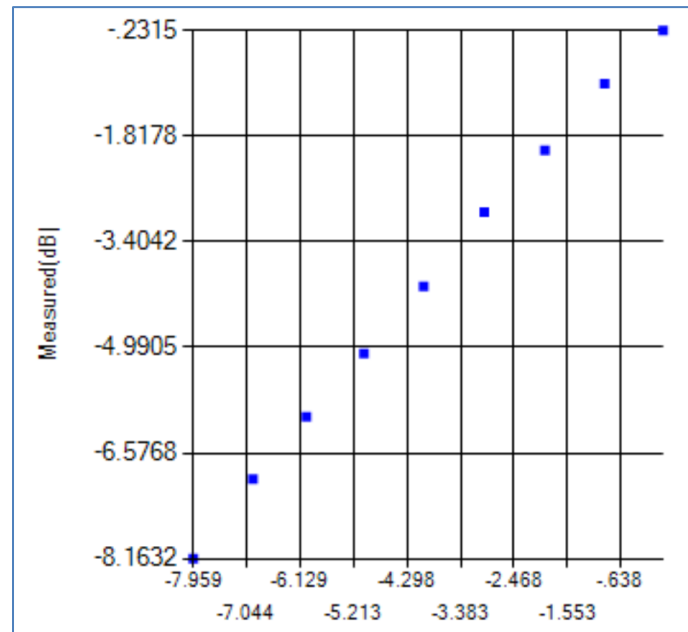


FIGURE 47. DE-EMPHASIS CALIBRATION CALTABLE GRAPH

8.1.3 Launch Amplitude Calibration

The Caltable method is used to calibrate Launch Amplitude:

1. Initialize BERT.
2. Set BERT to 0dB Pre-shoot and De-emphasis obtained from Caltable as measured above.
3. Set 300mV Amplitude at BERT, then measure the amplitude in scope, record it.
4. Increase 100mV on each iteration, measure the amplitude in scope, until measured amplitude meets or exceeds 1200mV.
5. Plot a Caltable graph.
6. Passing criteria is to obtain MEAN value of Launch Amplitude measurement at 720-800mV.

8.1.4 RJ Calibration

The Caltable method is used to calibrate RJ:

1. Initialize BERT.
2. Set 800mV (p-p) amplitude (based on calibrated value).
3. Set BERT to 0dB Pre-shoot and De-emphasis obtained from Caltable as measured above.
4. Set All Stress to 0mV.
5. Set 1100 Pattern on BERT.
6. Set Initial RJ value to 0.04UI(p-p) on BERT.
7. Measure RJ (in ps (RMS)) from scope using EZJIT, record the measured value.
8. Increase 0.1UI (p-p) on each iteration, measure RJ from scope, until measured RJ meets or exceeds 1.0ps (RMS).
9. Plot a Caltable graph.
10. Passing criteria is to obtain measured RJ at 1.0 ps (RMS).

8.1.5 SJ Calibration

The Caltable method is used to calibrate SJ:

1. Initialize BERT.
2. Set 800mV (p-p) amplitude (based on calibrated value).
3. Set BERT to 0dB Pre-shoot and De-emphasis obtained from Caltable as measured above.
4. Set All Stress to 0mV.
5. Set 1100 Pattern on BERT.
6. Set the SJ Frequency of the first Permutation (33KHz, 1MHz, 10MHz, 100MHz).
7. Set 0 (%UI (p-p)) as base value in SJ, measure SJ (in ps (p-p)) from scope using EJZIT, record.
8. Increase 0.1UI (p-p) on each iteration for SJ Frequency 1MHz, 10MHz, 100MHz; Increase 0.2UI (p-p) on each iteration for SJ Frequency 33KHz.
9. Measure SJ from scope until measured SJ meets or exceeds 62.5ps for 33KHz SJ Frequency or 20.0ps for SJ Frequency 1MHz, 10MHz, 100MHz.
10. Plot a Caltable graph.
11. Passing criteria is to obtain measured SJ at Min 6ps (p-p) and Max 62.5ps (p-p) for 33KHz, 20.0ps (p-p) for 1MHz, 10MHz, 100MHz.
12. Proceed to next permutation.

8.1.6 SJ Tone Calibration

The Caltable method is used to calibrate SJ Tone:

1. Initialize BERT.
2. Set 800mV (p-p) amplitude (based on calibrated value).
3. Set BERT to 0dB Pre-shoot and De-emphasis obtained from Caltable as measured above.
4. Set All Stress to 0mV.
5. Set 1100 Pattern on BERT.
6. Set SJ2 Frequency (210MHz).
7. Set 0 (%UI (p-p)) as base value in SJ2, measure SJ (in ps (p-p)) from scope using EJZIT, record.
8. Increase 0.1UI (p-p) on each iteration.
9. Measure SJ from scope until measured SJ meets or exceeds 10ps (p-p).
10. Plot a Caltable graph.
11. Passing criteria is to obtain measured SJ at Min 5ps (p-p) and Max 10ps (p-p).

8.2 Perform Calibration at TP2

Calibration at TP2 can be performed for Downstream (for Host) or Upstream (for Device).

8.2.1 ISI Calibration (CEM Connector Channel + Replica Channel) *[Applicable only if CTS version '1.0' is being used as the measurement reference method AND supported ISI Generator of either PCIe ISI Board or Artek is used.]*

1. Initialize BERT.
2. Set 800mV (p-p) amplitude (based on calibrated value).
3. Set BERT to 0dB Pre-shoot and De-emphasis obtained from Caltable as measured above.
4. Set All Stress to 0mV.
5. Set Clk/256 Pattern on BERT.
6. Start with PCIe CEM Variable ISI board Lane 3.
7. Trigger waveform on scope to display waveform.
8. Save waveform as .dat file (Y only).
9. Convert saved waveform to Seasim-compatible waveform (step response) with X component (start from 0). Save to xxx_vict.rfstep1. The _vict.rfstep1 format consists of time[SPACE]Voltage_level[New Line].
10. Create Seasim config file with predefined values for IL calculation.
11. Run Seasim with config file and step response.
12. Obtain .log file and .csv file from Seasim.
13. Record insertion loss at 16GHz in dB from .csv file. Check against upper and lower specification limits.
14. If insertion loss at 16GHz is above 34-37dB, decrease Lane number and repeat steps 7 to 13.
15. If insertion loss at 16GHz is below 37dB, increase Lane number and repeat steps 7 to 13.
16. Insertion loss (IL) profile curve will be generated to determine Lane number that corresponds to 34dB, 35dB, and 37dB losses for use in next step of calibration.

8.2.2 Common Mode (CM) Sinusoidal Interference Calibration

The Caltable method is used to calibrate CM-SI:

1. Insert ISI trace at 36dB loss from previous calibration step.
2. Initialize BERT.
3. Set 0mV (p-p) amplitude.
4. Set BERT to 0dB Pre-shoot and De-emphasis obtained from Caltable as measured above.
5. Set All Stress to 0mV.
6. Set Frequency on BERT for Common Mode to 120MHz.
7. Set Output on BERT for Common Mode to 20mV, turn On Output.
8. Turn Off Output on BERT for Differential Mode.
9. Initialize scope.
10. Set up Func1 on scope to (Chan1 + Chan3)/2.
11. Measure Vp-p on Func1.
12. Record measured Phase.
13. Set 800mV (p-p) amplitude (based on calibrated value).
14. Set All Zero Pattern on BERT.
15. Set ISI % value based on above calibrated data.

16. Set BERT (Common Mode) to Sine Wave.
17. Measure Amplitude (in mV) from scope, record.
18. Increase 0.174dBm/20mV on each iteration, measure Amplitude from scope until measured value meets or exceeds 150mV.
19. Plot a Caltable graph.
20. Passing criteria is to obtain measured CM-SI at Min 100mV and Max 150mV.

8.2.3 Differential Mode (DM) Sinusoidal Interference Calibration

This calibration is to ensure that the waveform achieves the calibrated eye height.

The Caltable method is used to calibrate DM-SI:

1. Insert ISI trace at 36dB loss from calibration step of Section 8.2.1.
2. Initialize BERT.
3. Set 0mV (p-p) amplitude.
4. Set BERT to 0dB Pre-shoot and De-emphasis obtained from Caltable as measured above.
5. Set All Stress to 0mV.
6. Set Frequency on BERT for Differential Mode to 2.1GHz.
7. Set Output on BERT for Differential Mode to 10mV, turn On Output.
8. Turn Off Output on BERT for Common Mode.
9. Initialize scope.
10. Set up Func1 on scope to (Chan1 – Chan3).
11. Measure Vp-p on Func1.
12. Measure Amplitude (in mV) from scope, record.
13. Increase 0.174dBm/10mV on each iteration, measure Amplitude from scope until measured value meets or exceeds 30mV.
14. Plot a Caltable graph.
15. Passing criteria is to obtain measured DM-SI at Min 10mV and Max 40mV.

8.2.4 Stress Jitter Voltage Eye Calibration

This calibration is to ensure that the waveform achieves the calibrated eye width and eye height.

1. Initialize BERT.
2. Set 800mV (p-p) amplitude (based on calibrated value).
3. Set All Stress to 0mV.
4. Set Clk/256 Pattern on BERT.
5. Start with ISI traces of 37dB.
6. Trigger waveform on scope to display waveform.
7. Embed waveform with reference package s4p.
8. Save waveform to .dat file (Y only).
9. Convert saved waveform to Seasim-compatible waveform (step response) with X component (starting from 5). Save to xxx_vict.rfstep1. The _vict.rfstep1 format consists of time[SPACE]Voltage_level[New Line].
10. Create Seasim config file with predefined values for Eye Opening calculation, starting with 0mV DM-SI.
11. Run Seasim with config file and step response.
12. Obtain .log file from Seasim.
13. Read eye height (EH) and eye width (EW).
14. Record EH vs. DM, and EW vs. DM for 800mV.

15. Increase DM-SI (in Seasim config) to 15mV, run Seasim again, obtain EH and EW.
16. Once EH and EW at 5, 15mV are obtained, plot Caltable graph and adjust DM setting needed to achieve 0.3UI and 15mV EH and EW.
17. If adjusted DM setting is out of range, increase/decrease SJ by 0.02UI. Repeat method to obtain EH and EW by adjusting DM.
18. If EH and EW do not fall within 0.3UI and 15mV after SJ variation, reduce ISI by 1dB up to 34dB and repeat steps 15 to 17.
19. If EH and EW still do not fall within specifications, return to starting ISI trace of 37dB while adjusting Amplitude and reducing ISI if necessary.
20. Repeat until EW and EW fall within specifications.
21. Record measured Amplitude, SJ, and DM.

9 Appendix B: Artek CLE Model Series Installation

9.1 ISI Generator Driver Installation

If using a Artek CLE Model unit for Variable ISI Calibration, follow these steps to install the ISI generator driver before selecting it as an ISI channel in the GRL Platform Solutions software.

1. Connect the Artek unit to the PC being used as the controller using a USB 2.0 cable.
2. Turn on the front panel power switch on the Artek unit.
3. Right-click on **My Computer > Manage > Device Manager**. If no software for Artek has been installed, you will see a 'bang' in the Device Manager.

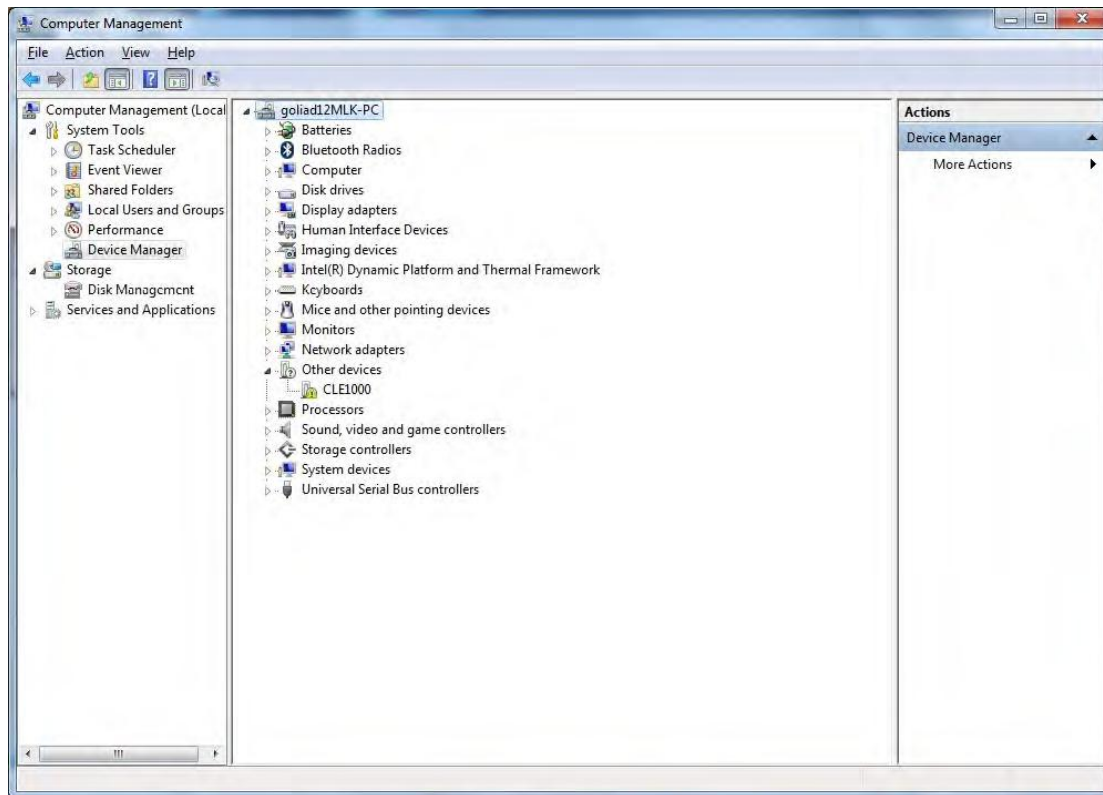


FIGURE 48. DEVICE MANAGER WINDOW

4. To install the Artek driver, go to <http://www.aceunitech.com/support.html> and download the Control Software package for the Artek CLE Series.
5. Unpack the CLE Series Software .zip file.
6. Install the CLE Series Driver:
 - a) In Device Manager, right-click on **CLExxxx > Update Driver**.
 - b) Select **Browse My Computer for Driver** from Windows dialog. See Figure 49.
 - c) Browse to the root directory of the unzipped CLE Series Software folder.
 - d) Click **Next**. You will be asked to confirm your request to install a driver. See Figure 50.
 - e) Click **Install**. The driver software will complete the installation.
7. Once installation has completed, the Device Manager should look like Figure 51.



FIGURE 49. UPDATE DRIVER WINDOW

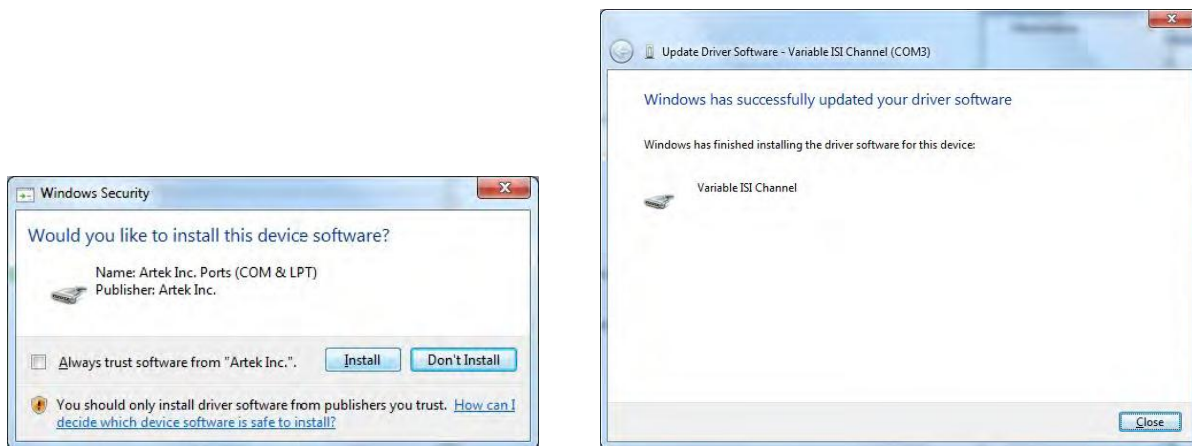


FIGURE 50. WINDOWS SECURITY WINDOW AND CONFIRMATION WINDOW

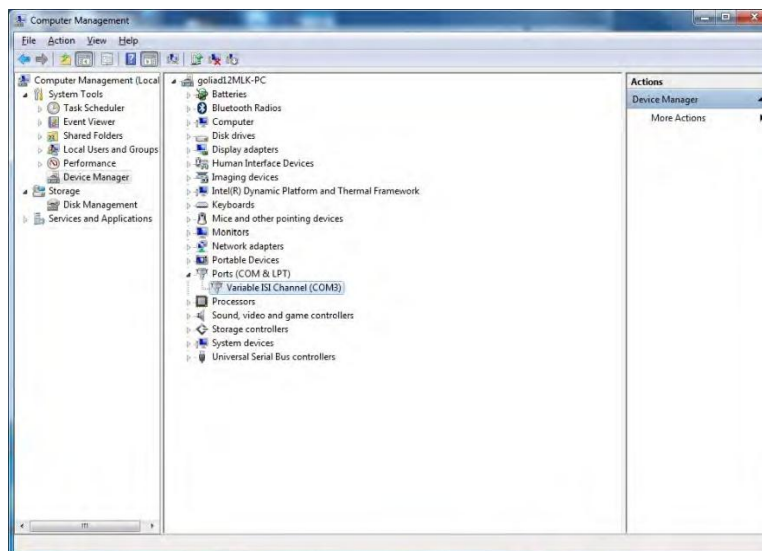


FIGURE 51. DEVICE MANAGER WINDOW AFTER INSTALLATION

The CLE Series software driver is now installed and the Artek unit can now be selected for use remotely using the GRL Platform Solutions software.

9.2 CLE Series GUI Installation

It may also be useful to install the CLE Series GUI, so that the ISI channel can also be controlled manually from the PC. To install the software, do the following:

1. In the CLE Series Software folder, click on the Setup.exe file. Once installed successfully, the following GUI will appear on the desktop.
2. You can now close the GUI if you do not want to have manual control.

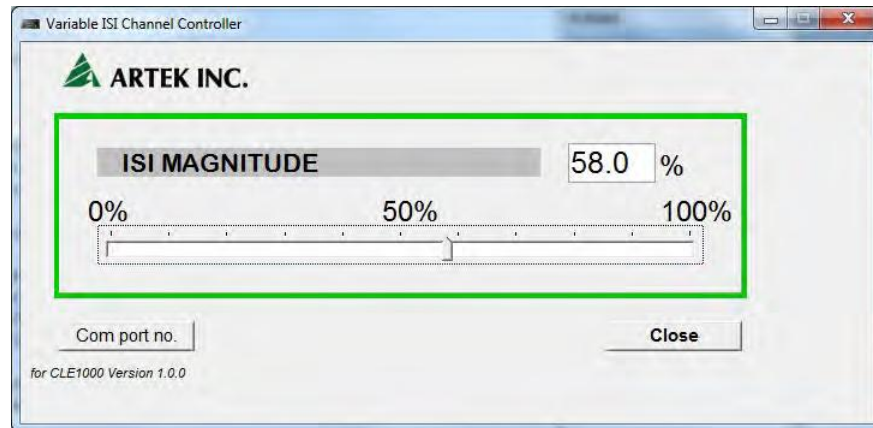


FIGURE 52. CLE SERIES GUI

10 Appendix C: Connecting Keysight Oscilloscope to PC

If using a Keysight oscilloscope, refer to the following procedure on how to connect the Scope to be used with a PC. The Keysight Scope can be connected to the PC through GPIB, USB, or LAN.

1. Download the latest version of the Keysight IO Libraries Suite software from the Keysight website and install on the PC.
2. When installed successfully, the IO icon () will appear in the taskbar notification area of the PC.
3. Select the IO icon to launch the **Keysight Connection Expert**.
4. Click Rescan.

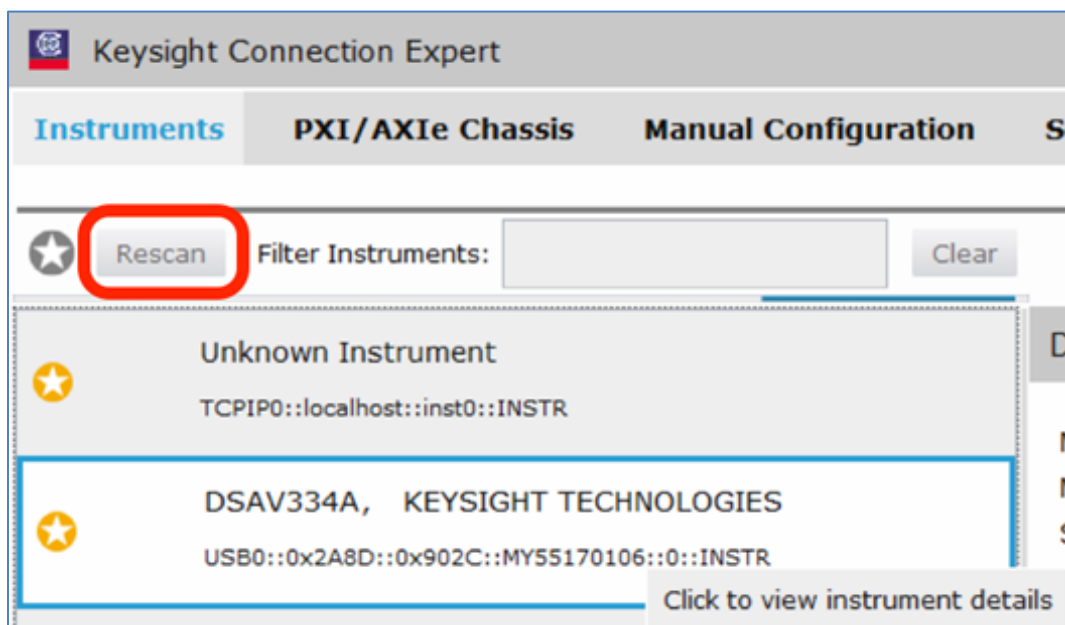


FIGURE 53. KEYSIGHT CONNECTION EXPERT

5. Refresh the system. The Keysight Scope is shown on the left pane and the VISA address is shown on the right pane.

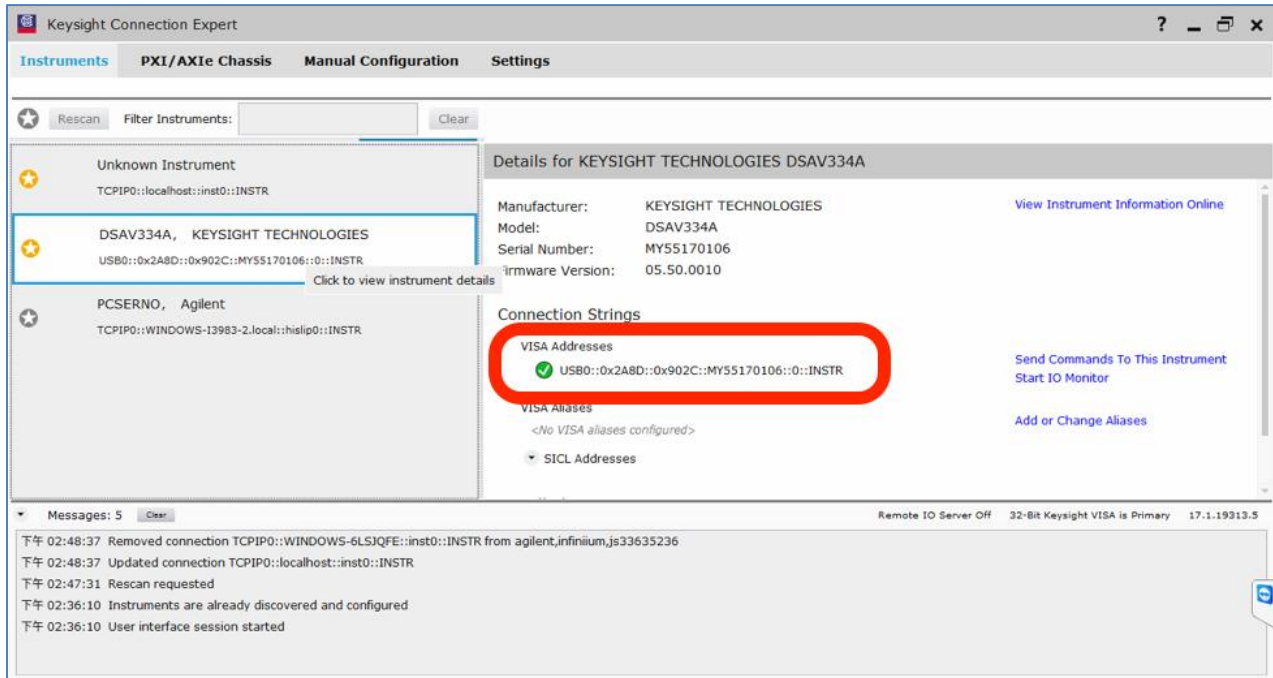


FIGURE 54. OSCILLOSCOPE'S VISA ADDRESS

6. When connecting the Keysight Scope to the PC through GPIB/USB, type in the VISA address into the 'Address' field on the Equipment Setup page of the GRL Platform Solutions PCIe 5.0 Base Rx Test Application. If connected via LAN, type in the Scope IP address, for example "TCPIP0::192.168.0.110::inst0::INSTR". Note to **omit** the Port number from the address.

If there is error in connection, type in the Scope IP address as "TCPIP0::192.168.0.4::5025::SOCKET".

11 Appendix D: Connecting Tektronix Oscilloscope to PC

If using a Tektronix DPOJET Series oscilloscope, refer to the following procedure on how to connect the Scope to be used with a PC. The Tektronix Scope can be connected to the PC through GPIB, USB, or LAN.

1. Download the latest version of the Tektronix TekVISA software from the Tektronix website and install on the PC.
2. When installed successfully, open the OpenChoice Instrument Manager application.

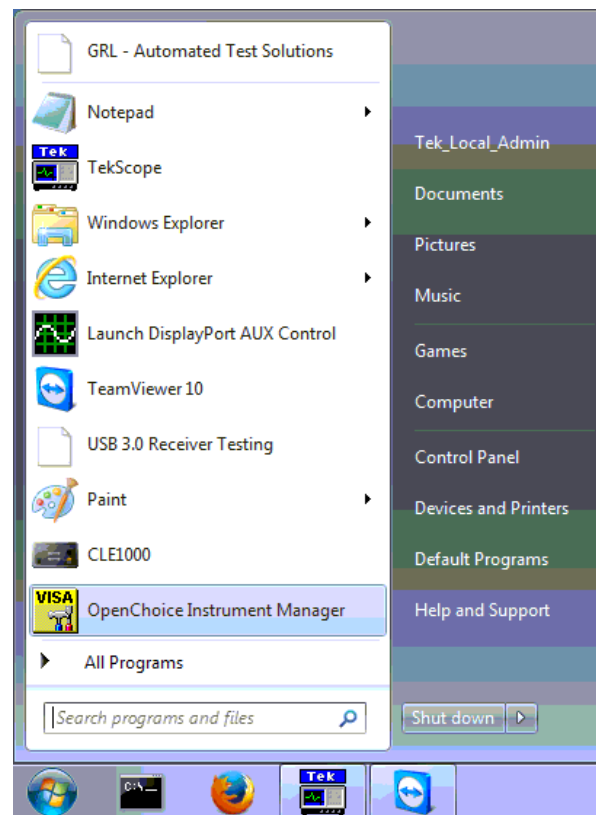


FIGURE 55. OPENCHOICE INSTRUMENT MANAGER IN START MENU

3. The left “Instruments” panel on the OpenChoice Instrument Manager will display all connected instruments. The functional buttons below the “Instruments” panel – “Instrument List Update”, “Search Criteria”, “Instrument Identify” and “Properties” can be used to detect the Scope in case it does not initially appear under “Instruments”.
 - a) “Instrument List Update”: Select to refresh the instrument list and locate new instruments connected to the PC.
 - b) “Search Criteria”: Select to configure the instrument search function.
 - c) “Instrument Identify”: Select to use a supported programming language to send a query to identify the selected instrument.
 - d) “Properties”: Select to display and view the selected instrument properties.

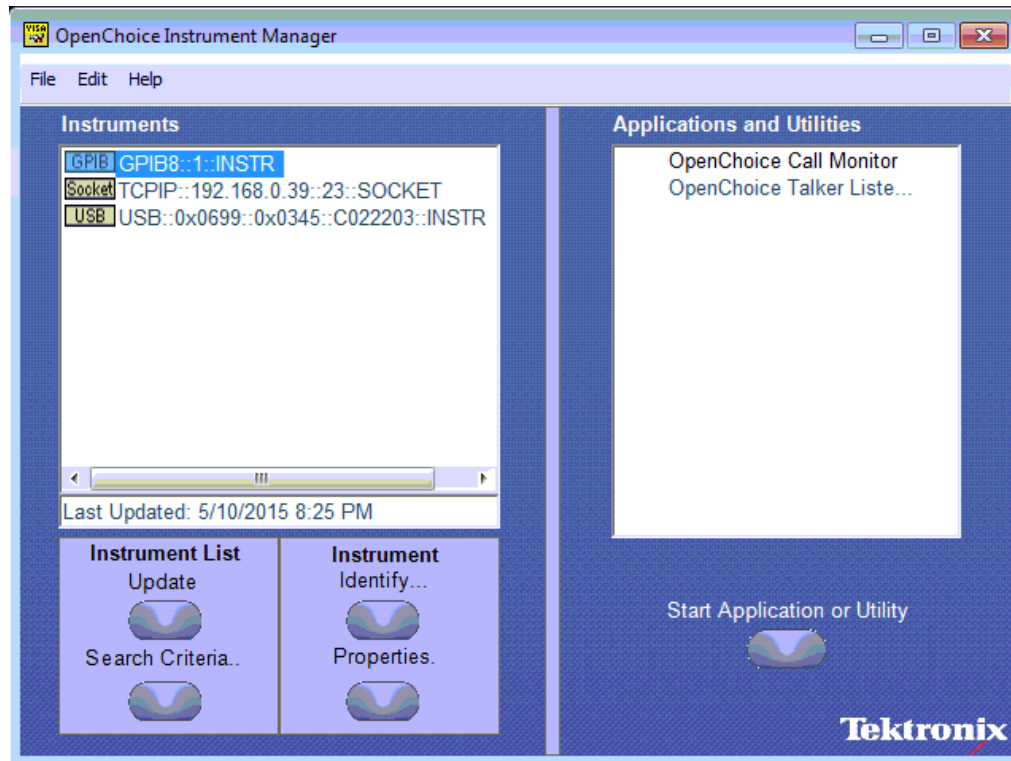


FIGURE 56. OPENCHOICE INSTRUMENT MANAGER MENU

4. If connecting the Tektronix Scope to the PC via USB, select the “Search Criteria” function to ensure that USB connection is enabled, and then select the “Instrument List Update” function. When the Scope appears on the “Instruments” panel, select it and then go to the “Instrument Identify” function. This will display the model and serial number of the Scope once detected. Select the “Properties” function to view the Scope address.
5. If connecting the Tektronix Scope to the PC via LAN, the Scope IP address must be pre-determined beforehand. Then select the “Search Criteria” function to ensure that LAN connection is enabled and type in the Scope IP address. When the Scope shows up in the list, select it followed by “Search”. The Scope should then appear on the “Instruments” panel. Select it and access the “Instrument Identify” function to view the Scope model and serial number as well as the “Properties” function to view the Scope address.
6. On the Equipment Setup page of the GRL Platform Solutions PCIe 5.0 Base Rx Test Application, type in the Scope address into the ‘Address’ field. If the PCIe 5.0 Base Rx Test Application is installed on the Tektronix Scope, ensure the Scope is connected via GPIB and type in the GPIB network address, for example “GPIB8::1::INSTR”. If the GRL Platform Solutions software is installed on the PC to control the Scope, type in the Scope IP address, for example “TCPIP0::192.168.0.110::inst0::INSTR”. Note to **omit** the Port number from the address.

END_OF_DOCUMENT