



GRL Platform Solutions

Addendum

For Hardware Setup and USB Type-C® High-Speed Functional Test Methods with GRL-USB-PD-FCB Type-C® Functional Compliance Board and USB Type-C® Power Delivery Tester and Analyzer (GRL-USB-PD-C2-EPR)

This material is provided as a reference to set up the hardware and perform USB Type-C High-Speed Functional compliance testing using the GRL Platform Solutions Type-C Functional Compliance Board (GRL-USB-PD-FCB) and GRL-USB-PD-C2-EPR test controller as the main equipment.

For user support or information, contact support@grlps.com.

Documented based on USB Type_C Specification - Release 2.2

&

Documented based on USB Type_C Functional - Release 0.88

Published on 26 June 2026

DISCLAIMER

This document is provided “as is” with no warranties whatsoever, including any warranty of merchantability, no infringement, fitness for any particular purpose, or any warranty otherwise arising out of any proposal, specification, or sample. The GRL Platform Solutions disclaims all liability for infringement of proprietary rights, relating to use of information in this specification. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted herein.

All product names are trademarks, registered trademarks, or service marks of their respective owners.



Copyright © 2026 GRL Platform Solutions. All rights reserved.

TABLE OF CONTENTS

1	SCOPE OF THIS ADDENDUM	6
2	TEST/EQUIPMENT REQUIREMENTS	6
3	TEST MODES	6
3.1	COMPLIANCE TEST MODE CONFIGURATION	7
3.2	INFORMATIONAL TEST MODE CONFIGURATION	8
4	USB TYPE-C HIGH-SPEED FUNCTIONAL TEST SETUP	11
4.1	GENERAL TEST SETUP.....	11
4.1.1	For Source/Sink/DRP Receptacle UUT Not Capable of USB Communication	11
4.1.2	For Source/Sink/DRP UUT with Captive Cable Not Capable of USB Communication	12
4.2	USB DATA VALIDATION TEST SETUP	12
5	USB DATA VALIDATION FUNCTIONAL TEST PROCEDURE	14
5.1	USB POWER DELIVERY VALIDATION WITHOUT USB DATA VALIDATION SUPPORT.....	14
5.2	USB 2.0/3.1 DATA VALIDATION.....	17
5.2.1	Manual USB 2.0/3.1 Data Validation.....	20
6	TEST CASE PROMPTS/MESSAGES	21
6.1	TEST CASE TD.4.1.1 INITIAL VOLTAGE TEST	21
6.2	TEST CASE TD.4.1.2 UNPOWERED CC VOLTAGE TEST.....	23
6.3	TEST CASE TD.4.9.1 SOURCE SUSPEND TEST.....	23
6.4	TEST CASE TD.4.11.2 SINK DEAD BATTERY TEST	23
6.5	TEST CASE TD.4.12.2 HUB PORT TYPE TEST	24
7	CV TOOL USAGE	26
7.1	TD 4.9.1 TEST CV TOOL PROCEDURE	26
7.2	TD 4.10.1 SINK POWER SUB-STATES TEST CV TOOL PROCEDURE.....	30
7.3	TD 4.10.2 SINK POWER PRECEDENCE TEST CV TOOL PROCEDURE.....	34
7.4	TD.4.10.3 SINK SUSPEND TEST CV TOOL PROCEDURE	40

LIST OF FIGURES

Figure 3.1: Selecting Compliance Test Mode	7
Figure 3.2: USB-C Functional Tests Configuration (Compliance Test Mode)	8
Figure 3.3: Selecting Informational Test Mode.....	9
Figure 3.4: USB-C Functional Tests Configuration (Informational Test Mode)	10
Figure 4.1: General Test Connection Setup – For Source/Sink/DRP Receptacle UUT Not Capable of USB Communication	11
Figure 4.2: General Test Connection Setup – For Source/Sink/DRP UUT with Captive Cable Not Capable of USB Communication.....	12
Figure 4.3: USB Data Validation Test Connection Setup Example	13
Figure 5.1: Accessing & Selecting Functional Compliance Tests Without USB Data Support	15
Figure 5.2: Selecting Start Execution Button for Functional Compliance Test Cases Without USB Data Support.....	15
Figure 5.3: Running Functional Compliance Test Cases Without USB Data Support	16
Figure 5.4: Selecting Stop Execution Button for Functional Compliance Test Cases Without USB Data Support.....	16
Figure 5.5: Selecting Scroll to Current Test Results Checkbox for Functional Compliance Test Cases Without USB Data Support.....	16
Figure 5.6: Accessing Test Reports for Functional Compliance Test Cases Without USB Data Support.....	17
Figure 5.7: Enable USB_Comms_Capable for Functional Compliance Tests with USB Data Support	17
Figure 5.8: Load VIF File in Compliance Test Mode for Functional Compliance Tests With USB Data Support	18
Figure 5.9: Accessing Functional Compliance Tests With USB Data Support.....	19
Figure 5.10: Selecting Start Execution Button for Functional Compliance Test Cases with USB Data Support	19
Figure 5.11: USB Data Validation Options for Functional Compliance Test Cases With USB Data Support.....	19
Figure 5.12: USB Data Validation Enabled for High-Speed Functional Tests.....	20
Figure 5.13: Verify Enumeration Status of Golden Device #1.....	20
Figure 5.14: Verify Enumeration Status of Golden Device #2.....	21
Figure 6.1: User Prompts to Connect UUT to GRL-USB-PD-C2-EPR Test Controller.....	22
Figure 6.2: User Prompt to Connect UUT to Fixture or Board if Required.....	22
Figure 6.3: User Prompt to Remove External Power from UUT	23
Figure 6.4: User Prompt to Re-Connect External Power to UUT	23

Figure 6.5: Verify Checkbox is Selected if Battery is Connected to UUT	24
Figure 6.6: User Prompt to Check if Dead Battery is Connected to UUT	24
Figure 6.7: User Prompt to Remove Dead Battery and Reconnect Charged Battery to UUT	24
Figure 6.8: Verify UUT Hub Port Embedding Before Testing.....	25
Figure 7.1: User Prompt to Select Host Controller in CV Tool.....	26
Figure 7.2: Select and Execute TD 4.9.1 Enter Suspend (U3) Test in CV Tool.....	27
Figure 7.3: User Prompt to Enter Debug Mode Configuration Index in CV Tool for TD 4.9.1 Tests	27
Figure 7.4: Test Results Generation in CV Tool for TD 4.9.1 Enter Suspend (U3) Test.....	28
Figure 7.5: Select and Execute TD 4.9.1 Enumerate Device to Unconfigured State Test in CV Tool.....	29
Figure 7.6: Test Results Generation in CV Tool for TD 4.9.1 Enumerate Device to Unconfigured State Test	29
Figure 7.7: Select and Execute TD 4.10.1 Tests in CV Tool.....	30
Figure 7.8: User Prompt to Select FS Device in CV Tool for TD 4.10.1 Tests	31
Figure 7.9: User Prompt to Enter Debug Mode Configuration Index in CV Tool for TD 4.10.1 Tests	32
Figure 7.10: User Prompt to Enter Debug Mode Number of Bytes in CV Tool for TD 4.10.1 Tests	32
Figure 7.11: Test Results Generation in CV Tool for TD 4.10.1 Tests	33
Figure 7.12: User Prompt to Close USB 3 Gen X CV App in Golden Device	33
Figure 7.13: User Prompt to Select FS Device in CV Tool for TD 9.16 Enumeration Test.....	34
Figure 7.14: User Prompt to Enter Debug Mode Enumeration Loop Count in CV Tool.....	35
Figure 7.15: Test Results Generation in CV Tool for TD 9.16 Enumeration Test	35
Figure 7.16: User Prompt to Confirm CTS “9.16 Enumeration Test” Status in CV Tool	36
Figure 7.17: User Prompt to Execute CTS “TD 9.13 Set Configuration Test” in CV Tool.....	36
Figure 7.18: Test Results Generation in CV Tool for TD 9.13 Set Configuration Test.....	37
Figure 7.19: User Prompt to Execute CTS “TD 7.40 Warm Reset” in CV Tool.....	37
Figure 7.20: User Prompt to Confirm Warm Reset Execution in CV Tool	38
Figure 7.21: Test Results Generation in CV Tool for TD 7.40 Warm Reset Test.....	39
Figure 7.22: User Prompt to Close USB 3 Gen X CV App in Golden Device	39
Figure 7.23: User Prompt to Suspend UUT Link Using CV Tool.....	40
Figure 7.24: Select and Execute Suspend UUT Link Test in CV Tool.....	41

1 Scope of this Addendum

This Addendum serves as the supplementary documentation to connect the GRL-USB-PD-FCB Type-C Functional Compliance Board to the GRL-USB-PD-C2-EPR USB Type-C Test Controller and unit-under-test (UUT) for USB Type-C High-Speed Functional compliance testing. This will be followed by Methods of Implementation (MOI) procedures to perform manual testing using the GRL-USB-PD-C2-EPR application and test setups.

Below describes the GRL-USB-PD-FCB Type-C Functional Compliance Board, which consists of the following test fixture:



- **GRL-HS-EXT Fixture** – Extension fixture for the GRL-USB-PD-C2-EPR test controller, used to control the VBUS and CC lines between connected devices without interfering with the high-speed lines between USB Type-C input/output connectors.

2 Test/Equipment Requirements

For purchase or information of the following items, contact info@grlps.com.

- GRL-USB-PD-FCB Type-C Functional Compliance Board (GRL-HS-EXT test fixture)
- GRL-USB-PD-C2-EPR USB Type-C test controller
- 2 x GRL Platform Solutions Special (GRL-SPL-EPR) Type-C VCONN passthrough test cables (GRL-USB-PD-STC) *[Note: GRL Platform Solutions mandates using 3 x GRL-SPL-EPR cables for setup of UUT without captive cable.]*
- Golden Device with USB Type-C Power Delivery Data port (computer or phone, USB-IF compliant) *[Note: GRL Platform Solutions recommends using the Google Pixel 3 phone as a Golden Device.]*
- CV tool software (USB Gen3) installed and run on a Host laptop PC. *[Note: This software can be downloaded from USB-IF website.]*

3 Test Modes

This section describes how to set up the **Informational** test mode (using the UUT Type selection and querying the Capabilities of the UUT) or the **Compliance** test mode (using a VIF File) on the GRL-USB-PD-C2-EPR application for USB Type-C High-Speed Functional compliance testing.

1. Open the GRL-USB-PD-C2-EPR application and connect to the GRL-USB-PD-C2-EPR test controller. *For details on using the GRL-USB-PD-C2-EPR application, refer to the GRL-USB-PD-C2-EPR App user documentation in <https://www.grlps.com/en-us/download-center>.*
2. Go to the “Product Capability” screen and enter the **Project Name** of the current test session.

3. **If a VIF File is not provided or available**, select the **Informational (No VIF)** test mode.
4. **If a VIF File is provided**, select the **Compliance** test mode.

Note: More details on these test modes are provided in the Product Capability section in the GRL-USB-PD-C2-EPR App user documentation.

3.1 Compliance Test Mode Configuration

The Compliance test mode is used for test certification run. In this mode, a VIF file is required to ensure proper execution for all test cases, which otherwise most test runs may render incomplete without a VIF file.

1. Select the **Compliance** Test Mode radio button as shown in Figure 3.1 below.

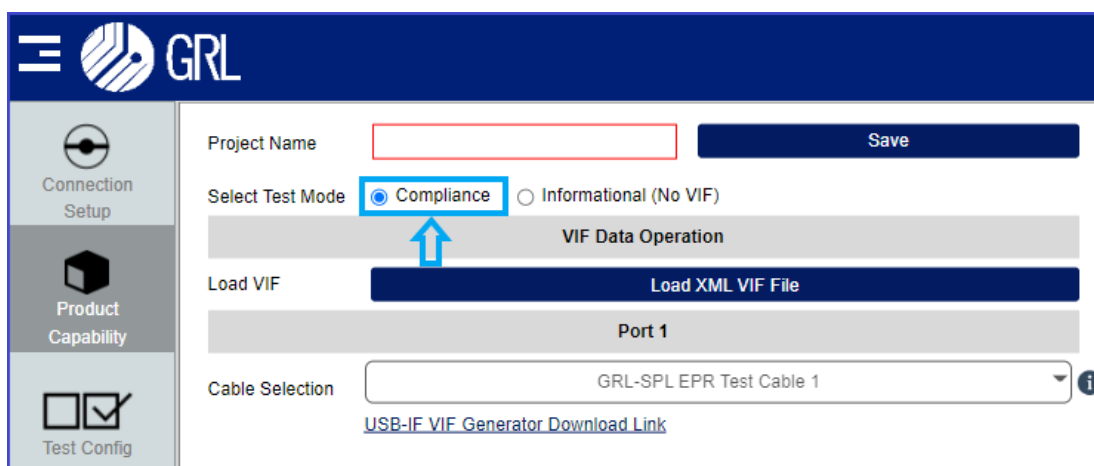


FIGURE 3.1: SELECTING COMPLIANCE TEST MODE

2. Load the **VIF** file of the UUT by selecting the **Load XML VIF File** button.
3. Select the type of Cable that connects the UUT to the specific USB Port on the GRL-USB-PD-C2-EPR test controller from the **Cable Selection** drop-down menu.
4. Go to the “Test Config” screen and select the “USB-C Functional Tests” radio button to access the functional compliance tests. Select the checkbox(s) of the test cases to be run.
5. The test cases have additional inputs that can be configured as follows (Figure 3.2):

USB-C Functional Test Configuration	
	☒ Enable USB Data Validation
	☐ Automate USB Data Validation Setup Image
Device URL	ⓘ
Number of USB Type-C ports	0 ⓘ
Number of USB Type-B/Micro-B receptacle or Type-A plug	0 ⓘ
	☒ Is connected Hub is embedded ⓘ
	☒ Is Battery Connected to DUT ⓘ

FIGURE 3.2: USB-C FUNCTIONAL TESTS CONFIGURATION (COMPLIANCE TEST MODE)

- Enable data validation at high USB speeds through automation.
- Enter the UUT URL address.
- Enter the number of USB Type-C ports on the UUT.
- Enter the number of USB Type-B/Micro-B or Type-A ports on the UUT (if available).
- Select if the UUT is an embedded USB hub.
- Select if the UUT is connected to a battery.


[Note: The “Enable USB Data Validation” checkbox is selected by default which will be updated with the information from the loaded VIF file.]

6. Make sure to select [Setup Image](#) to verify that the equipment connection has been set up correctly before starting test execution.

3.2 Informational Test Mode Configuration

The Informational test mode is used when a VIF file is not available. In this mode, multiple options can be configured to execute tests without a VIF file by selecting the UUT type, reading the UUT capabilities and generating a VIF file from the configuration.

1. Select the **Informational (No VIF)** Test Mode radio button as shown in Figure 3.3 below.

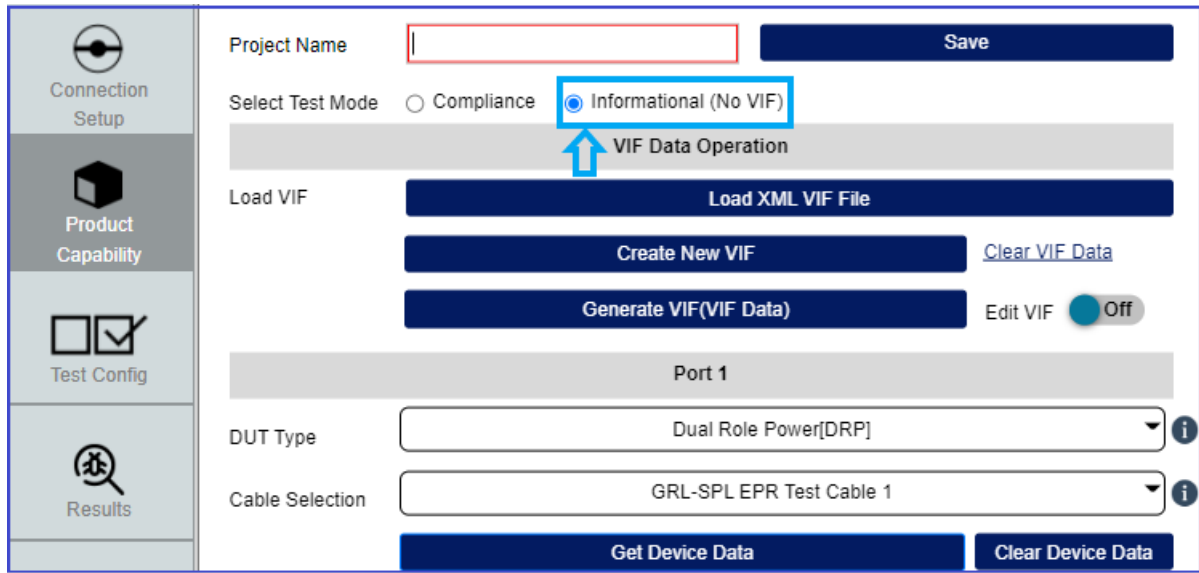

The screenshot shows the 'Connection Setup' screen of the GRL Platform. On the left is a sidebar with icons for 'Connection Setup', 'Product Capability', 'Test Config', and 'Results'. The main area contains the following fields and buttons:

- Project Name:** A text input field with a red border and a 'Save' button.
- Select Test Mode:** Two radio buttons: 'Compliance' and 'Informational (No VIF)'. The 'Informational (No VIF)' option is selected and highlighted with a blue box. A blue arrow points to the 'Informational (No VIF)' option.
- VIF Data Operation:** A section header.
- Load VIF:** A section header.
- Buttons:** 'Load XML VIF File', 'Create New VIF', 'Generate VIF(VIF Data)', 'Clear VIF Data', and 'Edit VIF' (with a toggle switch set to 'Off').
- Port 1:** A section header.
- DUT Type:** A dropdown menu showing 'Dual Role Power[DRP]'.
- Cable Selection:** A dropdown menu showing 'GRL-SPL EPR Test Cable 1'.
- Buttons:** 'Get Device Data' and 'Clear Device Data'.

FIGURE 3.3: SELECTING INFORMATIONAL TEST MODE

2. Select the **DUT Type** drop-down menu to select the UUT type for both Port 1 and Port 2.
3. Select the type of Cable that connects the UUT to the specific USB Port on the GRL-USB-PD-C2-EPR test controller from the **Cable Selection** drop-down menu.
4. Click on the **Get Device Data** button to read the UUT capabilities from the UUT connected to each respective GRL-USB-PD-C2-EPR test controller port.
5. If required, click on the **Create New VIF** button to create a new VIF File from the configuration. The current configuration can also be saved to a VIF data file by clicking on the **Generate VIF (VIF Data)** button.
6. Once the UUT has been defined as above, go to the “Test Config” screen and select the “USB-C Functional Tests” radio button to access the functional compliance tests. Select the checkbox(s) of the test cases to be run.
7. The test cases have additional inputs that can be configured as follows (Figure 3.4):

USB-C Functional Test Configuration	
	☐ Enable USB Data Validation
	☐ Automate USB Data Validation Setup Image
Device URL	
Number of USB Type-C ports	0 
Number of USB Type-B/Micro-B receptacle or Type-A plug	0 
	☐ Is connected Hub is embedded 
	☐ Is Battery Connected to DUT 

FIGURE 3.4: USB-C FUNCTIONAL TESTS CONFIGURATION (INFORMATIONAL TEST MODE)

- Enable manual data validation at high USB speeds.
 - Enable data validation at high USB speeds through automation.
 - Enter the UUT URL address.
 - Enter the number of USB Type-C ports on the UUT.
 - Enter the number of USB Type-B/Micro-B or Type-A ports on the UUT (if available).
 - Select if the UUT is an embedded USB hub.
 - Select if the UUT is connected to a battery.
8. Make sure to select [Setup Image](#) to verify that the equipment connection has been set up correctly before starting test execution.

4 USB Type-C High-Speed Functional Test Setup

This section describes the connection diagrams and procedures to set up the equipment and fixture for USB Type-C High-Speed Functional compliance testing. Below are the different types of test setups:

- General test setup – *Applicable for all types of UUTs*
- High-Speed Validation test setup – *Applicable only when USB data validation is enabled*

Make sure to follow all the steps as described below before testing the UUTs using these test setups.

For details on using the GRL-USB-PD-C2-EPR application, refer to the GRL-USB-PD-C2-EPR App user documentation in <https://www.grlps.com/en-us/download-center>.

4.1 General Test Setup

4.1.1 For Source/Sink/DRP Receptacle UUT Not Capable of USB Communication

Connect the UUT directly to Port 1 of the GRL-USB-PD-C2-EPR test controller using the GRL-SPL-EPR cable, as shown in Figure 4.1 below.

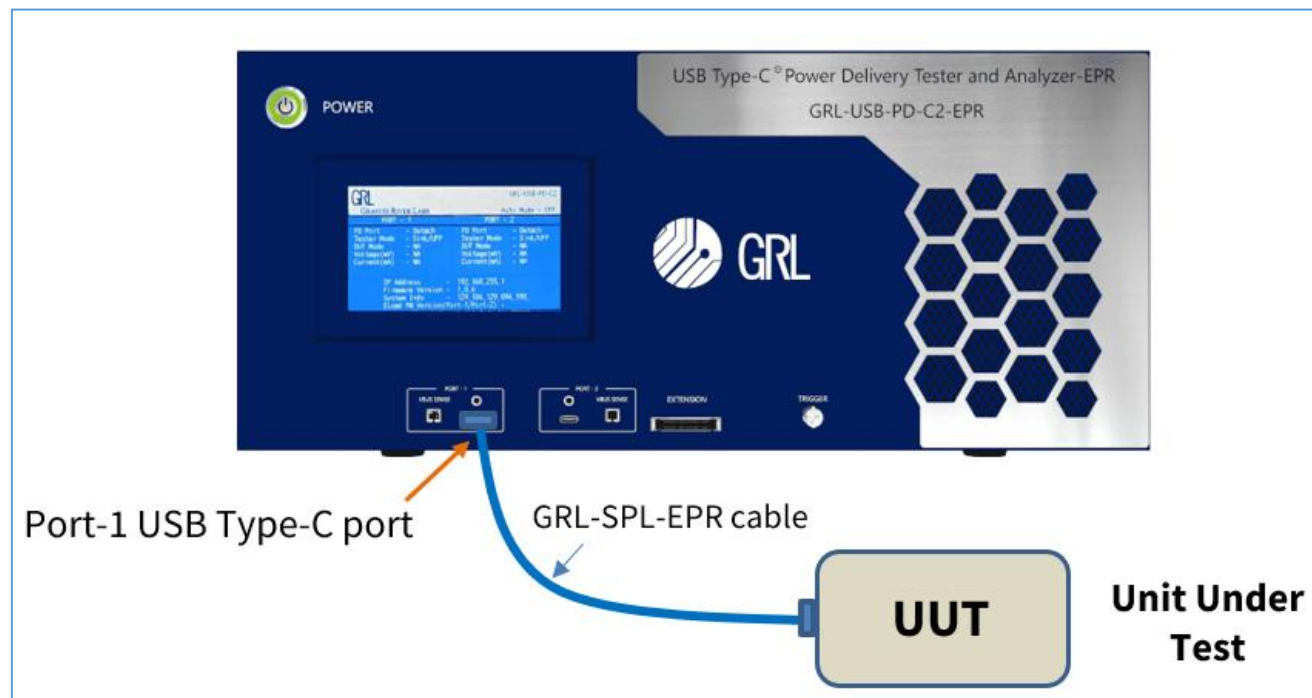


FIGURE 4.1: GENERAL TEST CONNECTION SETUP – FOR SOURCE/SINK/DRP RECEPTACLE UUT NOT CAPABLE OF USB COMMUNICATION

4.1.2 For Source/Sink/DRP UUT with Captive Cable Not Capable of USB Communication

Connect the UUT directly to Port 1 of the GRL-USB-PD-C2-EPR test controller using a captive cable, as shown in Figure 4.2 below.

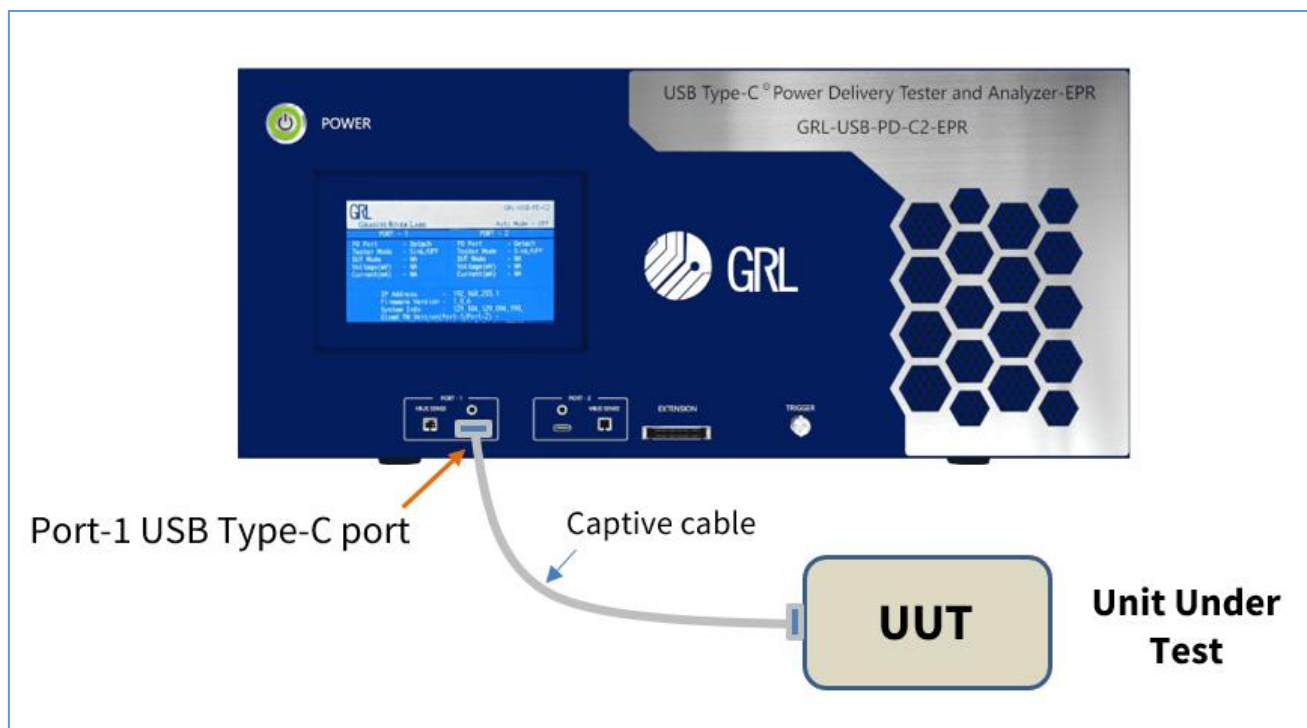


FIGURE 4.2: GENERAL TEST CONNECTION SETUP – FOR SOURCE/SINK/DRP UUT WITH CAPTIVE CABLE NOT CAPABLE OF USB COMMUNICATION

4.2 USB Data Validation Test Setup

Figure 4.3 below shows an example hardware connection setup for USB data validation test.

Note: Make sure to place the GRL Platform Solutions logo on every GRL-SPL-EPR cable in the upward position to maintain the same cable orientation.

1. Connect Port1 and Port2 of the GRL-HS-EXT fixture to Port 1 and Port 2 of the GRL-USB-PD-C2-EPR test controller respectively using the GRL-SPL-EPR cable.
2. Connect the golden device to the plug side of the GRL-HS-EXT fixture.
3. Connect the UUT (if without captive cable) to the Receptacle port of the GRL-HS-EXT fixture using the GRL-SPL-EPR cable. If the UUT comes with captive cable, connect the UUT directly to the receptacle port of the GRL-HS-EXT fixture.

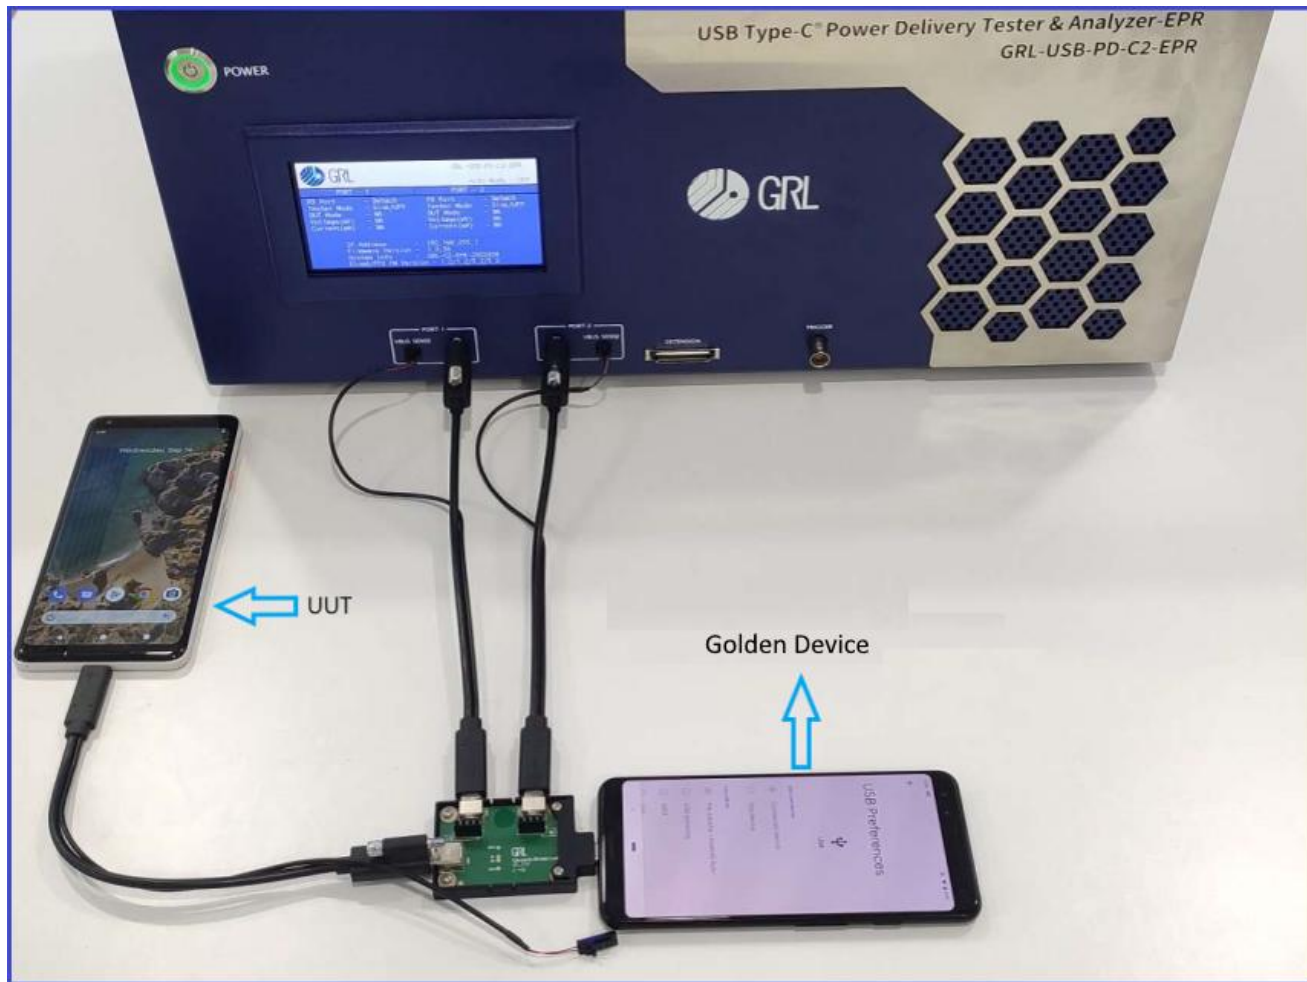


FIGURE 4.3: USB DATA VALIDATION TEST CONNECTION SETUP EXAMPLE

5 USB Data Validation Functional Test Procedure

This section describes how to perform USB Data Validation Type-C Functional compliance testing based on the latest revision of the ver0.87 specification. For detailed test information, please refer to the specification document.


The following test methods are used to perform the USB Data Validation Type-C Functional compliance tests:

- USB Power Delivery validation without USB data validation support
- USB data validation with manual USB 2.0/3.1 data validation.

5.1 USB Power Delivery Validation Without USB Data Validation Support

The following procedure explains how to perform functional compliance testing only by using USB Power Delivery negotiation without USB data support.

1. Connect the equipment for General Test setup as shown in Figure 4.1 or Figure 4.2 whichever applies.
2. Open the GRL-USB-PD-C2-EPR application and connect to the GRL-USB-PD-C2-EPR test controller. *For details on using the GRL-USB-PD-C2-EPR application, refer to the GRL-USB-PD-C2-EPR App user documentation in <https://www.grlps.com/en-us/download-center>.*
3. Go to the “Product Capability” screen and load the VIF file of the UUT. *[Note: A VIF file is required to ensure proper execution for all test cases, which otherwise most test runs may render incomplete without a VIF file.]*
4. After loading the VIF file, go to the “Test Config” screen and select the “USB-C Functional Tests” checkbox (Figure 5.1 below) to access the functional compliance tests. Select the checkbox(s) of the test cases to be run as shown in below example (Figure 5.1).

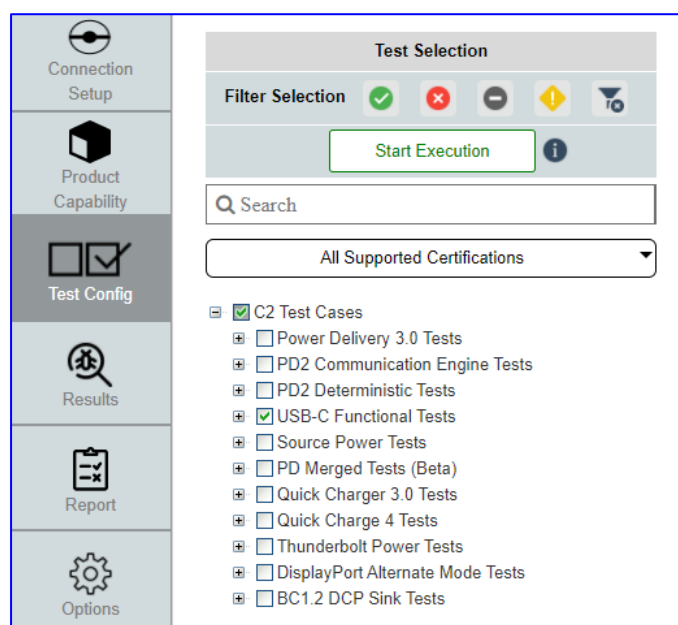


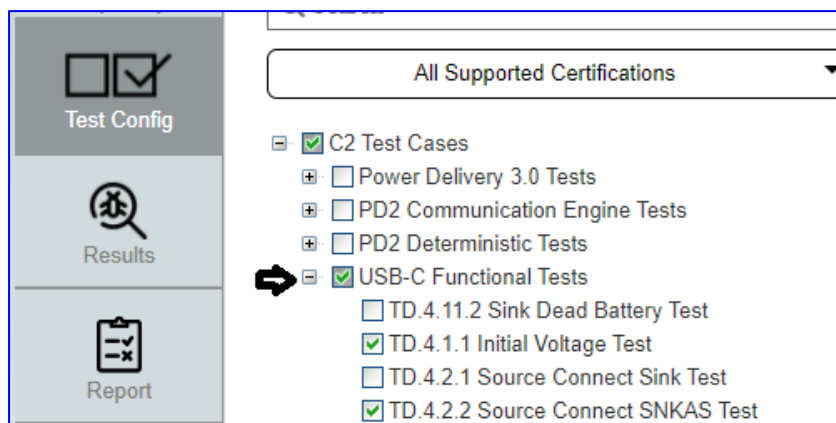


FIGURE 5.1: ACCESSING & SELECTING FUNCTIONAL COMPLIANCE TESTS WITHOUT USB DATA SUPPORT

Note: In the **Compliance** Test Mode, the “**Enable USB Data Validation**” checkbox on the right pane (USB-C Functional Test Configuration) will be disabled in the application interface if the UUT is not capable of supporting USB Host or Device. To enable this checkbox, select the **Informational** Test Mode (figure below).

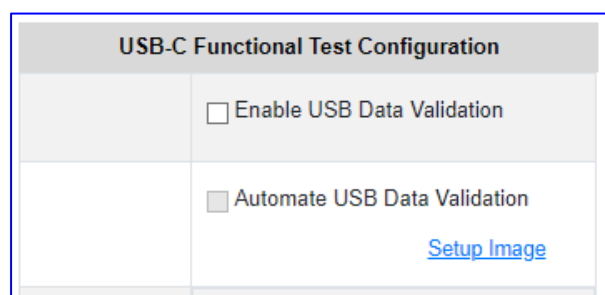

- After selecting the test cases, select the **Start Execution** button (Figure 5.2 below) to begin execution for the selected test cases.

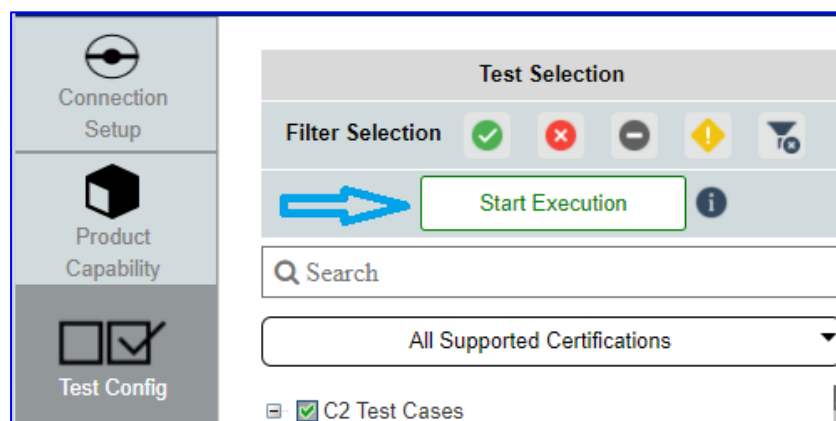


FIGURE 5.2: SELECTING START EXECUTION BUTTON FOR FUNCTIONAL COMPLIANCE TEST CASES WITHOUT USB DATA SUPPORT

- As tests are running, the “Results” screen will display the progress and status of the test runs along with the PDO communications exchange protocol and live signal trace plot as shown in Figure 5.3 below.

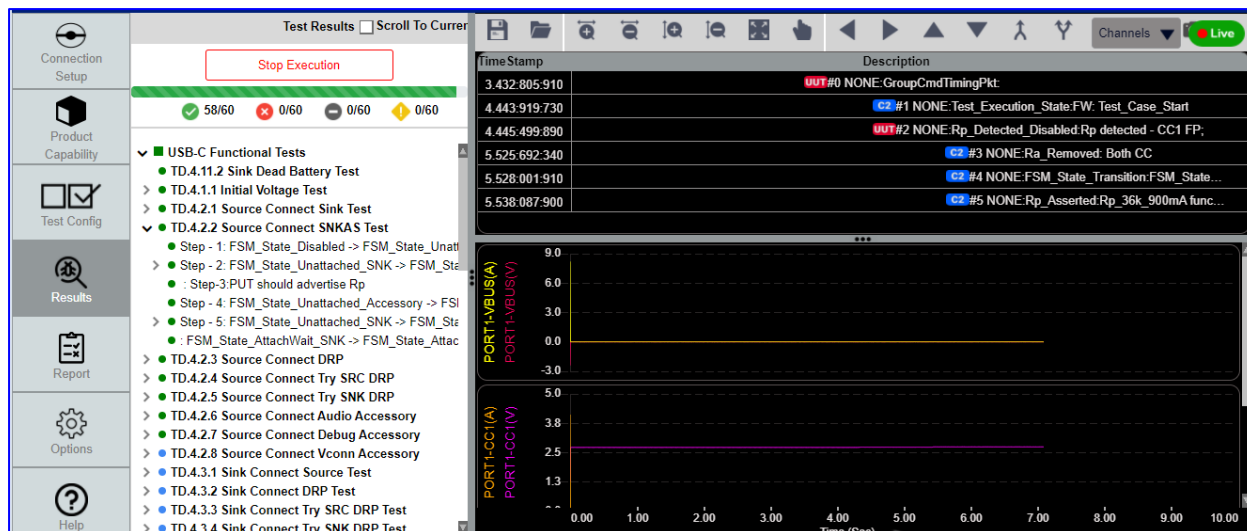


FIGURE 5.3: RUNNING FUNCTIONAL COMPLIANCE TEST CASES WITHOUT USB DATA SUPPORT

- To stop the test run while in progress, select the **Stop Execution** button (Figure 5.4 below) at the top of the Results screen.

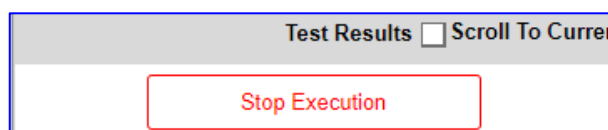


FIGURE 5.4: SELECTING STOP EXECUTION BUTTON FOR FUNCTIONAL COMPLIANCE TEST CASES WITHOUT USB DATA SUPPORT

To jump to the current running test case, click on the “Scroll To Current Test Result” checkbox (Figure 5.5 below) above the Stop Execution button.

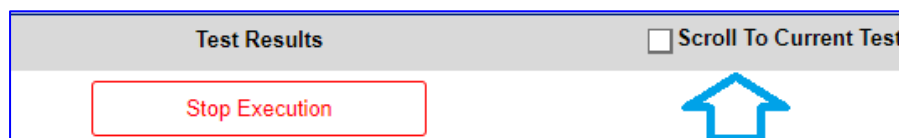


FIGURE 5.5: SELECTING SCROLL TO CURRENT TEST RESULTS CHECKBOX FOR FUNCTIONAL COMPLIANCE TEST CASES WITHOUT USB DATA SUPPORT

- After all test runs have completed, go to the “Report” screen to view or download the full report of the test results (Figure 5.6 below).



FIGURE 5.6: ACCESSING TEST REPORTS FOR FUNCTIONAL COMPLIANCE TEST CASES WITHOUT USB DATA SUPPORT

For more details on managing test reports, refer to the “Test Report View” section in the GRL-USB-PD-C2-EPR App user documentation.

5.2 USB 2.0/3.1 Data Validation

The following procedure explains how to perform functional compliance testing with USB data test validation. All functional compliance tests are applicable for all types of DRP and Consumer only UUTs if *USB_Comms_Capable* is set to “YES” in the VIF (Figure 5.7 below).


 


FIGURE 5.7: ENABLE USB_COMMS_CAPABLE FOR FUNCTIONAL COMPLIANCE TESTS WITH USB DATA SUPPORT


1. Connect the equipment for USB Data Validation Test setup as shown in Figure 4.3.
2. Open the GRL-USB-PD-C2-EPR application and connect to the GRL-USB-PD-C2-EPR test controller. *For details on using the GRL-USB-PD-C2-EPR application, refer to the GRL-USB-PD-C2-EPR App user documentation in <https://www.grlps.com/en-us/download-center>.*
3. Go to the “Product Capability” screen and load the VIF file of the UUT (Figure 5.8). *[Note: A VIF file is required to ensure proper execution for all test cases, which otherwise most test runs may render incomplete without a VIF file.]*

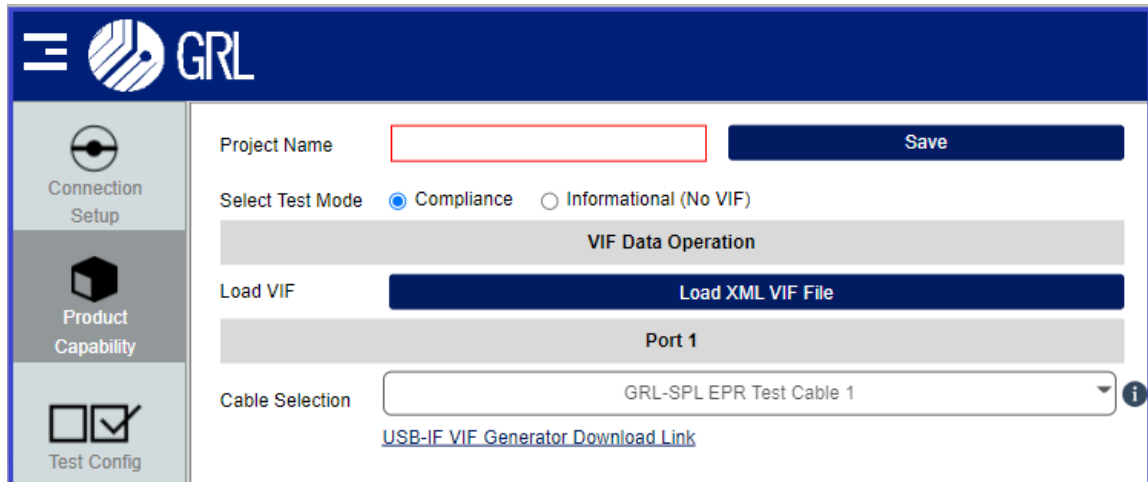

The screenshot shows the GRL web interface with a dark blue header. On the left is a sidebar with icons for 'Connection Setup', 'Product Capability', and 'Test Config' (which is selected). The main area has a 'Project Name' input field and a 'Save' button. Below this, 'Select Test Mode' has 'Compliance' selected with a radio button. A section titled 'VIF Data Operation' contains a 'Load VIF' button and a 'Load XML VIF File' button. Below that, 'Port 1' is indicated. The 'Cable Selection' dropdown menu is set to 'GRL-SPL EPR Test Cable 1'. At the bottom, there is a link for 'USB-IF VIF Generator Download Link'.

FIGURE 5.8: LOAD VIF FILE IN COMPLIANCE TEST MODE FOR FUNCTIONAL COMPLIANCE TESTS WITH USB DATA SUPPORT

4. After loading the VIF file, go to the “Test Config” screen and select the “USB-C Functional Tests” checkbox (as shown in Figure 5.9 below) to access the functional compliance tests.

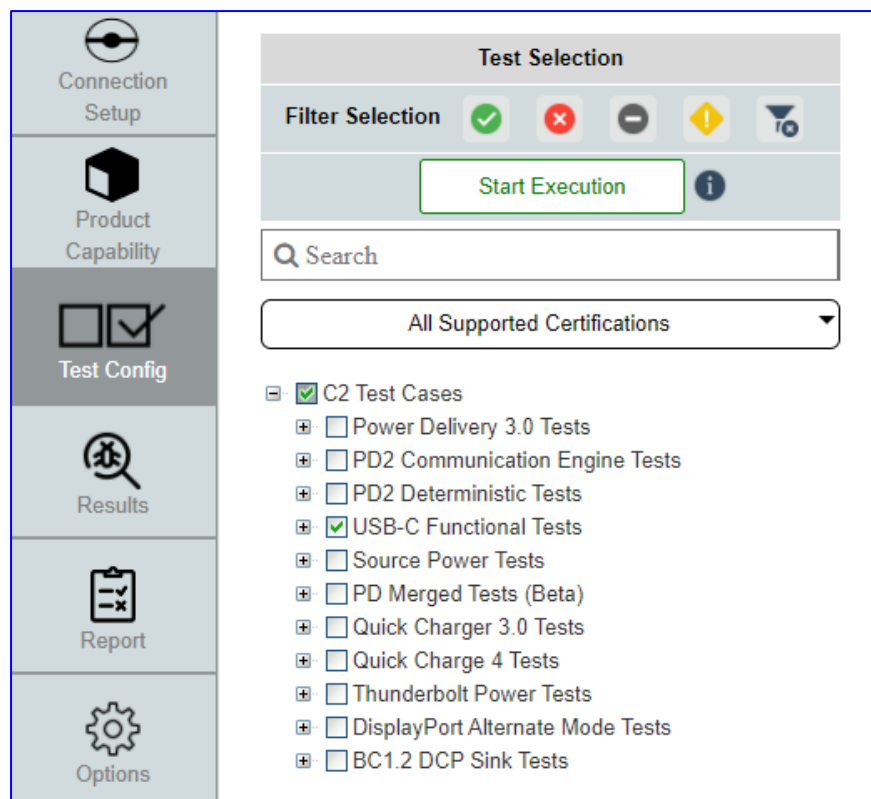

The screenshot shows the 'Test Selection' screen in the GRL web interface. The sidebar on the left has 'Test Config' selected. The main area has a 'Test Selection' header with 'Filter Selection' icons (checkmark, X, minus, warning, and funnel). Below this is a green 'Start Execution' button. A search bar is present, followed by a dropdown menu set to 'All Supported Certifications'. A list of test cases is shown under 'C2 Test Cases':

- ☐ Power Delivery 3.0 Tests
- ☐ PD2 Communication Engine Tests
- ☐ PD2 Deterministic Tests
- ☒ USB-C Functional Tests
- ☐ Source Power Tests
- ☐ PD Merged Tests (Beta)
- ☐ Quick Charger 3.0 Tests
- ☐ Quick Charge 4 Tests
- ☐ Thunderbolt Power Tests
- ☐ DisplayPort Alternate Mode Tests
- ☐ BC1.2 DCP Sink Tests

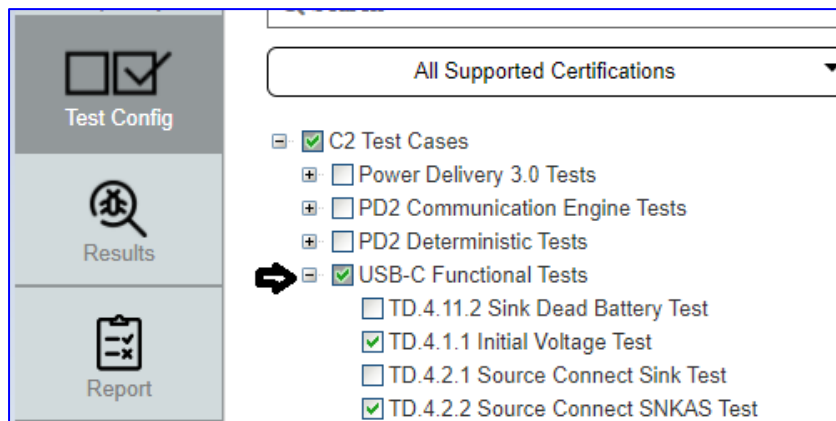


FIGURE 5.9: ACCESSING FUNCTIONAL COMPLIANCE TESTS WITH USB DATA SUPPORT

5. After selecting the test cases, select the **Start Execution** button (Figure 5.10 below) to begin execution for the selected test cases.



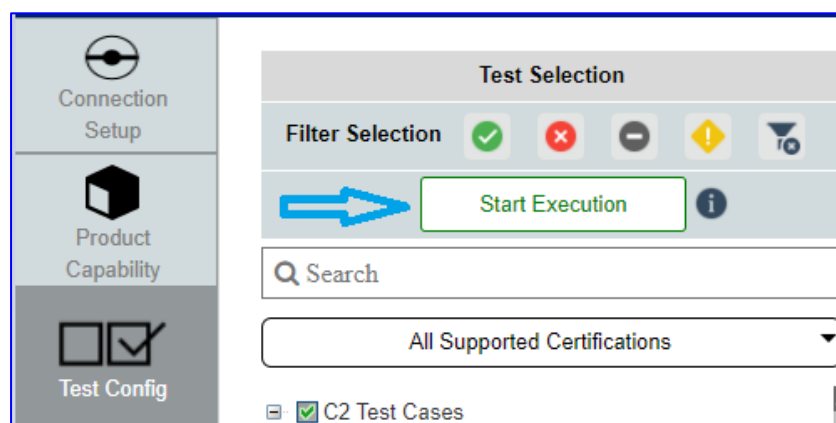


FIGURE 5.10: SELECTING START EXECUTION BUTTON FOR FUNCTIONAL COMPLIANCE TEST CASES WITH USB DATA SUPPORT

Tests should be executed in the **Compliance** test mode only, where the USB data validation will get updated automatically based on the VIF. *[Note: USB Data Validation options will only be available for the UUT with USB data support, otherwise the options will be disabled as shown in Figure 5.11 below].*

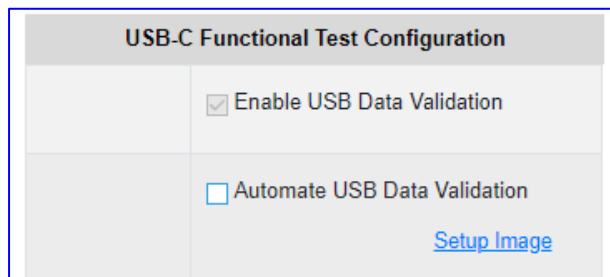

USB Data Validation **enabled** for UUT **with** USB data support

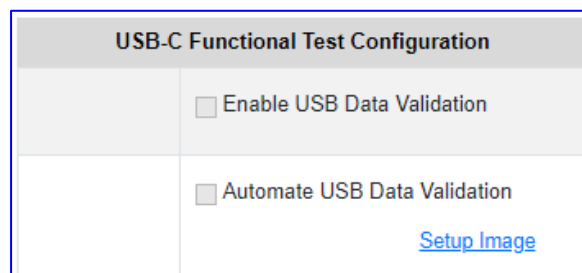

USB Data Validation **disabled** for UUT **without** USB data support

FIGURE 5.11: USB DATA VALIDATION OPTIONS FOR FUNCTIONAL COMPLIANCE TEST CASES WITH USB DATA SUPPORT

Functional compliance testing with USB data validation can be performed through the following test method:

- Manual USB 2.0/3.1 data validation *[Note: This will require the user to check enumeration manually.]*

This test method will be described in the following sections of this document.

5.2.1 Manual USB 2.0/3.1 Data Validation

1. After selecting the “USB-C Functional Tests” test cases to be run (see Figure 5.9), in the USB-C Functional Test Configuration pane by default the “Enable USB Data Validation” checkbox should be enabled to run the USB Type-C High-Speed Functional tests (Figure 5.12 below). *Note: Do not enable the “Automate USB Data Validation” checkbox.*

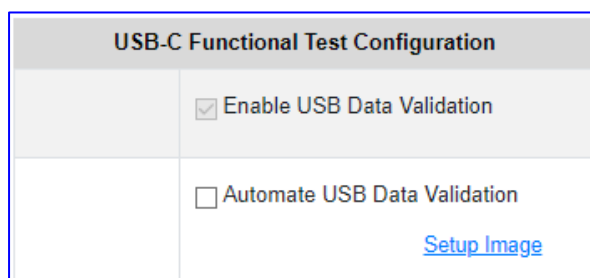


FIGURE 5.12: USB DATA VALIDATION ENABLED FOR HIGH-SPEED FUNCTIONAL TESTS

2. Select the **Start Execution** button to begin execution for the selected test cases.
3. As tests are running, the “Results” screen will display the progress and status of the test runs along with the PDO communications exchange protocol and live signal trace plot.
4. To stop the test run while in progress, select the **Stop Execution** button at the top of the Results screen.
5. As tests are running, the following screen will appear (Figure 5.13) to check for Enumeration status of the golden device.

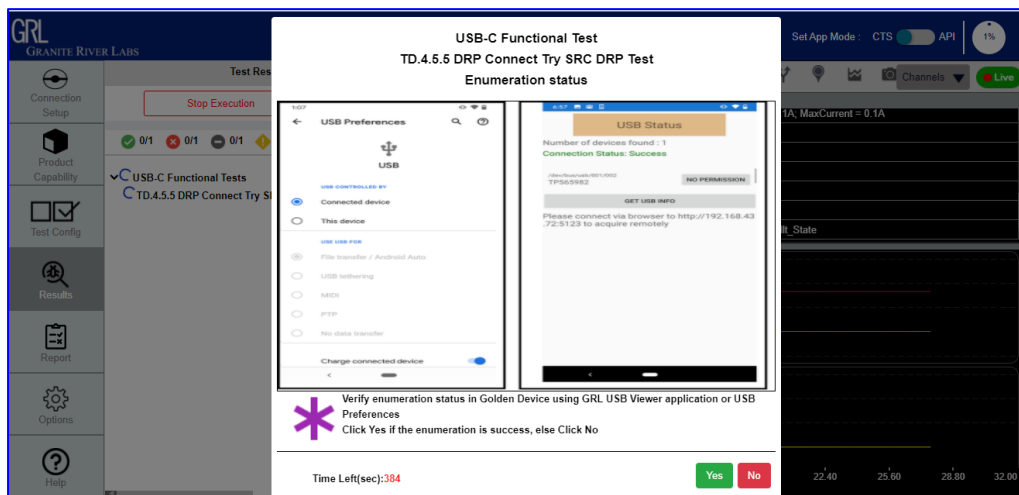


FIGURE 5.13: VERIFY ENUMERATION STATUS OF GOLDEN DEVICE #1

6. If the UUT is a Source device, the enumeration needs to be validated in the UUT's Device Manager, and if the UUT is a Sink device the enumeration needs to be validated in the golden device. If so, click "Yes" to proceed or otherwise click "No".
7. If the golden device is enumerating correctly, the next following screen will appear (Figure 5.14) to verify if the enumeration has been ceased. If so, click "Yes" to proceed or otherwise click "No".

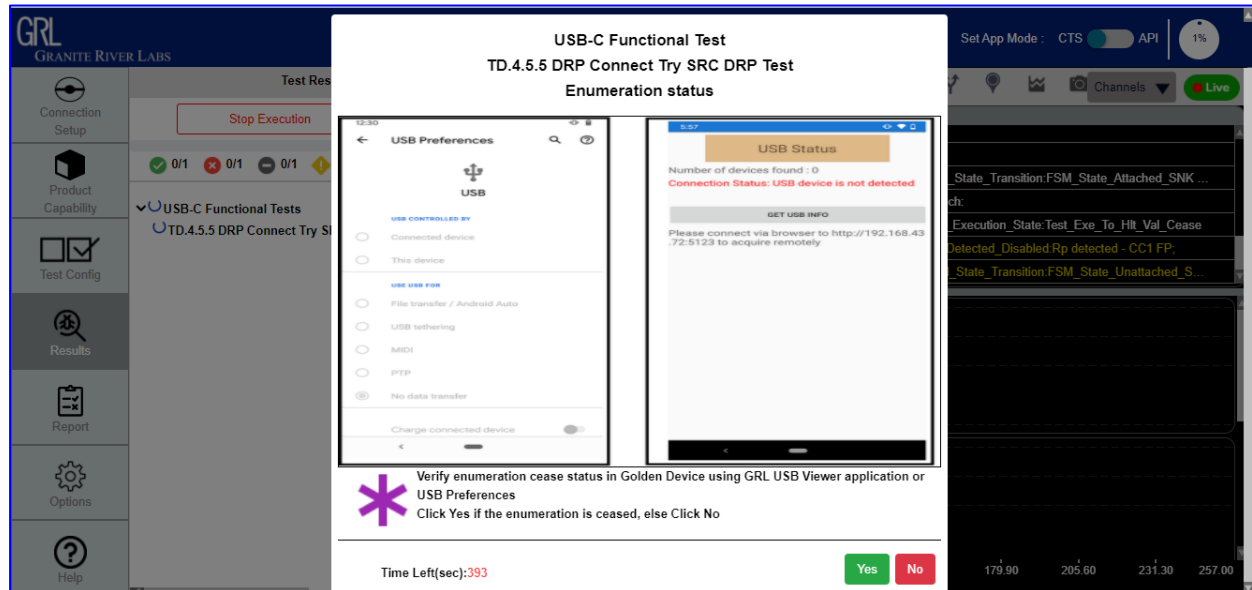


FIGURE 5.14: VERIFY ENUMERATION STATUS OF GOLDEN DEVICE #2

6 Test Case Prompts/Messages

When running functional compliance tests, certain test cases will require user input to proceed further. User input will be prompted through pop-up messages for the following test cases:

6.1 Test Case TD.4.1.1 Initial Voltage Test

If the "Enable USB Data Validation" checkbox is selected, the pop-up message and setup diagram (Figure 6.1 below) for this test case requires the user to connect the UUT directly to Port 1 of the GRL-USB-PD-C2-EPR test controller without any fixture or extension board attached. After the test case has been executed, another pop-up message/setup diagram will appear (Figure 6.2 below) which requires the user to set up the hardware connection as displayed. Select "OK" to continue when confirmed for each pop up.

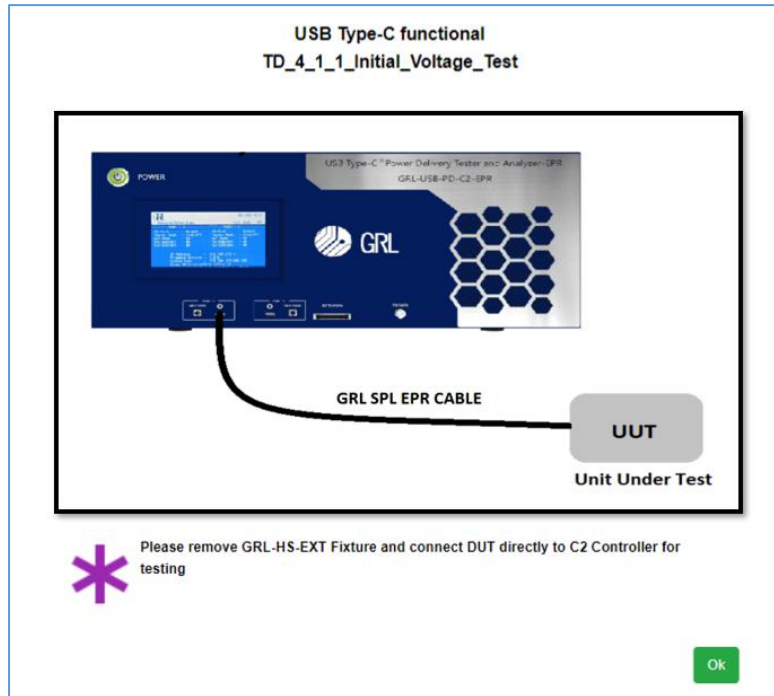


FIGURE 6.1: USER PROMPTS TO CONNECT UUT TO GRL-USB-PD-C2-EPR TEST CONTROLLER

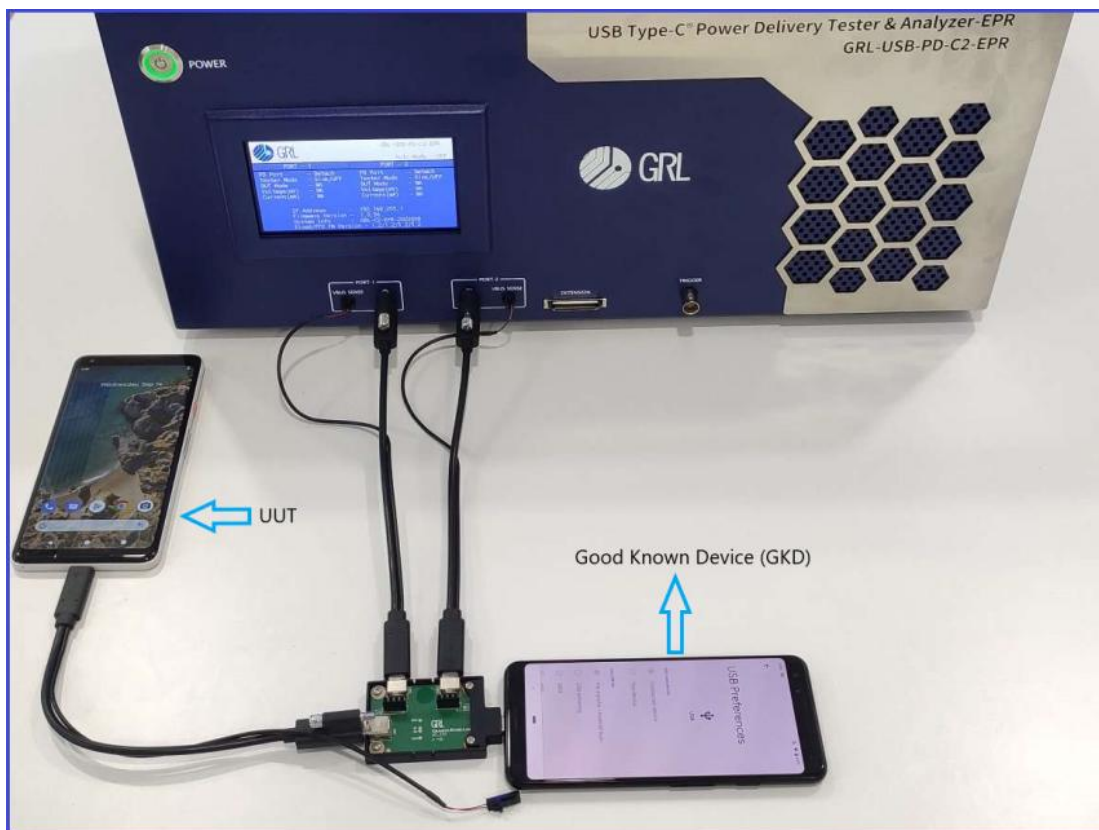


FIGURE 6.2: USER PROMPT TO CONNECT UUT TO FIXTURE OR BOARD IF REQUIRED

6.2 Test Case TD.4.1.2 Unpowered CC Voltage Test

While test is running, the user will be required to remove the UUT power (Figure 6.3 below). After the test run has completed, the user will then need to re-connect power supply to the UUT (Figure 6.4 below).

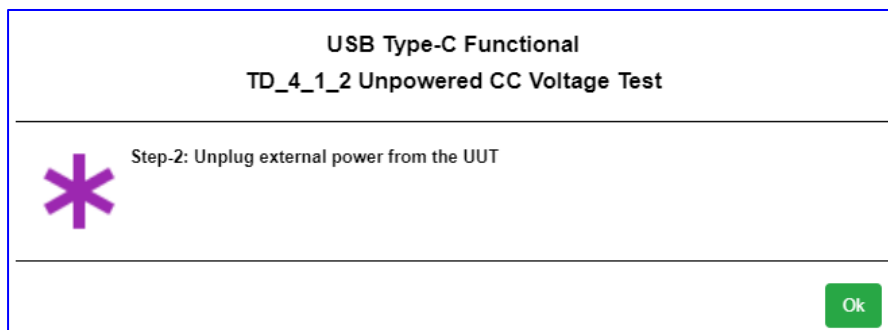


FIGURE 6.3: USER PROMPT TO REMOVE EXTERNAL POWER FROM UUT

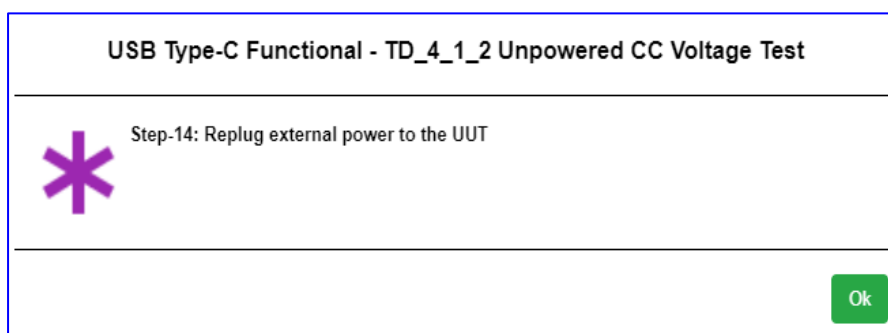



FIGURE 6.4: USER PROMPT TO RE-CONNECT EXTERNAL POWER TO UUT

6.3 Test Case TD.4.9.1 Source Suspend Test

After successful enumeration in compliance to CTS requirements, the user will be required to suspend the UUT data link (using whatever method available). A pop-up message will provide instructions to the user to suspend the UUT data link. When done, select “Yes” to proceed or “No” if otherwise. After the test run has completed, the user will then be required to resume the UUT high-speed link. Again select “Yes” when done or otherwise select “No”.

6.4 Test Case TD.4.11.2 Sink Dead Battery Test

This test case checks if the battery of the UUT is dead or 0% charged. The user will first need to verify if a battery is connected to the UUT at the Test Config screen and make sure to select the checkbox (Figure 6.5 below). If a battery is attached, a pop-up message will request the user to check if a dead battery is connected to the UUT (Figure 6.6 below). Select “Yes” to proceed with the verification test or “No” if otherwise. Once a dead battery has been verified, the user will then be required to remove the dead battery and replace with a charged battery for testing to continue (Figure 6.7 below).

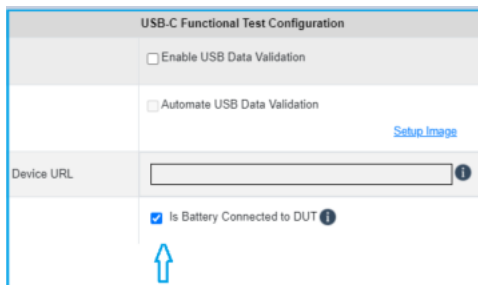

USB-C Functional Test Configuration


☐ Enable USB Data Validation

☐ Automate USB Data Validation [Setup Image](#)

Device URL:

☒ Is Battery Connected to UUT ⓘ

FIGURE 6.5: VERIFY CHECKBOX IS SELECTED IF BATTERY IS CONNECTED TO UUT

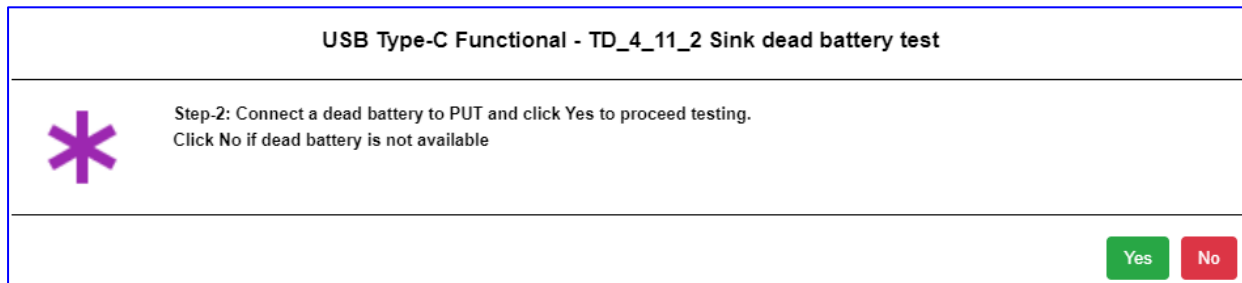


USB Type-C Functional - TD_4_11_2 Sink dead battery test

* Step-2: Connect a dead battery to PUT and click Yes to proceed testing.
Click No if dead battery is not available

Yes No

FIGURE 6.6: USER PROMPT TO CHECK IF DEAD BATTERY IS CONNECTED TO UUT

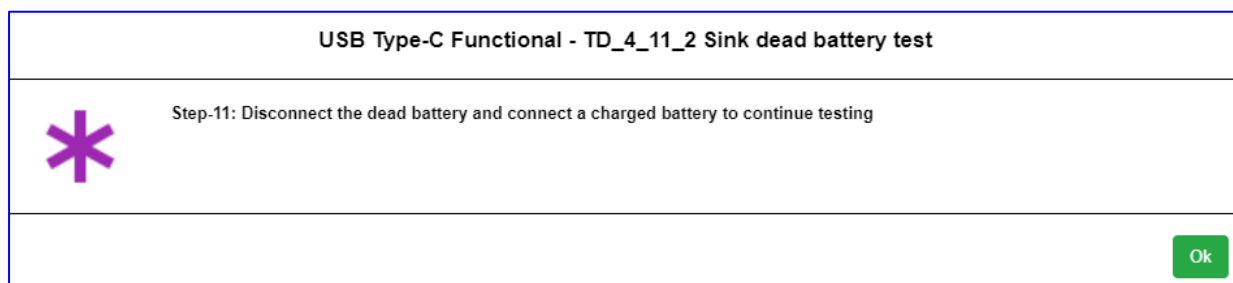

USB Type-C Functional - TD_4_11_2 Sink dead battery test

* Step-11: Disconnect the dead battery and connect a charged battery to continue testing

Ok

FIGURE 6.7: USER PROMPT TO REMOVE DEAD BATTERY AND RECONNECT CHARGED BATTERY TO UUT

6.5 Test Case TD.4.12.2 Hub Port Type Test

This test case is only applicable when the UUT *Type_C_Port_On_Hub* is set to “YES” in the VIF. The user will first need to verify if the UUT hub port is embedded at the Test Config screen (Figure 6.8 below). The user is required to enter the number of USB Type-C ports and USB Type-B/Micro-B receptacle or Type-A plug (if applicable) of the UUT hub. If the UUT hub port is embedded, select the corresponding checkbox.

USB-C Functional Test Configuration	
	☐ Enable USB Data Validation
	☐ Automate USB Data Validation Setup Image
Device URL	 i
Prerequisite : Please Install CV tool in DUT	
Number of USB Type-C ports	1 i
Number of USB Type-B/Micro-B receptacle or Type-A plug	1 i
	☒ Is connected Hub is embedded i

FIGURE 6.8: VERIFY UUT HUB PORT EMBEDDING BEFORE TESTING

7 CV Tool Usage

This section describes how to use the CV Tool for the following test cases which require a Host PC with CV tool software.

- TD 4.9.1 Test Cases
- TD 4.10.1 Sink Power Sub-States Test
- TD 4.10.2 Sink Power Precedence Test
- TD 4.10.3 Sink Suspend Test

Follow the steps below on using the CV Tool:

1. Open the USB 3 Gen x CV and the “Command Verifier” pop-up message will appear (Figure 7.1 below). Select the required host controller from the list to load the test stack switch and then select “Continue”. Wait until the stack switch is loaded. Where necessary the user may also need to reboot the golden device if prompted.

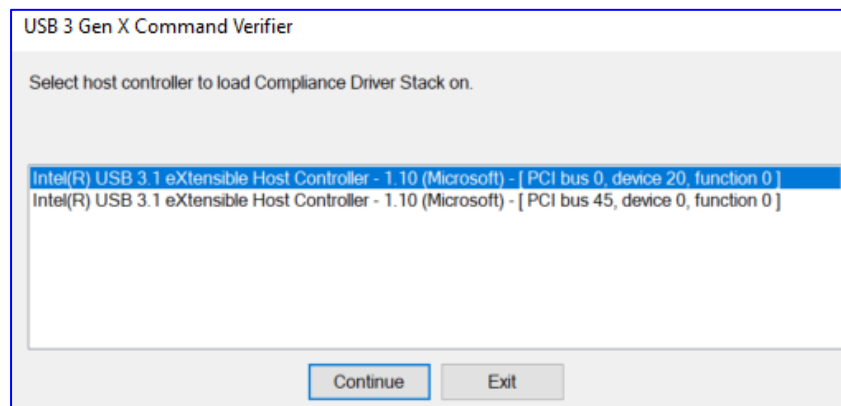


FIGURE 7.1: USER PROMPT TO SELECT HOST CONTROLLER IN CV TOOL

2. If rebooting the golden device, open the USB 3 Gen x CV again after reboot and repeat step 1.
3. When the “USB 3 Gen X Command Verifier” window appears, perform the following steps for the selected test case:

7.1 TD 4.9.1 Test CV Tool Procedure

1. Refer to Figure 7.2 below on the following:
 - a. In the **Select Test Suite** field, select “Current Measurement Tests [USB 3 devices]”.
 - b. In the **Select Test Mode** field, select the “Debug” radio button and the “Prompt for Test Parameters” checkbox.
 - c. In the **Select Test** field, select the “Enter Suspend (U3)” checkbox.
 - d. Finally, select the bottom “Yes” button to execute the test.
 - e. While test is running, the “USB Command Verifier (xHCI- USB 3)” pop-up message will display a list of Enhanced SuperSpeed Devices. Select the Device as supported by the UUT and select “OK”.

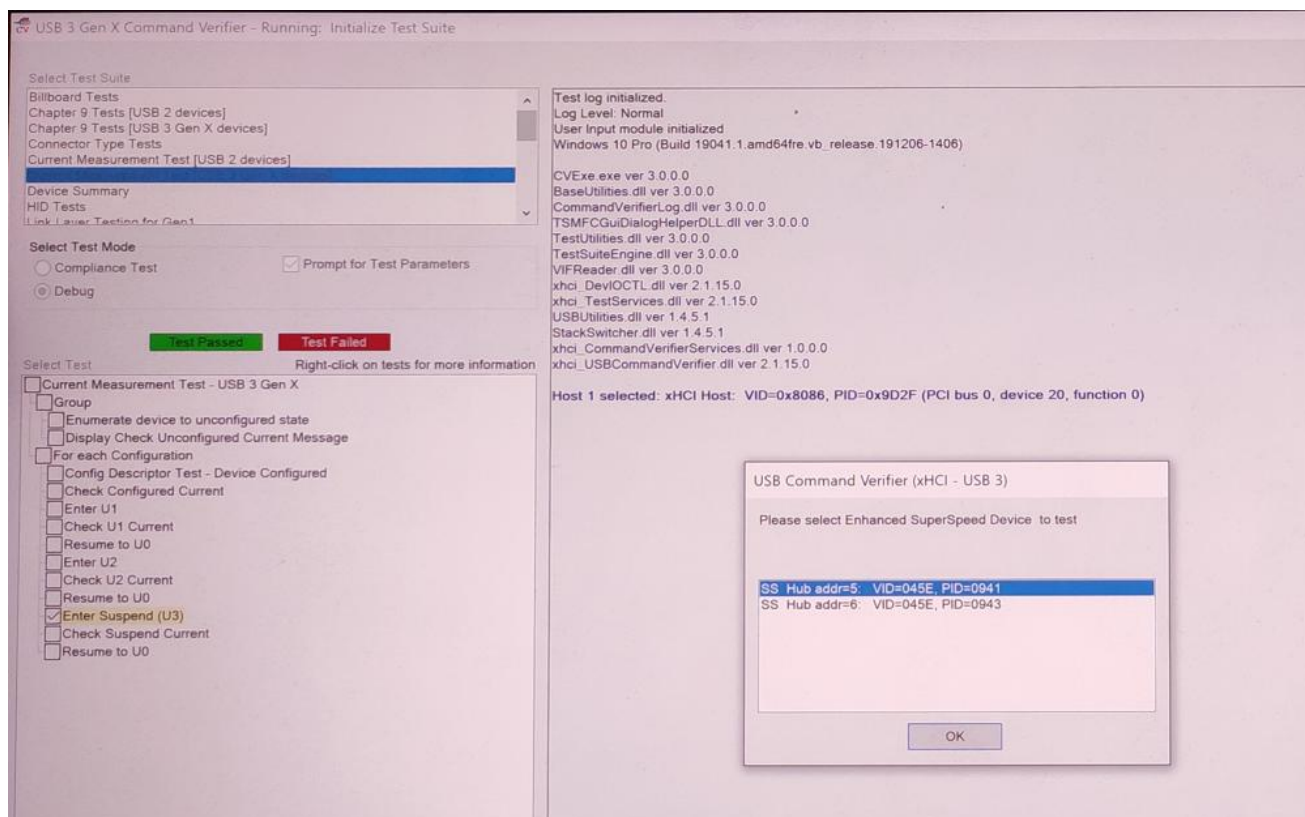


FIGURE 7.2: SELECT AND EXECUTE TD 4.9.1 ENTER SUSPEND (U3) TEST IN CV TOOL

2. In the next pop-up message (Figure 7.3 below), the user will need to enter the appropriate Configuration Index value in hex for Debug mode and then select “DONE”.

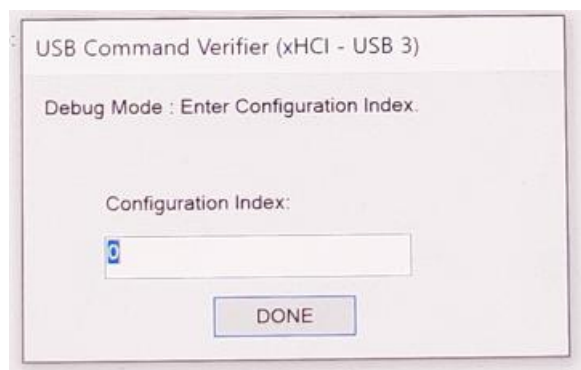


FIGURE 7.3: USER PROMPT TO ENTER DEBUG MODE CONFIGURATION INDEX IN CV TOOL FOR TD 4.9.1 TESTS

3. The test results will be updated in the CV tool once the test execution is completed (Figure 7.4 below).

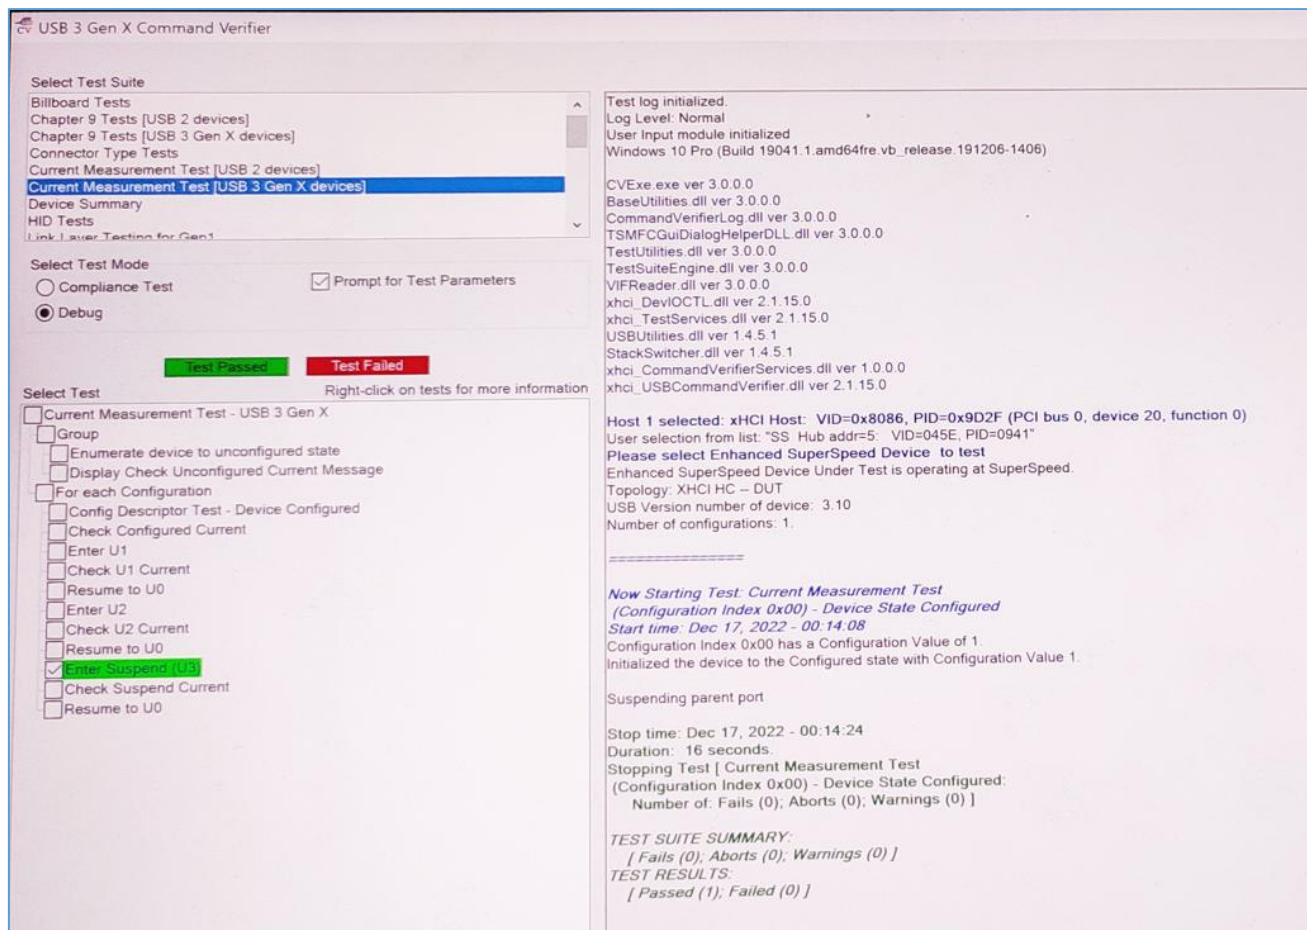


FIGURE 7.4: TEST RESULTS GENERATION IN CV TOOL FOR TD 4.9.1 ENTER SUSPEND (U3) TEST

4. Refer to Figure 7.5 below on the following:

- In the **Select Test Suite** field, select “Current Measurement Tests [USB 2 devices]”.
- In the **Select Test Mode** field, select the “Debug” radio button and the “Prompt for Test Parameters” checkbox.
- In the **Select Test** field, select the “Enumerate device to unconfigured state” checkbox.
- Finally, select the bottom “Yes” button to execute the test.
- While test is running, the “USB Command Verifier (xHCI- USB 3)” pop-up message will display a list of USB 2 Devices. Select the Device as supported by the UUT and select “OK”.

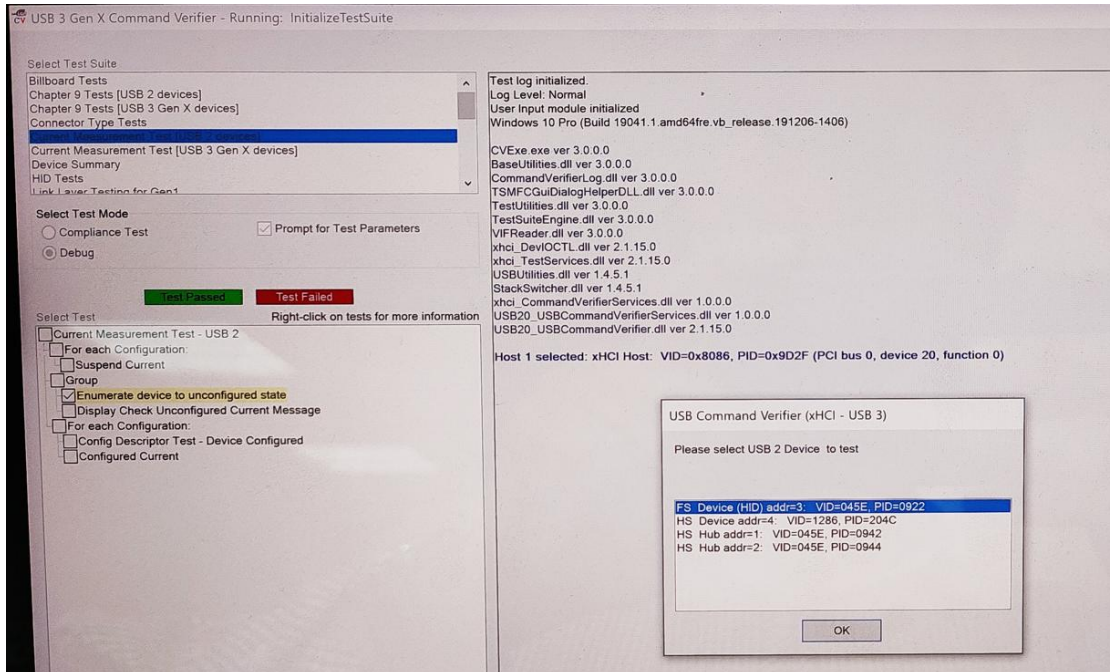


FIGURE 7.5: SELECT AND EXECUTE TD 4.9.1 ENUMERATE DEVICE TO UNCONFIGURED STATE TEST IN CV TOOL

5. The test results will be updated in the CV tool once the test execution is completed (Figure 7.6 below).

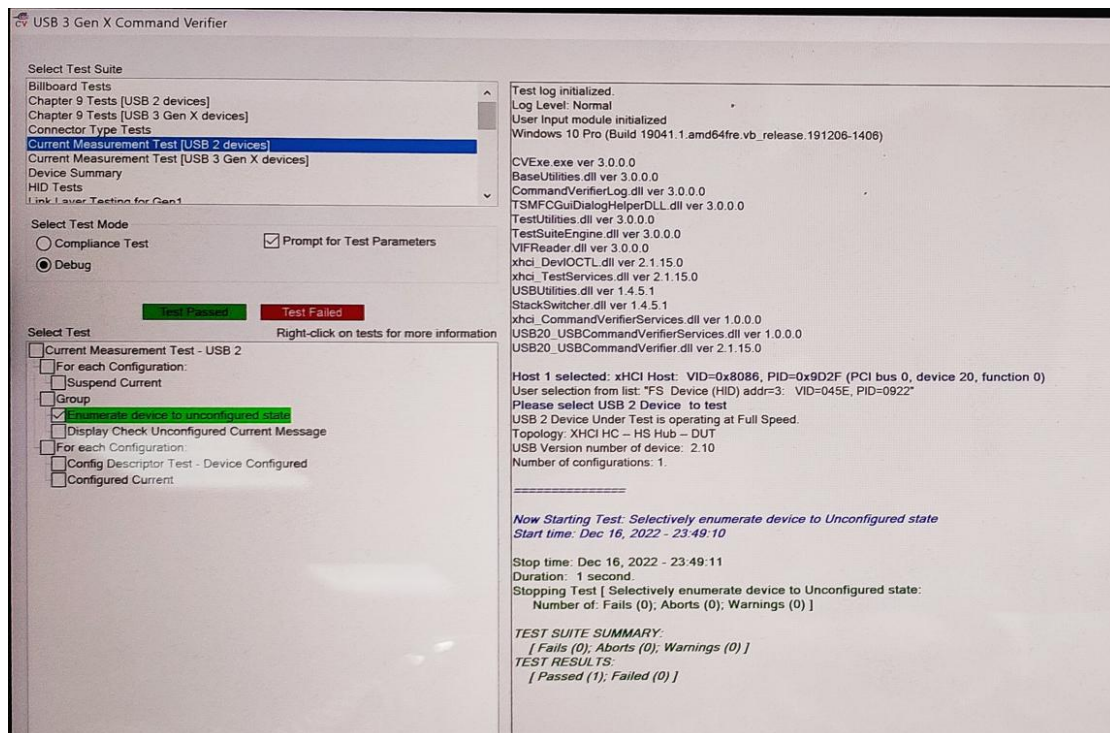


FIGURE 7.6: TEST RESULTS GENERATION IN CV TOOL FOR TD 4.9.1 ENUMERATE DEVICE TO UNCONFIGURED STATE TEST

7.2 TD 4.10.1 Sink Power Sub-States Test CV Tool Procedure

1. Refer to Figure 7.7 below on the following:
 - a. In the **Select Test Suite** field, select “Chapter 9 Tests [USB 2 devices]”.
 - b. In the **Select Test Mode** field, select the “Debug” radio button and the “Prompt for Test Parameters” checkbox.
 - c. In the **Select Test** field, select the “TD 9.1: Device Descriptor Test” and “TD 9.2: Configuration Descriptor Test” checkboxes.
 - d. Finally, select the bottom “Yes” button to execute the tests.

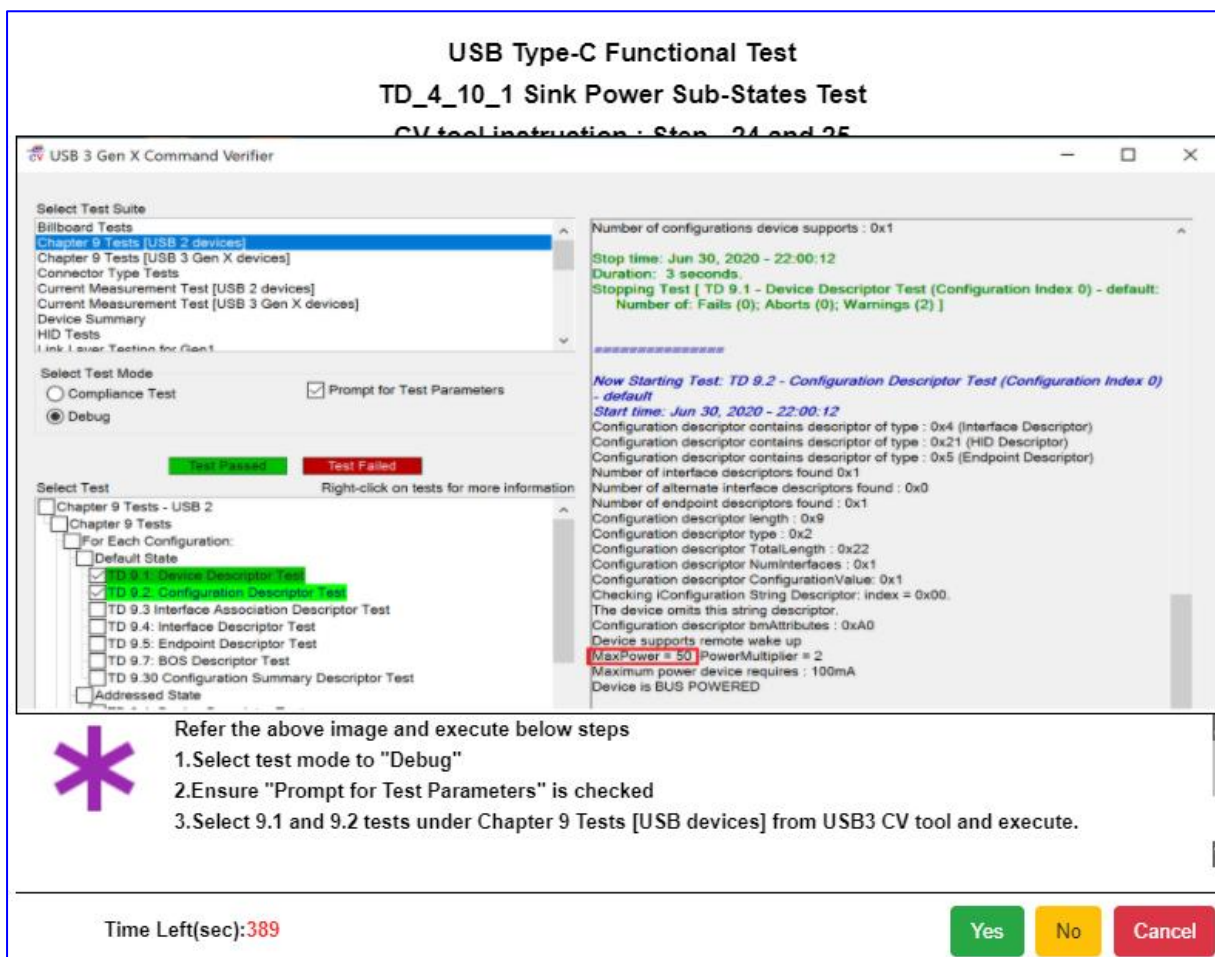


FIGURE 7.7: SELECT AND EXECUTE TD 4.10.1 TESTS IN CV TOOL

6. While test is running, the “USB Command Verifier (xHCI- USB 3)” pop-up message will display a list of FS Devices (Figure 7.8 below). Select the FS Device as supported by the UUT and select “OK”.

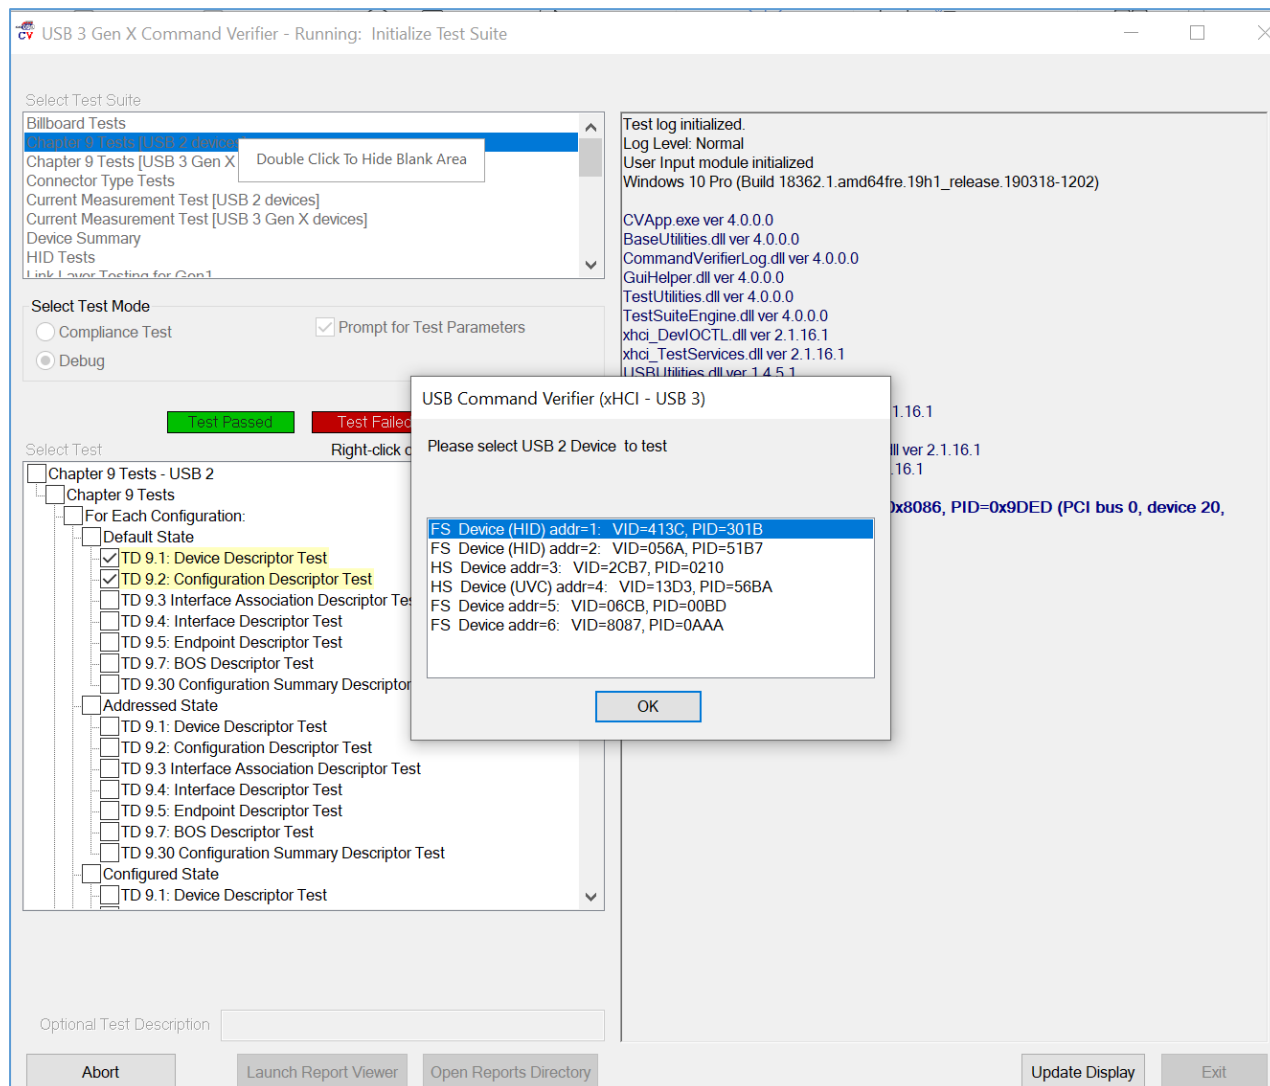


FIGURE 7.8: USER PROMPT TO SELECT FS DEVICE IN CV TOOL FOR TD 4.10.1 TESTS

7. In the next pop-up message (Figure 7.9 below), the user will need to enter the appropriate Configuration Index value in hex for Debug mode and then select “DONE”.

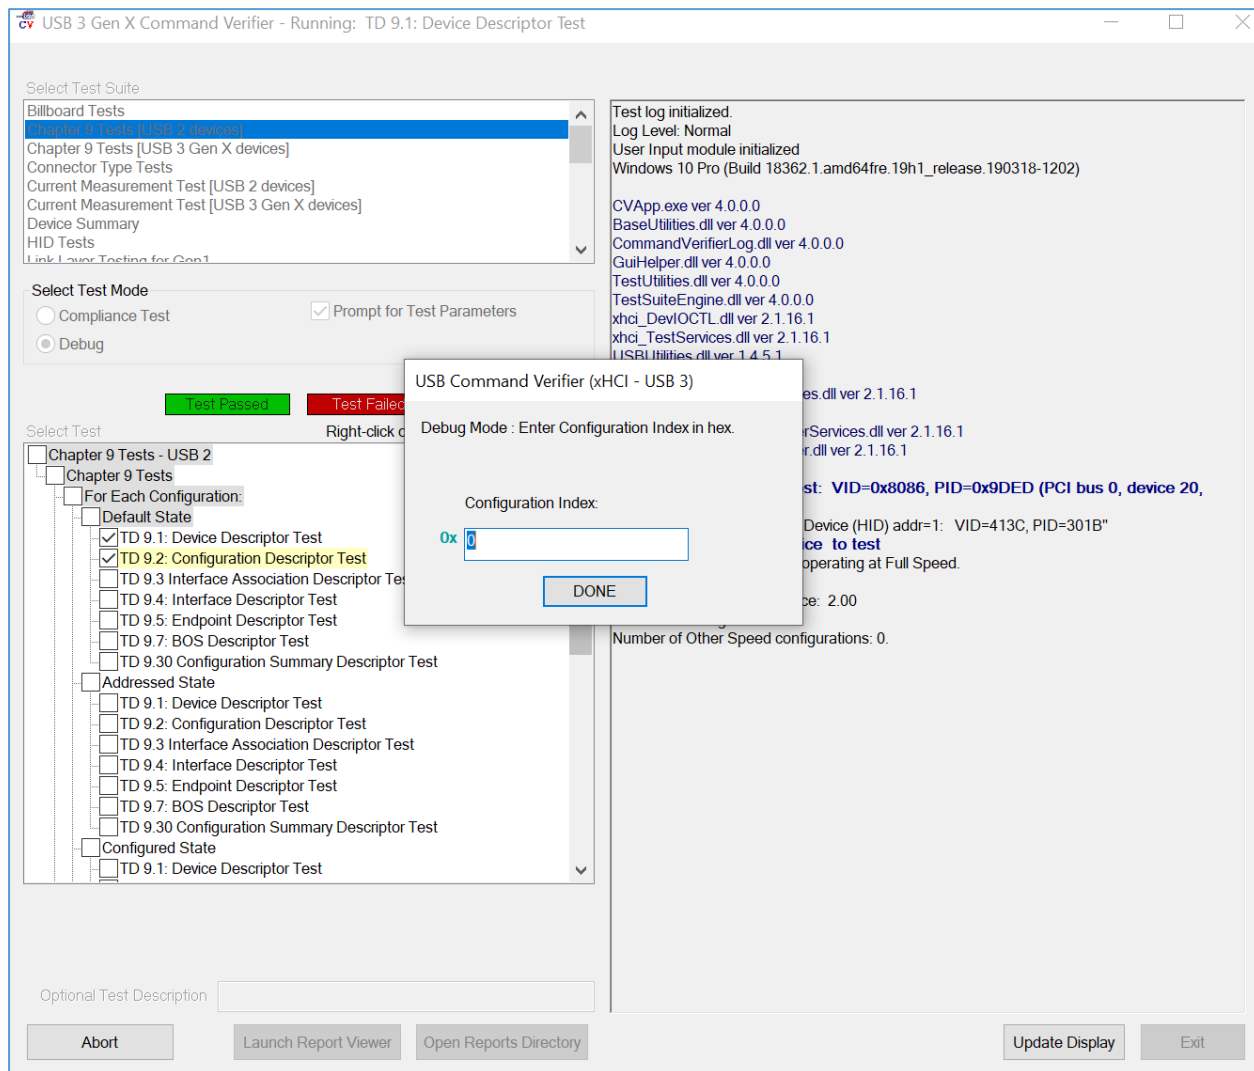


FIGURE 7.9: USER PROMPT TO ENTER DEBUG MODE CONFIGURATION INDEX IN CV TOOL FOR TD 4.10.1 TESTS

8. The next pop-up message (Figure 7.15 below) will require the user to enter the number of bytes to be verified in hex for Debug mode and then select “DONE”.

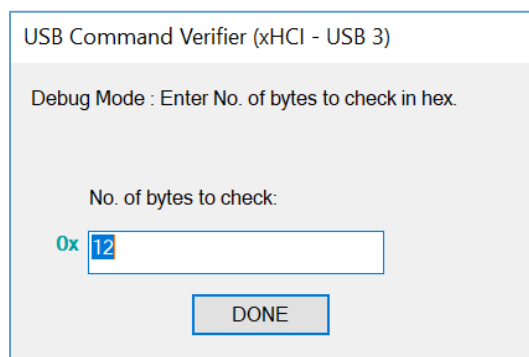


FIGURE 7.10: USER PROMPT TO ENTER DEBUG MODE NUMBER OF BYTES IN CV TOOL FOR TD 4.10.1 TESTS

9. The test results will be updated in the CV tool once the test execution is completed (Figure 7.11 below).

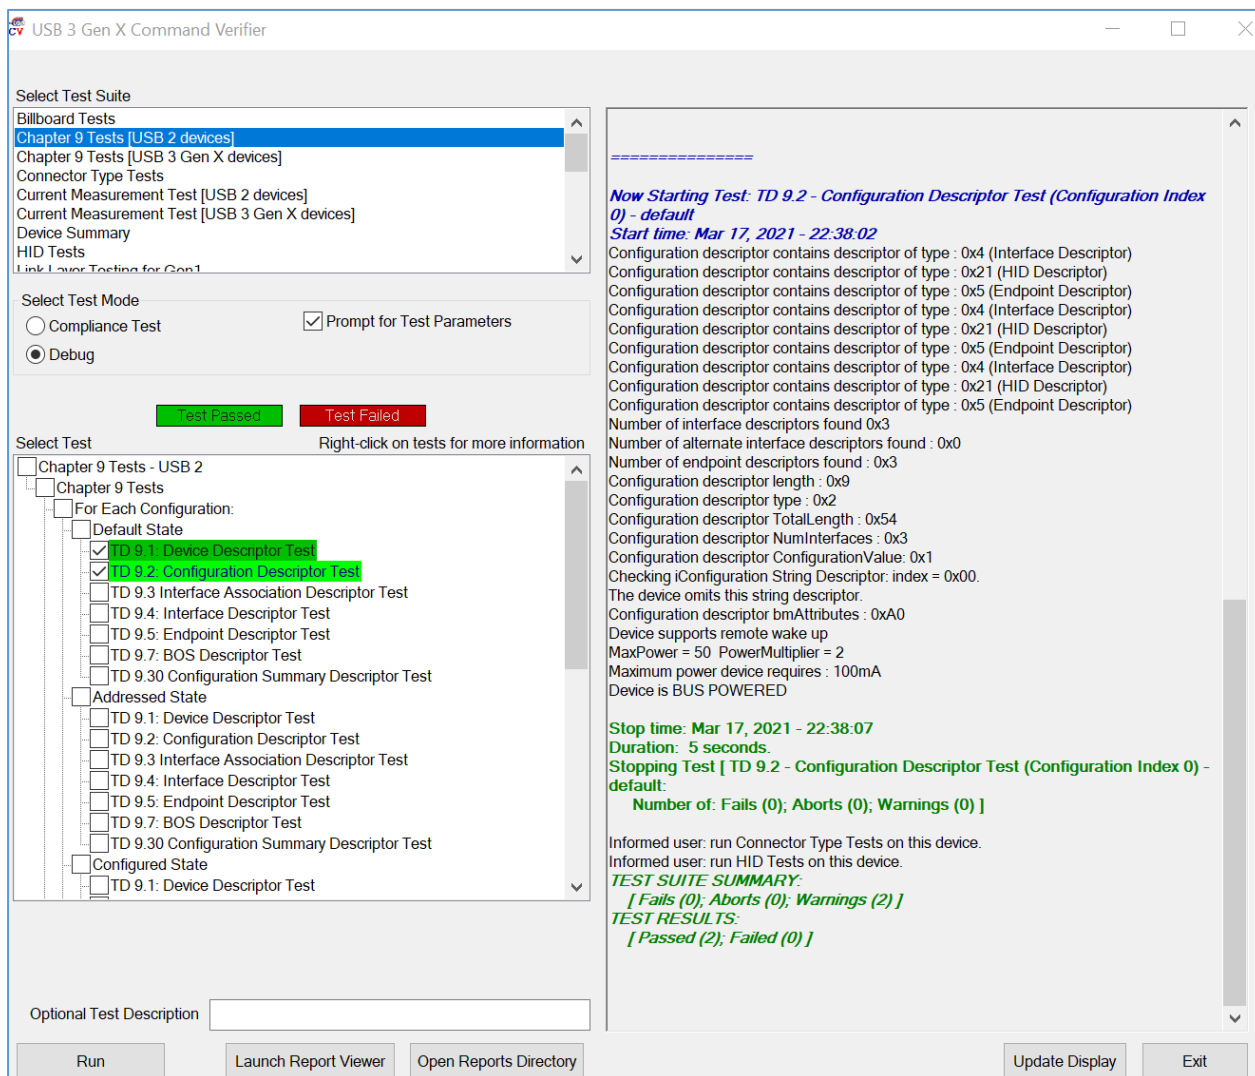


FIGURE 7.11: TEST RESULTS GENERATION IN CV TOOL FOR TD 4.10.1 TESTS

10. The following pop-up message (Figure 7.12 below) will then appear to ask the user to close the USB 3 Gen X CV application in the golden device.

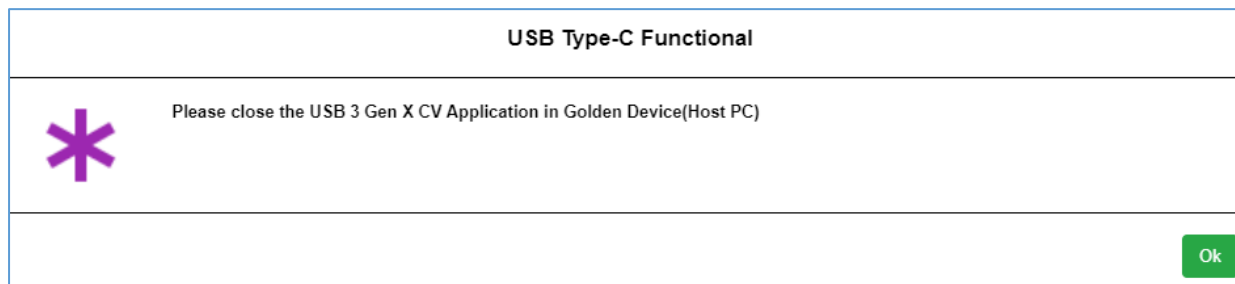


FIGURE 7.12: USER PROMPT TO CLOSE USB 3 GEN X CV APP IN GOLDEN DEVICE

7.3 TD 4.10.2 Sink Power Precedence Test CV Tool Procedure

1. When the “USB 3 Gen X Command Verifier” window appears, perform the following steps:
 - a. In the **Select Test Suite** field, select “Chapter 9 Tests [USB 2 devices]”.
 - b. In the **Select Test Mode** field, select the “Debug” radio button and the “Prompt for Test Parameters” checkbox.
 - c. In the **Select Test** field, select the “TD 9.16: Enumeration Test” checkbox.
 - d. Select the bottom “Run” button to execute the enumeration test.
2. While test is running, the “USB Command Verifier (xHCI- USB 3)” pop-up message will display a list of FS Devices (Figure 7.13 below). Select the FS Device as supported by the UUT and select “OK”.

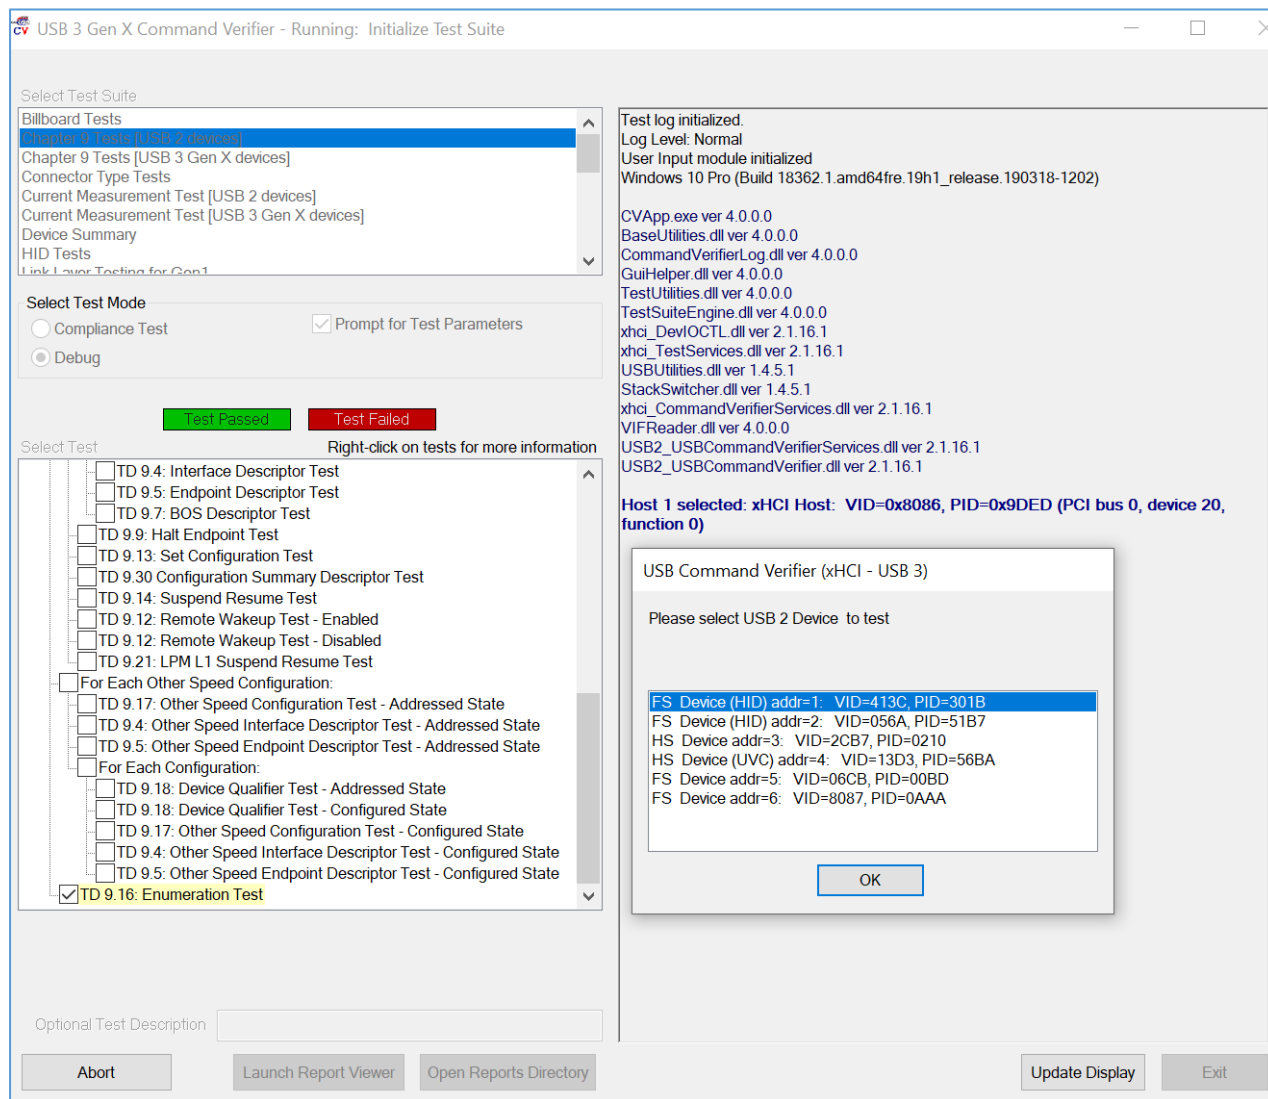


FIGURE 7.13: USER PROMPT TO SELECT FS DEVICE IN CV TOOL FOR TD 9.16 ENUMERATION TEST

3. In the next pop-up message (Figure 7.14 below), the user will need to enter the required enumeration loop count for Debug mode and select “DONE” [Note: 10 is the preferred count]. The user will also need to update the status in the GRL-USB-PD-C2-EPR application pop-up screen.

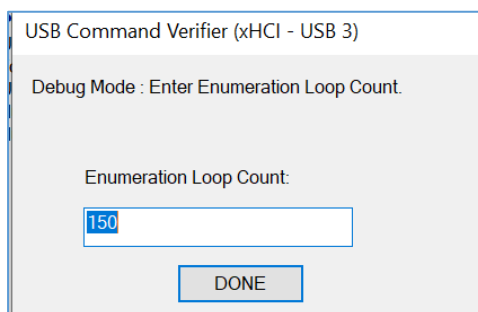


FIGURE 7.14: USER PROMPT TO ENTER DEBUG MODE ENUMERATION LOOP COUNT IN CV TOOL

4. The test results will be updated in the CV tool once the test execution is completed (Figure 7.15 below).

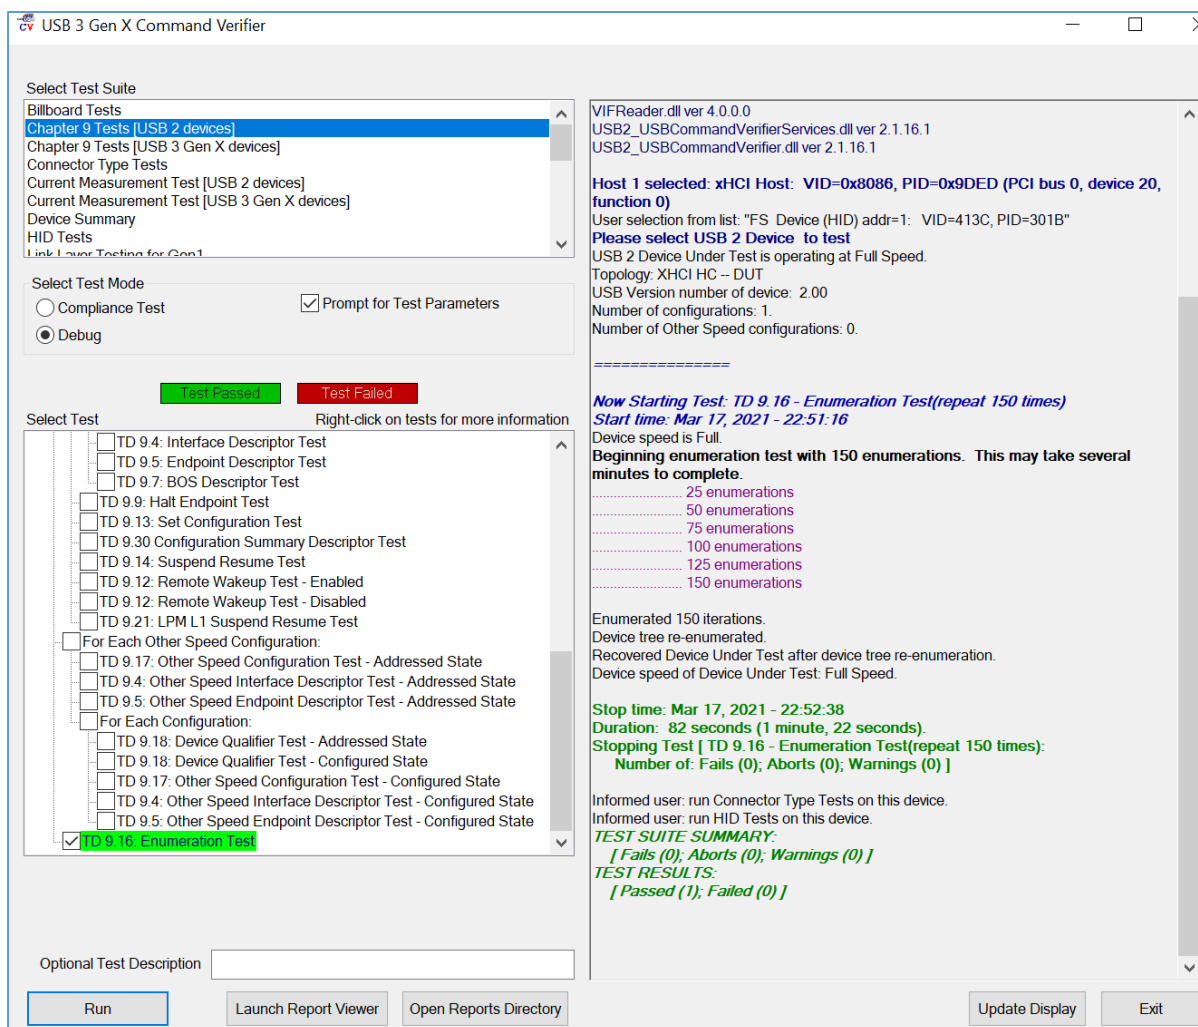


FIGURE 7.15: TEST RESULTS GENERATION IN CV TOOL FOR TD 9.16 ENUMERATION TEST

5. In the following pop-up message (Figure 7.16 below), select “Yes” if the test passes or “No” if fails. Select “Cancel” if the CV tool is not used to run the enumeration test.

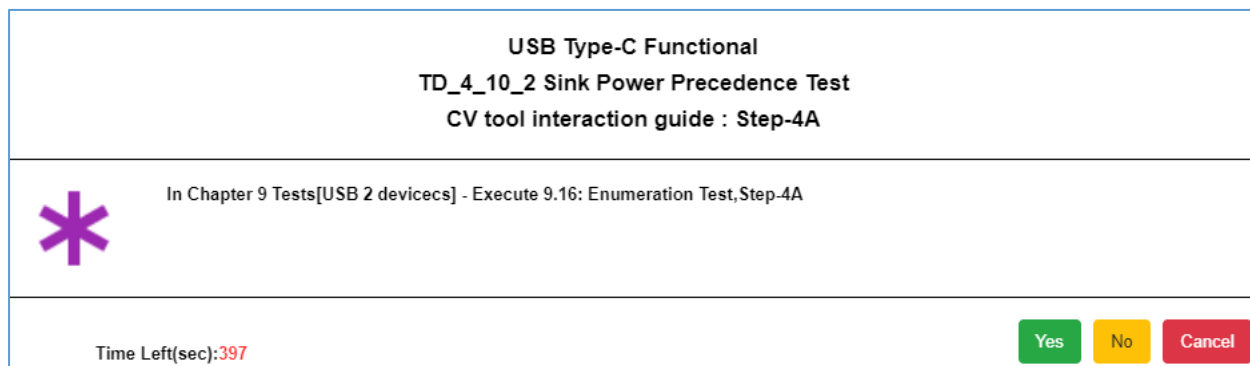


FIGURE 7.16: USER PROMPT TO CONFIRM CTS “9.16 ENUMERATION TEST” STATUS IN CV TOOL

6. The following pop-up message (Figure 7.17 below) will then appear to ask the user to execute CTS “TD 9.13 Set Configuration Test” in the CV Tool for all configuration found during the enumeration test run.

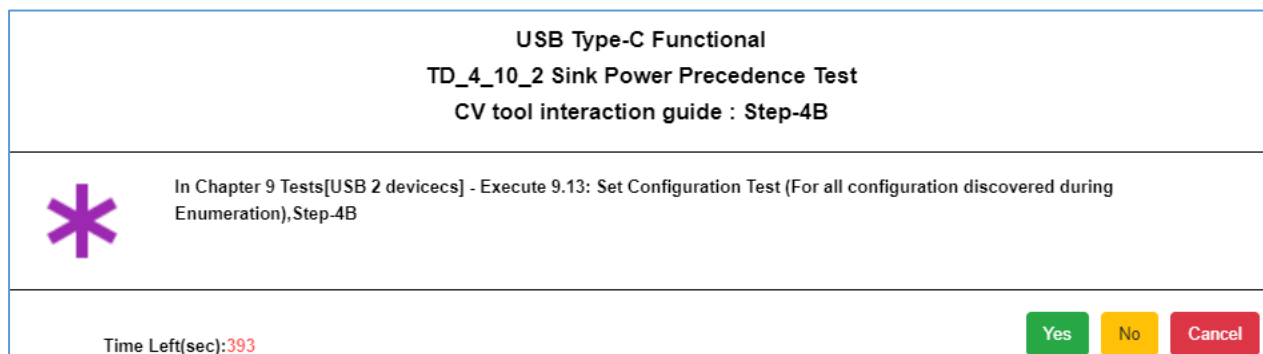


FIGURE 7.17: USER PROMPT TO EXECUTE CTS “TD 9.13 SET CONFIGURATION TEST” IN CV TOOL

7. When the “USB 3 Gen X Command Verifier” window appears, perform the following steps:
 - a. In the **Select Test Suite** field, select “Chapter 9 Tests [USB 2 devices]”.
 - b. In the **Select Test Mode** field, select the “Debug” radio button and the “Prompt for Test Parameters” checkbox.
 - c. In the **Select Test** field, select the “TD 9.13: Set Configuration Test” checkbox.
 - d. Finally, select the bottom “Run” button to execute the Set Configuration test.
8. While test is running, the “USB Command Verifier (xHCI- USB 3)” pop-up message will display a list of FS Devices. Select the FS Device as supported by the UUT and select “OK”.
9. In the next pop-up message, the user will need to enter the appropriate Configuration Index value in hex for Debug mode and then select “DONE”. The user will also need to update the status in the GRL-USB-PD-C2-EPR application pop-up screen.
10. The test results will be updated in the CV tool once the test execution is completed (Figure 7.18 below).

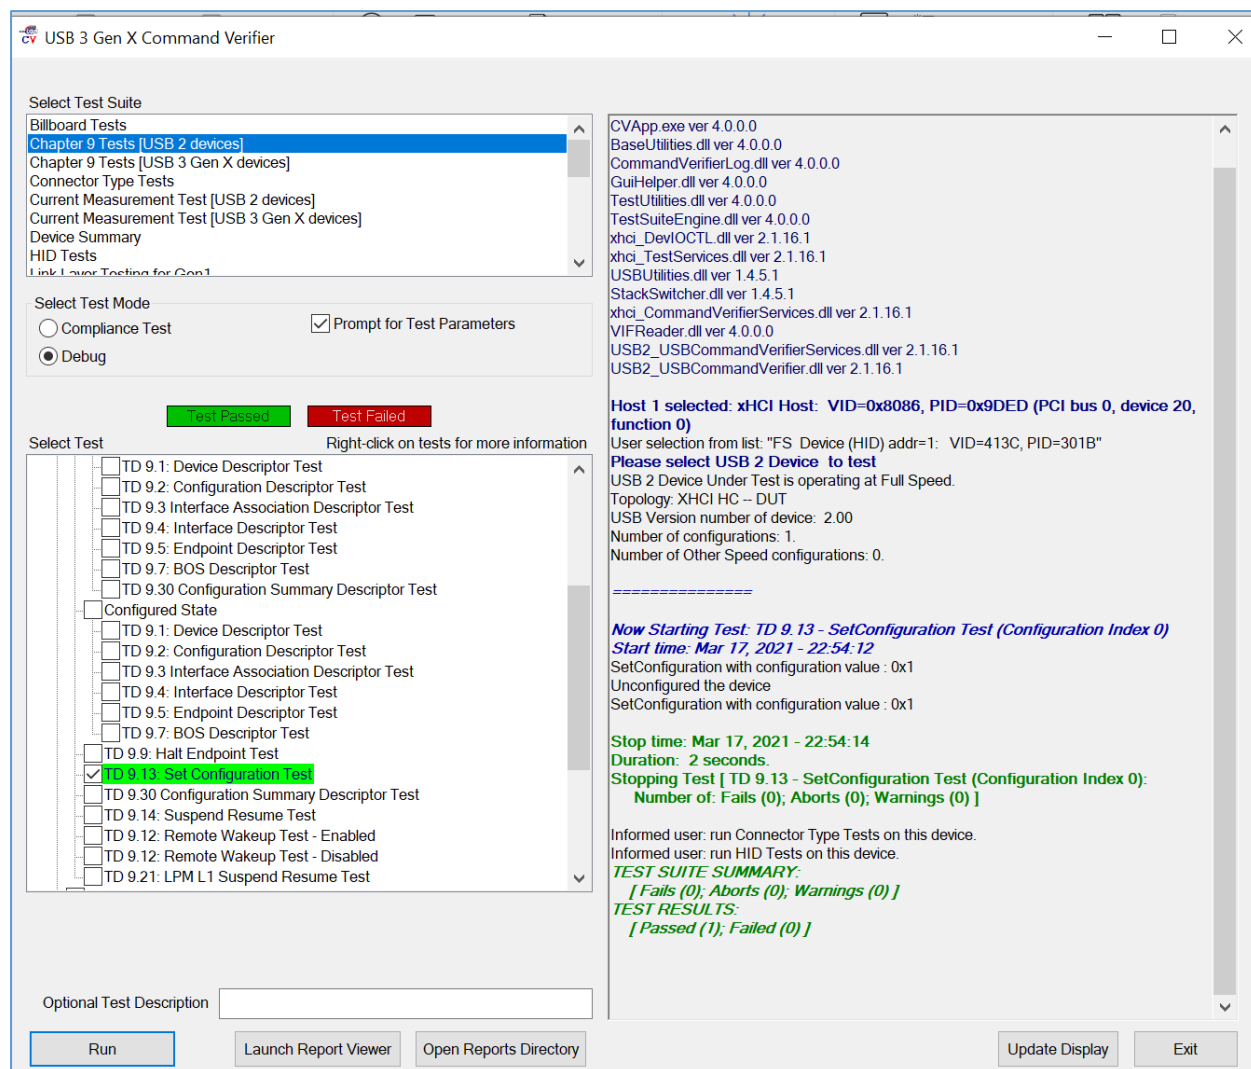


FIGURE 7.18: TEST RESULTS GENERATION IN CV TOOL FOR TD 9.13 SET CONFIGURATION TEST

11. If the test Fails or the user selects “Cancel” in the pop-up message, the user will be required to perform CTS “TD 7.40 Warm Reset” test as prompted by the following pop-up message (Figure 7.19 below) on the GRL-USB-PD-C2-EPR test controller. The user will also need to update the status in the GRL-USB-PD-C2-EPR application pop-up screen.

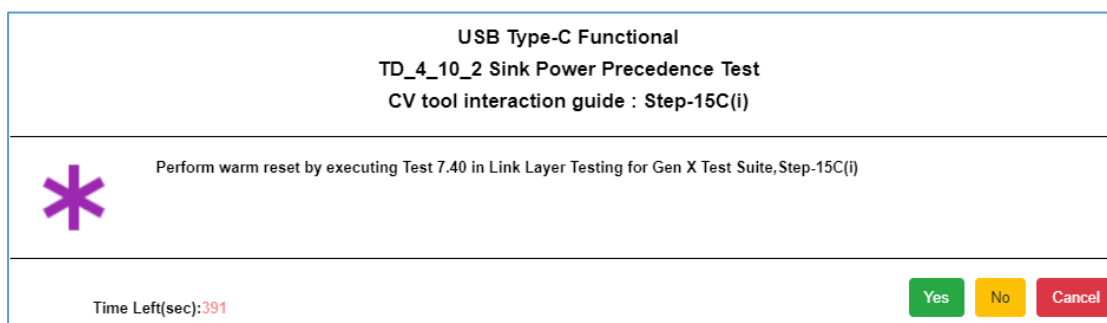


FIGURE 7.19: USER PROMPT TO EXECUTE CTS “TD 7.40 WARM RESET” IN CV TOOL

12. When the “USB 3 Gen X Command Verifier” window appears, perform the following steps:
 - a. In the **Select Test Suite** field, select “Link Layer Testing for Gen2”.
 - b. In the **Select Test Mode** field, select the “Debug” radio button and the “Prompt for Test Parameters” checkbox.
 - c. In the **Select Test** field, select the “TD 7.40 Warm Reset” checkbox.
 - d. Finally, select the bottom “Run” button to execute the Warm Reset test.
13. While test is running, the user will be asked to confirm warm reset to be carried out on the UUT (Figure 7.20 below). Select “OK” to proceed. The user will also need to update the status in the GRL-USB-PD-C2-EPR application pop-up screen.

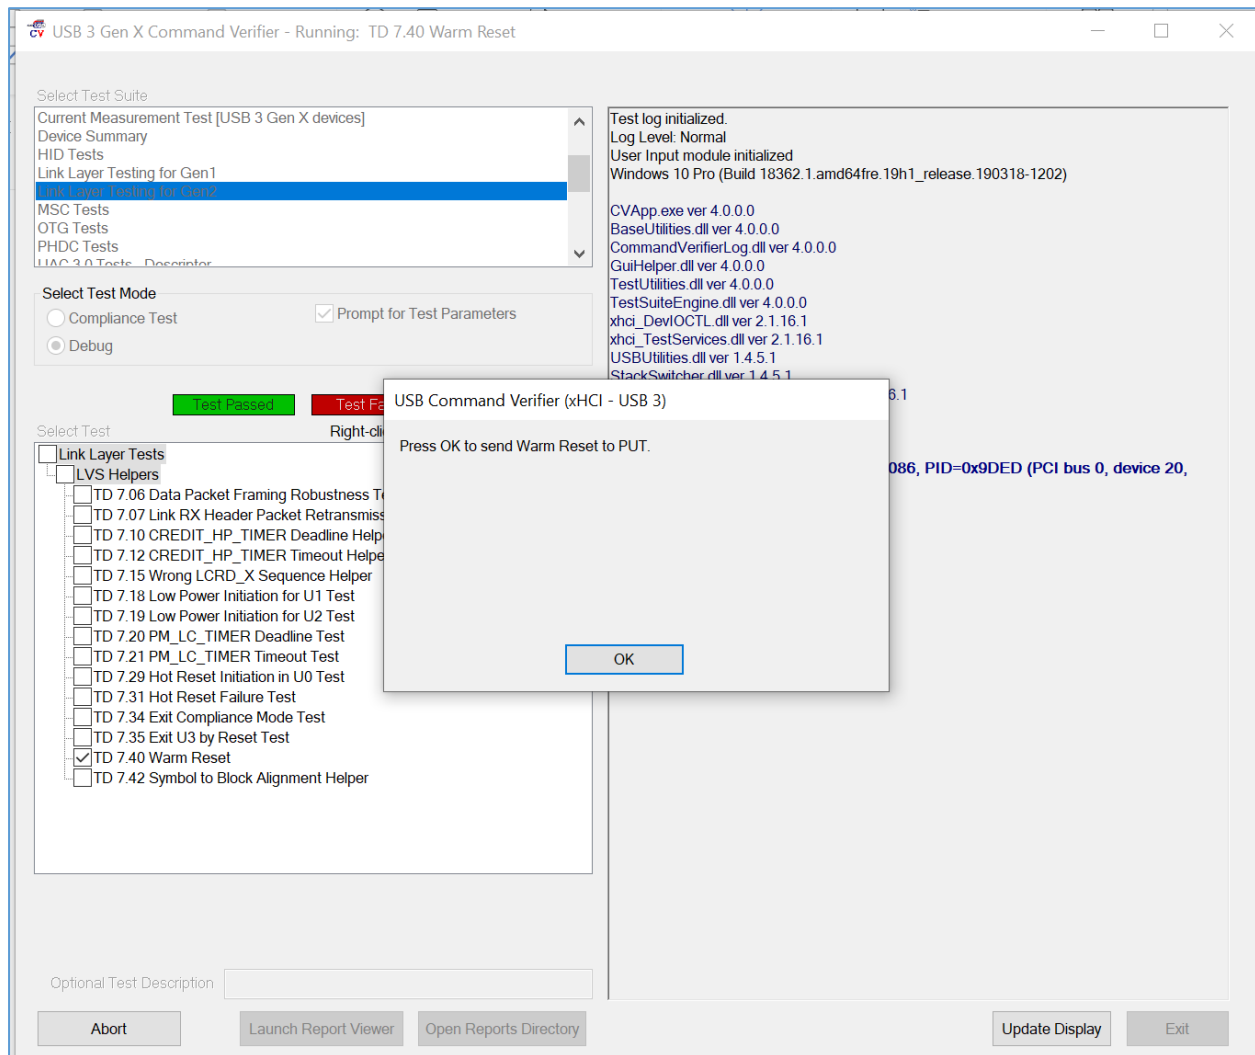


FIGURE 7.20: USER PROMPT TO CONFIRM WARM RESET EXECUTION IN CV TOOL

14. The test results will be updated in the CV tool once the test execution is completed (Figure 7.21 below).

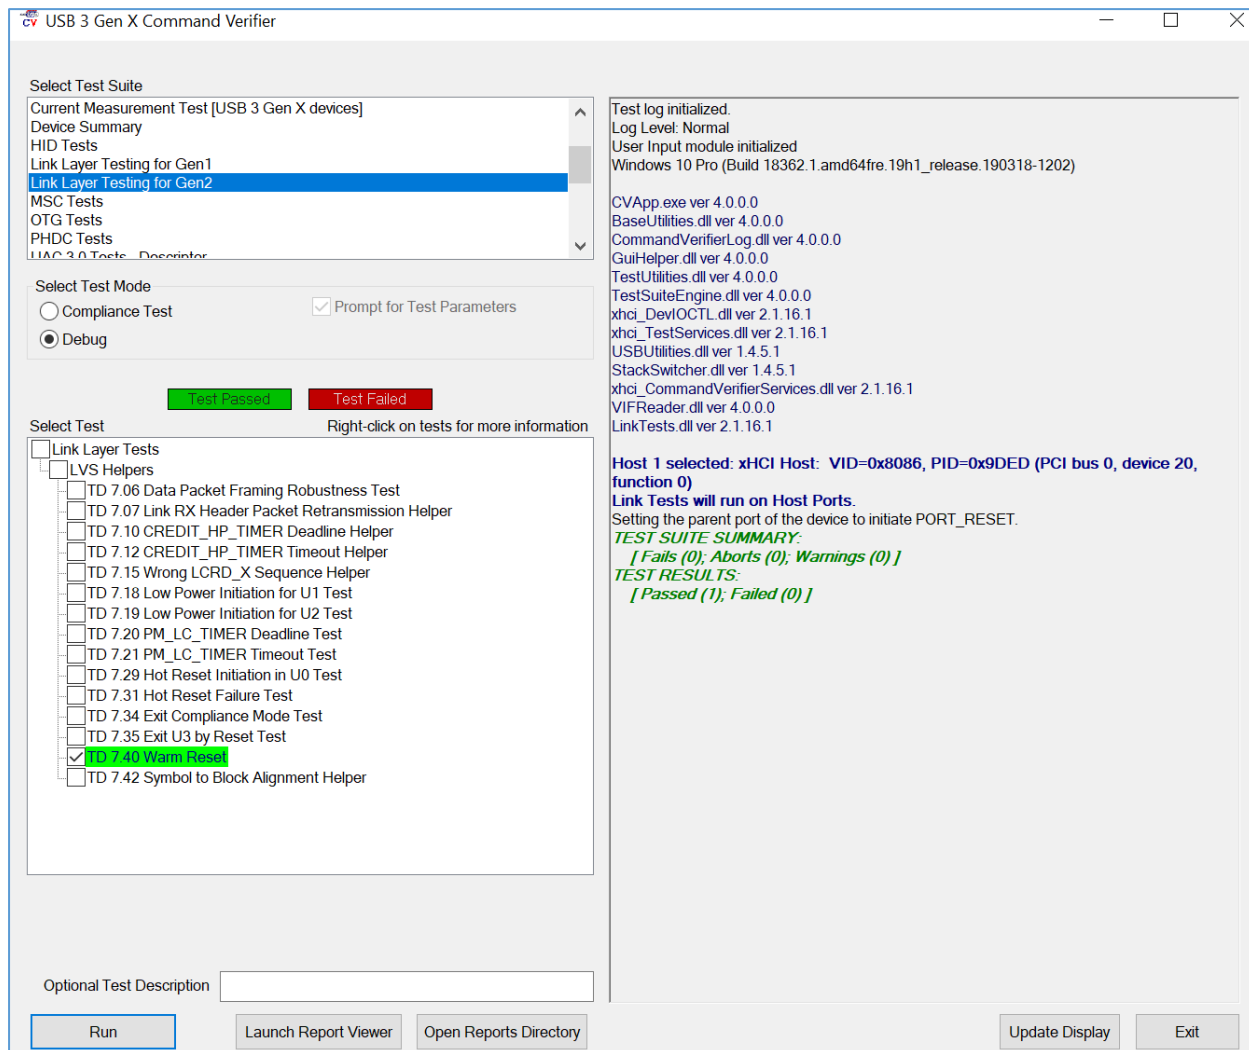


FIGURE 7.21: TEST RESULTS GENERATION IN CV TOOL FOR TD 7.40 WARM RESET TEST

15. The following pop-up message (Figure 7.22 below) will then appear to ask the user to close the USB 3 Gen X CV application in the golden device.

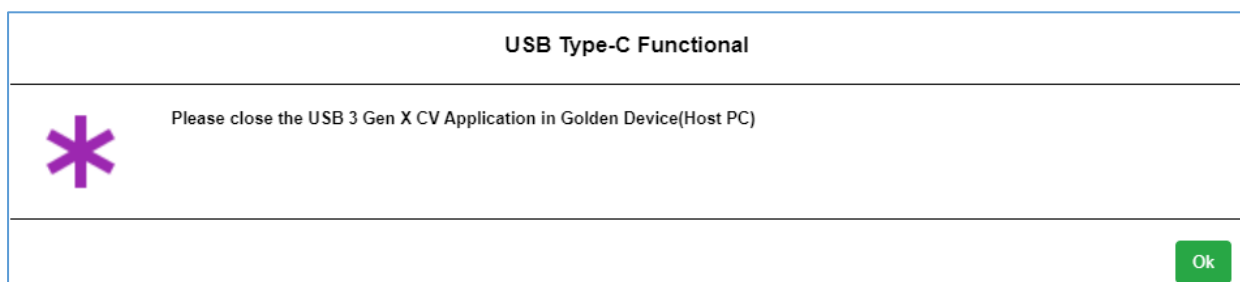


FIGURE 7.22: USER PROMPT TO CLOSE USB 3 GEN X CV APP IN GOLDEN DEVICE

7.4 TD.4.10.3 Sink Suspend Test CV Tool Procedure

For the TD 4.10.3 test case, define the USB spec supported by the UUT as USB 3.0 based or USB 2.0 based.

When the test is running, the user will be required to suspend UUT link using the CV Tool (**USB 3 Gen x CV**) in the golden device (Figure 7.23 below).

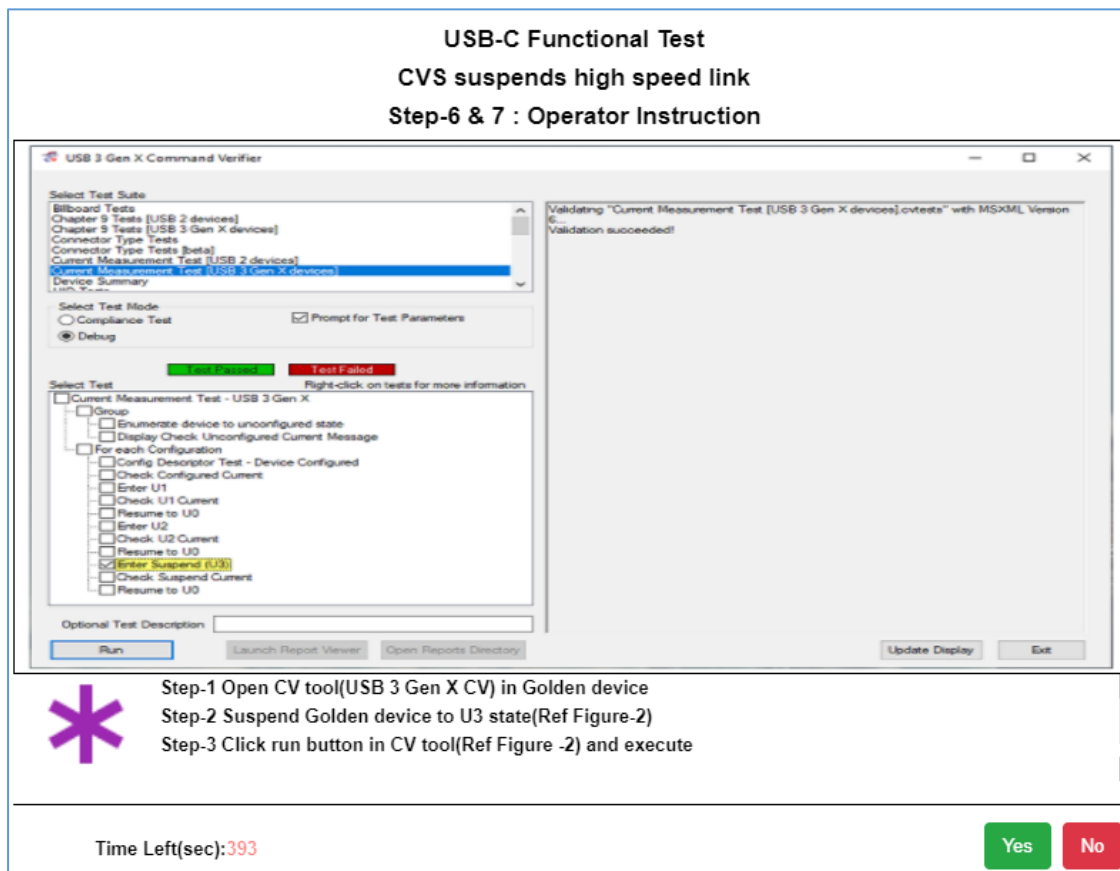


FIGURE 7.23: USER PROMPT TO SUSPEND UUT LINK USING CV TOOL

When the “USB 3 Gen X Command Verifier” window appears (Figure 7.24 below), perform the following steps:

- In the **Select Test Suite** field, select “Current Measurement Test [USB 3 Gen X devices]”.
- In the **Select Test Mode** field, select the “Debug” radio button and the “Prompt for Test Parameters” checkbox.
- In the **Select Test** field, select the “Enter Suspend (U3)” checkbox.
- Finally, select the bottom “Run” button to execute the Suspend UUT Link test.


USB 3 Gen X Command Verifier

Select Test Suite

- Current Measurement Test [USB 3 Gen X devices]**
- Device Summary
- HID Tests
- Link Layer Testing for Gen1
- Link Layer Testing for Gen2
- MSC Tests
- OTG Tests
- PHDC Tests
- UAC 3.0 Tests - Descriptor

Select Test Mode

☐ Compliance Test
 ☒ Prompt for Test Parameters
 ☒ Debug

Test Passed

Test Failed

Select Test Right-click on tests for more information

- ☐ Current Measurement Test - USB 3 Gen X
 - ☐ Group
 - ☐ Enumerate device to unconfigured state
 - ☐ Display Check Unconfigured Current Message
 - ☐ For each Configuration
 - ☐ Config Descriptor Test - Device Configured
 - ☐ Check Configured Current
 - ☐ Enter U1
 - ☐ Check U1 Current
 - ☐ Resume to U0
 - ☐ Enter U2
 - ☐ Check U2 Current
 - ☐ Resume to U0
 - ☒ **Enter Suspend (U3)**
 - ☐ Check Suspend Current
 - ☐ Resume to U0

Optional Test Description

FIGURE 7.24: SELECT AND EXECUTE SUSPEND UUT LINK TEST IN CV TOOL

END_OF_DOCUMENT