




GRL PLATFORM
SOLUTIONS
FOUNDATIONAL - INTELLIGENT - PRECISE

GRL Platform Solutions

User Guide WPC Qi Wireless Test Power Receiver Tester (GRL-WP-TPR-C3) with Automation Test Application

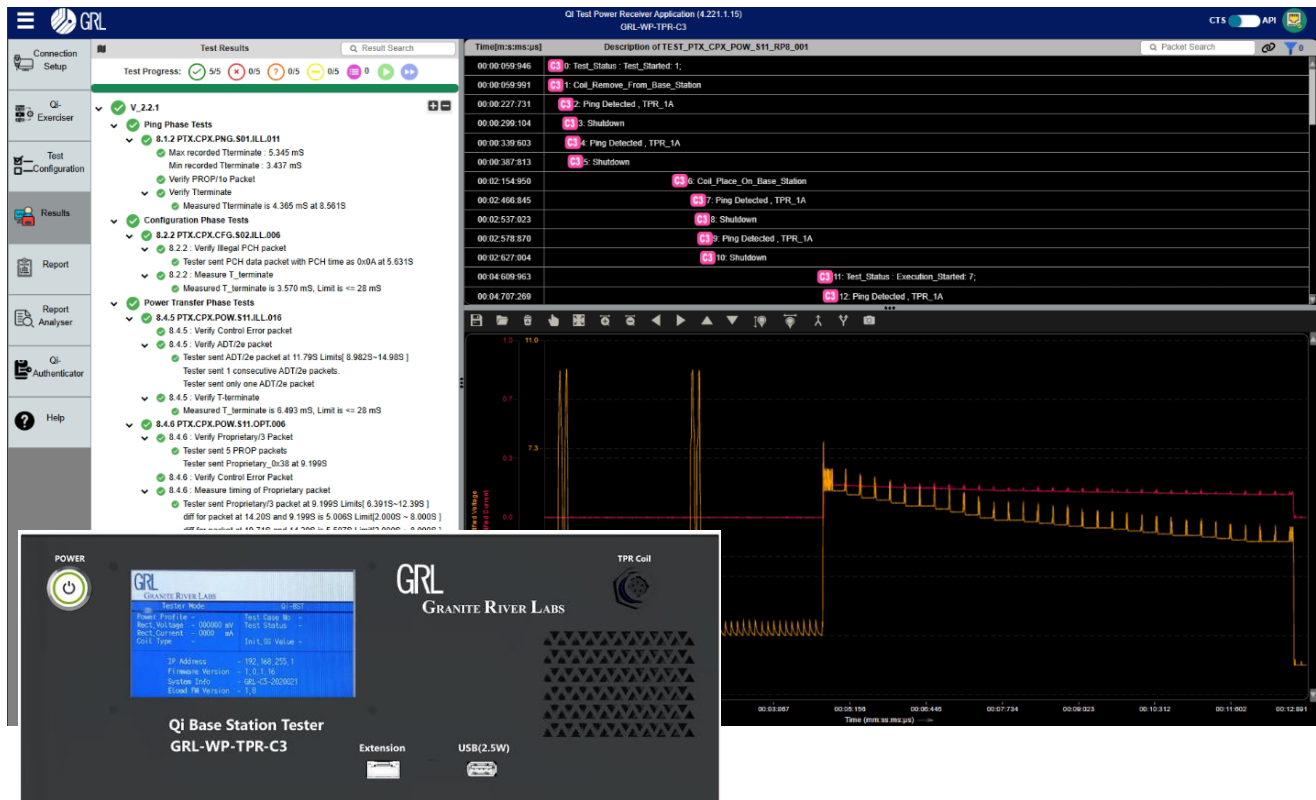

This material is provided as a reference to get started with the GRL Platform Solutions WPC Qi Wireless Test Power Receiver Tester (GRL-WP-TPR-C3) Hardware and the GRL-WP-TPR-C3 Automation Test Application.

For software support, contact support@grlps.com.

Published on 15 June 2026

DISCLAIMER

This document is provided “as is” with no warranties whatsoever, including any warranty of merchantability, no infringement, fitness for any particular purpose, or any warranty otherwise arising out of any proposal, specification, or sample. The GRL Platform Solutions disclaims all liability for infringement of proprietary rights, relating to use of information in this specification. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted herein.

All product names are trademarks, registered trademarks, or service marks of their respective owners.



Copyright © 2026 GRL Platform Solutions. All rights reserved.

TABLE OF CONTENTS

1	REFERENCE DOCUMENTS	10
2	ACRONYM/ABBREVIATION GLOSSARY	10
3	SCOPE OF THIS USER GUIDE	11
4	OVERVIEW OF GRL-C3 STANDARD PURCHASE ITEMS AND ORDERABLE ACCESSORIES	11
4.1	GRL-C3 SHIPPING BOX CONTENTS.....	11
5	GETTING STARTED WITH GRL-C3	18
5.1	INSTALL GRL-C3 APPLICATION	18
5.2	START UP AND NAVIGATE GRL-C3 APPLICATION	21
5.2.1	Using GRL-C3 Application in Chrome OS	22
5.2.2	Using GRL-C3 Application in macOS.....	23
6	CONNECTION AND SETUP OF GRL-C3 TESTER HARDWARE	25
6.1	CONNECT POWER SUPPLY TO GRL-C3 TESTER HARDWARE.....	26
6.2	CONNECT ETHERNET CABLE AND TURN ON GRL-C3 TESTER HARDWARE.....	26
6.2.1	Verify GRL-C3 Tester Hardware Ethernet Connection	27
6.3	CONNECT OSCILLOSCOPE TO GRL-C3 TESTER HARDWARE.....	29
6.4	CONNECT TPR COIL TO GRL-C3 TESTER HARDWARE.....	30
7	CONNECTION AND SETUP OF GRL-C3 APPLICATION	31
7.1	UPDATE GRL-C3 TESTER HARDWARE'S FIRMWARE.....	32
8	COMPLIANCE TESTING WITH GRL-C3	37
8.1	APP MODE	37
8.1.1	Using GRCL3ApiLibTestingTool in API Mode	38
8.1.2	Develop Custom Test Cases Via GRL-WP-QI-C3 API Programming.....	41
8.2	QI-EXERCISER	42
8.2.1	Set Qi Specification	42
8.2.2	Configure GRL-C3 Tester Hardware	42
8.2.3	Set Up DUT Power Transmitter Capability	43
8.2.4	Select and Set Up Reference Test Power Receiver (TPR) Coil.....	43
8.2.5	Set Up Load Condition in Load Circuit	44
8.2.6	Set Up Coil Modulation in Modulator Circuit.....	45
8.2.7	Set Up Packet Simulation Test Sequence.....	46
8.2.8	Run Packet Simulation Test.....	54
8.3	TEST CONFIGURATION	55
8.3.1	Create New Test Project.....	55
8.3.2	Upload Existing Saved Test Project.....	60
8.3.3	Test Configuration	61
8.3.4	Test Selection.....	65

8.3.5	Report Generation	68
8.3.6	Run Tests.....	68
8.4	TEST REPORT VIEW.....	74
8.5	JSON REPORT ANALYZER.....	76
8.5.1	Expand Data Fields in JSON Report.....	76
8.5.2	JSON Report Data Fields Definition	77
8.5.3	Load Multiple JSON Report Files.....	82
8.5.4	Manage JSON Reports.....	84
8.5.5	Merge Results of Multiple JSON Report Files	85
8.5.6	Download/Export JSON Reports.....	86
8.6	QI AUTHENTICATOR CONFIGURATION & VALIDATION	87
8.6.1	Validate Qi Certificate of Power Transmitter	88
8.6.2	Validate Challenge Authentication for Power Receiver	90

9 GRL-C3 INFORMATION AND HELP

93

LIST OF FIGURES

Figure 5.1: Start GRL-C3 Application Installation	18
Figure 5.2: Accept GRL-C3 Application License Agreement.....	19
Figure 5.3: GRL-C3 Application Installation In Progress.....	19
Figure 5.4: Start GRL-C3 Device Driver Installation	20
Figure 5.5: GRL-C3 Device Driver Installation Completed	20
Figure 5.6: GRL-C3 Application Installation Completed.....	21
Figure 5.7: App Server Screen Running Backend Operations	21
Figure 5.8: GRL-C3 Application Landing Screen	22
Figure 5.9: Using GRL-C3 Application in Chrome OS	23
Figure 5.10: Using GRL-C3 Application in macOS	24
Figure 6.1: GRL-C3 Hardware Setup for Qi Wireless Base Station DUT.....	25
Figure 6.2: GRL-C3 Power Interface.....	26
Figure 6.3: GRL-C3 Ethernet Connector.....	26
Figure 6.4: GRL-C3 Power Button.....	27
Figure 6.5: Network Connections Before Connecting GRL-C3	27
Figure 6.6: Ethernet Properties	28
Figure 6.7: Ethernet Properties with TCP/IPV4 Selected	28
Figure 6.8: Network Connections After Setup and Connection of GRL-C3	29
Figure 6.9: Oscilloscope to GRL-C3 Connections.....	29
Figure 6.10: TPR Coil to GRL-C3 Connection	30
Figure 7.1: Connection Configuration Screen After Successful Connection	31
Figure 7.2: Update GRL-C3 Firmware Button	32
Figure 7.3: Update GRL-C3 Firmware- #1	32
Figure 7.4: Update GRL-C3 Firmware- #2	33
Figure 7.5: Update GRL-C3 Firmware- #3.....	33
Figure 7.6: Update GRL-C3 E-Load Firmware	33
Figure 7.7: Update GRL-C3 Firmware- #4.....	34
Figure 7.8: Update GRL-C3 Firmware- #5	34
Figure 7.9: Manual GRL-C3 Firmware Update Procedure.....	35
Figure 7.10: GRL-C3 Reset Button	35
Figure 7.11: Copy GRL-C3 Firmware Files Into Removable USB Drive.....	36
Figure 8.1: App Mode Selection	37
Figure 8.2: Results Screen In API Mode.....	37

Figure 8.3: GRLC3ApiLibTestingTool Window	38
Figure 8.4: Connect GRLC3ApiLibTestingTool with GRL-C3	38
Figure 8.5: GRLC3ApiLibTestingTool– Configure Controller.....	39
Figure 8.6: GRLC3ApiLibTestingTool– Test Execution Example.....	40
Figure 8.7: GRLC3ApiLibTestingTool– Test Execution Qi Messages Example	40
Figure 8.8: GRLC3ApiLibTestingTool– Read Data.....	41
Figure 8.9: Qi-Exerciser Screen.....	42
Figure 8.10: Qi Specification Selection.....	42
Figure 8.11: Configure GRL-C3.....	42
Figure 8.12: Select DUT Power Profile.....	43
Figure 8.13: Configure TPR Coil.....	43
Figure 8.14: Configure Additional Parameters.....	44
Figure 8.15: Configure Load Condition	44
Figure 8.16: Start Load FOD Test Execution Example	45
Figure 8.17: Configure Coil Modulation.....	45
Figure 8.18: Configure Packet Simulation Test Sequence	46
Figure 8.19: Configure Packet Information	46
Figure 8.20: Additional Packet Settings for BPP and EPP DUT's (ID/Config Phase & PT Phase).....	49
Figure 8.21: Additional Packet Settings for EPP DUT (Negotiation Phase)	50
Figure 8.22: Additional Packet Settings for EPP DUT (Calibration Phase).....	51
Figure 8.23: Remove or Add Packets & Reset or Set Packet Sequence	52
Figure 8.24: Add New Phase & Packet to Packet Sequence	52
Figure 8.25: Configure and Send Instant Packets.....	53
Figure 8.26: Add Packet to History Table.....	54
Figure 8.27: Run Packet Simulation Test and Manage Configuration	54
Figure 8.28: Start Exerciser Packet Simulation Test Run Example.....	54
Figure 8.29: Example of Saved Configuration File Path	55
Figure 8.30: Test Configuration Screen	55
Figure 8.31: Create New Project— #1.....	56
Figure 8.32: Create New Project— #2.....	56
Figure 8.33: Create New Project— #3.....	57
Figure 8.34: Create New Project— #4.....	57
Figure 8.35: Create New Project— #5.....	58

Figure 8.36: Create New Project— #6	60
Figure 8.37: Upload Project— #1	60
Figure 8.38: Upload Project— #2	60
Figure 8.39: Upload Project— #3	61
Figure 8.40: Upload Project— #4	61
Figure 8.41: DUT Self Declaration Form Management	62
Figure 8.42: Configuration for Optimum Coil Position	63
Figure 8.43: Optimum Coil Position Test Execution Example	63
Figure 8.44: Configure Tester	64
Figure 8.45: Load PRMC Code from Selected Pool Data File	64
Figure 8.47: Select Tests Based on TPR Coil Type for V2.2.1 Certification & BPP Power Profile	65
Figure 8.48: Test Selection for All TPR Coil Types (for MPP V2.2.1 Certification & BPP Power Profile).....	65
Figure 8.49: Test Selection for TPR_1A Coil (for V2.2.1 Certification & BPP Power Profile) ..	66
Figure 8.50: Test Selection for TPR_1B Coil (for V2.2.1 Certification & BPP Power Profile) ..	66
Figure 8.51: Test Selection for TPR_1C Coil (for V2.2.1 Certification & BPP Power Profile) ..	66
Figure 8.52: Test Selection for TPR_1D Coil (for V2.2.1 Certification & BPP Power Profile) ..	66
Figure 8.53: Test Selection for TPR_1E Coil (for V2.2.1 Certification & BPP Power Profile) ..	67
Figure 8.54: Test Selection for TPR_3 Coil (for V2.2.1 Certification & BPP Power Profile) ...	67
Figure 8.55: Test Selection for TPR_5 Coil (for V2.2.1 Certification & BPP Power Profile) ...	67
Figure 8.56: Test Selection for TPR_6 Coil (for V2.2.1 Certification & BPP Power Profile) ...	67
Figure 8.57: Test Selection for TPR_THERMAL_5W Coil (for V2.2.1 Certification & BPP Power Profile).....	68
Figure 8.58: Test Lab Information Panel for Report Generation.....	68
Figure 8.59: Run Tests	69
Figure 8.60: Results Screen – Test Run In Progress	69
Figure 8.61: Results Screen – Test Run Completed	70
Figure 8.63: Filter Packet Communications Options.....	71
Figure 8.64: Trace Plot Control Buttons.....	71
Figure 8.65: Save Trace Plot After Test Run Completion.....	71
Figure 8.66: Load Trace File Button	72
Figure 8.67: Select Saved Trace File	72
Figure 8.68: Selected Trace File Loaded for Verification	73
Figure 8.69: Verify Failure Packet.....	73

Figure 8.70: Clear Capture Button	74
Figure 8.71: Report Screen	74
Figure 8.72: Scroll Down to View Full Report.....	75
Figure 8.73: Report Management Functions	75
Figure 8.74: JSON Report Analyzer Screen.....	76
Figure 8.75: Expand All Data Fields Example	76
Figure 8.76: Test Lab Data Field	77
Figure 8.77: Test Execution Data Field	78
Figure 8.78: Report Remark Data Field.....	78
Figure 8.79: Test Tool Info Data Field.....	79
Figure 8.80: DUT Info Data Field.....	80
Figure 8.81: Testing Scopes Data Field	80
Figure 8.82: View Test Case Details	81
Figure 8.83: Digital Signature Info Data Field.....	81
Figure 8.84: Upload JSON Report Icon	82
Figure 8.85: Select JSON Files to Upload	82
Figure 8.86: JSON Files Loaded on Screen Example	83
Figure 8.87: Select and Compare Multiple JSON Files Results.....	83
Figure 8.88: Manage JSON Report Icons	84
Figure 8.89: JSON Report Test Results Summary Example	84
Figure 8.90: JSON Report Test Reports Summary Example.....	84
Figure 8.91: JSON Report Test Reports Summary Example	85
Figure 8.92: Merge Icon.....	85
Figure 8.93: Merged Test Results from Multiple JSON Report Files.....	86
Figure 8.94: Download/Export JSON Report Files.....	87
Figure 8.95: Qi-Authenticator Screen	87
Figure 8.96: Certificate Validation Panel for Power Transmitter	88
Figure 8.97: Upload Power Transmitter Auth Certificate Chain File Example	88
Figure 8.98: Root Certificate Hash Drop-Down Panel	89
Figure 8.99: Manufacturer CA Certificate Drop-Down Panel.....	89
Figure 8.100: Product Unit Certificate Drop-Down Panel.....	90
Figure 8.101: Challenge Auth Validation Panel.....	90
Figure 8.102: Select and Paste Contents of Nonce File.....	91
Figure 8.103: Select and Paste Contents of Challenge Auth File.....	92

Figure 8.104: Successful Challenge Auth Validation	92
Figure 9.1: Help Screen	93

1 Reference Documents

The test methods outlined in this document are tests required by the Wireless Power Consortium (WPC) for Qi compliance of a Wireless Power Transmitter/Receiver device. The Qi Wireless Power Transfer System for Power Class 0 Specification may be referenced in this document that includes, but is not limited to, the following specification versions.

Note: In order to have access to all specifications, it is required that you are a member of the WPC Web site and have attained the proper permissions.

WPC Specification Compliance Documents are available for download at:

<https://www.wirelesspowerconsortium.com/knowledge-base/specifications/download-the-qi-specifications.html>

The Qi Wireless Power Transfer System for Power Class 0 Specification:

Introduction to the Power Class 0 Specification Version 1.2.3 (February 2017)

Parts 1 and 2: Interface Definitions Version 1.2.3 (February 2017)

Part 3: Compliance Testing Version 1.2.4 (February 2018)

Part 4: Reference Designs Version 1.2.3 (February 2017)

2 Acronym/Abbreviation Glossary

TPR	Test Power Receiver
DUT	Device Under Test
OS	Operating System
BSUT	Base Station Under Test
FPGA	Field Programmable Gate Array
BPP	Base Power Profile
EPP	Extended Power Profile
API	Application Programming Interface
CTS	Compliance Test Specification
MOI	Method of Implementation
GP	Guaranteed Power
FOD	Foreign Object Detection
Power Tx	Power Transmitter
ID/Config	Identification & Configuration
RP	Received Power
EPP5	Extended Power Profile 5
Qf	Quality Factor
PRMC	Power Receiver Manufacturer Code

3 Scope of this User Guide

This User Guide serves as the primary user documentation for the GRL-WP-TPR-C3 (aka GRL-C3) WPC Qi Wireless Test Power Receiver Tester Hardware and GRL-C3 Automation Test Application. The subsequent sections describe the GRL-C3 initial setup and each feature provided by the GRL-C3 automation test application when connected to the GRL-C3 tester hardware.

4 Overview of GRL-C3 Standard Purchase Items and Orderable Accessories

4.1 GRL-C3 Shipping Box Contents



GRL-WP-TPR-C3 – WPC Qi Wireless Test Power Receiver Tester



Power Supply



USB Cable – Standard Type-A to Type-B Programming cable used to update GRL-C3 firmware. Connects to GRL-C3 upgrade USB port.



Ethernet Cable – 3m Cat 5 cable to connect GRL-C3 test controller to control computer.



E-Load Firmware Update Cable



**PicoScope 8-Channel Temperature Datalogger –
ThermoMux**



TPR #1A Coil Assembly



TPR #1B Coil Assembly



TPR #1C Coil Assembly



TPR #1D Coil Assembly

**TPR #1E Coil Assembly****TPR #5 Coil Assembly****TPR #MP1A Coil Assembly****TPR #MP1B Coil Assembly**

**TPR #MP1C Coil Assembly****TPR #MP3 Coil Assembly****TPR #MP4 Coil Assembly****TPR Thermal 5W Coil Assembly**

**TPR Thermal 15W Coil Assembly****Foreign Object #1: Steel Disc Centered****Foreign Object #1: Steel Disc Off Centered****Foreign Object #2: Aluminum Ring****Foreign Object #3: Aluminum Foil**



Foreign Object #1 for EPP – Steel Disc



Foreign Object #2 for EPP – Aluminum Ring



Foreign Object #3 for EPP – Aluminum Foil



Foreign Object #4 for EPP – Aluminum Disc



Foreign Object Holder #1

**Foreign Object Holder #2****Foreign Object Holder #3****2mm Spacer****5mm Spacer****1.5mm Spacer**

5 Getting Started with GRL-C3

This section describes how to get started with the GRL-C3 test solution for Qi wireless charging compliance testing. Whether you are installing for the first time or doing an upgrade, please make sure to follow all the steps in this section to verify your setup prior to testing a Device Under Test (DUT). The procedure is as follows:

1. Install the latest version of GRL-C3 automation test application on the host computer (laptop or desktop) connected to the GRL-C3 tester hardware. It is recommended that the host computer supports the Intel Core i7 processor and 8GB RAM with Google Chrome version 80.0.3987.122 or above (64-bit) for the application to run properly. Make sure to clear the browser cache before launching the GRL-C3 application.
2. Make sure the GRL-C3 tester firmware has been updated to the latest version. Refer to Section 7.

If this procedure is followed and any issues arise, please contact support@grlps.com.

5.1 Install GRL-C3 Application

1. Download the GRL-C3 application from <http://grlps.com/download-center/>.
2. Run the installer by double clicking the extracted executable (*GRL-WP-TPR-C3_V4.xxx.x.xx.exe*) and then click on the 'Next' button.

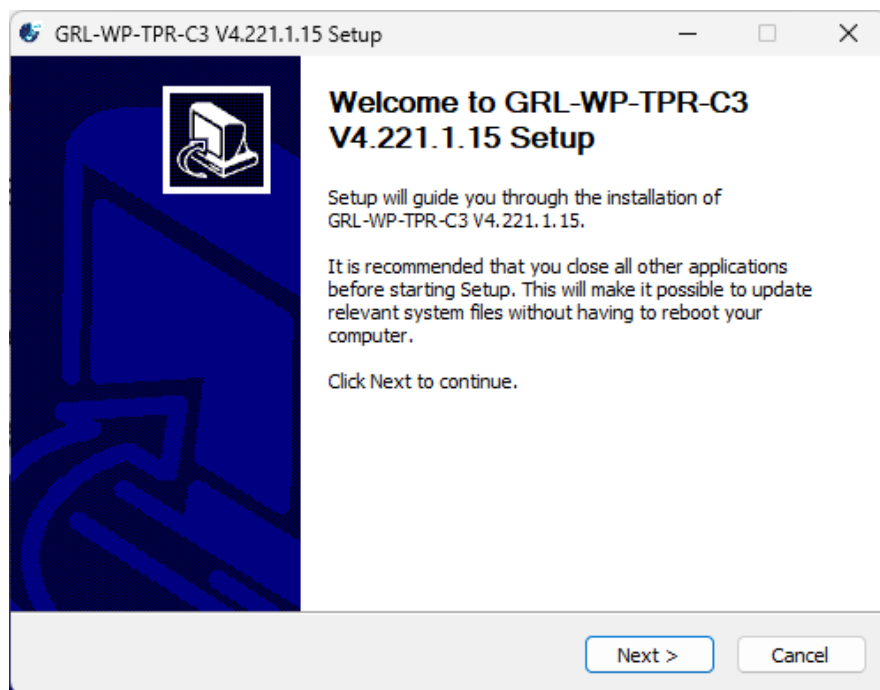


FIGURE 5.1: START GRL-C3 APPLICATION INSTALLATION

3. Read and accept the license agreement by clicking on the 'I Agree' button.

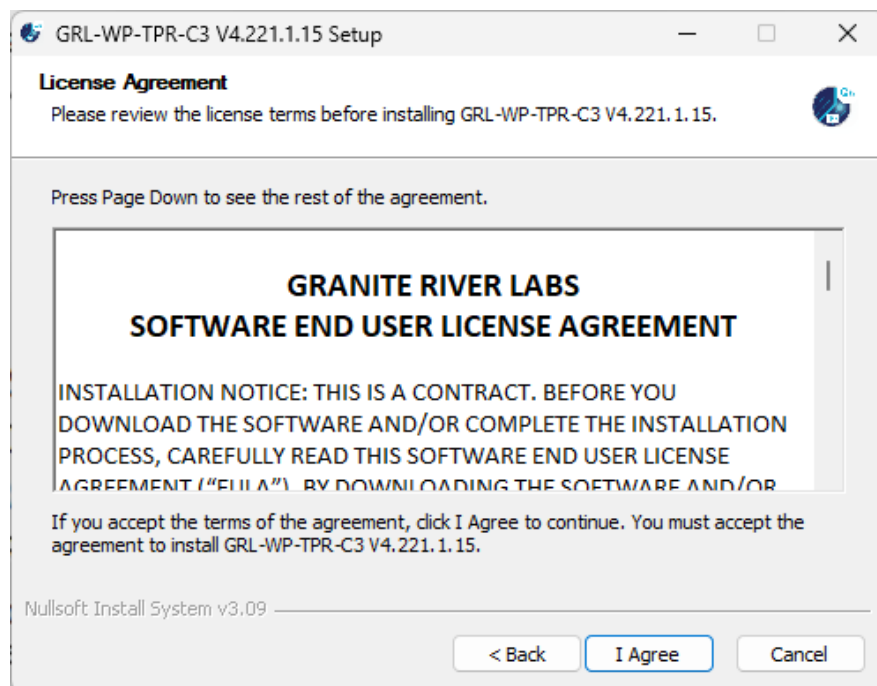


FIGURE 5.2: ACCEPT GRL-C3 APPLICATION LICENSE AGREEMENT

4. The software installation will then proceed.

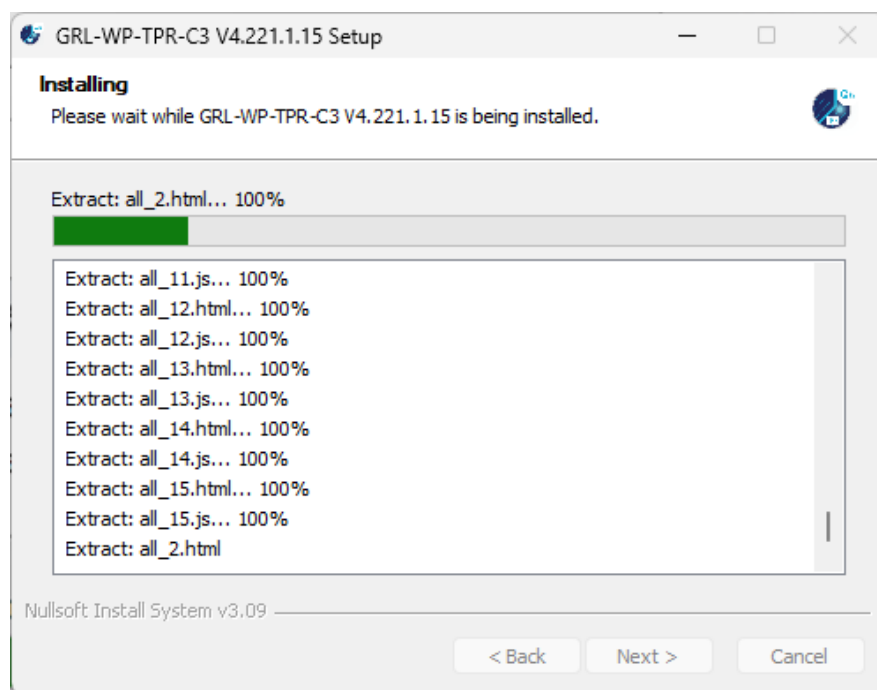


FIGURE 5.3: GRL-C3 APPLICATION INSTALLATION IN PROGRESS

5. Install the device driver when prompted. Click on the 'Next' button to proceed.

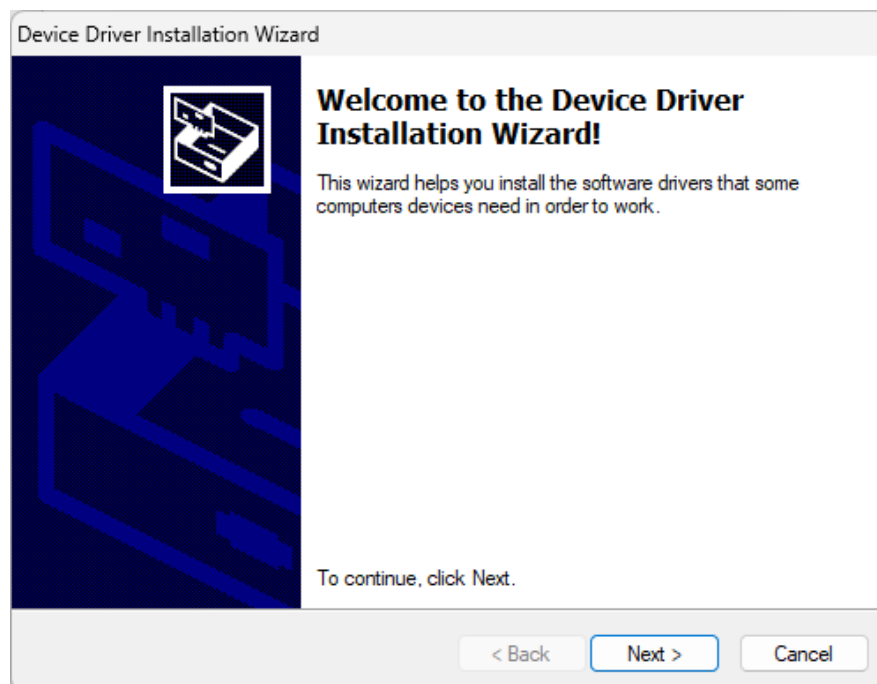


FIGURE 5.4: START GRL-C3 DEVICE DRIVER INSTALLATION

6. The device driver installation will then proceed and upon completion, click on the 'Finish' button.

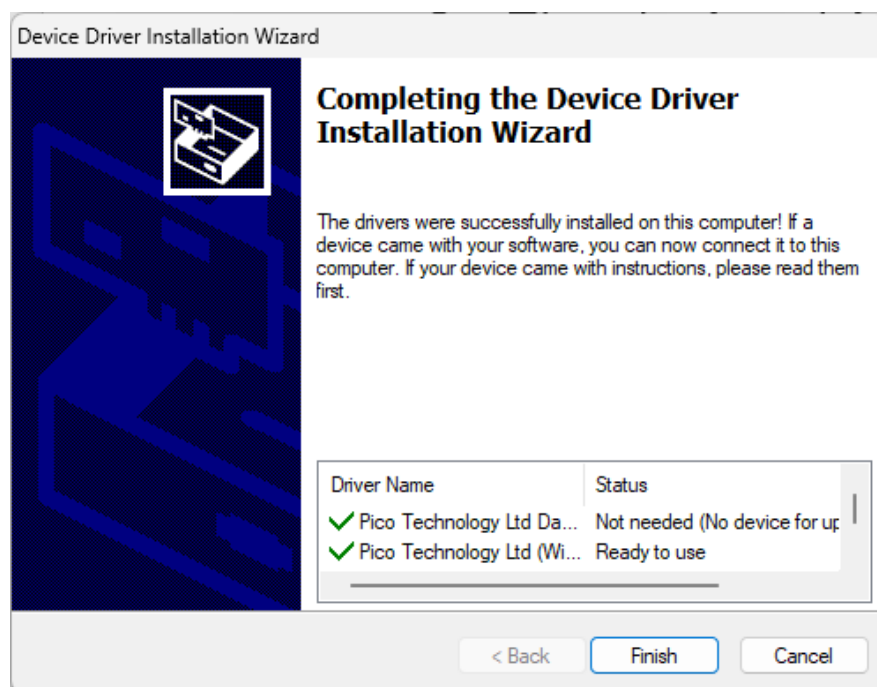


FIGURE 5.5: GRL-C3 DEVICE DRIVER INSTALLATION COMPLETED

7. Click on the 'Finish' button to complete the software installation.

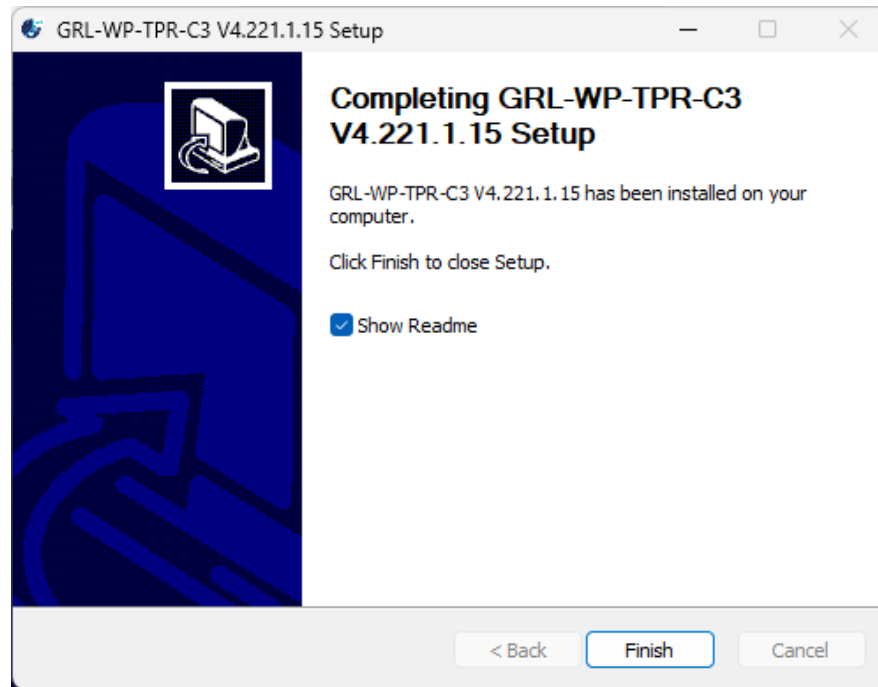


FIGURE 5.6: GRL-C3 APPLICATION INSTALLATION COMPLETED

8. The GRL-C3 application is now ready for use.

5.2 Start Up and Navigate GRL-C3 Application

1. Once installed, you can directly open the GRL-C3 application using the “**TPR-C3**” application desktop shortcut. This will initiate the App server to run backend operations before launching the GRL-C3 application.

Note: Do not close this window except when you need to exit from the GRL-C3 application.

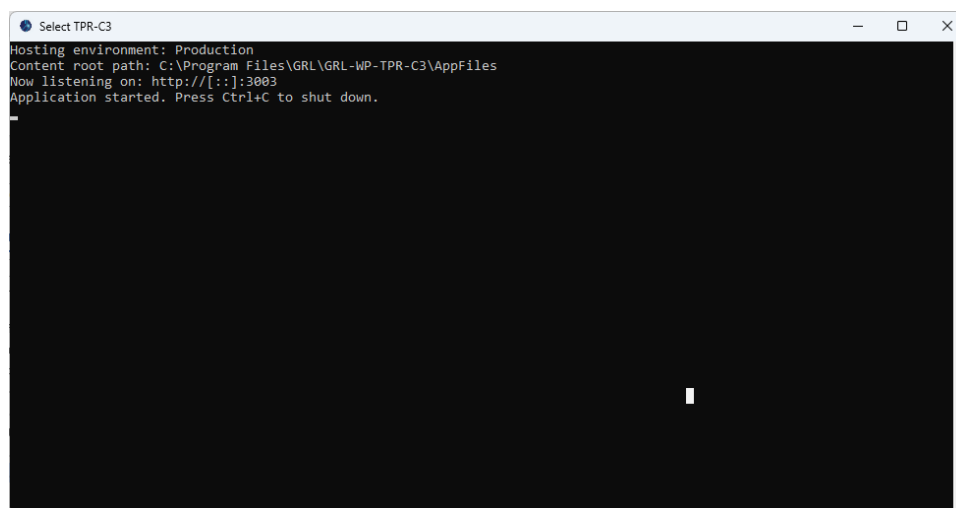


FIGURE 5.7: APP SERVER SCREEN RUNNING BACKEND OPERATIONS

2. The GRL-C3 application should launch after a few seconds on a browser window with the appropriate port number. If for some reason the browser window does

not appear after a few minutes, open a new browser tab and navigate to *http://IP address of host PC Windows software:3003/* (for example, *http://192.168.3.241:3003/*).

3. The GRL-C3 application when launched will display “Connection Setup” as the landing screen as follows:

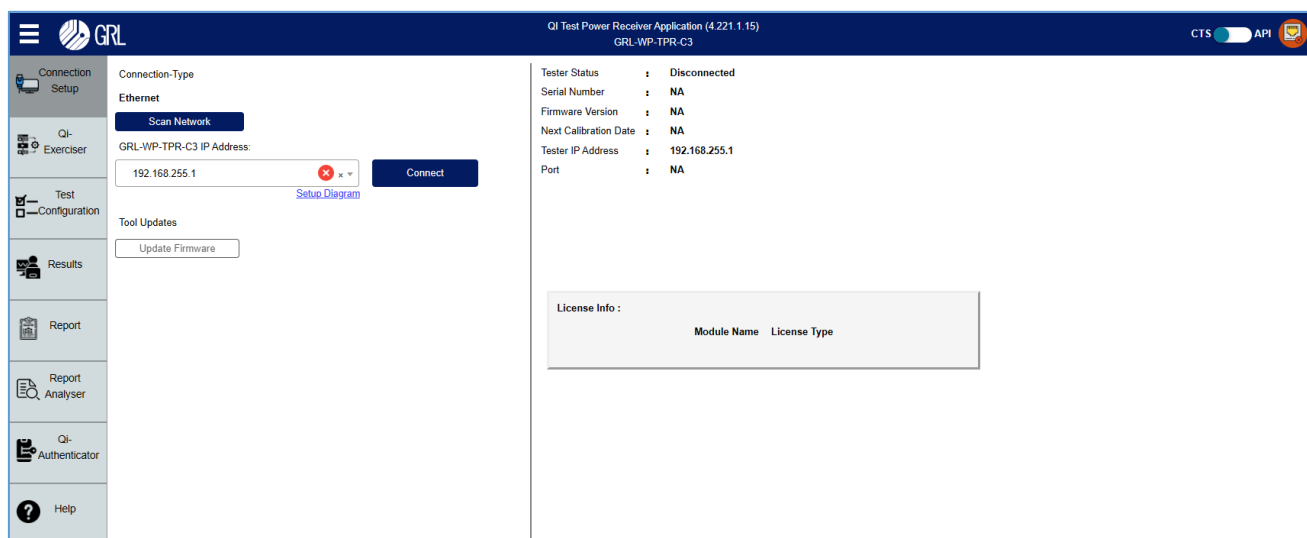


FIGURE 5.8: GRL-C3 APPLICATION LANDING SCREEN

This screen allows you to set up connection between the GRL-C3 application and the GRL-C3 Tester hardware as well as performing firmware/software updates. More details are provided in Section 7.

5.2.1 Using GRL-C3 Application in Chrome OS

Note: Make sure that the GRL-C3 tester hardware is connected to a control PC running Windows 10.

1. Install the GRL-C3 application on a Windows 10 control PC connected to the GRL-C3 tester hardware.
2. Once installed, open the GRL-C3 application using the **TPR-C3** desktop shortcut.
3. Open a new Chrome browser tab in Chrome OS and navigate to *http://IP address of host PC Windows software:3003/* (for example, *http://192.168.3.241:3003/*).

Note: Make sure that both the Windows 10 control PC and Google Chromebook are connected to the same Ethernet network (wired or wireless).

See Figure 5.9 below for an illustration of the above steps.

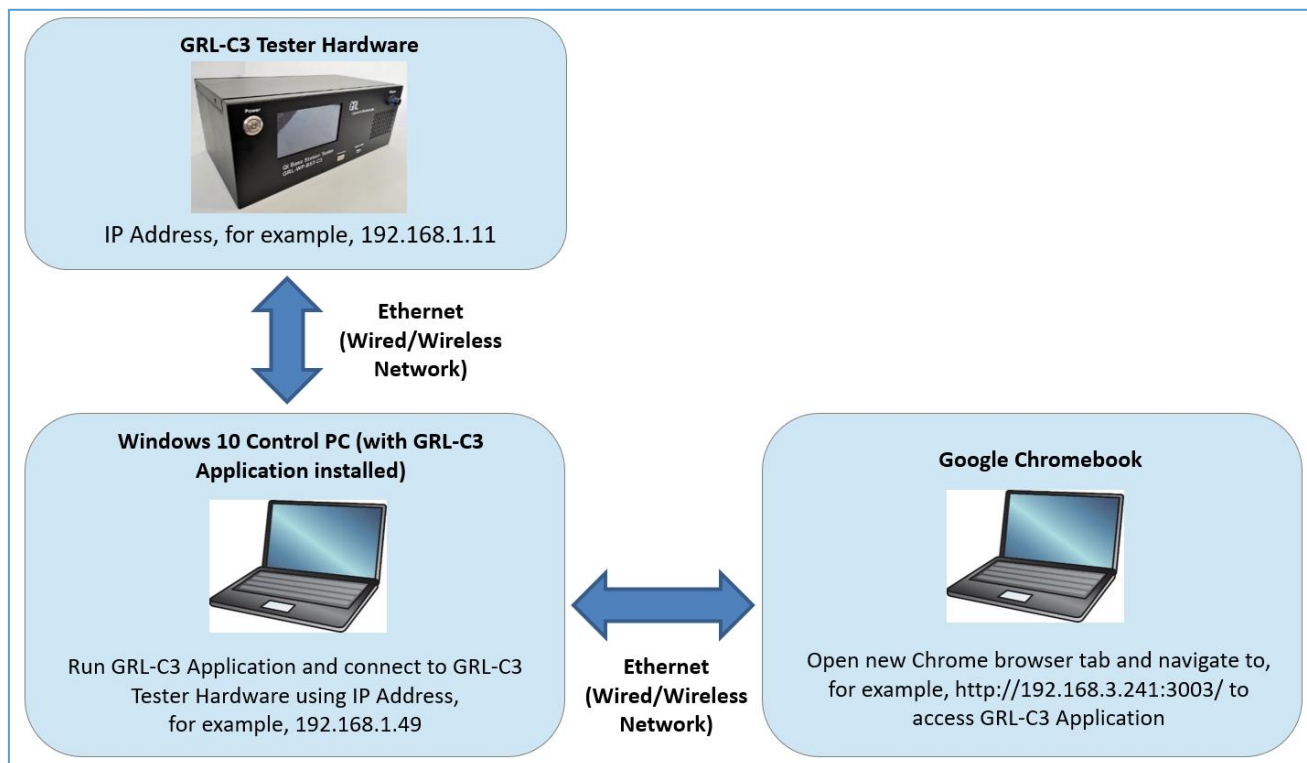


FIGURE 5.9: USING GRL-C3 APPLICATION IN CHROME OS

5.2.2 Using GRL-C3 Application in macOS

Note: Make sure that the GRL-C3 tester hardware is connected to a control PC running Windows 10.

1. Install the GRL-C3 Application on a Windows 10 control PC connected to the GRL-C3 tester hardware.
2. Once installed, open the GRL-C3 Application using the **TPR-C3** desktop shortcut.
3. Open a new Chrome browser tab in macOS and navigate to *http://IP address of host PC Windows software:3003/* (for example, <http://192.168.3.241:3003/>).

Note: Make sure that both the Windows 10 control PC and Apple MacBook are connected to the same Ethernet network (wired or wireless).

See Figure 5.10 below for an illustration of the above steps.

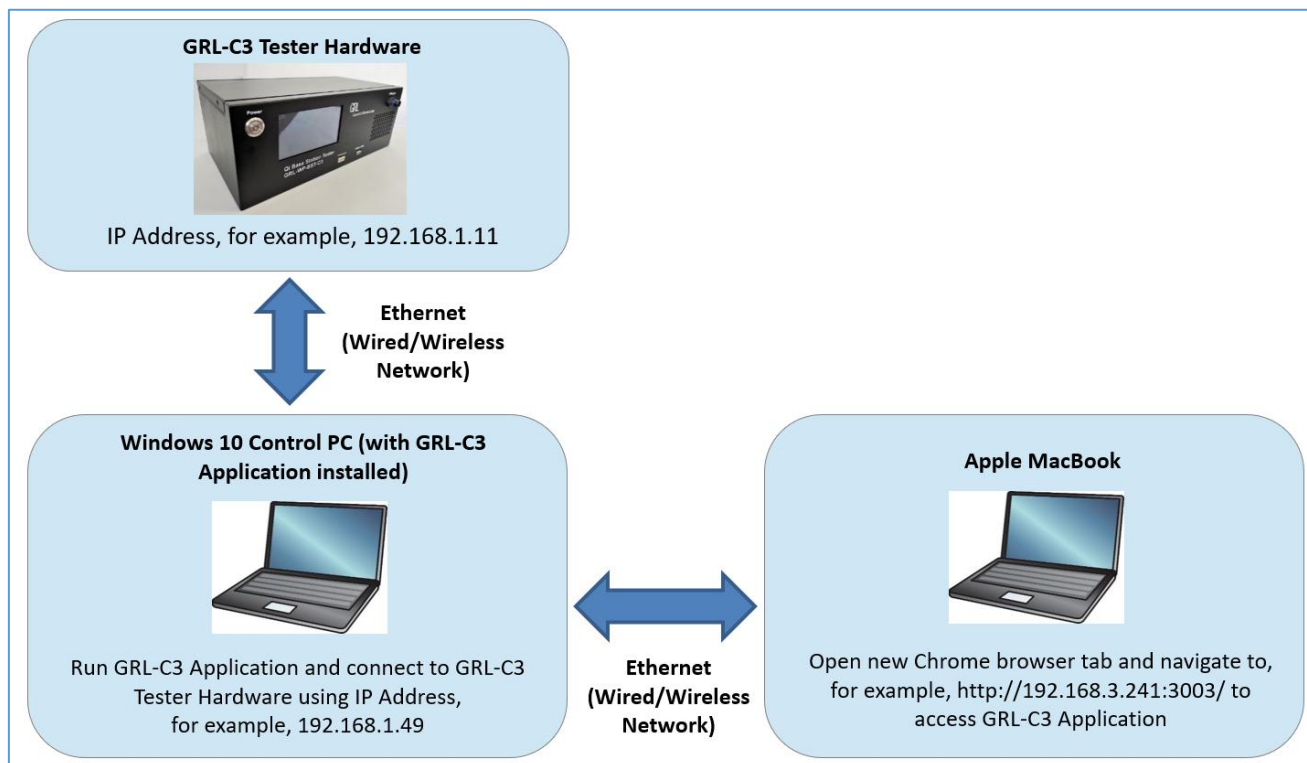


FIGURE 5.10: USING GRL-C3 APPLICATION IN MACOS

6 Connection and Setup of GRL-C3 Tester Hardware

Figure 6.1 below shows an example setup for testing a Qi wireless base station DUT.

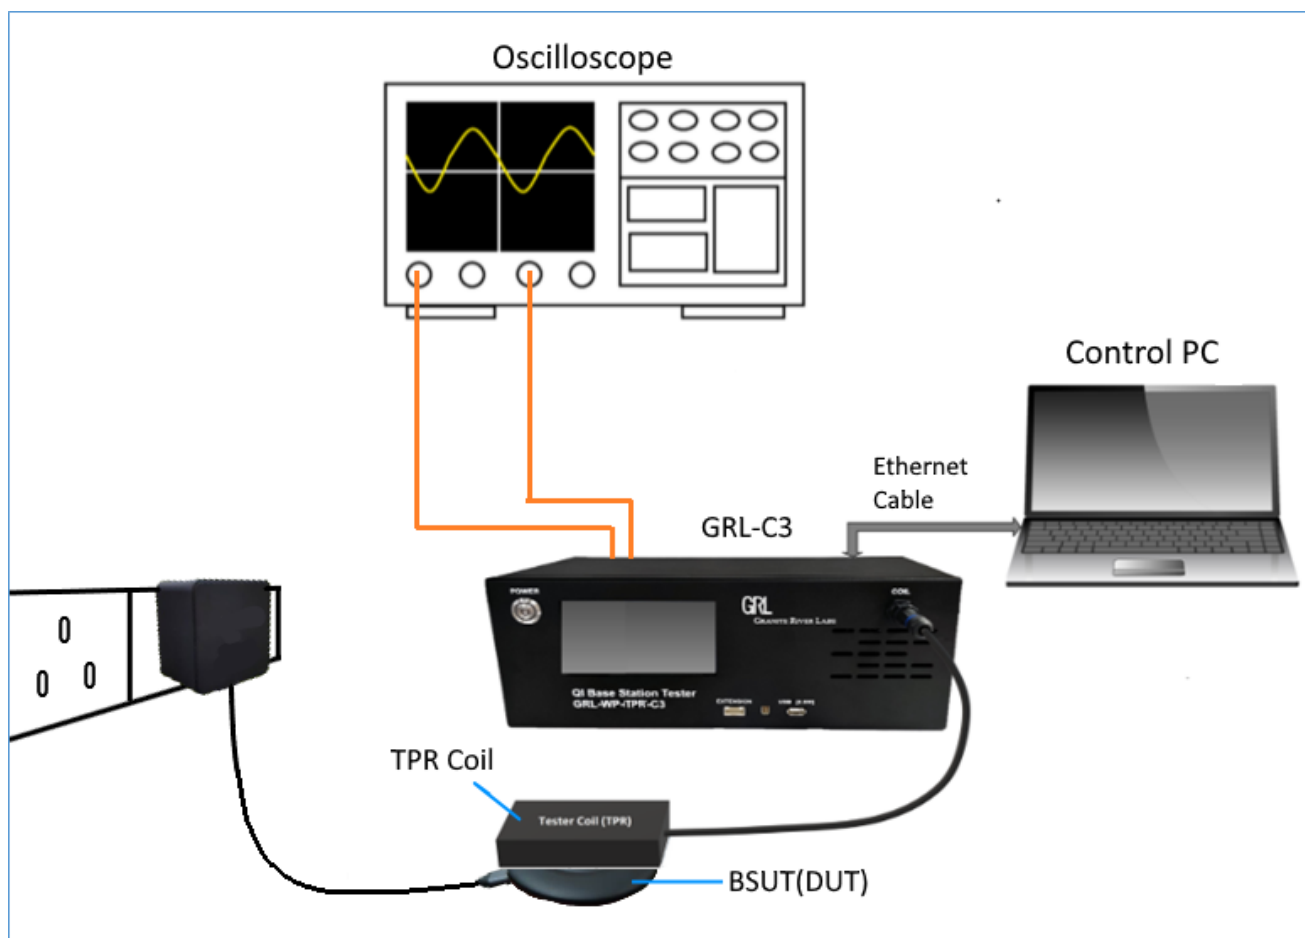


FIGURE 6.1: GRL-C3 HARDWARE SETUP FOR QI WIRELESS BASE STATION DUT

The GRL-C3 application installed on a Windows 10 (or higher) computer automates the testing process. Below is a procedure for connecting the hardware and verifying proper hardware connections.

1. Connect power supply to the GRL-C3 tester hardware.
2. Connect the GRL-C3 tester hardware using a physical Ethernet connection between the control computer and the tester.
3. Connect an external oscilloscope to the GRL-C3 tester hardware. This is useful if the user wants to run measurements on the oscilloscope. Otherwise, the oscilloscope can be omitted from the setup.
4. Connect the Base Station under test (BSUT) / DUT to a power outlet.
5. Connect the Test Power Receiver (TPR) coil assembly to the "TPR Coil" connector on the GRL-C3 tester hardware. Place the TPR coil assembly on the BSUT / DUT.

6.1 Connect Power Supply to GRL-C3 Tester Hardware

Connect the GRL-C3 Power interface using the Power Brick included with the tester hardware.

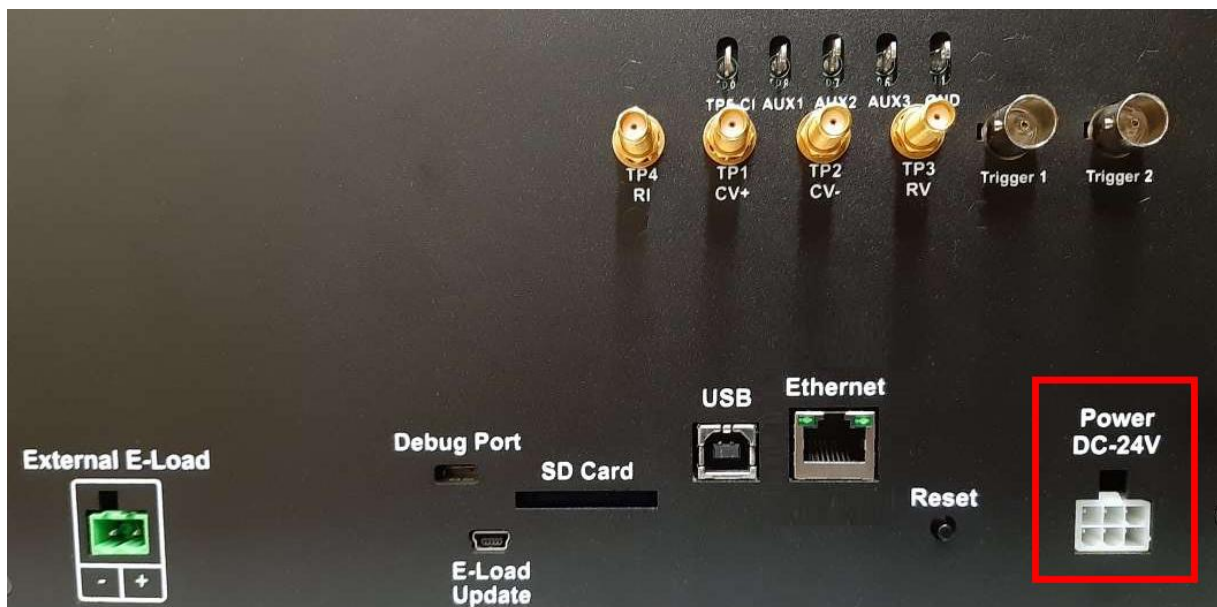


FIGURE 6.2: GRL-C3 POWER INTERFACE

6.2 Connect Ethernet Cable and Turn On GRL-C3 Tester Hardware

Connect the Ethernet (RJ-45) connector to one of the control computer's Ethernet ports. A USB to Ethernet adapter can be used if there are no native Ethernet ports on the control computer.

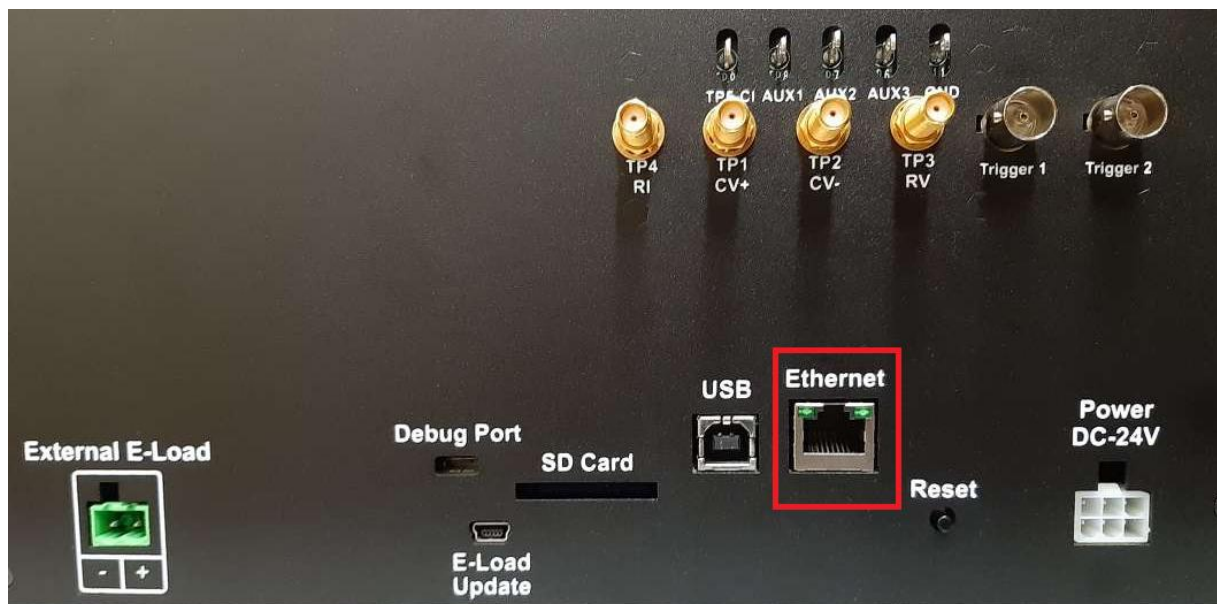


FIGURE 6.3: GRL-C3 ETHERNET CONNECTOR

Turn on the GRL-C3 tester hardware using the Power On/Off button on the front of the tester as shown in Figure 6.4.



FIGURE 6.4: GRL-C3 POWER BUTTON

6.2.1 Verify GRL-C3 Tester Hardware Ethernet Connection

The Ethernet port on the control computer needs to be configured correctly for the GRL-C3 tester hardware to recognize the control computer and vice versa.

To make sure the network connection is set up correctly, open the Network Connections panel from the Control Panel.

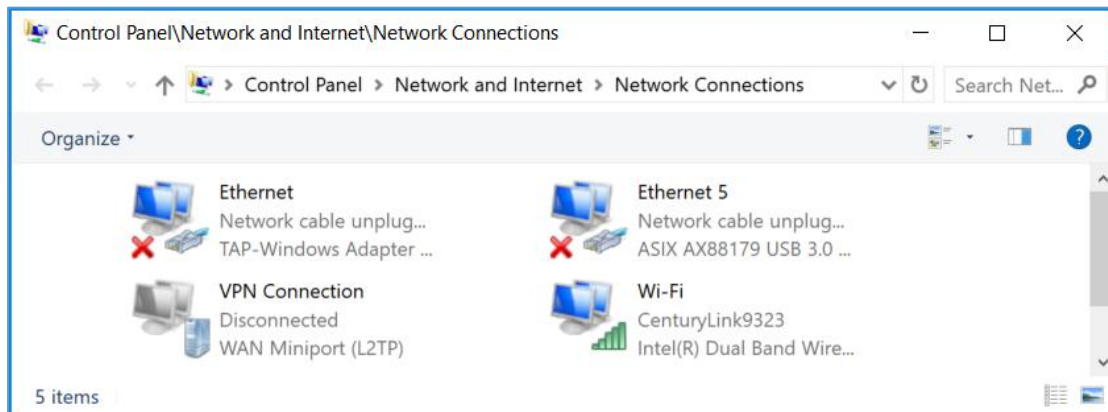


FIGURE 6.5: NETWORK CONNECTIONS BEFORE CONNECTING GRL-C3

Open the Ethernet panel for the Ethernet port that will connect to the GRL-C3 tester hardware, select “Internet Protocol Version 4 (TCP/IPv4)” and click on the “Properties” button below and to the right.

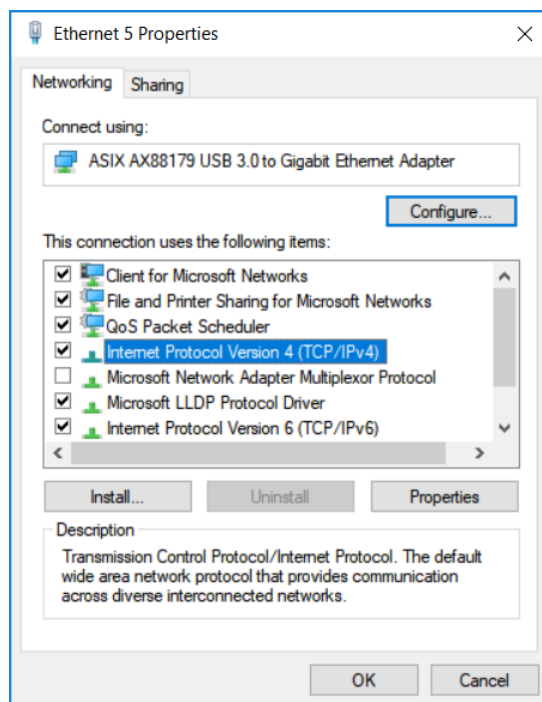


FIGURE 6.6: ETHERNET PROPERTIES

Set up the TCP/IPv4 properties as shown below.

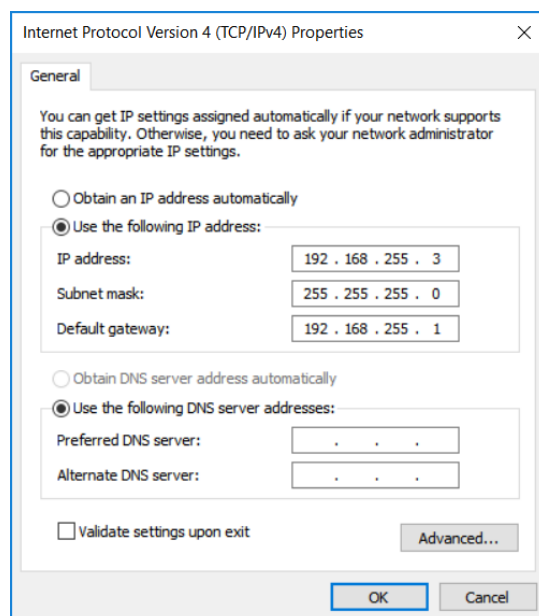


FIGURE 6.7: ETHERNET PROPERTIES WITH TCP/IPV4 SELECTED

Select a static IP address (“Use the following IP address:”) which should be 192.168.255.*n* where *n* is any number between 2 and 255. The subnet mask should be 255.255.255.0 and the default gateway should be 192.168.255.1. The rest of the items should remain unchanged.

Click on the “OK” button on the Internet Protocol Properties and close the Ethernet Properties. Make sure the GRL-C3 tester hardware is powered on and completely booted

up (front panel display shows firmware version number) and then connect the Ethernet cable from the GRL-C3 tester hardware to the computer's Ethernet port that was just set up. The network connections window should now look as pictured in Figure 6.8 below:

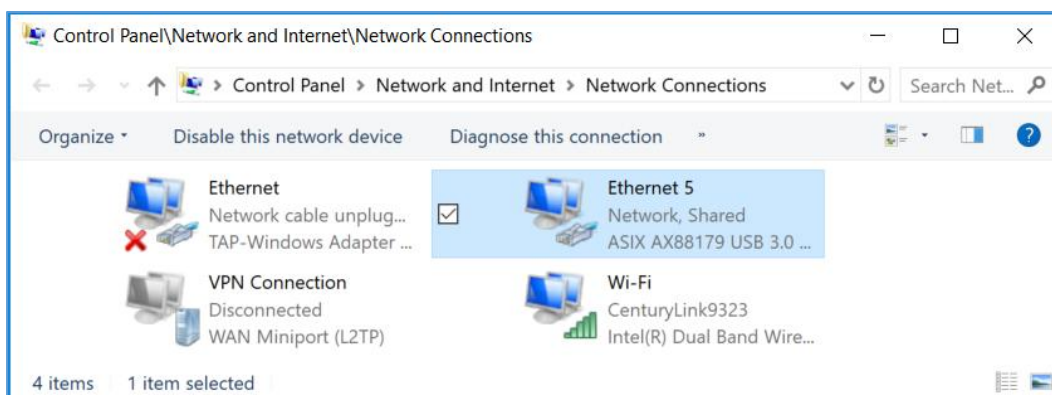


FIGURE 6.8: NETWORK CONNECTIONS AFTER SETUP AND CONNECTION OF GRL-C3

The GRL-C3 tester hardware is now set up and ready for use.

Before running any tests, it is recommended that you verify that the control computer and the GRL-C3 are communicating by going to the “Connection Setup” screen on the GRL-C3 application and clicking on the “Connect” button. The tester status should display “Connected”. Refer to Section 7 for more information.

6.3 Connect Oscilloscope to GRL-C3 Tester Hardware

An external oscilloscope can be connected to the GRL-C3 tester hardware to perform measurements. The GRL-C3 currently supports oscilloscope measurements with the Tektronix DPO7000 and PicoScope 6403D oscilloscopes.

Connect the oscilloscope channels to the “TP1” & “TP2” and “TP3” & “TP4” connector pairs and trigger port to the “Trigger 2” connector on the back of the GRL-C3 tester hardware.

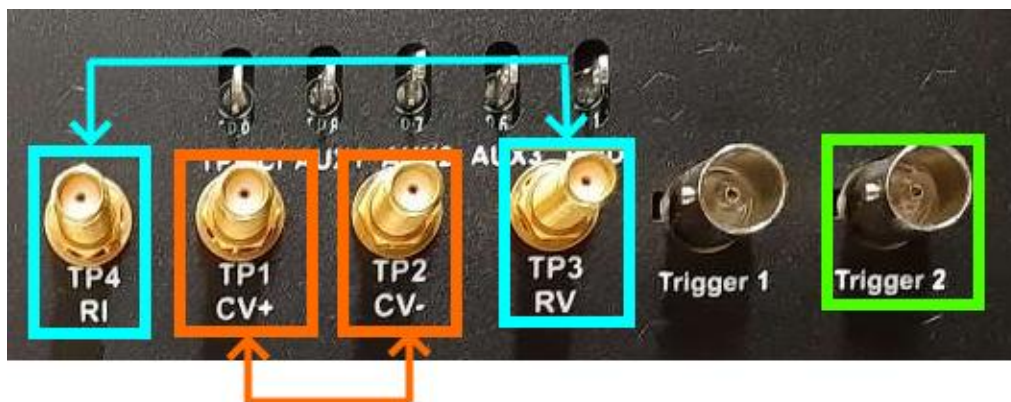


FIGURE 6.9: OSCILLOSCOPE TO GRL-C3 CONNECTIONS

The user can use the default oscilloscope configuration file, “TekScope Settings” which is available with the GRL-C3 application to load into the TekScope to perform measurements. This config file is located in C:\GRL\GRL-WP-TPR-C3\TekScopeSettings on the control computer.

6.4 Connect TPR Coil to GRL-C3 Tester Hardware

Connect the TPR coil assembly to the “TPR Coil” connector as shown in below example:



FIGURE 6.10: TPR COIL TO GRL-C3 CONNECTION

Note: Make sure to place the TPR coil assembly on the BSUT / DUT connected to a power outlet to perform testing.

7 Connection and Setup of GRL-C3 Application

Note: The following procedure assumes that the GRL-C3 tester hardware has been properly set up as described above.

To connect the GRL-C3 application with the GRL-C3 tester hardware, do the following:

1. On the GRL-C3 application landing page (“Connection Setup” screen), enter the IP address as displayed on the GRL-C3 tester hardware screen and click on the **Connect** button. You can also click on the **Scan Network** button to detect all available GRL-C3 tester hardware connected to the same network.

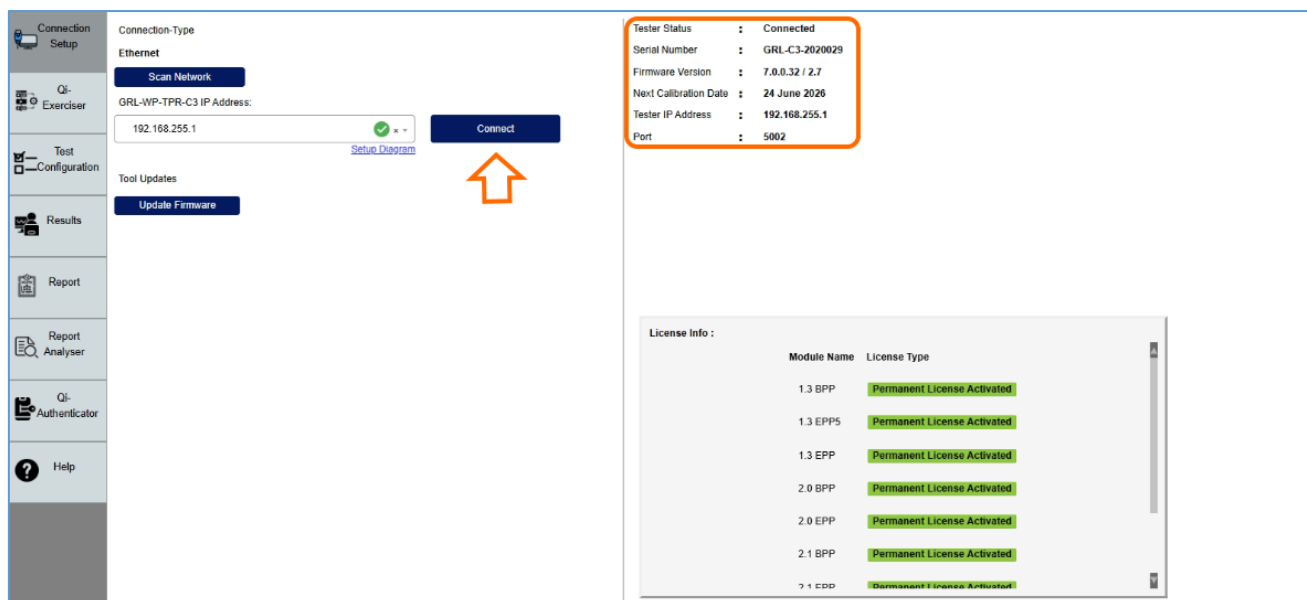
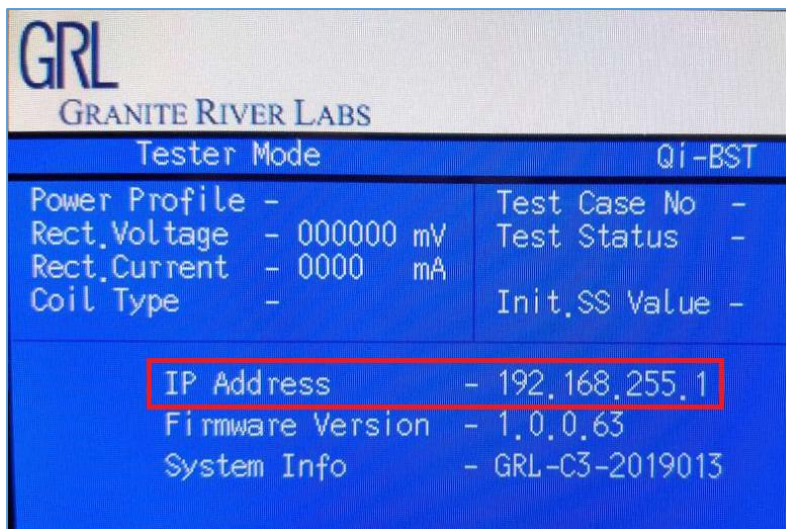


FIGURE 7.1: CONNECTION CONFIGURATION SCREEN AFTER SUCCESSFUL CONNECTION

2. The GRL-C3 tester hardware and application are now connected as indicated by the tester information display (“Tester Status”, “Serial Number”, “Firmware Version”, etc.).

3. Optionally you can also select “[Setup Diagram](#)” below the IP address field to display the test setup connection diagram. This shows how to attach the TPR coil assembly to the GRL-C3 tester hardware before placing the coil on the DUT and also shows how to connect the tester hardware to the control computer via Ethernet.

Along with each GRL-C3 application revision, a new version of FPGA firmware and E-Load code is provided. Use the following procedure to update the GRL-C3 tester hardware's FPGA and E-Load firmware.

- Click on the **Update Firmware** button to update the GRL-C3 tester hardware's FPGA and E-Load firmware. Clicking this button causes a set of instructions to appear to guide you through the entire updating process. Follow the instructions to perform the updates accordingly.

 


FIGURE 7.2: UPDATE GRL-C3 FIRMWARE BUTTON

7.1 Update GRL-C3 Tester Hardware's Firmware

Follow the steps below to perform firmware update for the GRL-C3 tester hardware:

1. Click on the **Update Firmware** button and the following pop-up message will appear (Figure 7.3 below). Using a standard USB Type-B cable, connect the USB Type-B port (for firmware update as indicated in the image) at the back of the GRL-C3 tester hardware to the control PC (where the GRL-C3 application is running). When connected, click “Ok” to proceed.

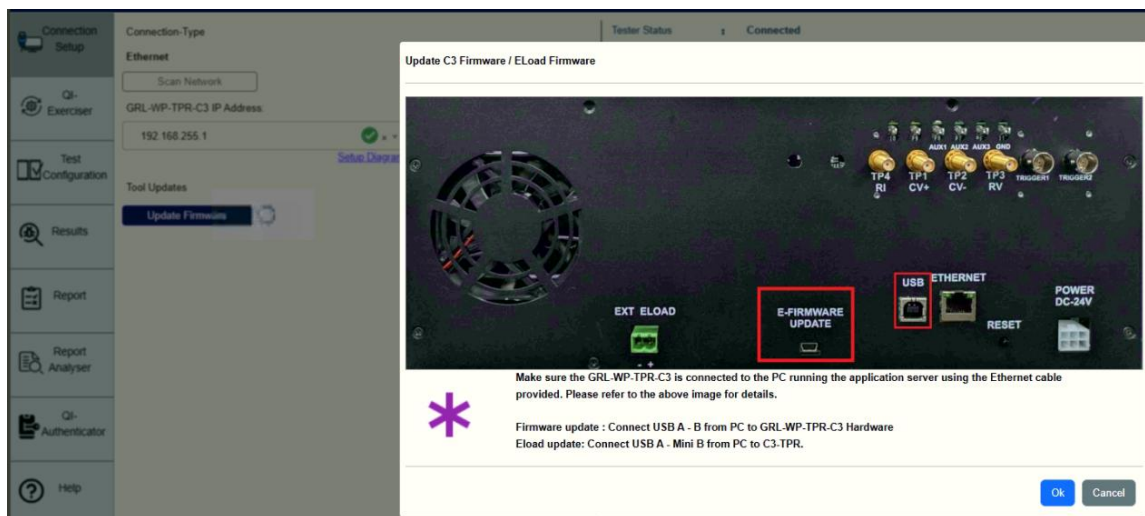


FIGURE 7.3: UPDATE GRL-C3 FIRMWARE- #1

2. The firmware update process will start and may take a few minutes to complete (Figure 7.4 below).

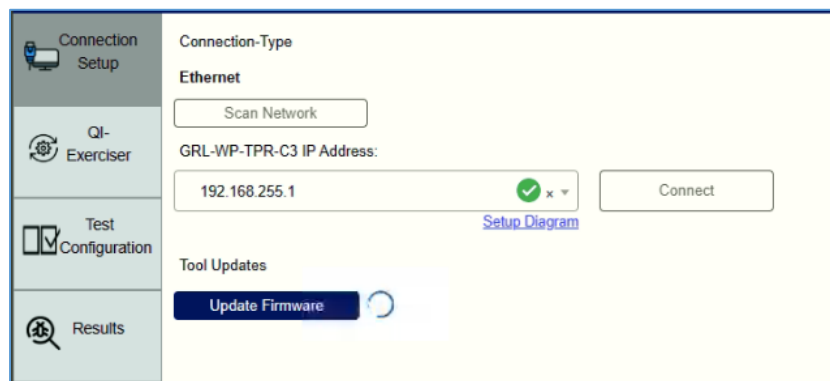


FIGURE 7.4: UPDATE GRL-C3 FIRMWARE– #2

3. A pop-up message will appear when the firmware update process has completed successfully (Figure 7.5 below). Click “Ok” to proceed with E-Load firmware update for the GRL-C3 tester hardware.

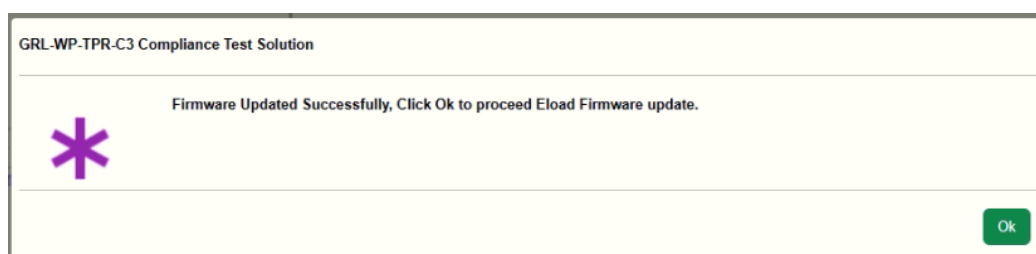


FIGURE 7.5: UPDATE GRL-C3 FIRMWARE– #3

4. Once the E-Load firmware update process has completed successfully, click “Ok” for the GRL-C3 tester hardware to power cycle and reboot (Figure 7.6 below).

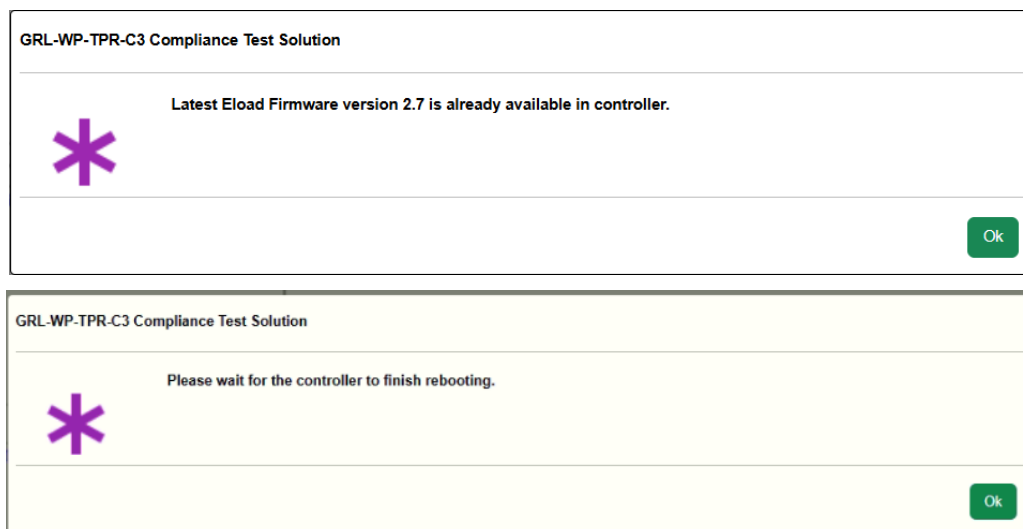


FIGURE 7.6: UPDATE GRL-C3 E-LOAD FIRMWARE

5. After the GRL-C3 tester hardware has rebooted, click on the Connect button to re-establish connection with the application (Figure 7.7 below).

Connection-Type

Ethernet

[Scan Network](#)

GRL-WP-TPR-C3 IP Address:

192.168.255.1

✕

[Setup Diagram](#)

[Connect](#)

Tool Updates

[Update Firmware](#)

Tester Status : Disconnected

Serial Number : NA

Firmware Version : NA

Next Calibration Date : NA

Tester IP Address : 192.168.255.1

Port : NA

License Info :

Module Name	License Type
-------------	--------------

FIGURE 7.7: UPDATE GRL-C3 FIRMWARE- #4

- The GRL-C3 tester hardware and application should now be connected and ready for use with updated firmware (Figure 7.8 below).

Connection-Type

Ethernet

[Scan Network](#)

GRL-WP-TPR-C3 IP Address:

192.168.255.1

✓

[Setup Diagram](#)

[Connect](#)

Tool Updates

[Update Firmware](#)

Tester Status : Connected

Serial Number : GRL-C3-2020024

Firmware Version : 7.0.1.3 / 2.7

Next Calibration Date : Sunday, December 21, 2025

Tester IP Address : 192.168.255.1

Port : 5002

License Info :

Module Name	License Type
1.3 BPP	Permanent License Activated
1.3 EPP5	Permanent License Activated
1.3 EPP	Permanent License Activated
2.0 BPP	Permanent License Activated
2.0 EPP	Permanent License Activated
2.1 BPP	Permanent License Activated
2.1 EPP	Permanent License Activated

FIGURE 7.8: UPDATE GRL-C3 FIRMWARE- #5

In the event that the firmware fails to update automatically, a pop-up message will appear as shown in Figure 7.9 below. Follow the procedure as given in the pop-up message to update the firmware manually.

GRL-WP-TPR-C3 Compliance Test Solution

Firmware update failed! Please update the firmware manually.



Manual firmware update procedure:

1. Connect firmware update USB port of GRL-WP-TPR-C3 to the test PC using standard USB Type-B cable where GRL-WP-TPR-C3 Compliance Test Solution Application is running
2. Press the reset button on the back-side of the GRL-WP-TPR-C3 controller
3. Wait for the test PC to detect a new removable USB drive
4. Copy all the files from "C:\GRL\GRL-WP-TPR-C3\Firmware_Files" folder into newly detected removable USB drive
5. Power cycle the GRL-WP-TPR-C3 controller using the push button on the left top corner in the front panel of GRL-WP-TPR-C3 controller

Note1. If Step-4 fails, format the GRL-WP-TPR-C3 SD card's removable drive that appears in the Test PC after connecting FW update USB cable

Note2. If the above step(Note1) Fails, remove the SD card, connect it to the Test PC, and format it

Ok

FIGURE 7.9: MANUAL GRL-C3 FIRMWARE UPDATE PROCEDURE

1. Once the user presses on the **Reset button** at the back of the GRL-C3 tester (as indicated in Figure 7.10 below), the control PC should detect a new removable USB drive.

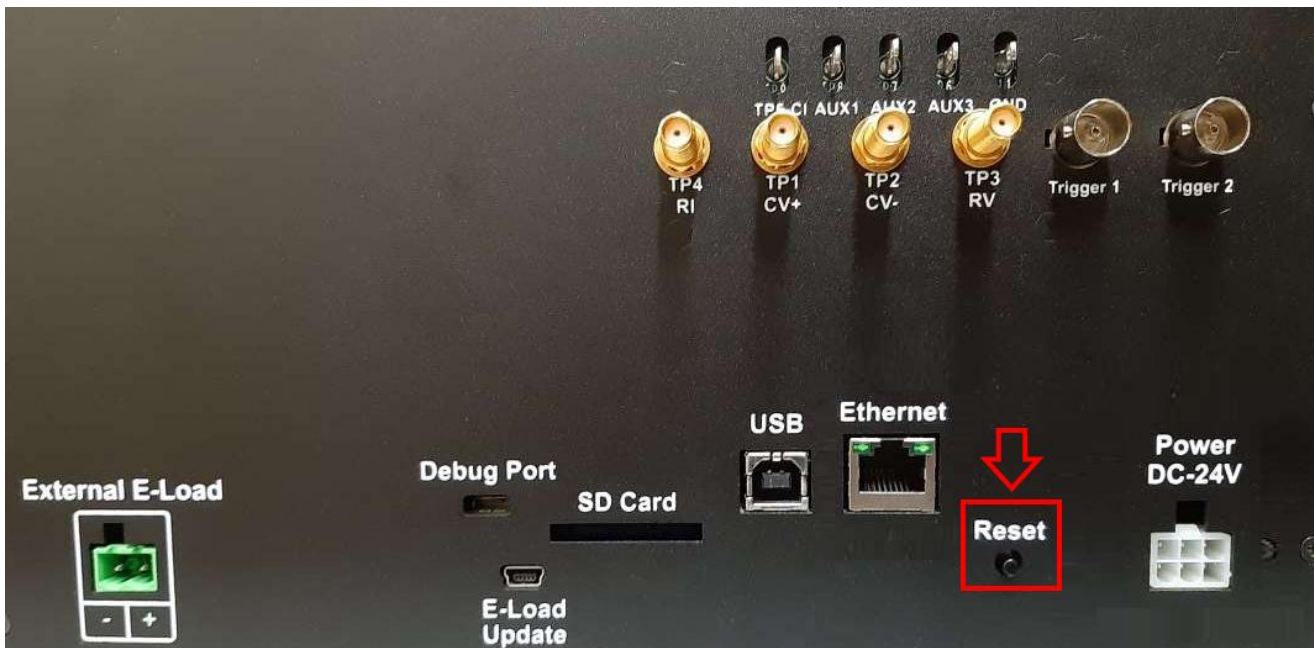


FIGURE 7.10: GRL-C3 RESET BUTTON

2. Copy the files from “**C:\GRL\GRL-WP-TPR-C3\Firmware_Files**” into the newly detected removable USB drive. Refer to Figure 7.11 below.


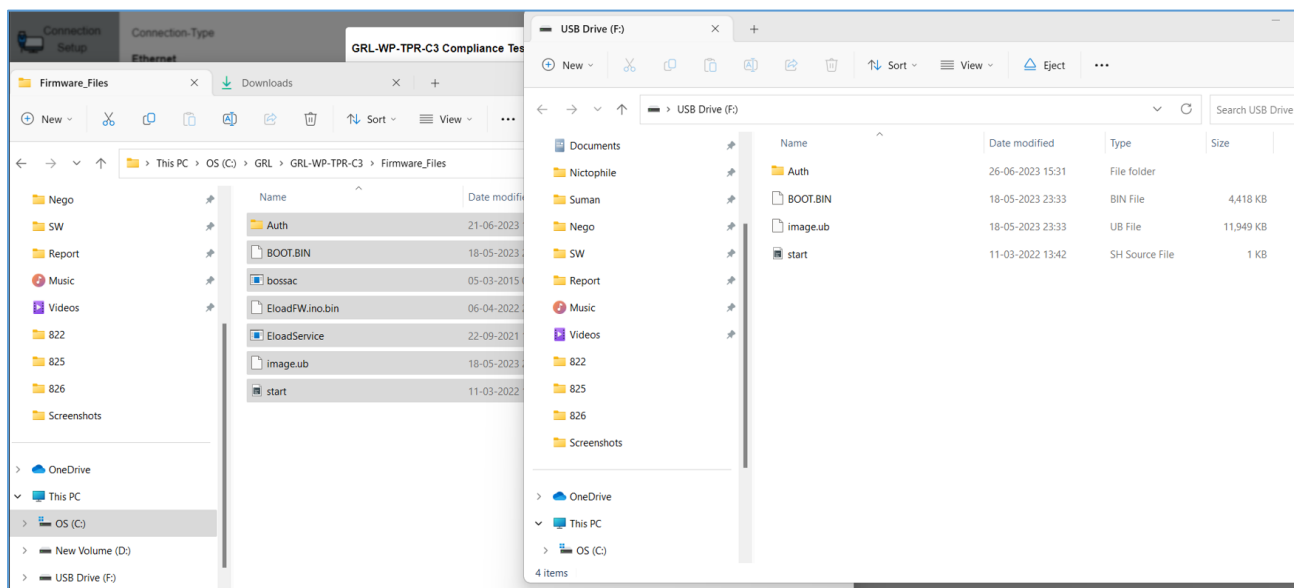


FIGURE 7.11: COPY GRL-C3 FIRMWARE FILES INTO REMOVABLE USB DRIVE

3. When the following pop-message appears, click **Ok** to proceed to the next step.

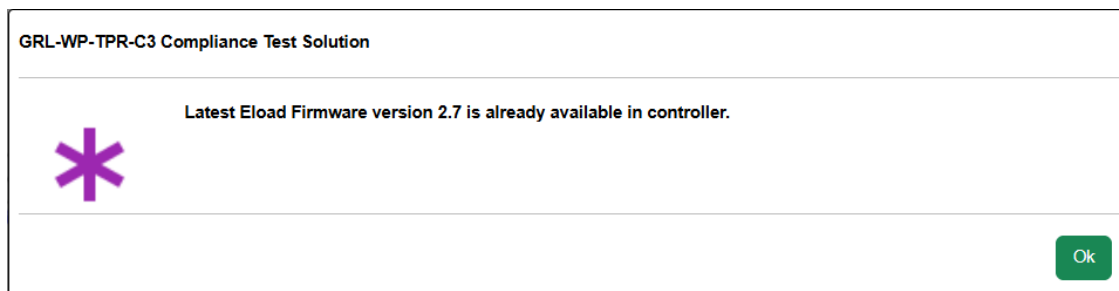

4. Power cycle the GRL-C3 tester using the Power button on the front of the tester as shown in Figure 6.4.

Note 1: If Step-4 fails, format the GRL-C3 SD card's removable drive that appears in the control PC after connecting the firmware update USB cable.

Note 2: If the above step (Note 1) fails, remove the SD card, connect it to the control PC and format it.

8 Compliance Testing with GRL-C3

GRL-C3 supports testing of Qi Base Power Profile (BPP) and Extended Power Profile (EPP) of Qi wireless base stations, for compliance with Qi specification versions 1.2.4 and 1.3 respectively. GRL-C3 also supports compliance testing of proprietary varieties of Qi wireless charging that follows Qi standards. GRL-C3 uses the GRL-C3 application for automated or manual test execution.

GRL-C3 also supports oscilloscope measurements with the Tektronix DPO7000 and PicoScope 6403D oscilloscopes.

Apart from automated testing, the user can also choose to execute tests using custom mode configurations or API's on the GRL-C3.

The various screens presented by the GRL-C3 application allow the user to select, configure, run and generate reports from the tests for a variety of Qi wireless base stations (Devices Under Tests or DUT's). There are also more specific controls that allow the user to perform offline analysis and debug specific DUT features and capabilities using saved waveforms.

8.1 App Mode

The GRL-C3 application allows the user to choose between **CTS** mode and **API** mode for test execution. The CTS mode is applied by default while the user can optionally select the API mode to run tests on the App using a separate GRL Platform Solutions API Tool. Use the **Set App Mode** slider at the top right of screen to set the required mode.



FIGURE 8.1: APP MODE SELECTION

If the **API** mode is selected:

The user will be directed to the *Results* screen and all other screens on the GRL-C3 application will not be accessible.

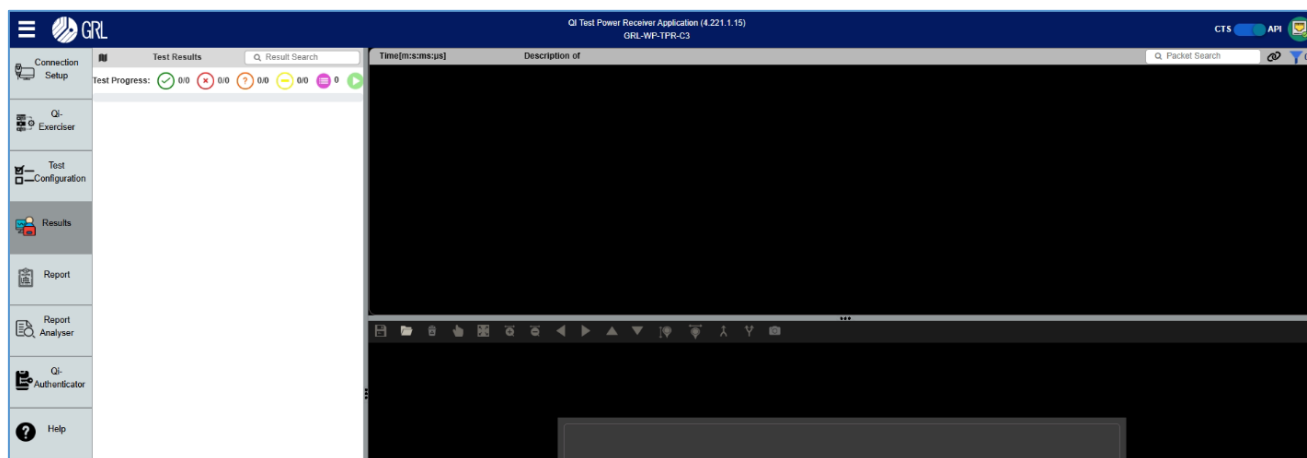


FIGURE 8.2: RESULTS SCREEN IN API MODE

The user can use the GRL Platform Solutions API Tool to automate testing for the Qi DUT when in API mode. The API tool will be available in C:\GRL\GRL-WP-TPR-C3\APILibrary\GRLC3ApiLibTestingTool.exe once the GRL-C3 application is installed. The

user can directly open the **GRLC3ApiLibTestingTool.exe** tool to set up the test environment, perform measurements and acquire test results.

8.1.1 Using GRLC3ApiLibTestingTool in API Mode

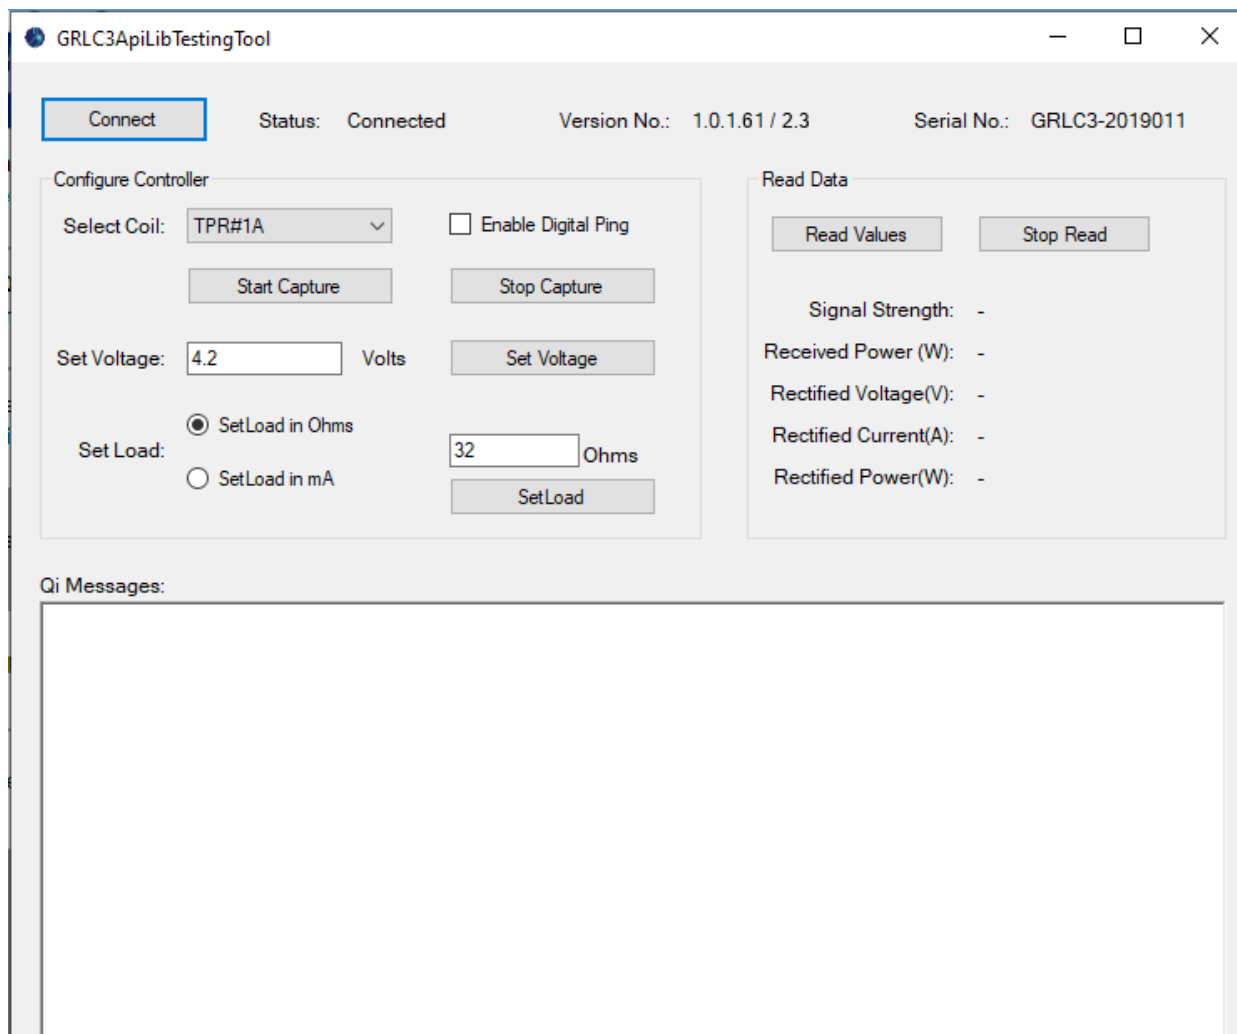


FIGURE 8.3: GRLC3APILIBTESTINGTOOL WINDOW

Click on the **Connect** button to connect the GRLC3ApiLibTestingTool to the GRL-C3 tester hardware. Once connection is established, the tester information (“Status”, “Version No.” and “Serial No.”) will be displayed.

 


FIGURE 8.4: CONNECT GRLC3APILIBTESTINGTOOL WITH GRL-C3

8.1.1.1 Configure Controller

The Configure Controller panel allows the user to set up and run tests using the GRL-C3 tester hardware.

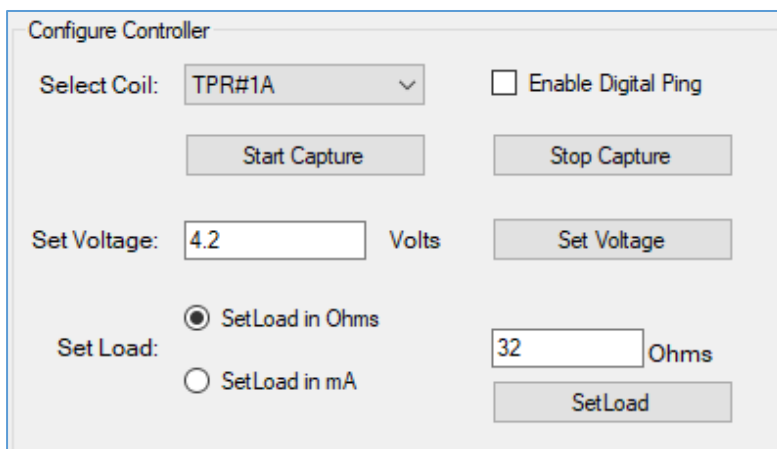


FIGURE 8.5: GRLC3APILIBTESTINGTOOL– CONFIGURE CONTROLLER

- **Select Coil:** The Select Coil drop down selects the coil assembly type of the reference TPR to be used.
- **Set Voltage:** The Set Voltage field displays the default operating voltage for the TPR coil assembly selected in the Select Coil field. The user can also enter a custom coil voltage value if required. Click on the **Set Voltage** button to apply the configured voltage.
- **Set Load:** Depending on which load condition (“SetLoad in Ohms” or “SetLoad in mA” checkbox) is selected, the Set Load field displays the default load resistance value or default variable load current value respectively for the TPR coil assembly selected in the Select Coil field. The user can also enter a custom load value if required. Click on the **Set Load** button to apply the configured load.
- **Enable Digital Ping:** Select the **Enable Digital Ping** checkbox to enable the DUT to send digital pings to provide information about the optimum positioning of the TPR coil.
- **Start Capture:** Click on the **Start Capture** button to start test execution using the configured voltage and load values. The test run along with signal trace acquisition will happen in the *Results* screen as shown in the example below:

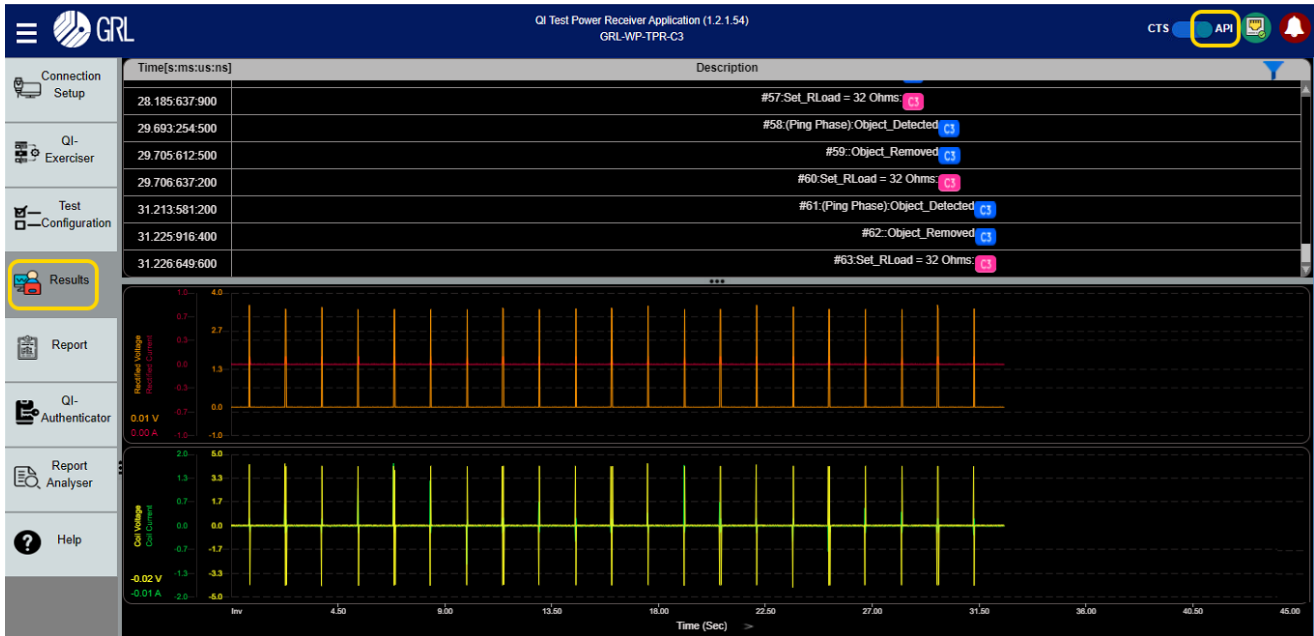


FIGURE 8.6: GRLC3APILibTESTINGTOOL– TEST EXECUTION EXAMPLE

To terminate the test run, click on the **Stop Capture** button.

Details of the test run will be logged in the **Qi messages** panel as shown in the example below:

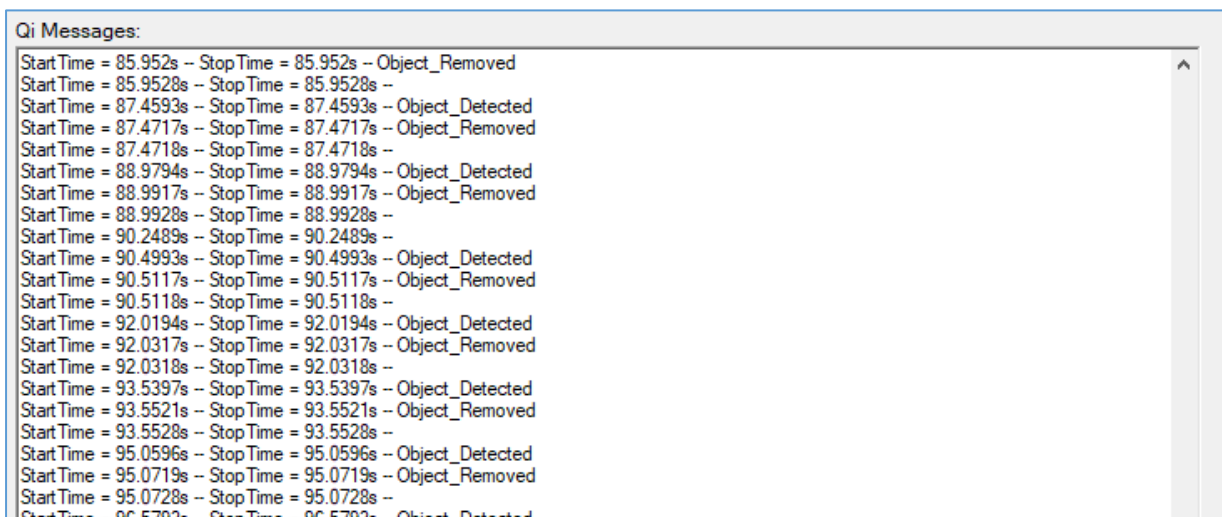


FIGURE 8.7: GRLC3APILibTESTINGTOOL– TEST EXECUTION Qi MESSAGES EXAMPLE

8.1.1.2 Read Data

The Read Data panel allows the user to acquire measurement readings in runtime (while tests are running) by clicking on the **Read Values** button. To stop the data acquisition, click on the **Stop Read** button.

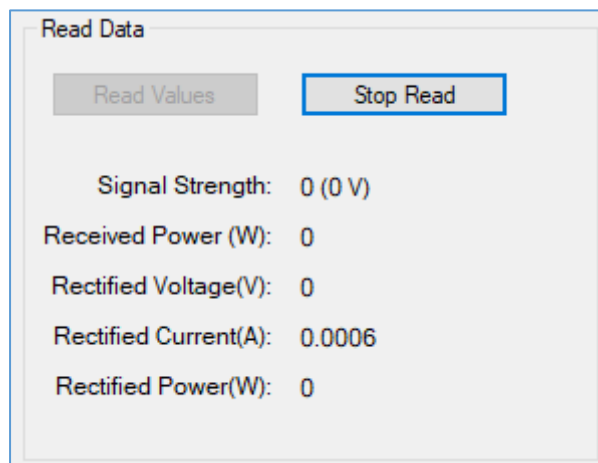


FIGURE 8.8: GRLC3ApiLibTestingTool– READ DATA

8.1.2 Develop Custom Test Cases Via GRL-WP-QI-C3 API Programming

The user can choose to create custom test cases to meet more customized test requirements using a defined list of GRL-WP-QI-C3 API commands. Custom test cases can be written in either C# or Python platform as an independent standalone application. These test cases call the API's defined in GrlC3ApiLib.dll along with all the support functions and helper classes from C:\GRL\GRL-WP-TPR-C3\APILibrary\. For details, refer to the **GRL-WP-QI-C3 API Documentation** by selecting the **API Guide** shortcut in C:\GRL\GRL-WP-TPR-C3\APILibrary\.

8.2 Qi-Exerciser

The GRL-C3 application *Qi-Exerciser* screen allows the user to configure and test a specific sequence of Packets.

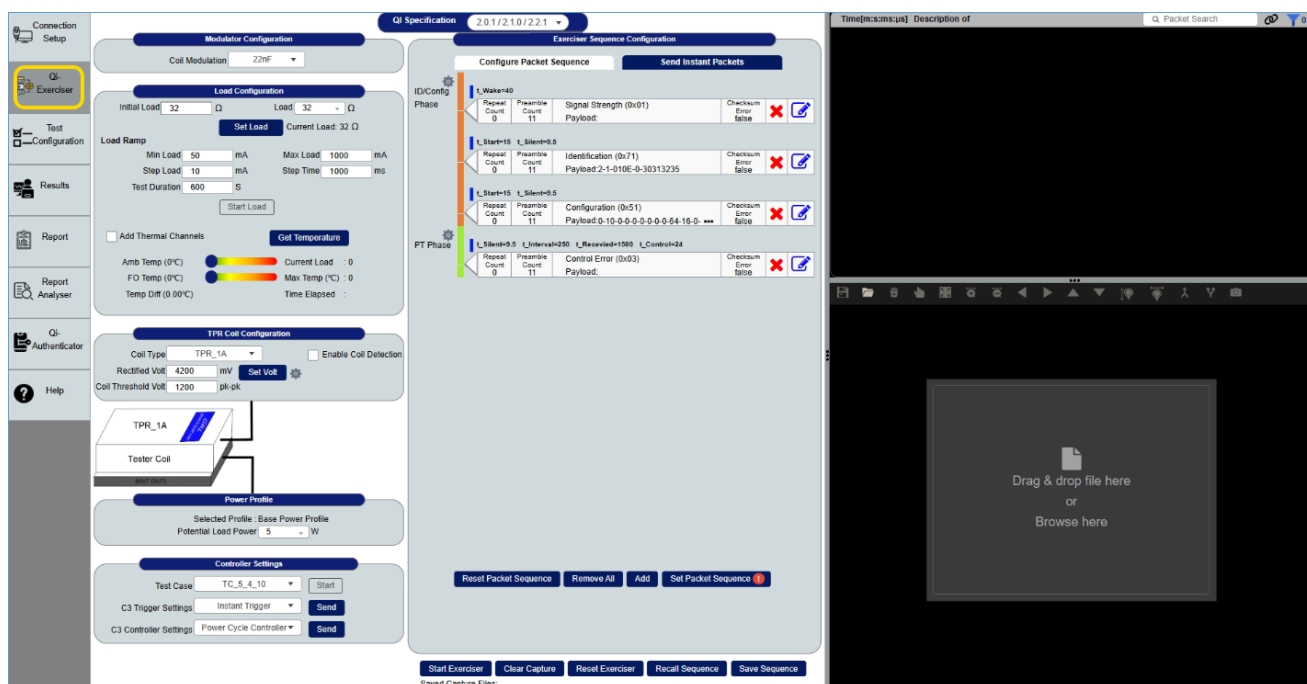


FIGURE 8.9: QI-EXERCISER SCREEN

8.2.1 Set Qi Specification

The Qi-Exerciser allows the user to choose any of the supported Qi specification versions for configuration and test execution. Use the **Qi Specification** drop-down menu at the top of screen to set and apply the required spec version.

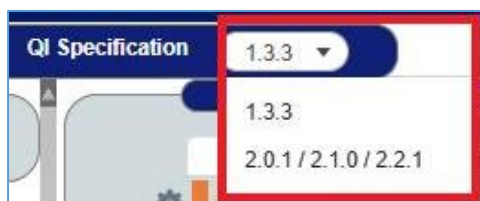


FIGURE 8.10: QI SPECIFICATION SELECTION

The following subsections describe how to set up and test the Packet sequence.

8.2.2 Configure GRL-C3 Tester Hardware

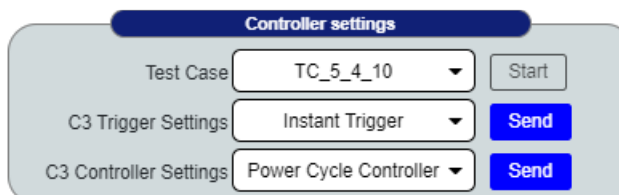


FIGURE 8.11: CONFIGURE GRL-C3

- **Test Case:** Select and apply the required MOI test case to be run on the GRL-C3 tester hardware.
To execute the selected test case, the user FIRST needs to click on the “Start Exerciser” button (below the Qi Exerciser screen; see Section 8.2.8) and then followed by the “Start” button. Details of the test run will be displayed in the Results screen.
- **C3 Trigger Settings:** Select the trigger type for the GRL-C3 tester hardware by clicking on the **Send** button.
- **C3 Controller Settings:** Select to power cycle or perform a reset on the GRL-C3 tester hardware by clicking on the **Send** button.

8.2.3 Set Up DUT Power Transmitter Capability

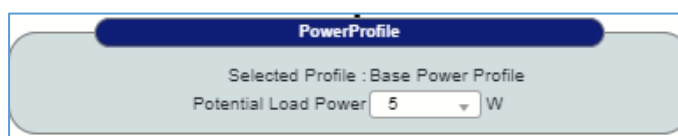


FIGURE 8.12: SELECT DUT POWER PROFILE

The **DUT Power Profile** panel displays the Baseline Power Profile (BPP) (up to 5W) or the Extended Power Profile (EPP) (up to 15W) as supported by the Base Station under test (BSUT) / DUT. Note: The displayed power profile will follow the TPR coil assembly type selected in the Coil Type field (see Section 8.2.4 below).

- **Potential Load Power:** Displays the default maximum power supported by the DUT for the TPR coil assembly selected in the Coil Type field (see Section 8.2.4 below). The user can also select an available power value from the drop-down list if required.

8.2.4 Select and Set Up Reference Test Power Receiver (TPR) Coil

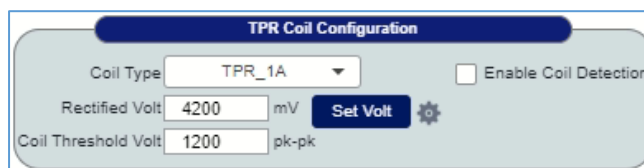


FIGURE 8.13: CONFIGURE TPR COIL

- **Coil Type:** Select the coil type of the reference TPR to be used.
- **Enable Coil Detection:** Select this check box to enable the TPR coil to be detected during testing.
- **Rectified Volt:** Displays the default operating voltage for the TPR coil selected in the Coil Type field. The user can also enter a custom coil voltage value if required.
- **Set Volt:** Click on this button to apply the configured voltage for testing. If required, the user can select  to configure additional parameters as follows:

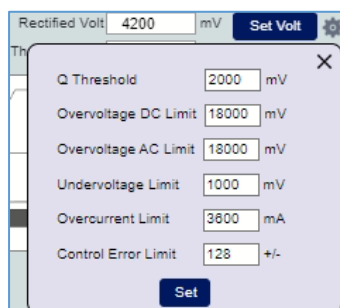


FIGURE 8.14: CONFIGURE ADDITIONAL PARAMETERS

Click on the **Set** button to apply the above configuration for testing.

- **Coil Threshold Volt:** Set the coil voltage limit for the selected TPR coil.

8.2.5 Set Up Load Condition in Load Circuit

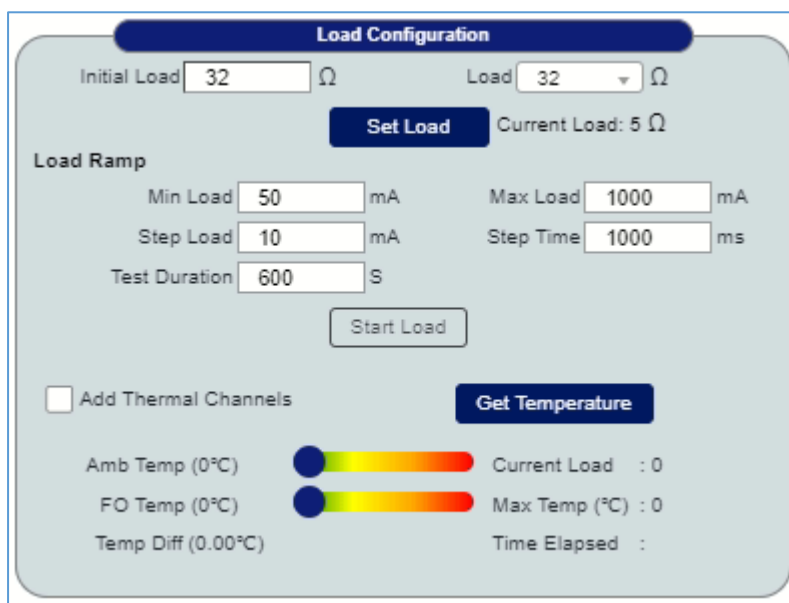


FIGURE 8.15: CONFIGURE LOAD CONDITION

- **Initial Load:** Displays the default initial load resistance value for the TPR coil assembly selected in the Coil Type field under the TPR Coil Configuration panel. The user can also enter a custom initial load value if required.
- **Load:** Displays the default load (with external load added) resistance value to be applied for the TPR coil assembly selected in the Coil Type field under the TPR Coil Configuration panel. The user can also enter a custom load value if required.
- **Set Load:** Click on this button to apply the configured load while the DUT is in the Power Transfer phase. The user can verify load change of the Guaranteed Power (GP) test using the Set Load function.
- **Min Load & Max Load:** The Min Load and Max Load fields allow the user to set the range of current values of the variable load used for the Foreign Object Detection (FOD) test.

- **Step Load & Step Time:** The Step Load and Step Time fields allow the user to set the variable load current step size value and time for stepping across each current over a specified duration during the FOD test.
- **Test Duration:** Set the time interval in seconds for running the FOD test.
- **Start Load:** The user *FIRST* needs to click on the **Start Exerciser** button (below the Qi Exerciser screen; see Section 8.2.8) and then followed by the **Start Load** button to execute the FOD test for the TPR using the configured load current and step values. Details of the test run will be displayed in the *Results* screen as shown in the below example:



FIGURE 8.16: START LOAD FOD TEST EXECUTION EXAMPLE

To terminate the test run, click on the **Stop Exerciser** button.

- **Add Thermal Channels:** Select this checkbox to add heat based channels/devices to the TPR coil assembly.
- **Get Temperature:** Select this checkbox to acquire readings of top-surface temperature of the TPR coil assembly and ambient temperature during the FOD test run.

8.2.6 Set Up Coil Modulation in Modulator Circuit

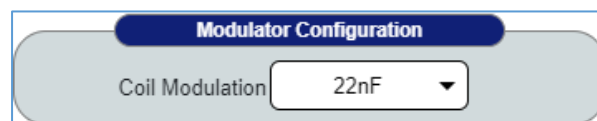


FIGURE 8.17: CONFIGURE COIL MODULATION

The **Coil Modulation** drop down allows the user to select the default capacitance value for the capacitive modulator or the default resistance value for the resistive modulator to be applied for the TPR coil assembly selected in the Coil Type field under the TPR Coil Configuration panel. The user can also select a custom value if required.

- **Configure Packet:** Select the Packet type to be applied.
- **Packet Phase:** Select the default Phase type of either ID/Config, Power Tx, Negotiation or Calibration Phase that corresponds to the selected Packet type.
- **Timing Details:** The Timing Details section displays the default settings for the selected Packet Phase. The user can also choose to enter custom values if required.
 - a) If the **ID/Config Phase** is selected, the following settings are available:
 - **t_Start (ms):** Set the time that elapses between Packets.
 - **t_Wake (ms):** Set the time period after the DUT has initiated the Digital Ping when the GRL-C3 tester hardware needs to initiate the first Packet.
 - **t_Silent (ms):** Set the silent time that elapses between the transmission of Packets.
 - **Preamble Count:** Set the number of preamble bits of the selected Packet.
 - **Repeat Count:** Set the number of times the selected Packet has to be sent.
 - **Corrupt Checksum:** Select this checkbox when selected enables all bits of the selected Packet checksum to be inverted to obtain an incorrect value.
 - b) If the **PT Phase** (Power Transfer Phase) is selected, the following settings are available:
 - **t_Interval (ms):** Set the time interval between two consecutive Control Error Packets.
 - **t_Received (ms):** Set the time interval between two consecutive Received Power Packets.
 - **t_Control (ms):** Set the time interval between two consecutive Control Error Packets.
 - **t_Silent (ms):** Set the silent time that elapses between the transmission of Packets.
 - **t_Charge (ms):** Set the time interval between two consecutive Charge Status Packets.
 - **Preamble Count:** Set the number of preamble bits of the selected Packet.
 - **Repeat Count:** Set the number of times the selected Packet has to be sent.
 - **Corrupt Checksum:** Select this checkbox to enable all bits of the selected Packet checksum to be inverted to obtain an incorrect value.
 - **Enable Reserved Bits:** Select this checkbox to enable all Reserved bits of the selected Packet to be set.

- **Send packet every # ms after 1st:** Select this checkbox to enable the Packet to be sent at every specified time interval and after the start of the first selected Packet type.
 - **Insert packet after RP-CE:** Select this checkbox to enable the selected Packet to be inserted after each Received Power Packet and Control Error Packet.
- c) If the **Negotiation Phase** is selected, the following settings are available:
- **t_Start (ms):** Set the time that elapses between Packets.
 - **t_Silent (ms):** Set the silent time that elapses between the transmission of Packets.
 - **t_Response timeout (ms):** Set the time period (after the end of a response) after which the power signal is to be removed if a Packet is not correctly received.
 - **Preamble Count:** Set the number of preamble bits of the selected Packet.
 - **Repeat Count:** Set the number of times the selected Packet has to be sent.
 - **Corrupt Checksum:** Select this checkbox to enable all bits of the selected Packet checksum to be inverted to obtain an incorrect value.
 - **disableRetry:** Select this checkbox to disable retry for the selected Packet.
- d) If the **Calibration Phase** is selected, the following settings are available:
- **t_Interval (ms):** Set the time interval between two consecutive Control Error Packets.
 - **t_Received (ms):** Set the time interval between two consecutive Received Power Packets.
 - **t_Charge (ms):** Set the time interval between two consecutive Charge Status Packets.
 - **t_Received_Mode1 (ms):** Set the time interval between two consecutive Received Power Packets in the light-load calibration value mode.
 - **t_Received_Mode2 (ms):** Set the time interval between two consecutive Received Power Packets in the connected-load calibration value mode.
 - **Preamble Count:** Set the number of preamble bits of the selected Packet.
 - **Repeat Count:** Set the number of times the selected Packet has to be sent.

- **Corrupt Checksum:** Select this checkbox to enable all bits of the selected Packet checksum to be inverted to obtain an incorrect value.
- **Payload Details:** The Payload Details section displays the default settings for the selected Packet Type which set the raw data to be sent in the hex format. The user can also choose to enter custom values if required.

When all the above configurations have been made, click on the **Save to Sequence** button

Save to Sequence

to apply the configurations and update the existing Packet information in the Configure Packet Sequence panel. Otherwise, click on the **Cancel** button

Cancel

to keep the existing Packet information and exit the settings panel.


To reset the configurations to default values, click on the **Set Default** button

Set Default

8.2.7.2 Additional Packet Settings

Additional configuration can be made to the Packet Sequence by selecting the  icon for the Base Power Profile (BPP) or Extended Power Profile (EPP) DUT as follows:

Note that these additional settings apply specifically for the ID/Config Phase and Power Transfer (PT) Phase (for both the BPP and EPP DUT's) as well as the Negotiation Phase and Calibration Phase (for the EPP DUT only).

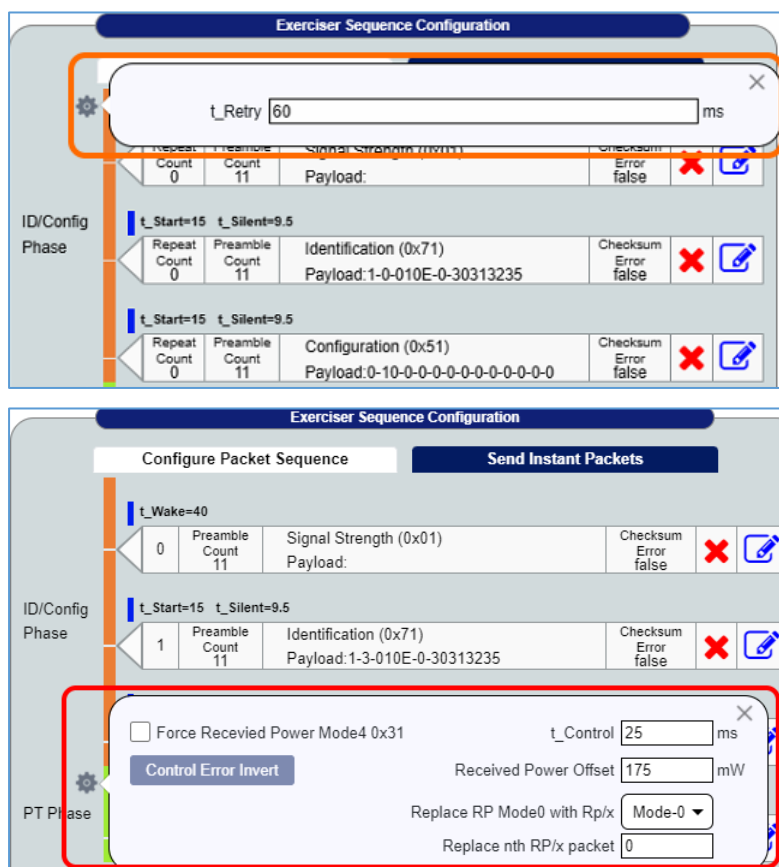

The screenshot displays the 'Exerciser Sequence Configuration' window. The top section shows a 't_Retry' field set to 60 ms. Below this, the 'ID/Config Phase' is configured with three packets: 'Signal Strength (0x01)', 'Identification (0x71)', and 'Configuration (0x51)'. Each packet has a 'Repeat Count' of 0 and a 'Preamble Count' of 11. The 'Checksum Error' is set to 'false' for all. The 'PT Phase' is also configured with a 't_Wake' of 40 ms and a 't_Control' of 25 ms. The 'Control Error Invert' checkbox is checked. The 'Received Power Offset' is set to 175 mW. The 'Replace RP Mode0 with Rp/x' is set to 'Mode-0'. The 'Replace nth RP/x packet' is set to 0.

FIGURE 8.20: ADDITIONAL PACKET SETTINGS FOR BPP AND EPP DUT's (ID/CONFIG PHASE & PT PHASE)

The following additional settings are available for both the **BPP and EPP DUT's**:

- **t_Retry**: Set the time interval in milliseconds for the TPR to retry the Packet after the end of the last Packet sent.
- **Force Received Power Mode4 0x31**: Select this checkbox to enable the GRL-C3 tester hardware to initiate the TPR to send the Received Power Packets with Mode 4 (instead of the default Mode 0) in the Power Transfer phase for related test cases.
- **Control Error Invert**: Click on this button to invert the control error value, by enabling the inverter of the power transmitter to be changed to use the full-bridge topology after receiving the first Control Error Packet. This applies for the case when the power transmitter establishes the Power Transfer Contract at the end of the negotiation phase with a maximum power greater than 5W.
- **t_Control**: Set the time interval between two consecutive Control Error Packets in milliseconds.
- **Received Power Offset**: Set the TPR to use a Received Power Offset value in mW.
- **Replace RP Mode0 with Rp/x**: Select the Mode for the Received Power Packets to be sent by the TPR in the Power Transfer phase (instead of the default Mode 0).
- **Replace nth RP/x packet**: Set the particular Received Power Packets with current existing Mode to be replaced with the ones using the Mode selected from the “Replace RP Mode0 with Rp/x” drop down.

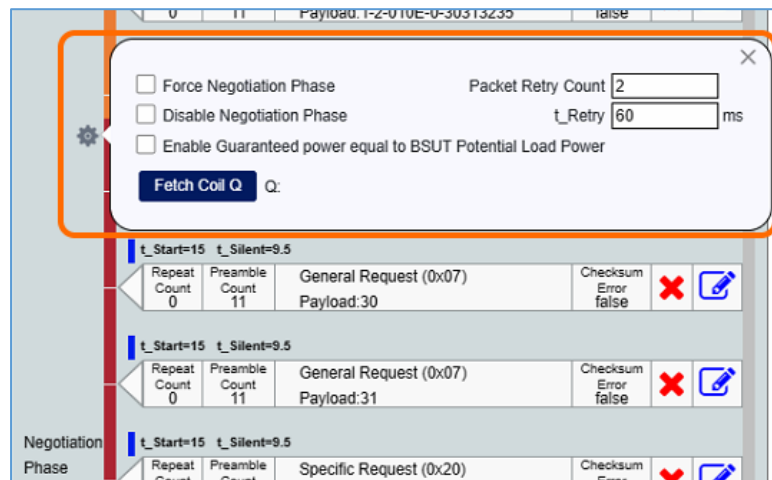


FIGURE 8.21: ADDITIONAL PACKET SETTINGS FOR EPP DUT (NEGOTIATION PHASE)

The following additional settings are available for the **EPP DUT only** for the Negotiation Phase:

- **Force Negotiation Phase**: Select this checkbox to enable the GRL-C3 tester hardware to initiate the DUT to send its Packets in the Negotiation phase.
- **Disable Negotiation Phase**: Select this checkbox to end Negotiation for the Packets.

- **Enable Guaranteed power equal to BSUT Potential Load Power:** Select this checkbox to set the content of the Guaranteed Power Value field to be equal to the Potential Power Value field.
- **Packet Retry Count:** Set the number of times for the TPR to retry the last Packet sent due to communications error in the received Packet.
- **t_Retry:** Set the time interval in milliseconds for the TPR to retry the Packet after the end of the last Packet sent.
- **Fetch Coil Q:** Click on this button to calculate and display the Reference Quality Factor value of the reference TPR coil. The Reference Quality Factor value will be applied in the Extended Power Profile tests.


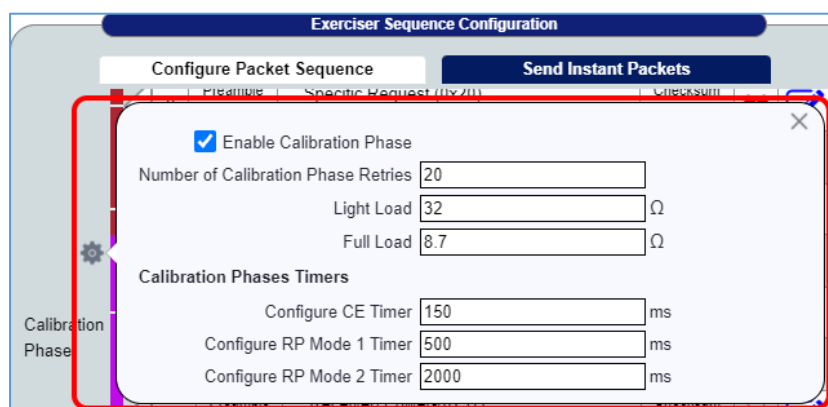


FIGURE 8.22: ADDITIONAL PACKET SETTINGS FOR EPP DUT (CALIBRATION PHASE)

The following additional settings are available for the **EPP DUT only** for the Calibration Phase:

- **Enable Calibration Phase:** Select this checkbox to enable the GRL-C3 tester hardware to execute the Calibration phase for the Packets.
- **Number of Calibration Phase Retries:** Set the number of times to retry the Packet after the end of the last Packet sent.
- **Light Load:** Set the load resistance of the extended Digital Ping as the light load.
- **Full Load:** Set the load resistance of the Guaranteed Power as the full load.
- **Configure CE Timer:** Set the time interval between two consecutive Control Error Packets in milliseconds.
- **Configure RP Mode 1 Timer:** Set the time interval between two Received Power Packets that have their Mode fields set to the light-load calibration value in milliseconds.
- **Configure RP Mode 2 Timer:** Set the time interval between two Received Power Packets that have their Mode fields set to the connected-load calibration value in milliseconds.

8.2.7.3 Manage Packet Simulation Sequence (Configure Packet Sequence)

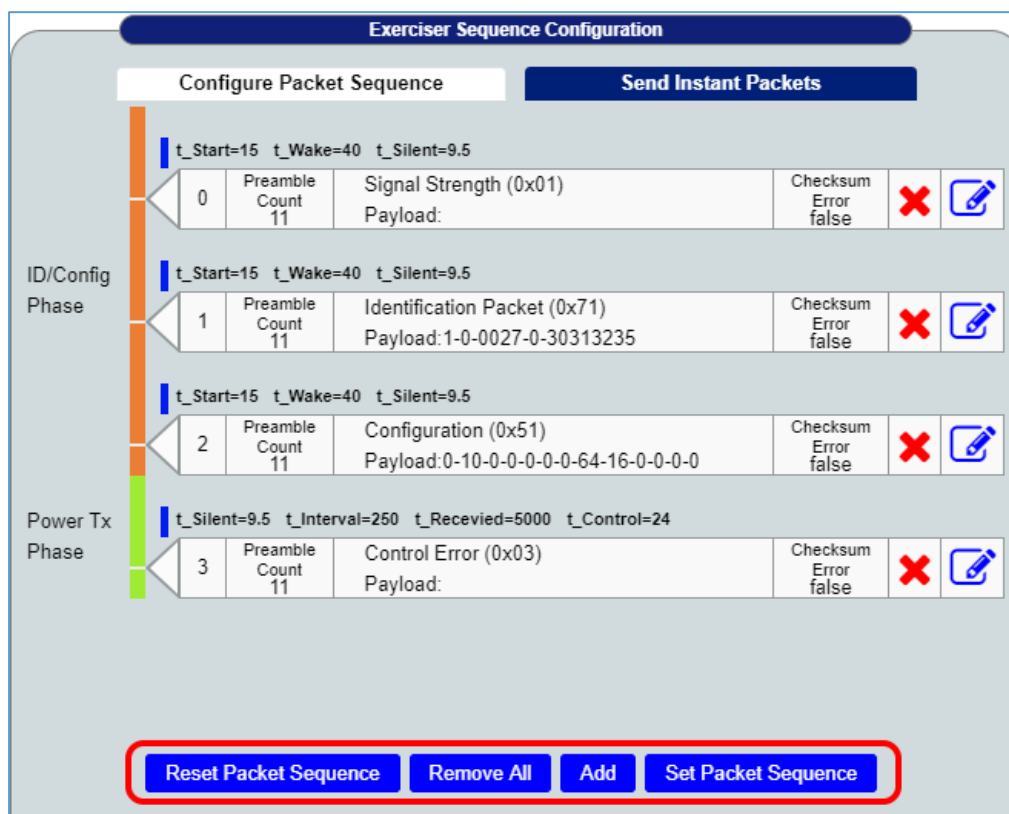

Exerciser Sequence Configuration					
Configure Packet Sequence				Send Instant Packets	
ID/Config Phase	0	Preamble Count 11	Signal Strength (0x01) Payload:	Checksum Error false	☒ 
	1	Preamble Count 11	Identification Packet (0x71) Payload: 1-0-0027-0-30313235	Checksum Error false	☒ 
	2	Preamble Count 11	Configuration (0x51) Payload: 0-10-0-0-0-0-0-64-16-0-0-0-0	Checksum Error false	☒ 
Power Tx Phase	3	Preamble Count 11	Control Error (0x03) Payload:	Checksum Error false	☒ 


Timing Details: t_Start=15 t_Wake=40 t_Silent=9.5

Timing Details: t_Silent=9.5 t_Interval=250 t_Received=5000 t_Control=24

Buttons: **Reset Packet Sequence** **Remove All** **Add** **Set Packet Sequence**

FIGURE 8.23: REMOVE OR ADD PACKETS & RESET OR SET PACKET SEQUENCE

The Configure Packet Sequence panel allows the user to add a new Phase and/or Packet to the Packet Sequence by clicking on the **Add** button at the bottom of the panel. This will display a settings panel similar to the one described above in Section 8.2.7.1 which is obtained by clicking the edit button to configure Packet information. Once configured, clicking on the **Add to Sequence** button causes the new Phase and/or Packet to be added to the existing Packet Sequence.

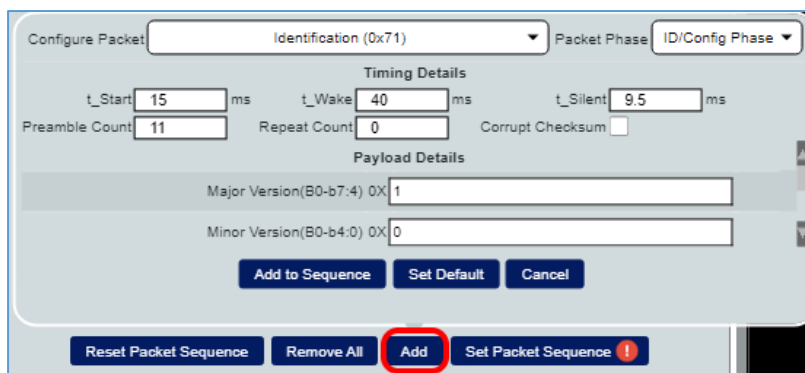

Configure Packet: Identification (0x71) Packet Phase: ID/Config Phase

Timing Details

t_Start: 15 ms t_Wake: 40 ms t_Silent: 9.5 ms

Preamble Count: 11 Repeat Count: 0 Corrupt Checksum: ☐

Payload Details

Major Version(B0-b7:4) 0x: 1

Minor Version(B0-b4:0) 0x: 0

Buttons: **Add to Sequence** **Set Default** **Cancel**

Buttons: **Reset Packet Sequence** **Remove All** **Add** **Set Packet Sequence**

FIGURE 8.24: ADD NEW PHASE & PACKET TO PACKET SEQUENCE

Once the user has confirmed the Packet Sequence, click on the **Set Packet Sequence** button to apply the sequence for testing. In case there is a need to return to the default Packet Sequence, click on the **Reset Packet Sequence** button. To clear the existing Packet Sequence, click on the **Remove All** button.

8.2.7.4 Send Instant Packets

The user can configure and send any Packets in runtime (when Packet simulation test is running) through the **Send Instant Packets** panel.

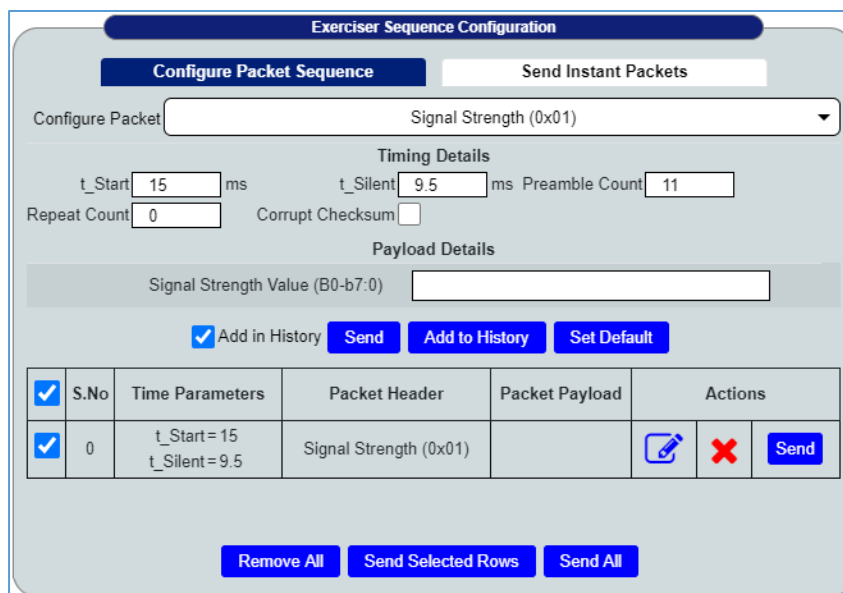


FIGURE 8.25: CONFIGURE AND SEND INSTANT PACKETS

- **Configure Packet:** Select the Packet type to be applied.
- **Timing Details:** The Timing Details section displays the default settings for the selected Packet. The user can also choose to enter custom values if required.
 - **t_Start (ms):** Set the time that elapses between Packets.
 - **t_Silent (ms):** Set the silent time that elapses between the transmission of Packets.
 - **Preamble Count:** Set the number of preamble bits of the selected Packet.
 - **Repeat Count:** Set the number of times the selected Packet has to be sent.
 - **Corrupt Checksum:** Select this checkbox to enable all bits of the selected Packet checksum to be inverted to obtain an incorrect value.
- **Payload Details:** The Payload Details section displays the default settings for the selected Packet which set the raw data to be sent in the hex format. The user can also choose to enter custom values if required.

After completing all the above configurations, the user can click on the **Send** button

Send

to send the configured Packet to the GRL-C3 tester hardware. To reset the configurations to default values, click on the **Set Default** button

Set Default

The user can also choose to add or log the configured Packet to the “History” table by selecting the **Add in History** checkbox and then clicking on the **Add to History** button.

☒ Add in History Send ☒ Add to History Set Default						
☒	S.No	Time Parameters	Packet Header	Packet Payload	Actions	
☒	0	t_Start = 15 t_Silent = 9.5	Signal Strength (0x01)			 Send

FIGURE 8.26: ADD PACKET TO HISTORY TABLE

Once the Packet is added to the table, the user can make edits to the Packet configuration by clicking on  in the respective Packet row. When finished, click on the **Save to History** button to apply and update the existing Packet row with the new configuration. To send out the Packet, select the Packet row checkbox and click on the **Send** button. If there is a need to delete a particular Packet row, click on . To send out Packets for selected Packet rows only, select the desired Packet rows and click on the **Send Selected Rows** button at the bottom. To send out all Packets in the History table, select all Packet rows and click on the **Send All** button at the bottom. If there is a need to clear all Packet rows in the History table, click on the Remove All button .

8.2.8 Run Packet Simulation Test



FIGURE 8.27: RUN PACKET SIMULATION TEST AND MANAGE CONFIGURATION

- **Start Exerciser:** Click on this button to start test execution/simulation for the configured Packets. The test run details along with signal trace acquisition will be displayed in the Results screen as shown in the example below:

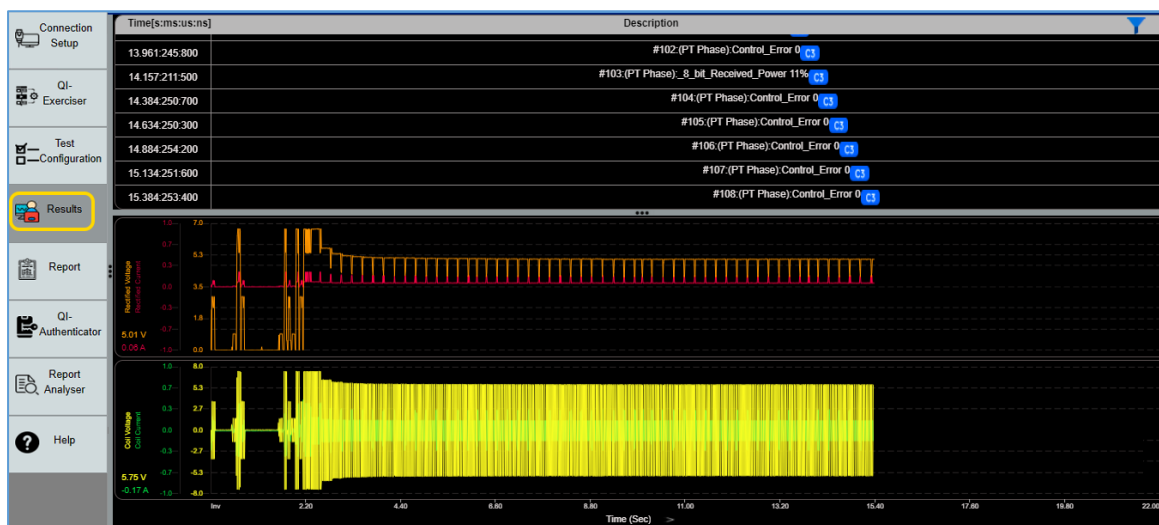


FIGURE 8.28: START EXERCISER PACKET SIMULATION TEST RUN EXAMPLE

To terminate the test run, click on the **Stop Exerciser** button.

- **Clear Capture:** Click on this button to remove existing test run details and signal trace acquisition displayed on the Results screen.
- **Reset Exerciser:** Click on this button to return all Packet configurations to default values.
- **Recall Sequence:** Click on this button to load and apply information from a saved Packet configuration file.
- **Save Sequence:** Click on this button to save the current Packet configuration to a file in the “C:\GRL\GRL-WP-TPR-C3\Report\” directory. See example below:

 


FIGURE 8.29: EXAMPLE OF SAVED CONFIGURATION FILE PATH

8.3 Test Configuration

The GRL-C3 application *Test Configuration* screen allows the user to select which set of tests is run on the DUT, set up test parameters, run selected tests and generate test reports.

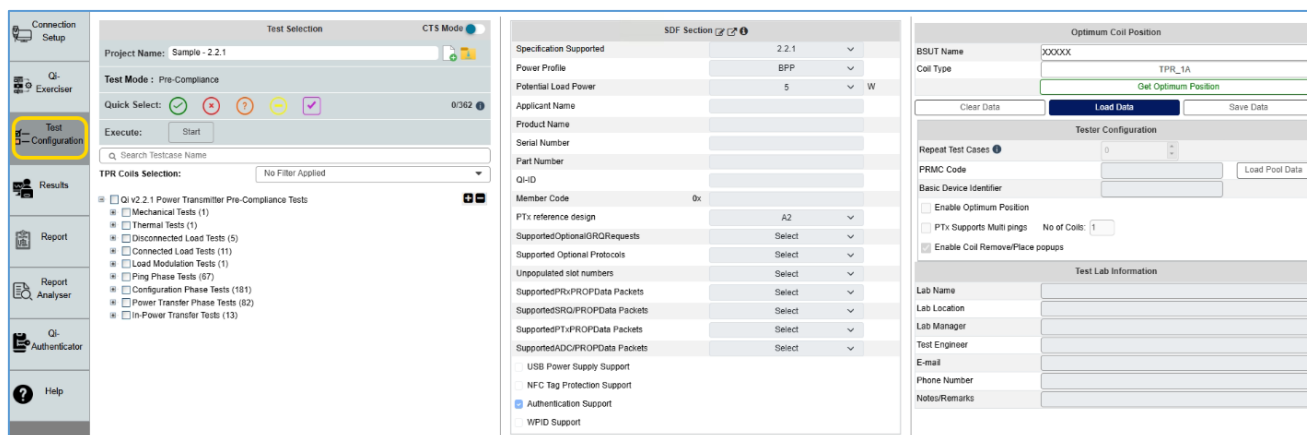


FIGURE 8.30: TEST CONFIGURATION SCREEN

Prior to accessing the test configuration, the user first needs to create a new project or upload an existing project that was saved previously, as described in the following sections.

8.3.1 Create New Test Project

The following procedure describes how to create a new test project:

1. Click on **Create New Project** as indicated in Figure 8.31 below.

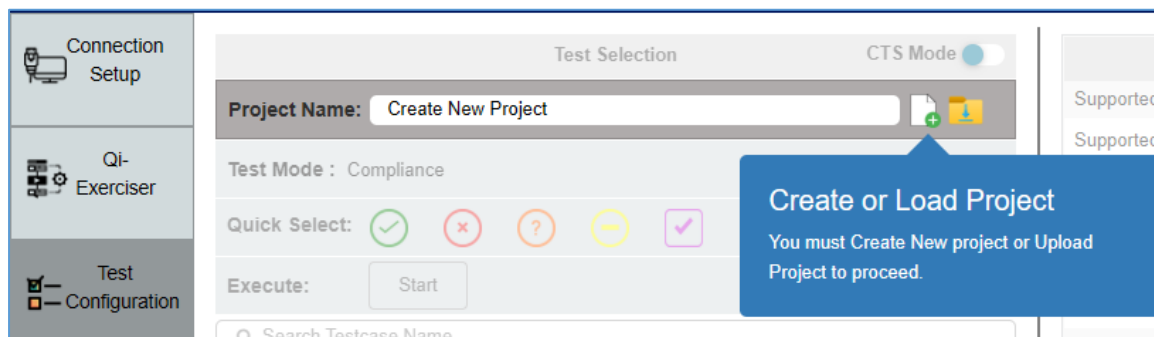


FIGURE 8.31: CREATE NEW PROJECT— #1

2. Set the following:

- a) Enter the **Project Name** (allowed up to 15 letters and special characters) and select the **Test Mode** as “Compliance” or “Pre-Compliance”.

Note: Select the “Compliance” test mode if the eSDF (Electronic Self Declaration Form) file of the DUT is available. If the eSDF is not available, select the “Pre-Compliance” test mode.

*Note: If the DUT being used is identical to another DUT in all aspects of wireless power functionality, select the “**Substantially Similar Product**” checkbox.*


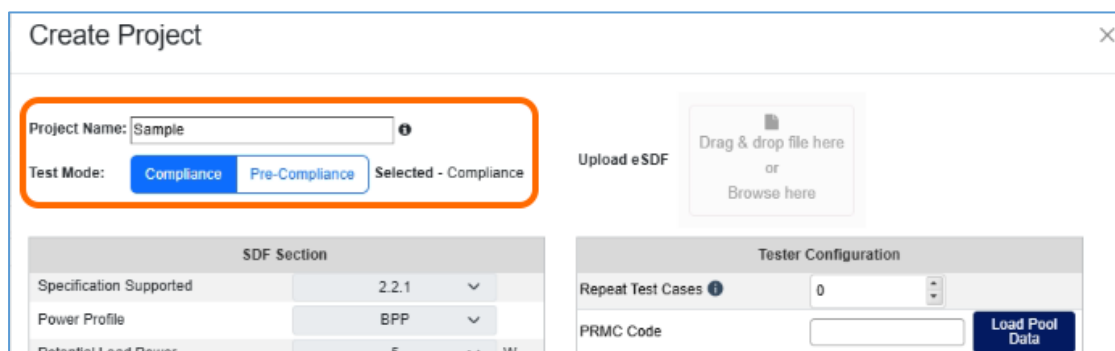


FIGURE 8.32: CREATE NEW PROJECT— #2

- b) If the “**Compliance**” Test Mode is selected, **upload** the **eSDF** file of the DUT by dragging and dropping the file into the panel on the right or clicking on the panel to select the file from the system. Then click on the **Create Project** button at the bottom.

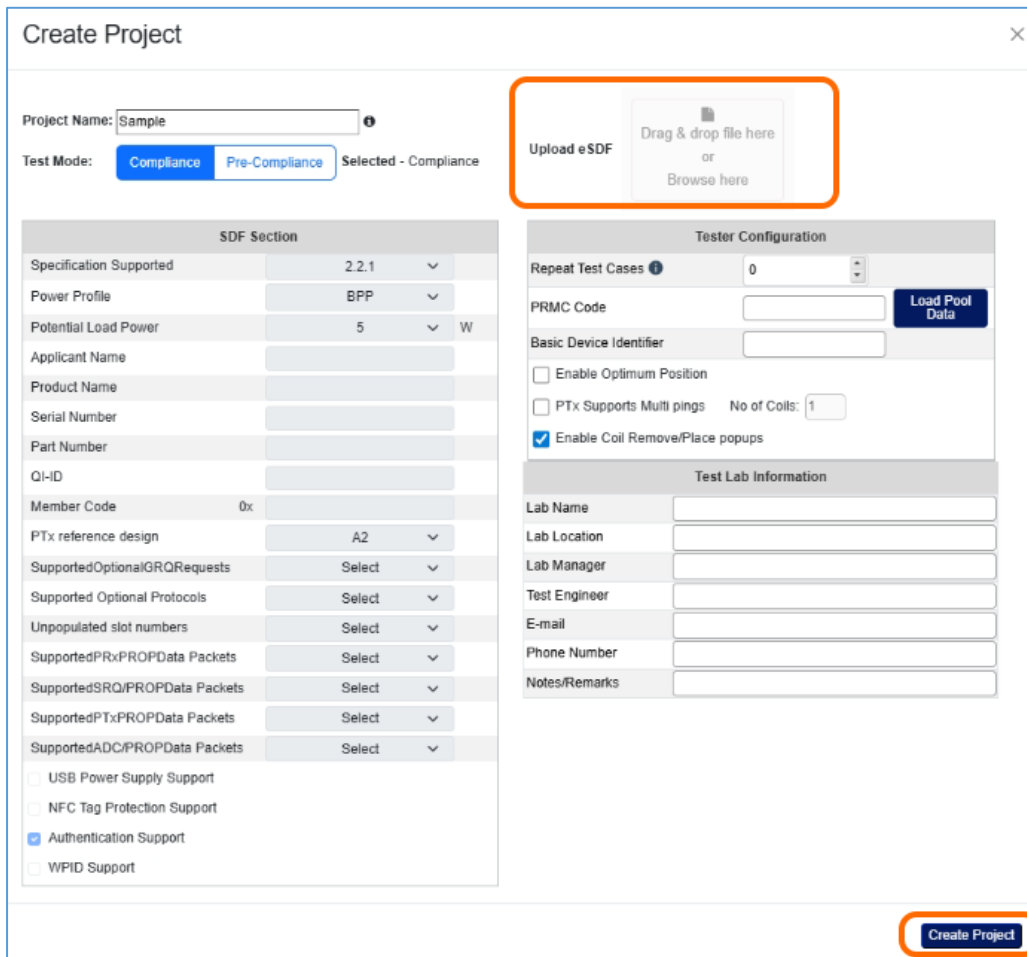

Create Project

Project Name:

Test Mode: Compliance **Pre-Compliance** Selected - Compliance

Upload eSDF (Highlighted with orange box)

Drag & drop file here
or
Browse here

SDF Section

Specification Supported	2.2.1	▼
Power Profile	BPP	▼
Potential Load Power	5	▼ W
Applicant Name		
Product Name		
Serial Number		
Part Number		
QI-ID		
Member Code	0x	
PTx reference design	A2	▼
SupportedOptionalGRQRequests	Select	▼
Supported Optional Protocols	Select	▼
Unpopulated slot numbers	Select	▼
SupportedPRxPROData Packets	Select	▼
SupportedSRQ/PROData Packets	Select	▼
SupportedPTxPROData Packets	Select	▼
SupportedADC/PROData Packets	Select	▼
☐ USB Power Supply Support		
☐ NFC Tag Protection Support		
☒ Authentication Support		
☐ WPID Support		

Tester Configuration

Repeat Test Cases: 0

PRMC Code: **Load Pool Data**

Basic Device Identifier:

☐ Enable Optimum Position

☐ PTx Supports Multi pings No of Coils: 1

☒ Enable Coil Remove/Place popups

Test Lab Information

Lab Name:

Lab Location:

Lab Manager:

Test Engineer:

E-mail:


Phone Number:

Notes/Remarks:

Create Project (Highlighted with orange box)

FIGURE 8.33: CREATE NEW PROJECT— #3

- c) If the **“Pre-Compliance”** Test Mode is selected, select to either upload the eSDF of the DUT (if available) or generate a default eSDF (**Get Default ESDF**) by clicking on the respective checkboxes.
- i. If the **“Get Default ESDF”** checkbox is selected, select the **Supported Specification** and **Power Profile** of the DUT.

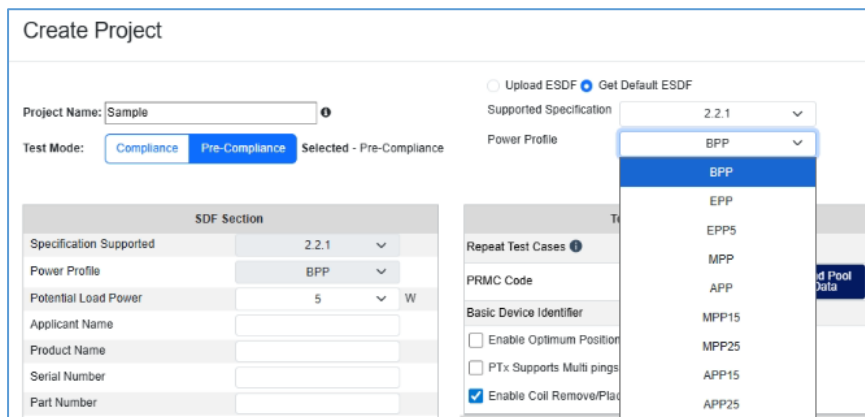

Create Project

Project Name:

Test Mode: Compliance **Pre-Compliance** Selected - Pre-Compliance

☐ Upload ESDF ☒ **Get Default ESDF**

Supported Specification: 2.2.1 ▼

Power Profile: BPP ▼

SDF Section

Specification Supported	2.2.1	▼
Power Profile	BPP	▼
Potential Load Power	5	▼ W
Applicant Name		
Product Name		
Serial Number		
Part Number		

Tester Configuration

Repeat Test Cases: 1

PRMC Code: **Load Pool Data**

Basic Device Identifier:

☐ Enable Optimum Position

☐ PTx Supports Multi pings

☒ Enable Coil Remove/Place popups

Test Lab Information

Lab Name:

Lab Location:

Lab Manager:

Test Engineer:

E-mail:


Phone Number:

Notes/Remarks:

FIGURE 8.34: CREATE NEW PROJECT— #4

- ii. After selecting the power profile and supported specification, click on the **Get Default ESDF** button. In the SDF Section, Tester Configuration and Test Lab Information panels, configure the following parameters:

Note: Some parameters may change based on the selected power profile and specification.

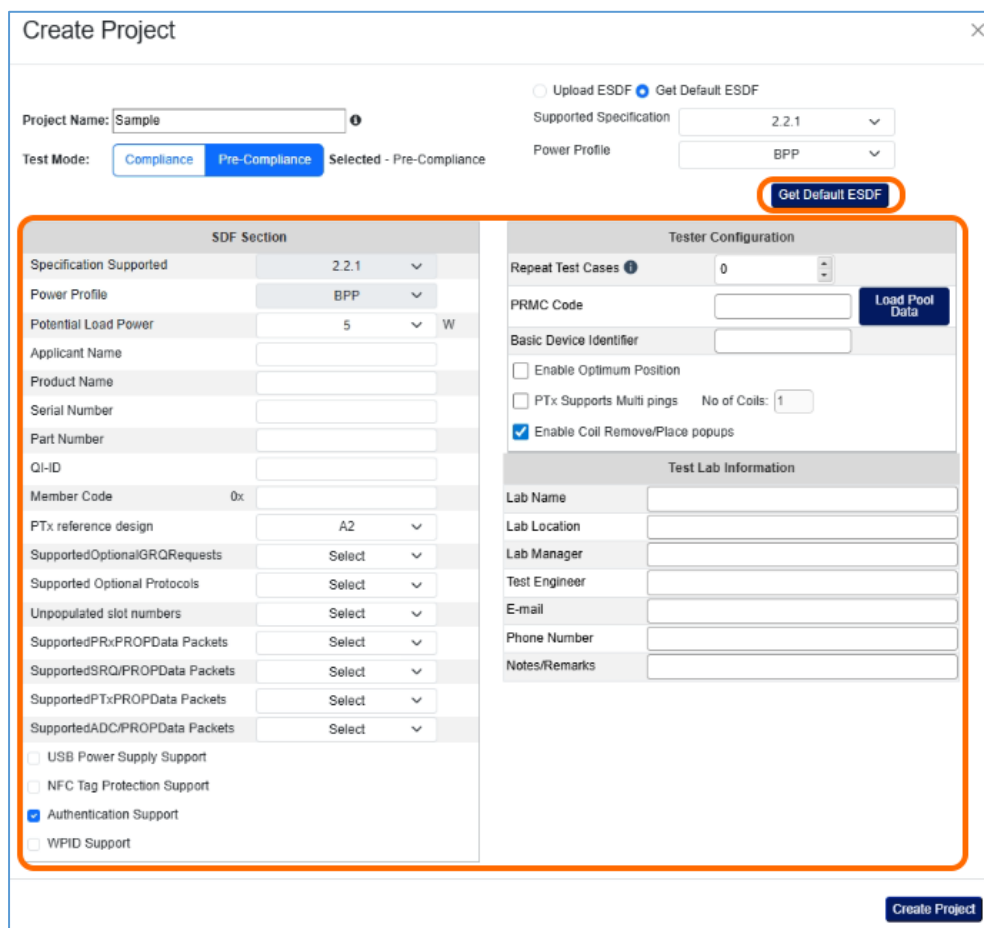

Create Project

Project Name:

Test Mode: Compliance Pre-Compliance Selected - Pre-Compliance

☐ Upload ESDF ☒ Get Default ESDF

Supported Specification:

Power Profile:

Get Default ESDF

SDF Section	
Specification Supported	2.2.1
Power Profile	BPP
Potential Load Power	5 W
Applicant Name	
Product Name	
Serial Number	
Part Number	
Qi-ID	
Member Code	0x
PTx reference design	A2
SupportedOptionalGRQRequests	Select
Supported Optional Protocols	Select
Unpopulated slot numbers	Select
SupportedPRxPROData Packets	Select
SupportedSRQ/PROData Packets	Select
SupportedPTxPROData Packets	Select
SupportedADC/PROData Packets	Select
☐ USB Power Supply Support	
☐ NFC Tag Protection Support	
☒ Authentication Support	
☐ WPID Support	

Tester Configuration	
Repeat Test Cases	0
PRMC Code	
Basic Device Identifier	
☐ Enable Optimum Position	
☐ PTx Supports Multi pings	No of Coils: 1
☒ Enable Coil Remove/Place popups	

Test Lab Information	
Lab Name	
Lab Location	
Lab Manager	
Test Engineer	
E-mail	
Phone Number	
Notes/Remarks	

Create Project

FIGURE 8.35: CREATE NEW PROJECT— #5

SDF Section:

- **Applicant Name & Product Name & Serial Number & Part Number:** Enter the name of the test lab personnel and name, serial number & part number of the DUT respectively.
- **Qi ID:** Enter the Qi certified ID number of the DUT.
- **Potential Load Power:** Select the maximum power supported by the DUT.
- **Manufacturer Code:** Enter the manufacturer code of the DUT.
- **PTx Reference Design:** Select the reference design type of the PTx DUT.
- **Supported Optional GRQ Requests:** Select the “XCAP” if the DUT supports the extended capability as requested by the DUT.
- **Supported Optional Protocols:** Select the “Extended Protocol” if the DUT supports the Extended Power Profile (EPP).

- **Unpopulated Slot Numbers:** Select the slots which do not contain the Qi certificate chain.
- **Supported PRx PROP Data Packets:** Select any proprietary PRx Packets as supported by the DUT.
- **Supported SRQ/PROP Data Packets:** Select any SRQ proprietary Packets as supported by the DUT.
- **Supported PTx PROP Data Packets:** Select any proprietary PTx Packets as supported by the DUT.
- **Supported ADC/PROP Data Packets:** Select the ADC Proprietary Packets as supported by the DUT.
- **USB Power Supply Support:** Select this checkbox if the DUT supports USB power.
- **NFC Tag Protection Support:** Select this checkbox if the DUT supports NFC tag protection against any counterfeiting or unauthorized access.
- **Authentication Support:** Select this checkbox if the DUT supports the Qi Authentication requirements.
- **WPID Support:** Select this checkbox if the DUT supports WP-ID (optional receiver ID for the Qi wireless charging standard).

Tester Configuration:

- **Repeat Test Cases:** Select the number of times to repeat running selected tests.
- **PRMC Code:** Set the Power Receiver Manufacturer Code (PRMC) ID of the TPR.
- **Load Pool Data:** This function allows you to use different power receiver manufacturer codes (PRMC's) other than the GRL-C3's own power receiver manufacturer code (PRMC) in order to obtain expected test results. Click on the "Load Pool Data" button to load an existing data file and this will enable PRMC codes to be assigned randomly for each test case when running multiple tests.
- **Basic Device Identifier:** Set the Basic Device Identifier ID of the TPR.
- **Enable Optimum Position:** Select this checkbox to enable the coil to be placed at an optimized position for testing. *Note: The Optimum Coil Positioning data is required for this feature.*
- **PTx Supports Multi Pings & No of Coils:** Select this checkbox if the DUT supports multi pings and specify the number of coils.
- **Enable Coil Remove/Place popups:** Select this checkbox to allow removal of coils or placement of device accessories during testing.

Test Lab Information:

- The "Test Lab Information" panel allows the user to enter information relevant to the lab specifics used for running tests. Once tests have

completed, the test report can be viewed in the *Report* screen (see Section 8.4).

After configuring the above parameters, click on the **Create Project** button.

3. The new project will be created with the provided Project Name and Test Mode as shown in the Figure 8.36 example below. The user can now proceed with the test configuration.

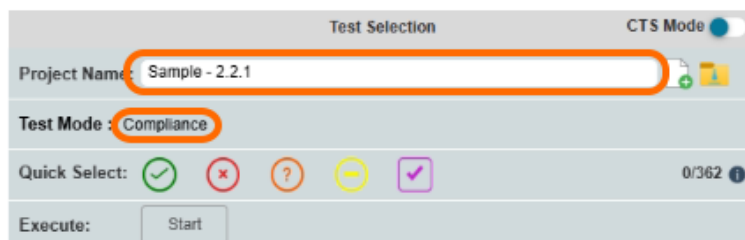


FIGURE 8.36: CREATE NEW PROJECT— #6

8.3.2 Upload Existing Saved Test Project

The following procedure describes how to upload an existing test project that was saved previously:

1. Click on the **Upload Project** icon as indicated in Figure 8.37 below.

 


FIGURE 8.37: UPLOAD PROJECT— #1

2. If the required project file (.gproj file) was saved in the local file directory, select that project file under “Local File” as shown in Figure 8.38 below.

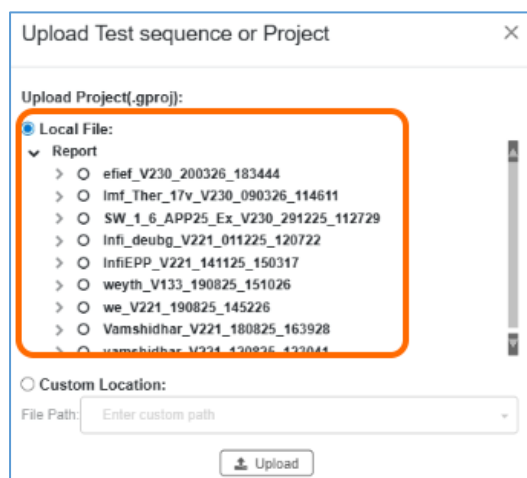


FIGURE 8.38: UPLOAD PROJECT— #2

3. If the required .gproj file was saved in another location other than the local file directory, select **Custom Location** and enter the project file path, for example, “C:\GRL\GRL-WP-TPR-

C3\Report\XYZ_TPR_100823_084915\Run1\ReferenceData\TPR_Run1_TestBackup.gproj”.

Note: Make sure to provide the project file name (**TPR_Run1_TestBackup.gproj**) in the path.

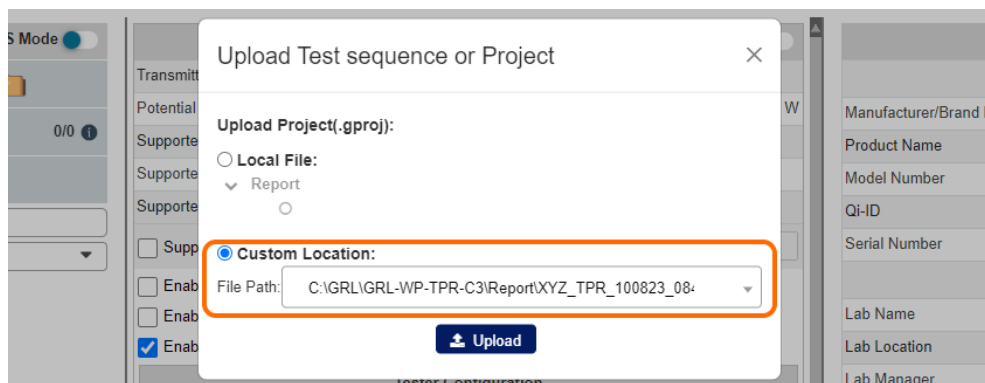


FIGURE 8.39: UPLOAD PROJECT— #3

- Click on the **Upload** button and the selected project file will be loaded as shown in the Figure 8.40 example below. The user can now proceed to access/configure the project.

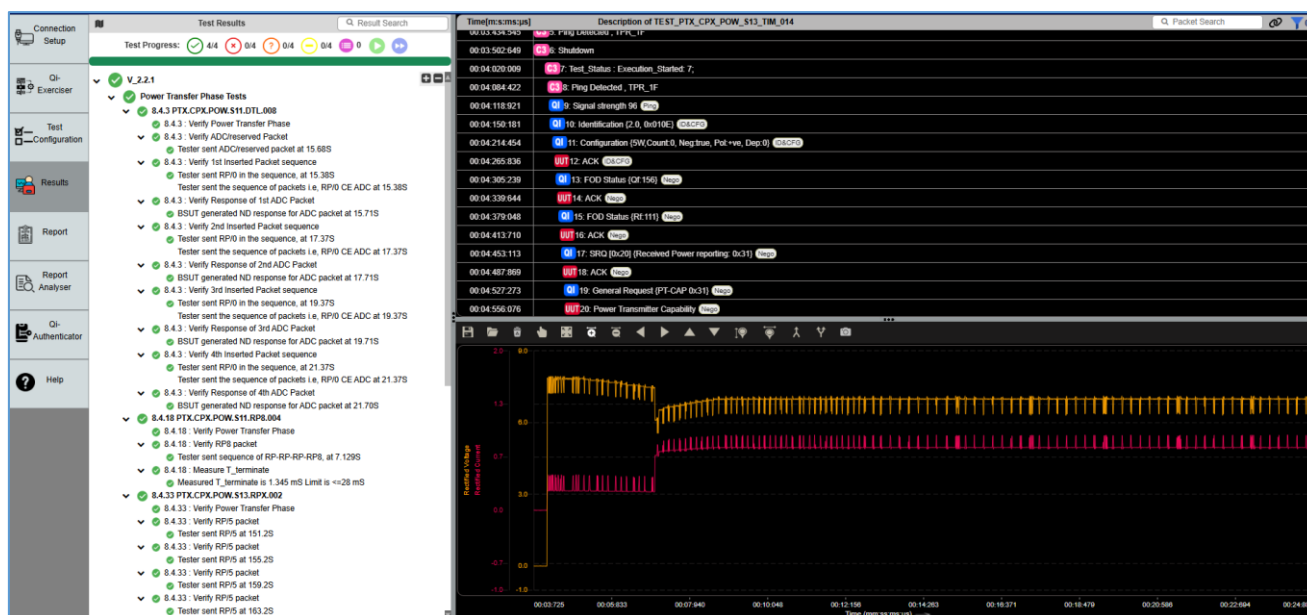



FIGURE 8.40: UPLOAD PROJECT— #4

8.3.3 Test Configuration

Before running any tests, make sure to configure the following main categories:

- SDF Section
- Optimum Coil Position
- Tester Configuration

8.3.3.1 SDF (Self Declaration Form) Section

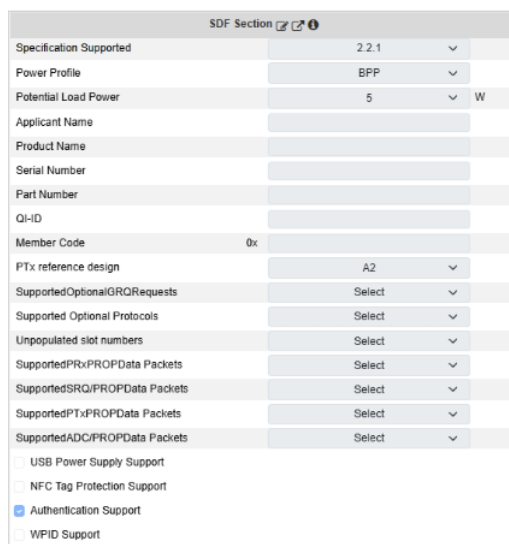


SDF Section	
Specification Supported	2.2.1
Power Profile	BPP
Potential Load Power	5 W
Applicant Name	
Product Name	
Serial Number	
Part Number	
QI-ID	
Member Code	0x
PTx reference design	A2
Supported Optional GRQ Requests	Select
Supported Optional Protocols	Select
Unpopulated slot numbers	Select
Supported PRx PROP Data Packets	Select
Supported SRQ/PROP Data Packets	Select
Supported PTx PROP Data Packets	Select
Supported ADC/PROP Data Packets	Select
☐ USB Power Supply Support ☐ NFC Tag Protection Support ☒ Authentication Support ☐ WPID Support	

FIGURE 8.41: DUT SELF DECLARATION FORM MANAGEMENT

When creating a new project, once the user has uploaded the eSDF file or created a default eSDF file, the SDF Section will be auto populated with the eSDF data read from the respective eSDF file. The user can edit or export the eSDF data by clicking on   respectively.

To edit the eSDF data, click on  and the following pop-up window will allow the user to make the required edits. Once done, click on the **Update** button to apply the changes.

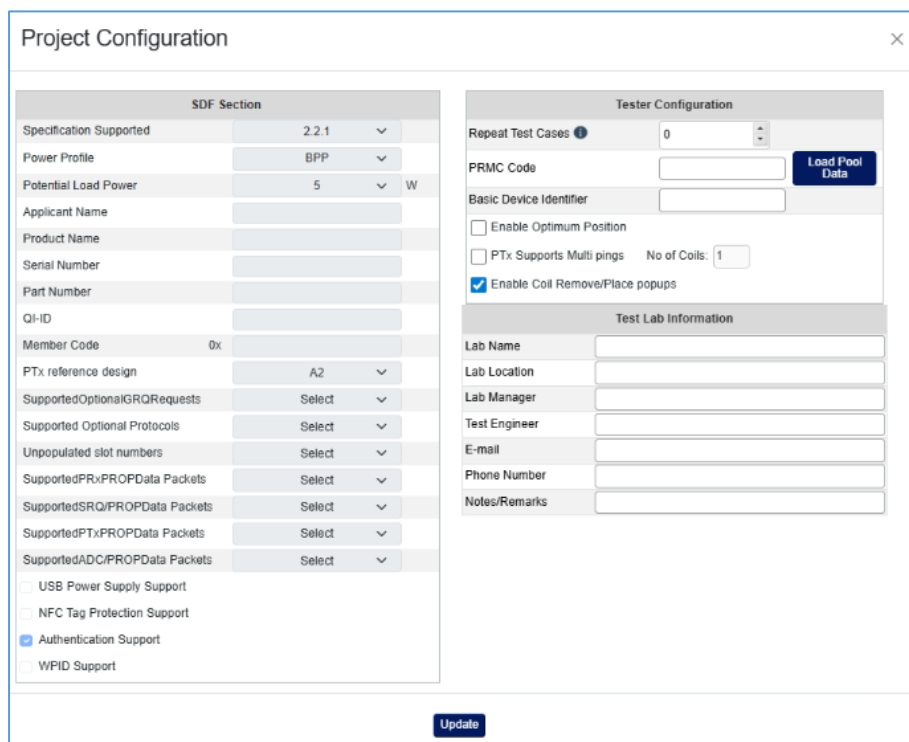

Project Configuration

SDF Section

Specification Supported

2.2.1

Power Profile

BPP

Potential Load Power

5

W

Applicant Name

Product Name

Serial Number

Part Number

QI-ID

Member Code

0x

PTx reference design

A2

Supported Optional GRQ Requests

Select

Supported Optional Protocols

Select

Unpopulated slot numbers

Select

Supported PRx PROP Data Packets

Select

Supported SRQ/PROP Data Packets

Select

Supported PTx PROP Data Packets

Select

Supported ADC/PROP Data Packets

Select

☐ USB Power Supply Support
☐ NFC Tag Protection Support
☒ Authentication Support
☐ WPID Support

Tester Configuration

Repeat Test Cases

0

PRMC Code

Load Pool Data

Basic Device Identifier

☐ Enable Optimum Position

☐ PTx Supports Multi pings No of Coils: 1

☒ Enable Coil Remove/Place popups

Test Lab Information

Lab Name

Lab Location

Lab Manager

Test Engineer

E-mail

Phone Number

Notes/Remarks

Update

To export the eSDF data, click on  to save the data to a JSON file in the system.

GRL-WP-TPR-C3 User Guide

Rev 15.0

© GRL Platform Solutions 2026

Version 15.0, June 2026. Updated 06.15.2026

Page 62 of 93

8.3.3.2 Optimum Coil Position

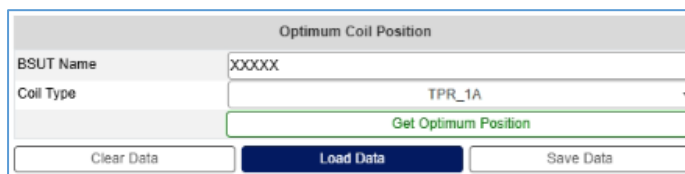


FIGURE 8.42: CONFIGURATION FOR OPTIMUM COIL POSITION

- **BSUT Name:** Set the name of the DUT (BSUT) for the coil positioning test.
- **Coil Type:** Select the type of TPR coil to be positioned on the Interface Surface of the DUT such that the DUT can achieve the maximum signal strength value.
- **Get Optimum Position:** Click on the Get Optimum Position button to start the coil positioning test once the TPR coil is placed on the Interface Surface of the DUT. During this process, adjust the coil in various positions on the DUT surface to obtain the maximum signal strength value. When the test has completed, the results will be displayed below this button. The *Results* screen will also display the results/details of the test case that is running in real-time as shown in the example below:



FIGURE 8.43: OPTIMUM COIL POSITION TEST EXECUTION EXAMPLE

- **Clear Data:** Click on this button to clear the current configuration.
- **Load Data:** Click on this button to load and use data from a saved configuration file.
- **Save Data:** Click on this button to save the current configuration to a file.

8.3.3.3 Tester Configuration

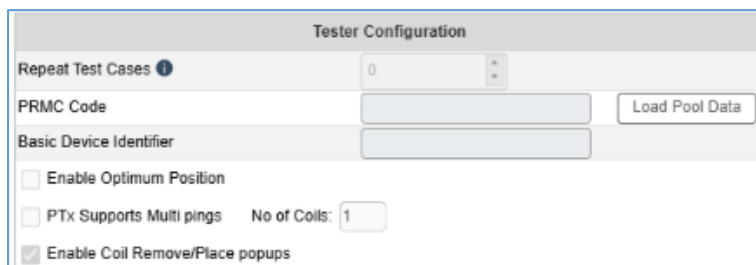


FIGURE 8.44: CONFIGURE TESTER

- **Repeat Test Cases:** Select the number of times to repeat running selected tests.
- **PRMC Code:** Set the Power Receiver Manufacturer Code (PRMC) ID of the TPR.
- **Load Pool Data:** This function allows the user to use different power receiver manufacturer codes (PRMC's) other than the GRL-C3's own power receiver manufacturer code (PRMC) in order to obtain expected test results. Click on the Load Pool Data button to load an existing data file and this will enable PRMC codes to be assigned randomly for each test case when running multiple tests.

Note: The PRMC_pool data is available in the WPC website.

 220601_prmc_pool_ch5rsdk (1)	10-01-2023 10:30	Microsoft Excel Co...	1 KB
 GRL_REPORT (27)	28-12-2022 13:27	File folder	
 GRL_REPORT (27)(1)	28-12-2022 13:27	File folder	

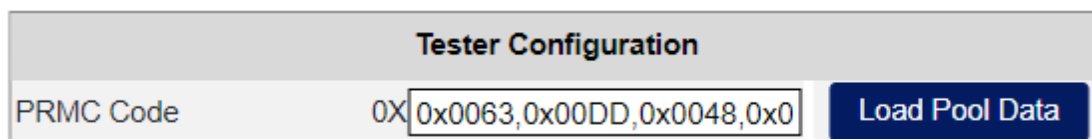


FIGURE 8.45: LOAD PRMC CODE FROM SELECTED POOL DATA FILE

- **Basic Device Identifier:** Set the Basic Device Identifier ID of the TPR.
- **Enable Optimum Position:** Select this checkbox to enable the coil to be placed at an optimized position for testing. *Note: The Optimum Coil Positioning data is required for this feature.*
- **PTx Supports Multi Pings & No of Coils:** Select this checkbox if the DUT supports multi pings and specify the number of coils.
- **Enable Coil Remove/Place popups:** Select this checkbox to allow removal of coils or placement of device accessories during testing.

8.3.4 Test Selection

The tests available to be run are shown on the “Test Selection” panel.

8.3.4.1 Select Tests

Individual tests are grouped together based on their definition in a specific version of specification. Selecting a group will cause all tests in that group to be selected. Selecting individual tests within a group will lead to just those individual tests to be selected.

Tests that comply with a certain or all TPR coil types can be selected by clicking on the drop-down menu:

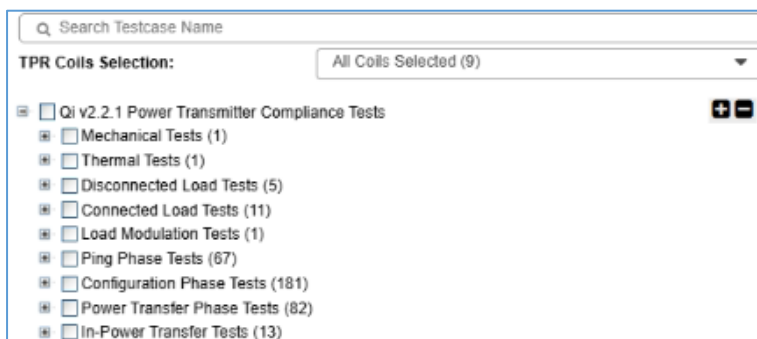


FIGURE 8.46: SELECT TESTS BASED ON TPR COIL TYPE FOR V2.2.1 CERTIFICATION & BPP POWER PROFILE

Note: For a detailed listing of all the tests and test methodology, please refer to the specification documents referenced in Section 1.

8.3.4.1.1 For V2.2.1 Certification, select from the following tests based on the TPR coil type:

8.3.4.1.1.1 All TPR Coil Types

Run the compliance tests for all TPR coil types.

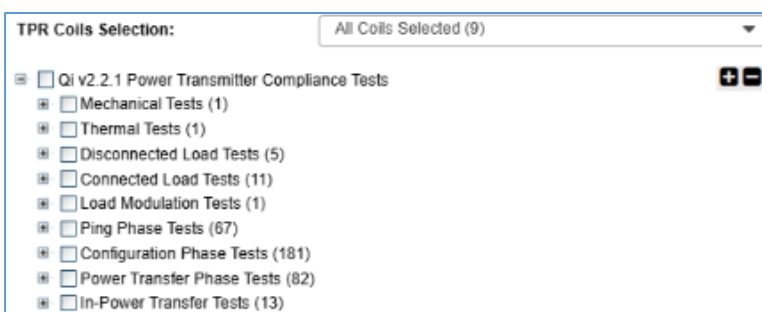


FIGURE 8.47: TEST SELECTION FOR ALL TPR COIL TYPES (FOR MPP V2.2.1 CERTIFICATION & BPP POWER PROFILE)

8.3.4.1.1.2 TPR_1A Coil

Run compliance tests for the TPR_1A coil.

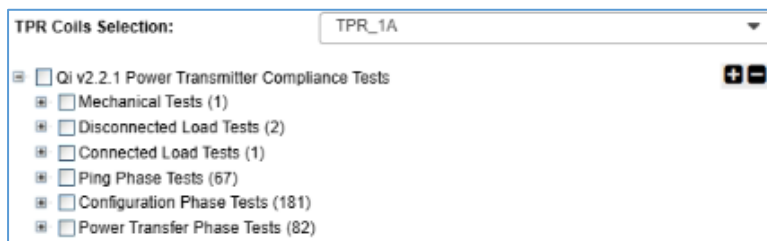


FIGURE 8.48: TEST SELECTION FOR TPR_1A COIL (FOR V2.2.1 CERTIFICATION & BPP POWER PROFILE)

8.3.4.1.1.3 TPR_1B Coil

Run compliance tests for the TPR_1B coil.

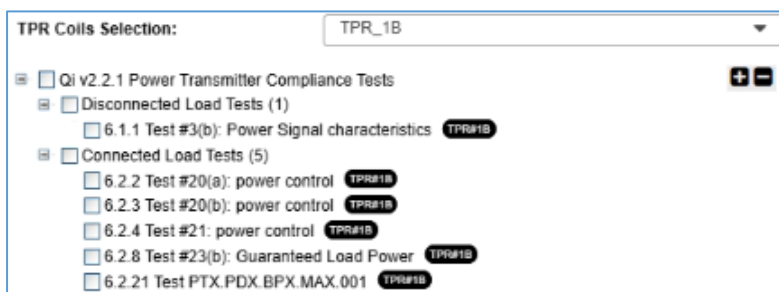


FIGURE 8.49: TEST SELECTION FOR TPR_1B COIL (FOR V2.2.1 CERTIFICATION & BPP POWER PROFILE)

8.3.4.1.1.4 TPR_1C Coil

Run compliance tests for the TPR_1C coil.



FIGURE 8.50: TEST SELECTION FOR TPR_1C COIL (FOR V2.2.1 CERTIFICATION & BPP POWER PROFILE)

8.3.4.1.1.5 TPR_1D Coil

Run compliance tests for the TPR_1D coil.

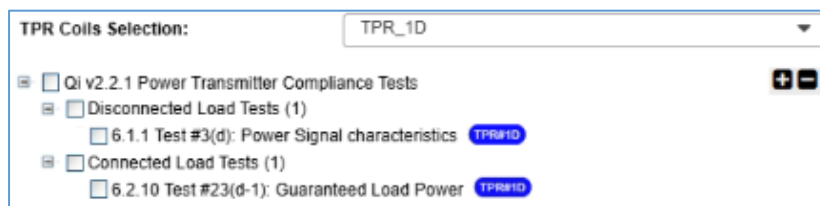


FIGURE 8.51: TEST SELECTION FOR TPR_1D COIL (FOR V2.2.1 CERTIFICATION & BPP POWER PROFILE)

8.3.4.1.1.6 TPR_1E Coil

Run compliance tests for the TPR_1E coil.



FIGURE 8.52: TEST SELECTION FOR TPR_1E COIL (FOR V2.2.1 CERTIFICATION & BPP POWER PROFILE)

8.3.4.1.1.7 TPR_3 Coil

Run compliance tests for the TPR_3 coil.



FIGURE 8.53: TEST SELECTION FOR TPR_3 COIL (FOR V2.2.1 CERTIFICATION & BPP POWER PROFILE)

8.3.4.1.1.8 TPR_5 Coil

Run compliance tests for the TPR_5 coil.

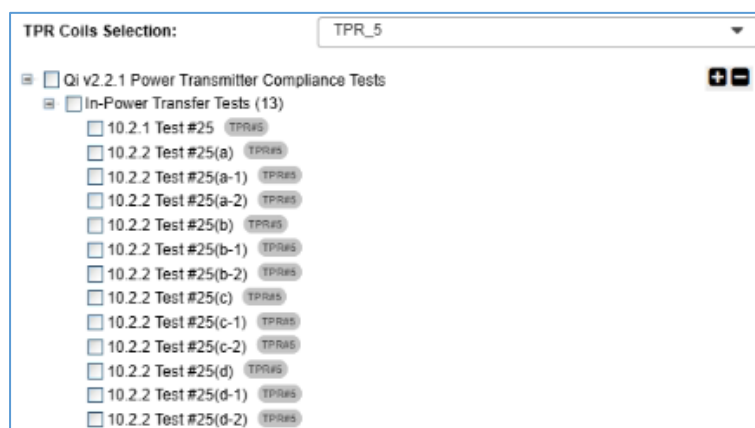


FIGURE 8.54: TEST SELECTION FOR TPR_5 COIL (FOR V2.2.1 CERTIFICATION & BPP POWER PROFILE)

8.3.4.1.1.9 TPR_6 Coil

Run compliance tests for the TPR_6 coil.



FIGURE 8.55: TEST SELECTION FOR TPR_6 COIL (FOR V2.2.1 CERTIFICATION & BPP POWER PROFILE)

8.3.4.1.10 TPR_THERMAL_5W Coil


Run compliance tests for the TPR_THERMAL_5W coil.



FIGURE 8.56: TEST SELECTION FOR TPR_THERMAL_5W COIL (FOR V2.2.1 CERTIFICATION & BPP POWER PROFILE)

8.3.4.2 Manage Test Selection

You can click on the  icon to select all the test cases in the list.

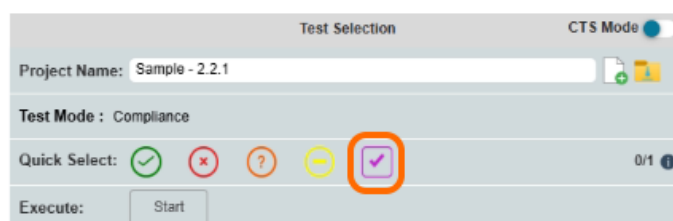

8.3.5 Report Generation

The “Test Lab Information” panel allows full reports to be created after running a set of tests.

Test Lab Information	
Lab Name	GRL Platform Solutions
Lab Location	India
Lab Manager	John
Test Engineer	David
E-mail	
Phone Number	
Notes/Remarks	

FIGURE 8.57: TEST LAB INFORMATION PANEL FOR REPORT GENERATION

The “Test Lab Information” panel allows the user to enter information relevant to the lab specifics used for running tests. Once tests have completed, the test report can be viewed in the *Report* screen (see Section 8.4).

8.3.6 Run Tests

Once the desired test cases have been selected, they can be run by clicking on the **Start** button as indicated in Figure 8.58 below. Click on this button (**Stop**) again to terminate the test run.

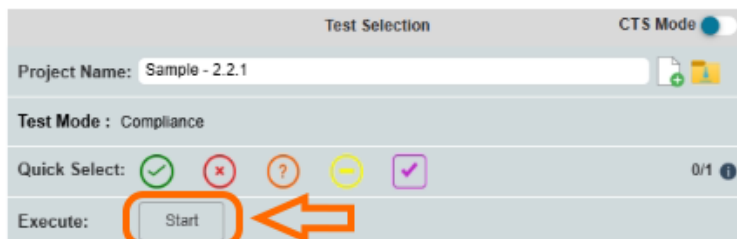


FIGURE 8.58: RUN TESTS

Once testing has started you can view each test being run in real-time mode on the **Results** screen:



FIGURE 8.59: RESULTS SCREEN – TEST RUN IN PROGRESS

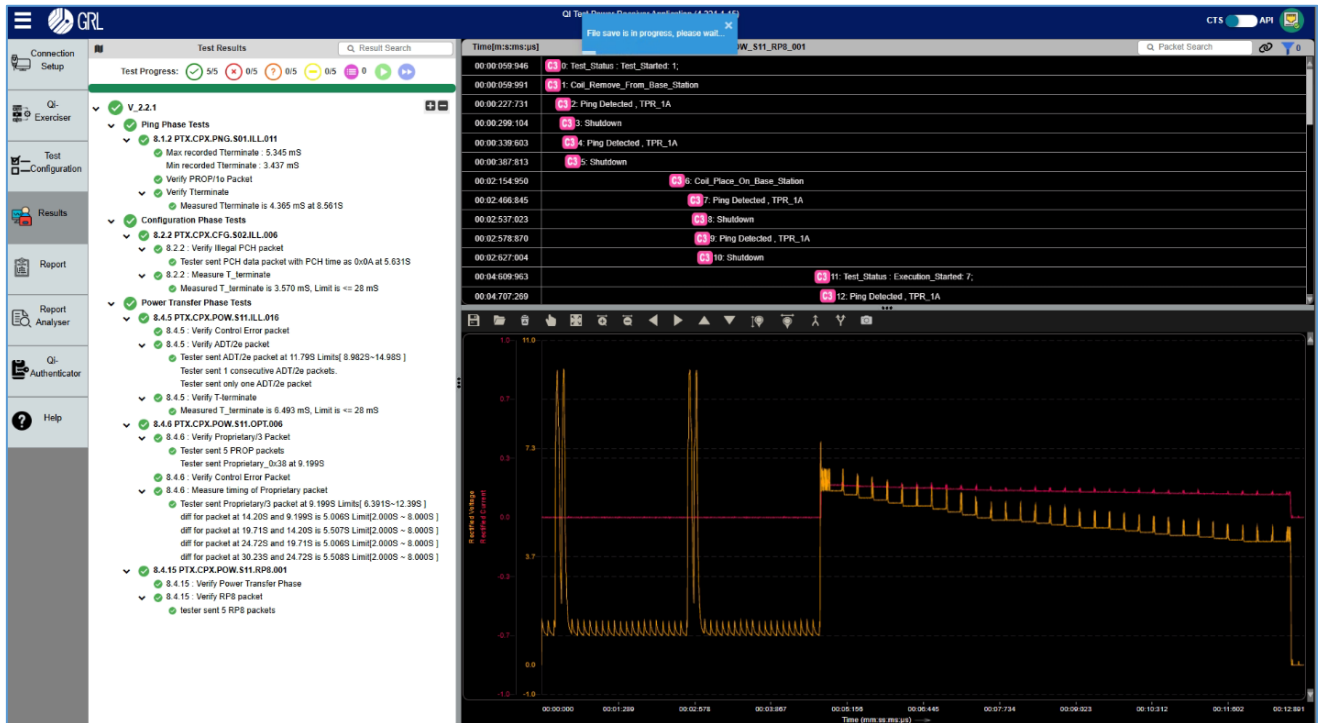


FIGURE 8.60: RESULTS SCREEN – TEST RUN COMPLETED

While tests are running, several pop-up messages will appear to guide the user through the test run. The Test Results panel will display the pass/fail/warning status of each test as well as each subtest which you can view by clicking the drop-down arrow of the test group if applicable. The Packet communications exchange protocol and waveform displays next to the Test Results panel allow you to scroll to the section representing the start of the selected test– this allows you to trace failing test to determine the cause of the test failure.

When the Packet communications exchange protocol is running, click on the **Stop Test Case Execution** button  under the Test Results panel at any time to end or pause the process respectively. To skip a test case that is currently running to the next test case, click on the **Skip Current Running Test Case** button . To select specific test cases in the test sequence, click on the  icon. To quickly navigate to the test case that is currently running, click on the **Scroll To Current Test** button .

Test results and configuration of any test run will automatically be saved to a JSON file in the Report folder of your PC's local file path.

To view a specific portion of the Packet communications exchange, click on the “Filter”  drop down to filter out the communications list by selecting the available options:

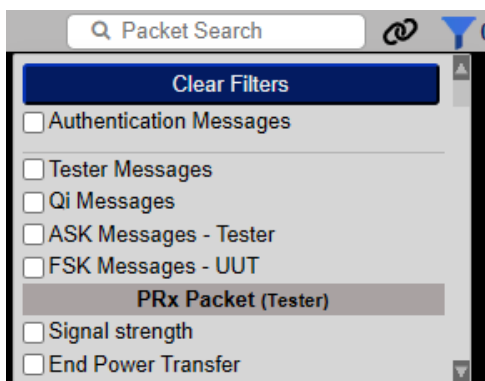


FIGURE 8.61: FILTER PACKET COMMUNICATIONS OPTIONS

To enable syncing of the Packet timings, click on the  icon and vice versa.

The common plot specific buttons can be used to control the trace view as desired which includes panning, merge/unmerge, fit and zooming in/out of the trace plots. You can use your mouse cursor to hover on top of each plot specific button to view the description of each button function.



FIGURE 8.62: TRACE PLOT CONTROL BUTTONS

The  buttons in particular can be selected to enable cursors for a test/subtest which lets you turn on/off vertical and horizontal markers at certain areas of the plot. You can also click on a test/subtest to navigate to the exact time stamp and packet details of the plot.

When the testing is complete, the screen displays all the data gathered during the testing process.

Select the **Save trace file**  button to save the trace plot to a .trace (grltrace) file or a CSV file, as shown in the example below.

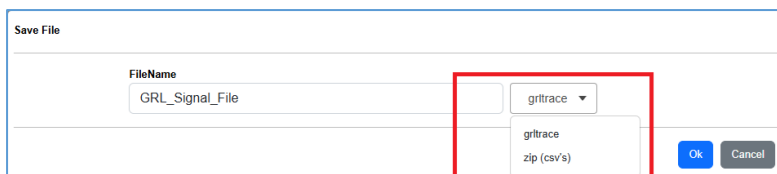


FIGURE 8.63: SAVE TRACE PLOT AFTER TEST RUN COMPLETION

Select the **Load trace file**  button to open and use an existing saved trace file (see Section 8.3.6.1 below).

You can then also return to the *Test Configuration* screen to filter out the test selection list for those tests with Pass/Fail/Inconclusive/Incomplete status. This allows you to easily determine the status of each test using the respective icons  under the Test Selection panel.

8.3.6.1 Load Previously Saved Trace Files for Test Capture Verification

1. In the Results screen, click on the **Load trace file**  button as indicated in Figure 8.64 below.

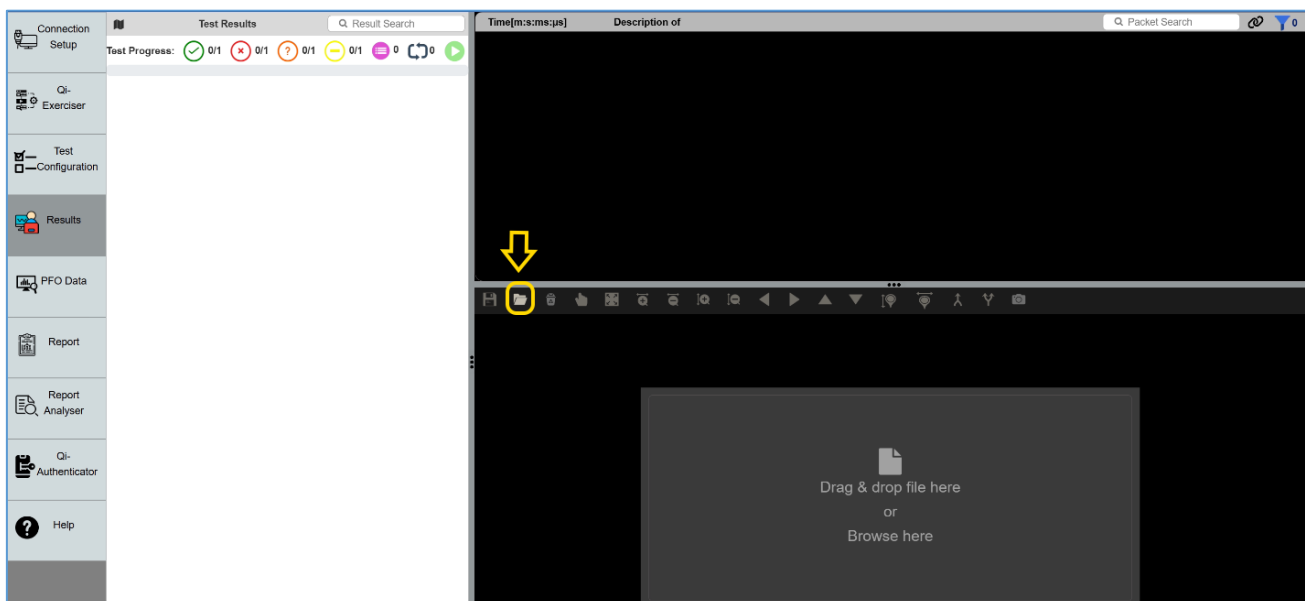


FIGURE 8.64: LOAD TRACE FILE BUTTON

2. Select the required **.grltrace** file (that was saved from a previous test run) as shown in the example in Figure 8.65 below.

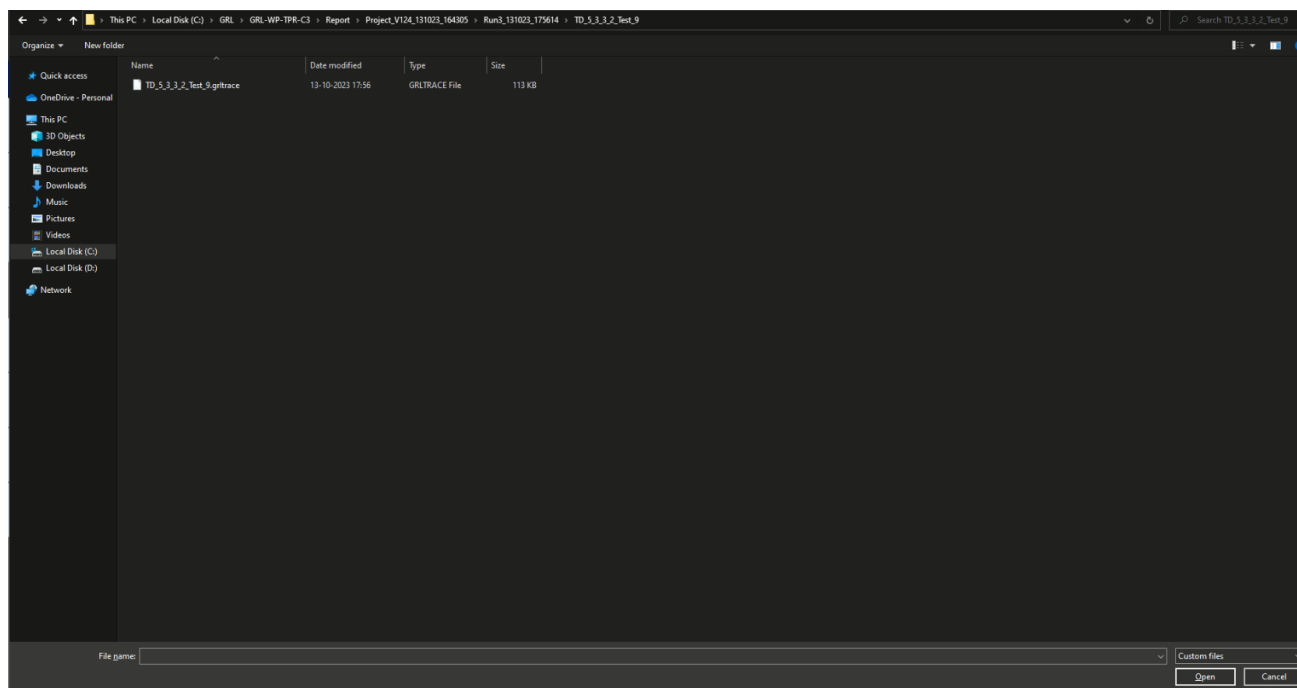


FIGURE 8.65: SELECT SAVED TRACE FILE

3. The selected trace file will be loaded as shown in the example in Figure 8.66 below. After loading the capture, the test data with packet, waveform &

description details will be updated and to verify the packet details, the user can click on the respective packet and select the **Collapse** button. The user can also click on the **Copy** button to copy and paste the packet description.

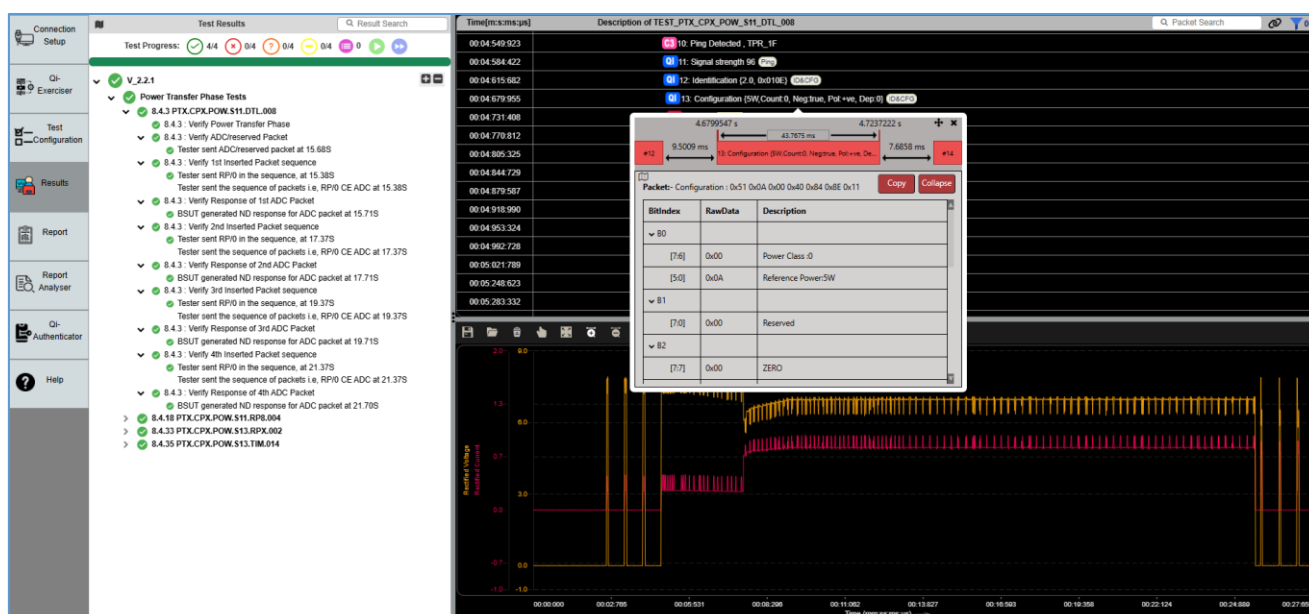


FIGURE 8.66: SELECTED TRACE FILE LOADED FOR VERIFICATION

- To verify the exact failure packet, the user can just select the failure description and the GRL-C3 application will automatically map the respective packet as shown in the example in Figure 8.67 below.

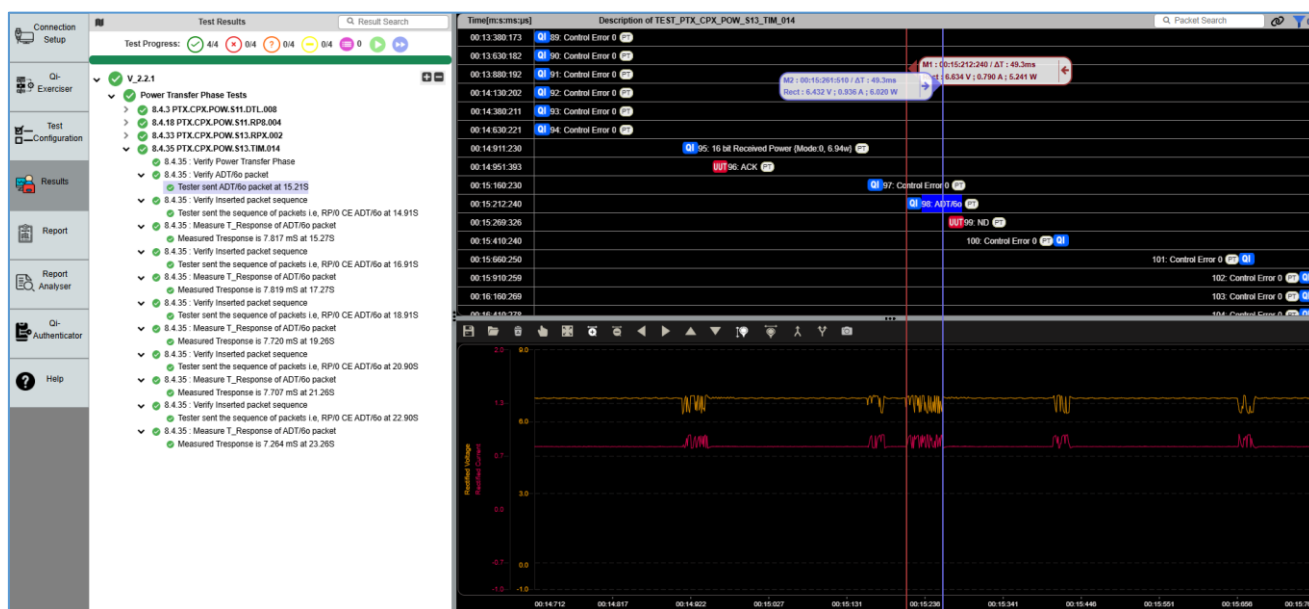


FIGURE 8.67: VERIFY FAILURE PACKET

- To remove the trace file from the screen, the user can click on the **Clear Capture** button as indicated in Figure 8.68 below.


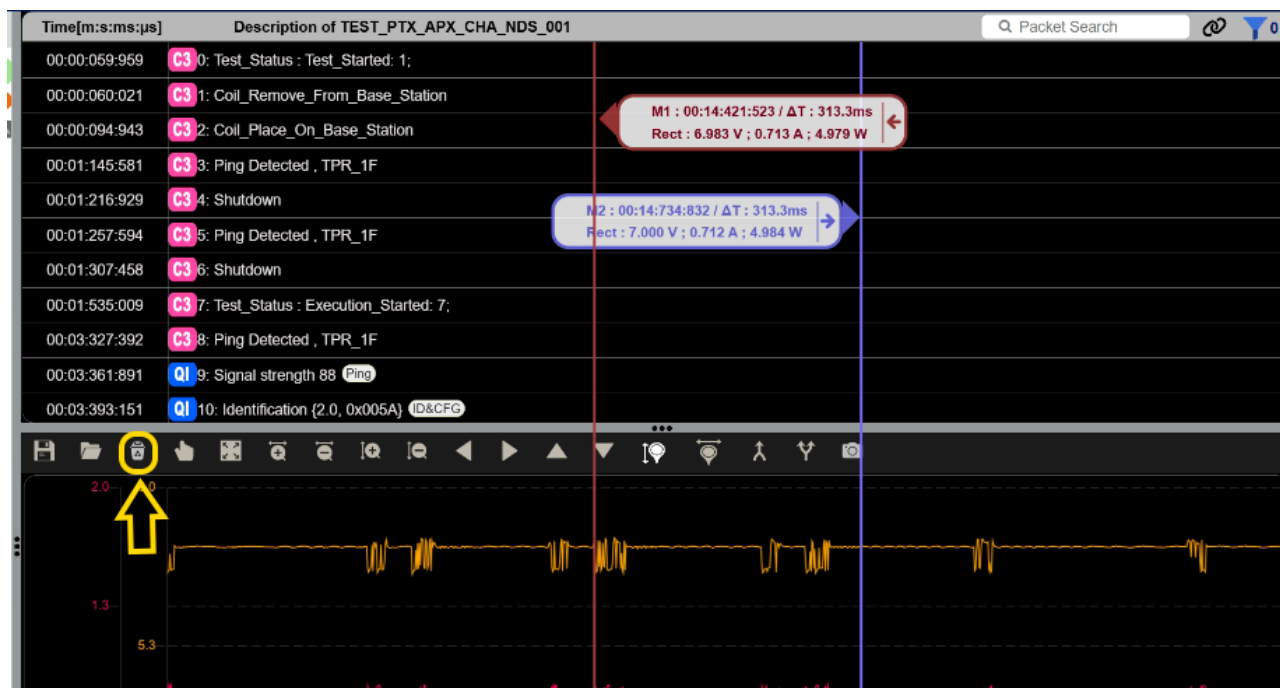


FIGURE 8.68: CLEAR CAPTURE BUTTON

8.4 Test Report View

After running a set of tests, the GRL-C3 application *Report* screen allows full reports to be created:

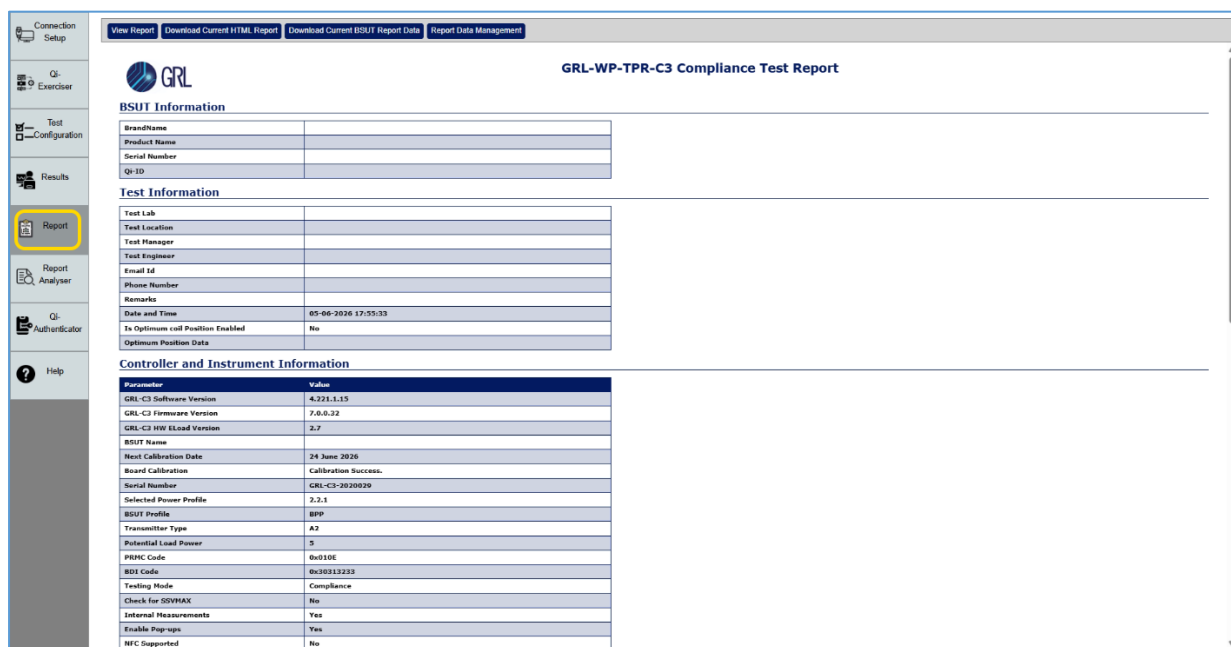

Connection Setup | View Report | Download Current HTML Report | Download Current BSUT Report Data | Report Data Management

GRL

GRL-WP-TPR-C3 Compliance Test Report

BSUT Information

BrandName	
Product Name	
Serial Number	
Q1-ID	

Test Information

Test Lab	
Test Location	
Test Manager	
Test Engineer	
Email Id	
Phone Number	
Remarks	
Date and Time	05-06-2026 17:55:33
Is Optimum coil Position Enabled	No
Optimum Position Data	

Controller and Instrument Information

Parameter	Value
GRL-C3 Software Version	4.221.1.15
GRL-C3 Firmware Version	7.6.0.32
GRL-C3 HW ELoad Version	2.7
BSUT Name	
Next Calibration Date	24 June 2026
Board Calibration	Calibration Success.
Serial Number	GRL-C3-2020020
Selected Power Profile	2.3.1
BSUT Profile	BPP
Transmitter Type	A3
Potential Load Power	5
PRPH Code	0x010E
BSI Code	0x0013223
Twisting Mode	Compliance
Check for SSVHAX	No
Internal Measurements	Yes
Enable Pop-ups	Yes
NFC Supported	No

FIGURE 8.69: REPORT SCREEN

If the report is not displayed when accessing the Report screen, click on the **View Report** button **View Report** at the top of screen to refresh the report view.

The content of the generated reports can consist of one or more of:

- **Configuration** – The product configuration information for the DUT.
- **Packet List** – A list of all the packets exchanged during testing.
- **Test Results** – The individual test Pass / Fail results.
- **Saved Images** – Any other images created during the test process.

The most recent set of results for all tests run (regardless of when they were run) will be captured in the generated reports.

Scroll down to view the full report as shown in the example (Figure 8.70) below.

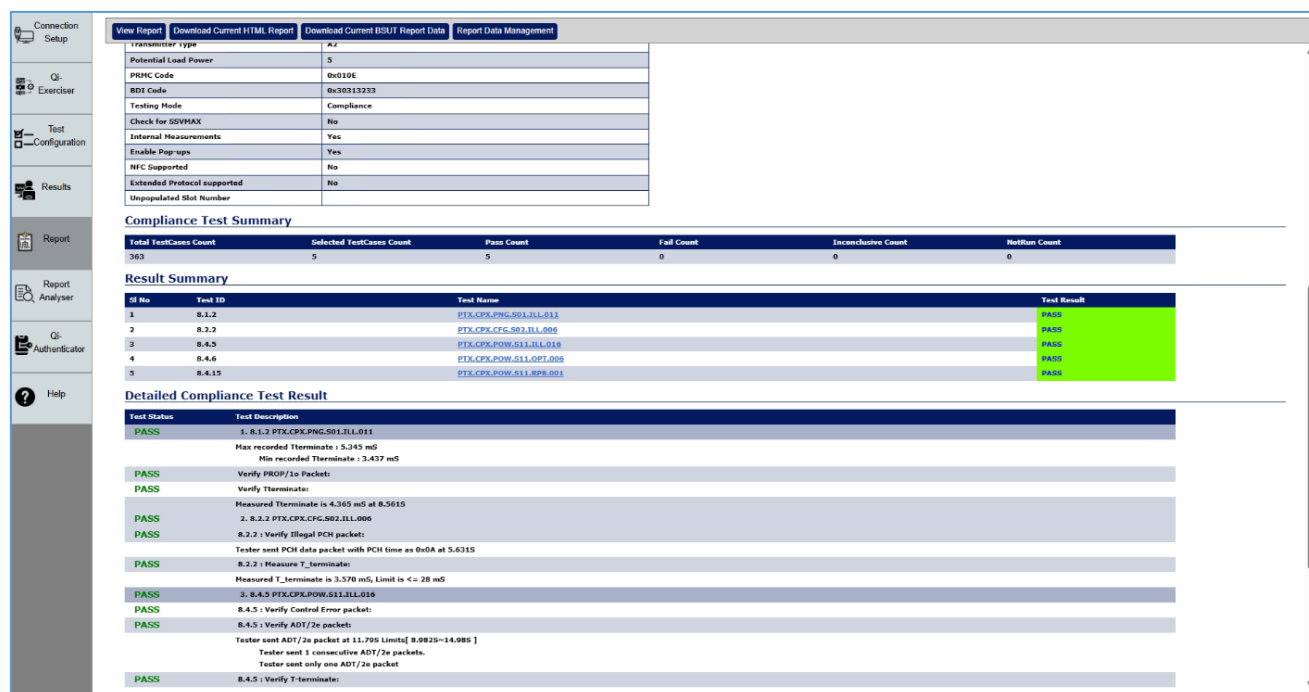


FIGURE 8.70: SCROLL DOWN TO VIEW FULL REPORT

The buttons at the top of the Report screen perform the following functions:

 


FIGURE 8.71: REPORT MANAGEMENT FUNCTIONS

- **View Report** – Click on the View Report button at any time you want to jump to the beginning of the report or refresh the report view.
- **Download Current HTML Report** – Click on the Download Current HTML Report button to save the test report in HTML format.
- **Download Current BSUT Report Data** – Click on the Download Current DUT Report Data button to save all the result information to a ZIP folder.
- **Report Data Management** – Click on the Report Data Management button to access other test reports including from previous test runs. This allows you to delete or save the reports as desired from the database.

8.5 JSON Report Analyzer

The GRL-C3 application *Report Analyzer* screen allows the user to view, configure and manage report logs in the JSON file format. The JSON report log will be automatically generated after completion of a test run.

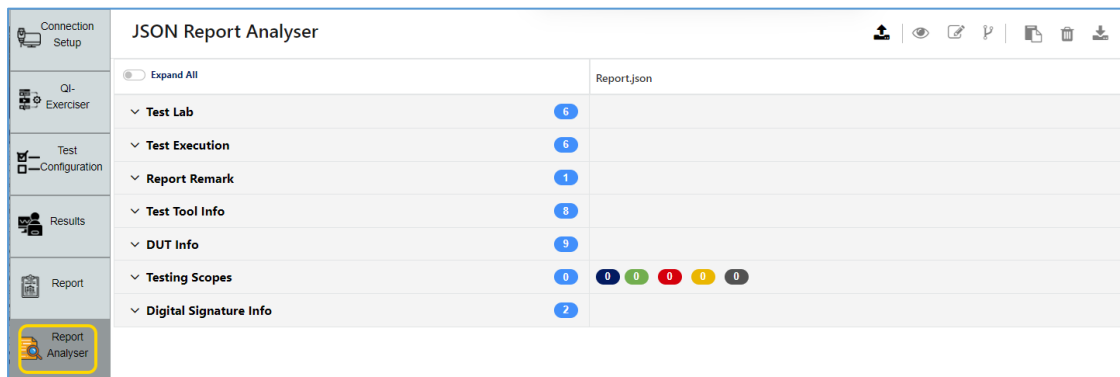


FIGURE 8.72: JSON REPORT ANALYZER SCREEN

The JSON Report Analyzer screen will display the results and configuration log of the most recent test run as shown in the Figure 8.72 example above.

8.5.1 Expand Data Fields in JSON Report

The report log has multiple fields that the user can expand to view data under each field.

To expand all fields, slide the  toggle button as shown in the Figure 8.73 example below.

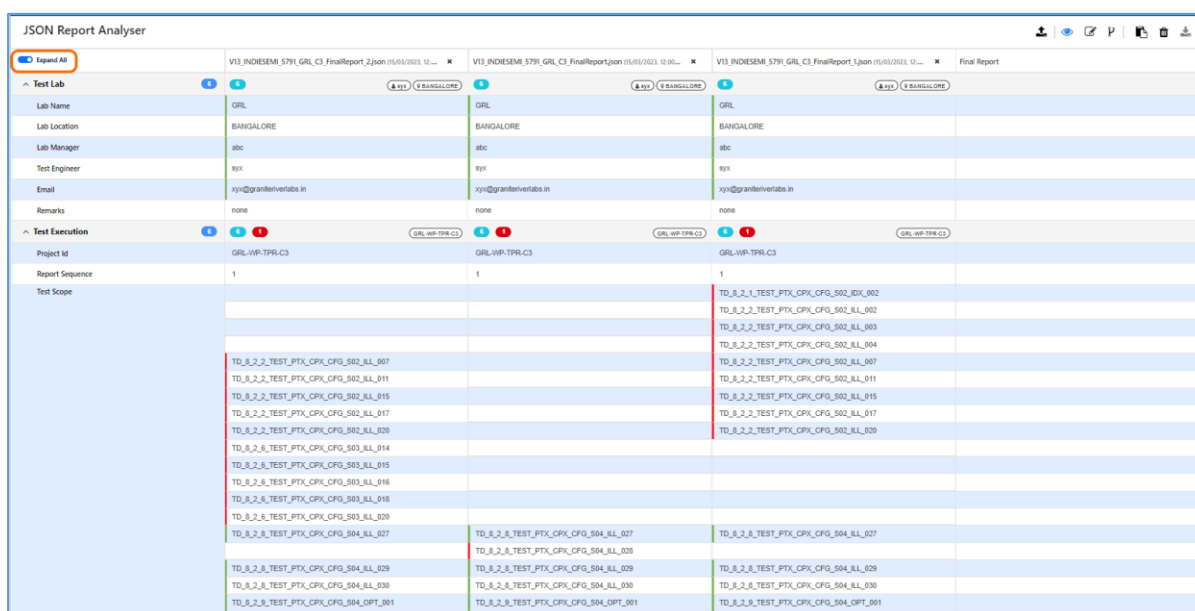


FIGURE 8.73: EXPAND ALL DATA FIELDS EXAMPLE

To expand only a certain field, just click on the drop-down arrow of the respective field to view the data under that field only.

8.5.2 JSON Report Data Fields Definition


The data fields in the JSON report log are based on the test configuration made by the user in Section 8.3, *Test Configuration*. Each of these data fields can be defined as follows:

8.5.2.1 Test Lab Field

Under the Test Lab field, the user can view details of the test laboratory used to run the test cases which includes the following:

- Lab Name: Name of the test laboratory.
- Lab Location: Location of the test laboratory.
- Lab Manager: Name of the personnel in charge of the test laboratory.
- Test Engineer: Name of the engineer running the tests.
- Email: E-mail contact of the personnel to be reached in regard to the test run.
- Remarks: Any remarks made on the test run.

See example in Figure 8.74 below.

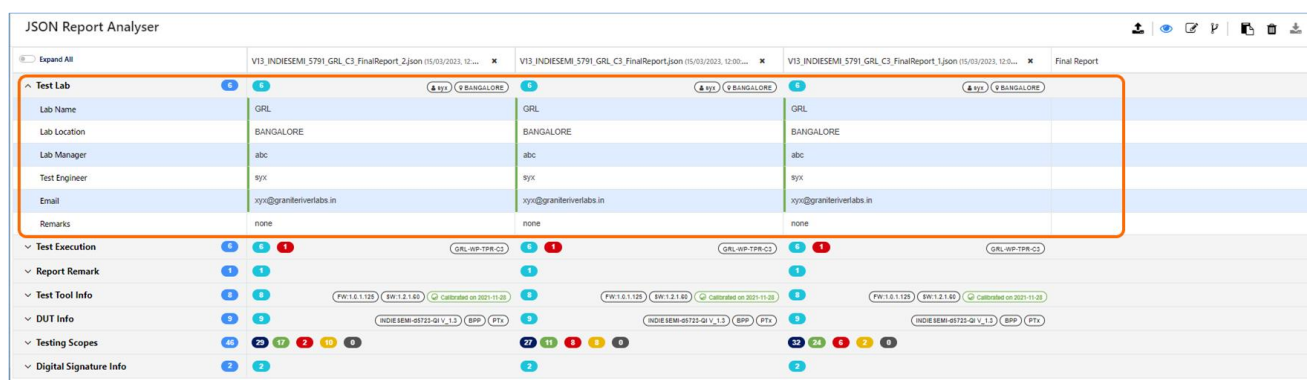

Test Lab	Final Report
Lab Name : GRL Lab Location : BANGALORE Lab Manager : abc Test Engineer : syx Email : syx@graniterlabs.in Remarks : none	Lab Name : GRL Lab Location : BANGALORE Lab Manager : abc Test Engineer : syx Email : syx@graniterlabs.in Remarks : none
Lab Name : GRL Lab Location : BANGALORE Lab Manager : abc Test Engineer : syx Email : syx@graniterlabs.in Remarks : none	Lab Name : GRL Lab Location : BANGALORE Lab Manager : abc Test Engineer : syx Email : syx@graniterlabs.in Remarks : none
Lab Name : GRL Lab Location : BANGALORE Lab Manager : abc Test Engineer : syx Email : syx@graniterlabs.in Remarks : none	Lab Name : GRL Lab Location : BANGALORE Lab Manager : abc Test Engineer : syx Email : syx@graniterlabs.in Remarks : none

FIGURE 8.74: TEST LAB DATA FIELD

8.5.2.2 Test Execution Field

Under the Test Execution field, the user can view details of the test run and related information. These include the following:

- Project ID: Name of the test project.
- Report Sequence: Sequence in which is the test report was created.
- Test Scope: List of test cases that have been run.
- Test Result: Aggregate of the overall test results (% pass, fail, etc.).
- Creation Time: Time when the test report was created.
- Spec Version: Version of the Qi specification that the test cases referred to.

See example in Figure 8.75 below.

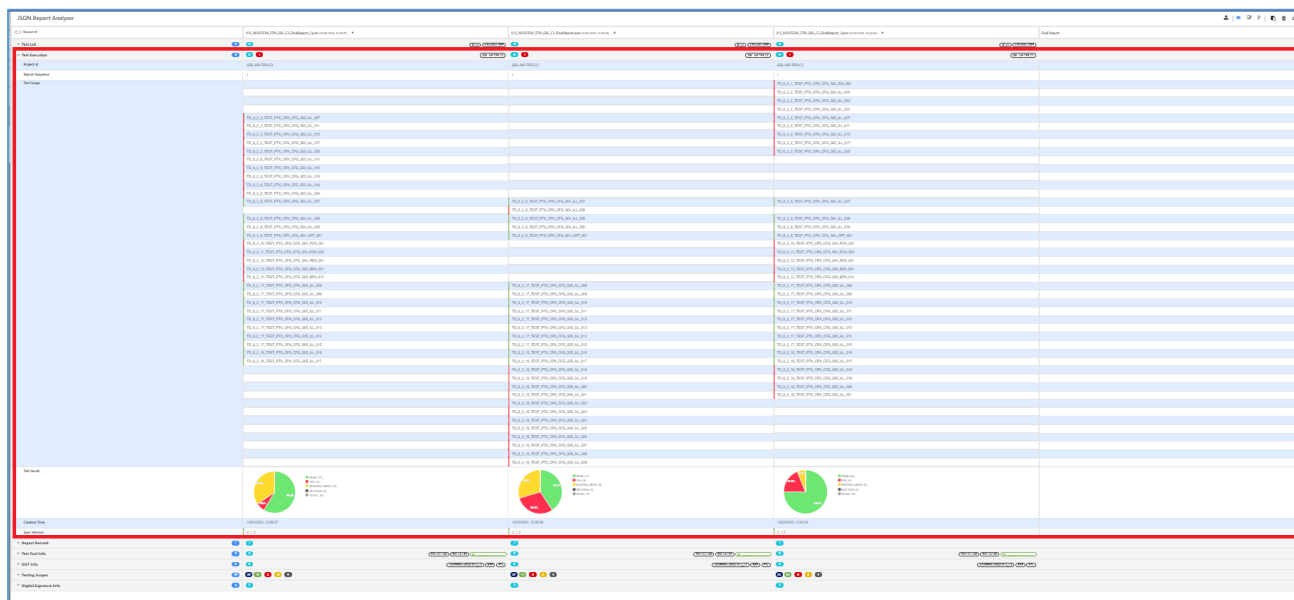


FIGURE 8.75: TEST EXECUTION DATA FIELD

8.5.2.3 Report Remark Field

Under the Report Remark field, the user can view remarks of the test run that have been added to the test report. See example in Figure 8.76 below.

Note: Report Remark is the only data field that can be edited by the user. Refer to Section 8.5.4 on how to edit the data field.

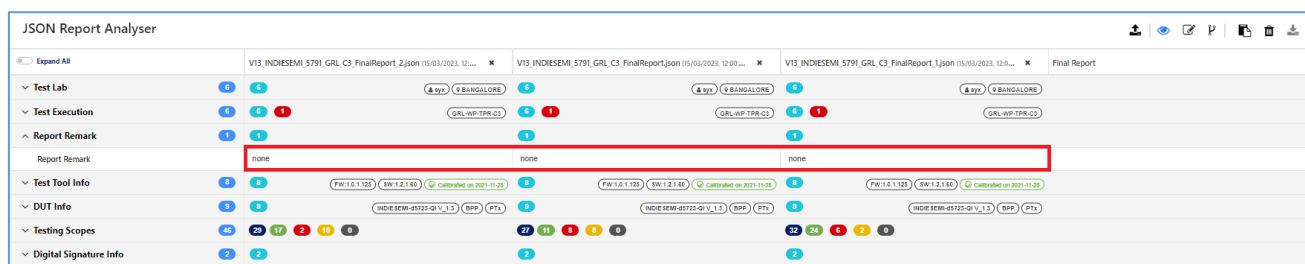



FIGURE 8.76: REPORT REMARK DATA FIELD

8.5.2.4 Test Tool Info Field

Under the Test Tool Info field, the user can view details of the tester hardware used for testing (e.g., GRL-C3). These include the following:

- Test Tool Manufacturer: Manufacturer of the tester hardware.
- Model Name: Tester hardware model.
- Serial Number: Serial number of the tester hardware.
- Last Calibration Date: When the tester hardware was last calibrated.
- Is Calibrated: Whether or not the tester hardware has been calibrated.
- Software / Firmware / Hardware Version: Software, firmware & hardware version numbers of the tester hardware.

See example in Figure 8.77 below.

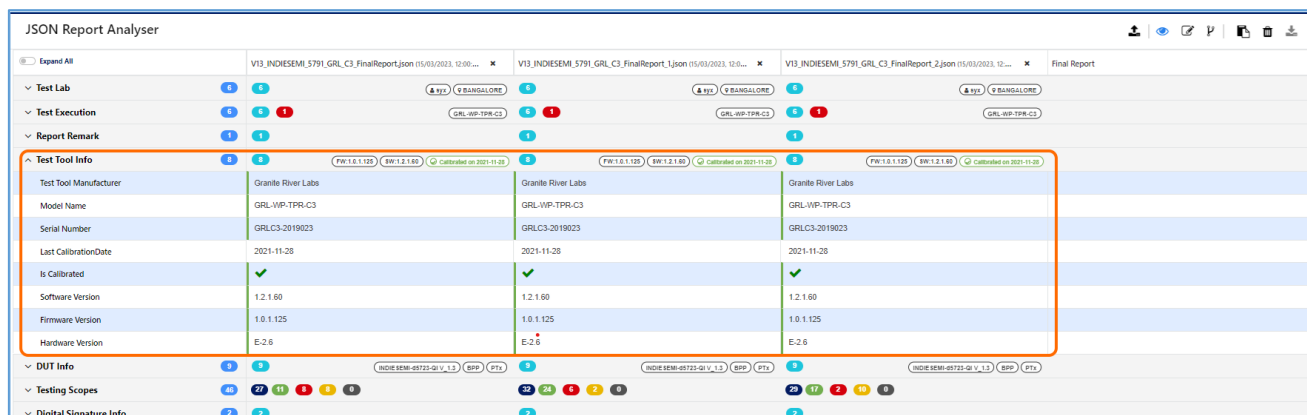

JSON Report Analyser			
	V13_INDISEMI_5791_GRL_C3_FinalReport.json (15/03/2023, 12:00:00)	V13_INDISEMI_5791_GRL_C3_FinalReport_1.json (15/03/2023, 12:00:00)	V13_INDISEMI_5791_GRL_C3_FinalReport_2.json (15/03/2023, 12:00:00)
Test Lab	6	6	6
Test Execution	6	6	6
Report Remark	1	1	1
Test Tool Info	6	6	6
Test Tool Manufacturer	Granite River Labs	Granite River Labs	Granite River Labs
Model Name	GRL-WP-TPR-C3	GRL-WP-TPR-C3	GRL-WP-TPR-C3
Serial Number	GRLC3-2019023	GRLC3-2019023	GRLC3-2019023
Last CalibrationDate	2021-11-28	2021-11-28	2021-11-28
Is Calibrated	✓	✓	✓
Software Version	1.2.1.60	1.2.1.60	1.2.1.60
Firmware Version	1.0.1.125	1.0.1.125	1.0.1.125
Hardware Version	E-2.6	E-2.6	E-2.6
DUT Info	6	6	6
Testing Scopes	40	27	29
Digital Signature Info	2	2	2

FIGURE 8.77: TEST TOOL INFO DATA FIELD

8.5.2.5 DUT Info Field

Under the DUT Info field, the user can find details of the device under test, which include the following:

- DUT Type: DUT type of either power transmitter or receiver.
- Brand Name: Brand of the DUT.
- Product Name: Vendor-defined name of the DUT.
- Qi-ID: Qi identification of the DUT.
- Serial Number: Serial number of the DUT.
- Power Profile: Power profile of either “BPP” (Baseline Power Profile), “EPP” (Extended Power Profile) or “EPP5” (Extended Power Profile 5) as supported by the DUT.
- Specification Supported: Qi specification as supported by the DUT.
- Base Station Details: Capabilities of the Base Station under test DUT.
- Mobile Device Info: Capabilities of the Mobile Device under test DUT.

See example in Figure 8.78 below.

FIGURE 8.78: DUT INFO DATA FIELD

Under the Testing Scopes field, the user can view the list of executed test cases with their respective results, overall test results and the option to view details of each test case. See example in Figure 8.79 below.

FIGURE 8.79: TESTING SCOPES DATA FIELD

GRL-WP-TPR-C3 User Guide
© GRL Platform Solutions 2026

Also see Section 8.5.3, Load Multiple JSON Report Files for more details when loading and comparing between multiple JSON files.

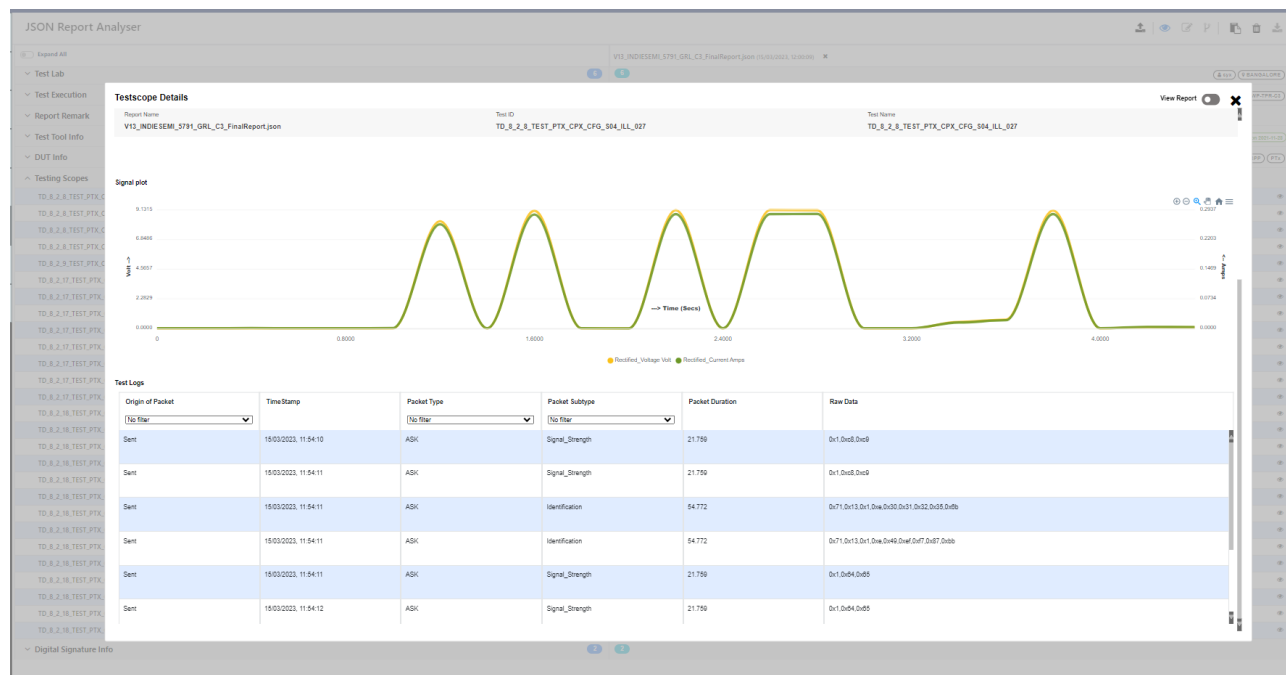


FIGURE 8.80: VIEW TEST CASE DETAILS

8.5.2.7 Digital Signature Info Field

Under the Digital Signature Info field, the user can find the Encrypted Hash 256 Bits algorithm and Test tool public key of the Qi DUT.

JSON Report Analyser			
Expand All	V13_INDIESEMI_5791_GRL_C3_FinalReport.json (15/0...	V13_INDIESEMI_5791_GRL_C3_FinalReport_1.json (15/0...	V13_INDIESEMI_5791_GRL_C3_FinalReport_2_Final Report
Test Lab	6	6	6
Test Execution	6	6	6
Report Remark	1	1	1
Test Tool Info	8	8	8
DUT Info	9	9	9
Testing Scopes	46	32	29
Digital Signature Info	2	2	2
Encrypted Hash 256 Bits	Mv8hawyW9WRl458anwzYrSkWCWd6r8Z7las7XLvy3S...	qfdlnRSAHBVIPAs7pm3nsjCrY+ca+0Dnct1mwSX2pvMH...	SLJw+EPDJoI4mY8eTnmEldDJ05hg+4Lwz
Test Tool Public Key	vSPpZz4r5zhM3riaS75i336wgQjK9YR1y/QV6+r2NoJS8l...	vSPpZz4r5zhM3riaS75i336wgQjK9YR1y/QV6+r2NoJS8l...	vSPpZz4r5zhM3riaS75i336wgQjK9YR1y/Q

FIGURE 8.81: DIGITAL SIGNATURE INFO DATA FIELD

8.5.3 Load Multiple JSON Report Files

The user can load multiple JSON reports from existing JSON files and compare the results. To load the JSON report files, follow the steps below.

1. Click on the Upload icon  at the top right of the *JSON Report Analyzer* screen as shown in Figure 8.82 below.

 


FIGURE 8.82: UPLOAD JSON REPORT ICON

2. The following pop-up window will appear as shown in Figure 8.83. The “Local File” panel on the left will show the list of all JSON report files that have been generated from previous test runs and stored in the default file location. The user can select one or more of these files and click on the **Upload** button on the bottom right of the window.

Alternatively, the user can drag and drop JSON files from the list on to the “Drag and drop” box on the right and then click on the **Upload** button.

If the required JSON files are stored in another directory other than the default file location, click on the “Drag and drop” box to browse for the files. After selecting the required JSON files, click on the **Upload** button.

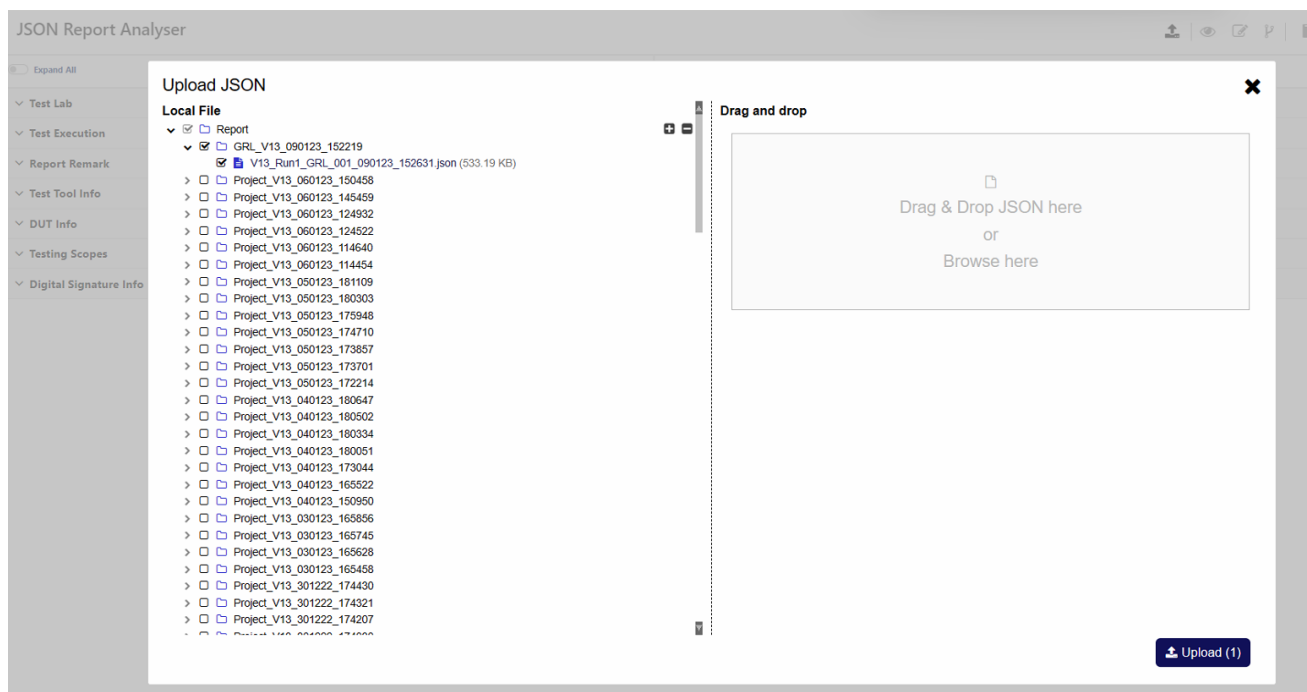


FIGURE 8.83: SELECT JSON FILES TO UPLOAD

3. After clicking on the **Upload** button, the selected JSON files will be loaded on to the *JSON Report Analyzer* screen as shown in the example in Figure 8.84 below.



FIGURE 8.84: JSON FILES LOADED ON SCREEN EXAMPLE

8.5.3.1 Compare Multiple JSON Report Files Results

When expanding the Testing Scopes data field (as described in Section 8.5.2.6) and clicking on the View Details icon of the respective test case, the user can slide the **Compare Reports** toggle button to compare the results between the loaded JSON files.

In the example in Figure 8.85 below, the user can select any of the loaded JSON files (as indicated by “1”, “2” and “3”) to view and compare the results for a particular test case.

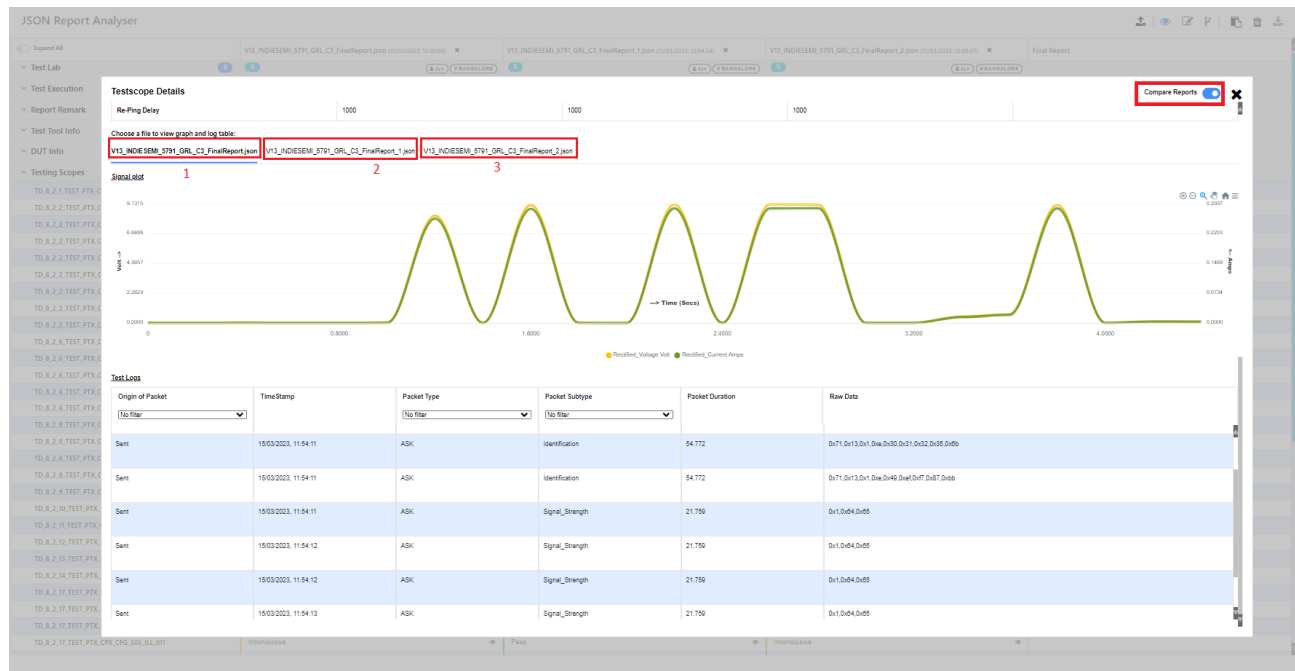


FIGURE 8.85: SELECT AND COMPARE MULTIPLE JSON FILES RESULTS

8.5.4 Manage JSON Reports

Use the following icons  on the top right of the *JSON Report Analyzer* screen to configure and manage the JSON reports.

 


FIGURE 8.86: MANAGE JSON REPORT ICONS

-  – Click on this icon to edit the JSON report. *Note: Only the Report Remark field can be edited (refer Section 8.5.2.3, Report Remark Field).*
-  – Click on this icon to merge two or more JSON reports (refer Section 8.5.5 below).
-  – Click on this icon to view a summary of the JSON report. An example is as shown in Figure 8.87 below which displays the number of test cases with their respective test run results for each JSON report.

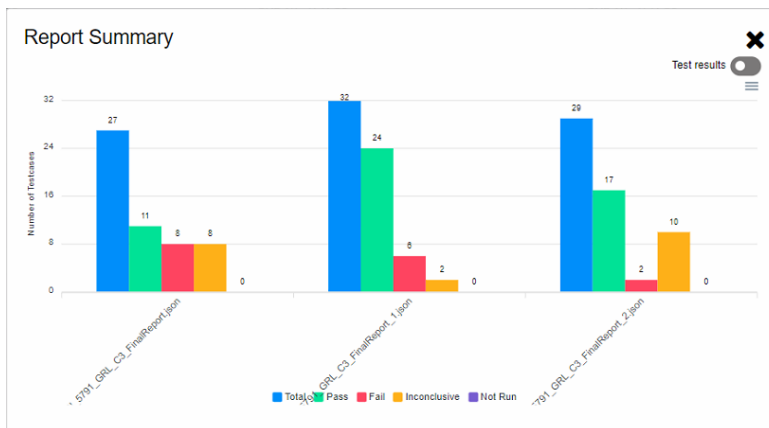


FIGURE 8.87: JSON REPORT TEST RESULTS SUMMARY EXAMPLE

The user can also switch to view the cumulative results for the test cases of each JSON report by sliding the “Test Results” toggle button to **Test reports** .

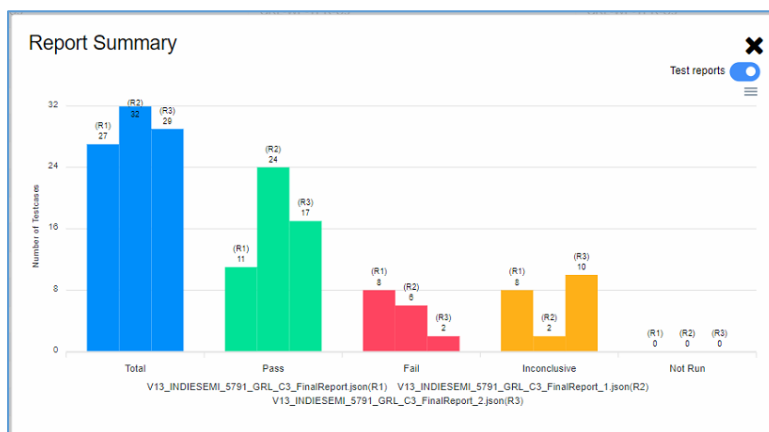


FIGURE 8.88: JSON REPORT TEST REPORTS SUMMARY EXAMPLE

The user can download/save the report summary to an SVG, PNG or CSV file by clicking on  and selecting the file type as shown in Figure 8.89 below. The user can find the saved report file in the Downloads folder.

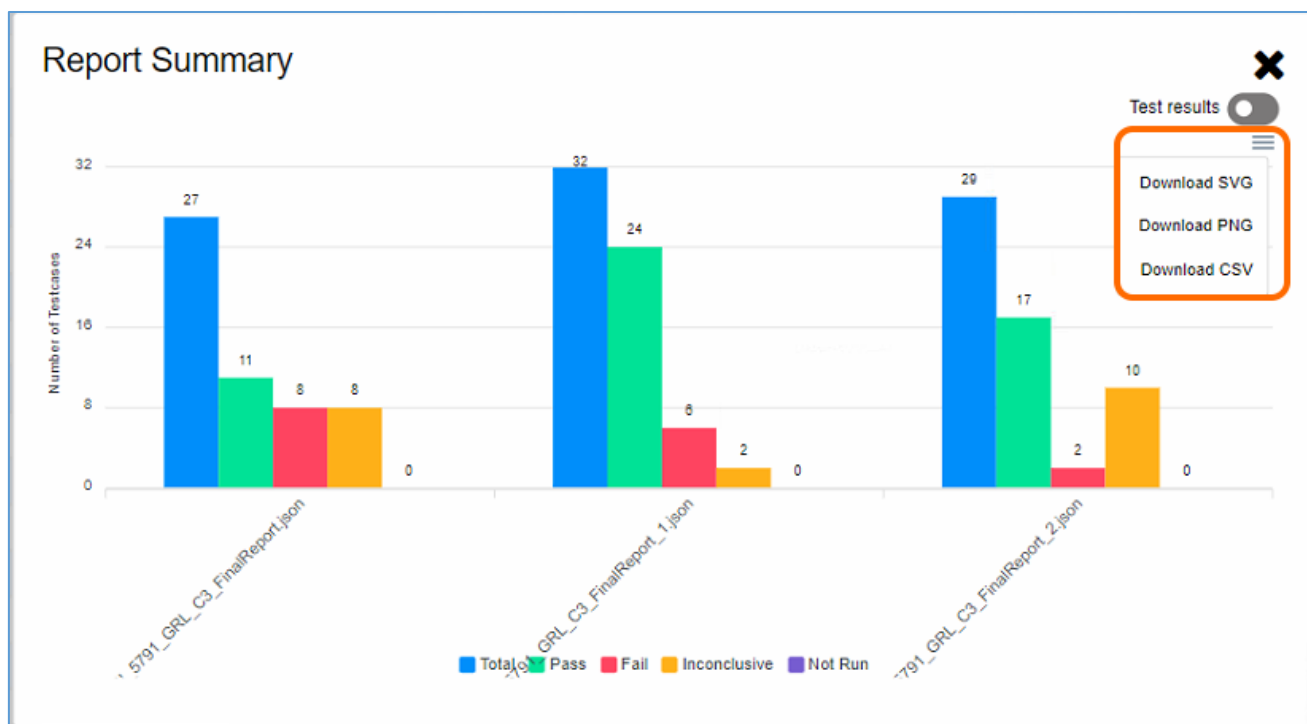


FIGURE 8.89: JSON REPORT TEST REPORTS SUMMARY EXAMPLE

-  – Click on this icon to delete the JSON report.

8.5.5 Merge Results of Multiple JSON Report Files

After loading two or more JSON report files, the user can merge the results of these files into one report as required. Follow the instructions below:

- Click on the Merge icon  as shown in Figure 8.90.

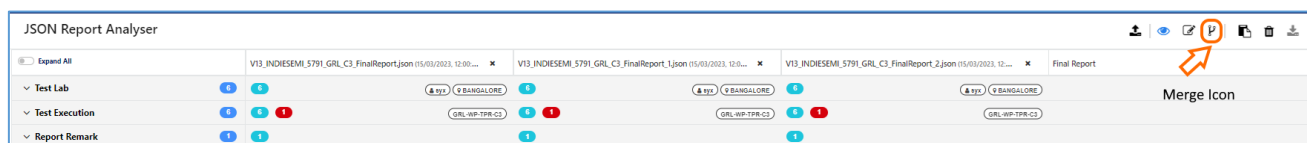


FIGURE 8.90: MERGE ICON

- Then click on the Testing Scopes data field and select the test results from JSON Report #1, JSON Report #2 and JSON Report #3 as indicated in the Figure 8.91 example below. The selected test results will be reflected under “Final Report” as merged results.

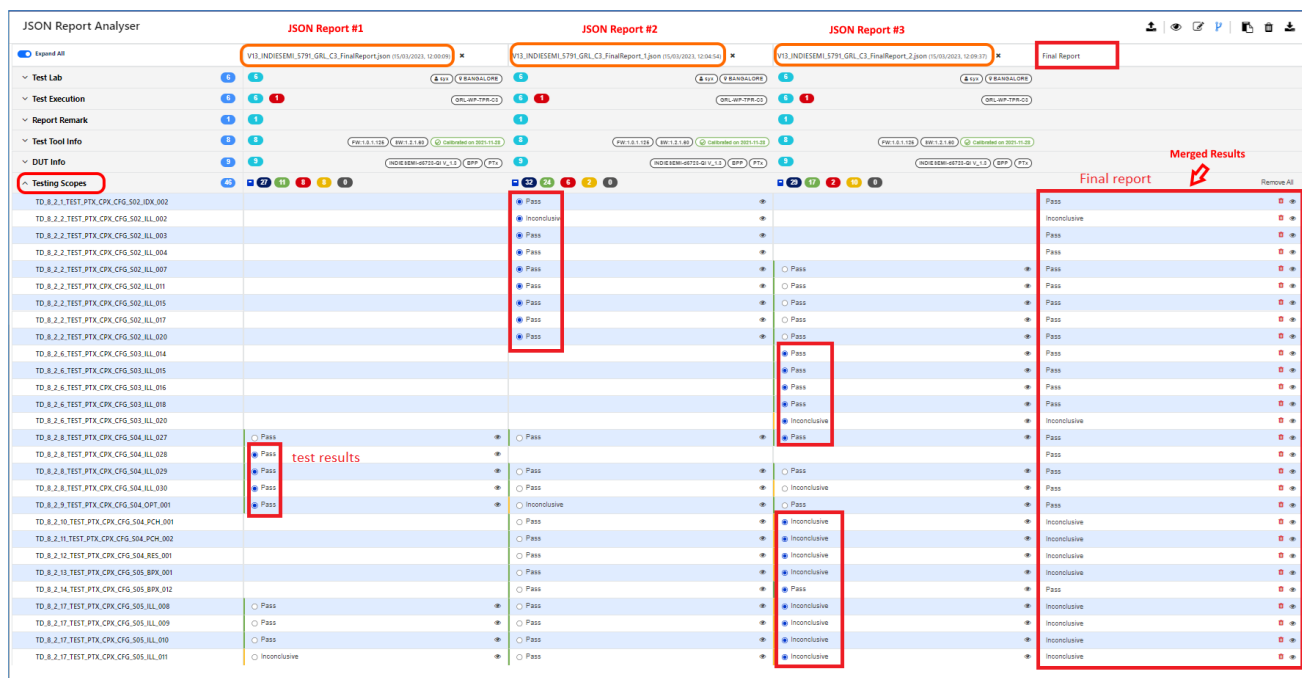


FIGURE 8.91: MERGED TEST RESULTS FROM MULTIPLE JSON REPORT FILES

3. If the user wants to delete certain results in the final merged report, click on the Delete icon  for the respective result. The user can also delete all merged results by selecting “Remove All”.

8.5.6 Download/Export JSON Reports

The user can download the JSON reports or export the reports to HTML or PDF files using the following steps:

1. Click on the Download icon  at the top right of the JSON Report Analyzer screen as shown in Figure 8.92 below.
2. Select “JSON” to download/save the reports as JSON files, or select “HTML” and “PDF” to export the reports to HTML and PDF files respectively. Otherwise select “All” to save the reports in all of these three file formats.
3. Then, click on the **Export** button. The user can find the exported/downloaded report files in the Downloads folder.

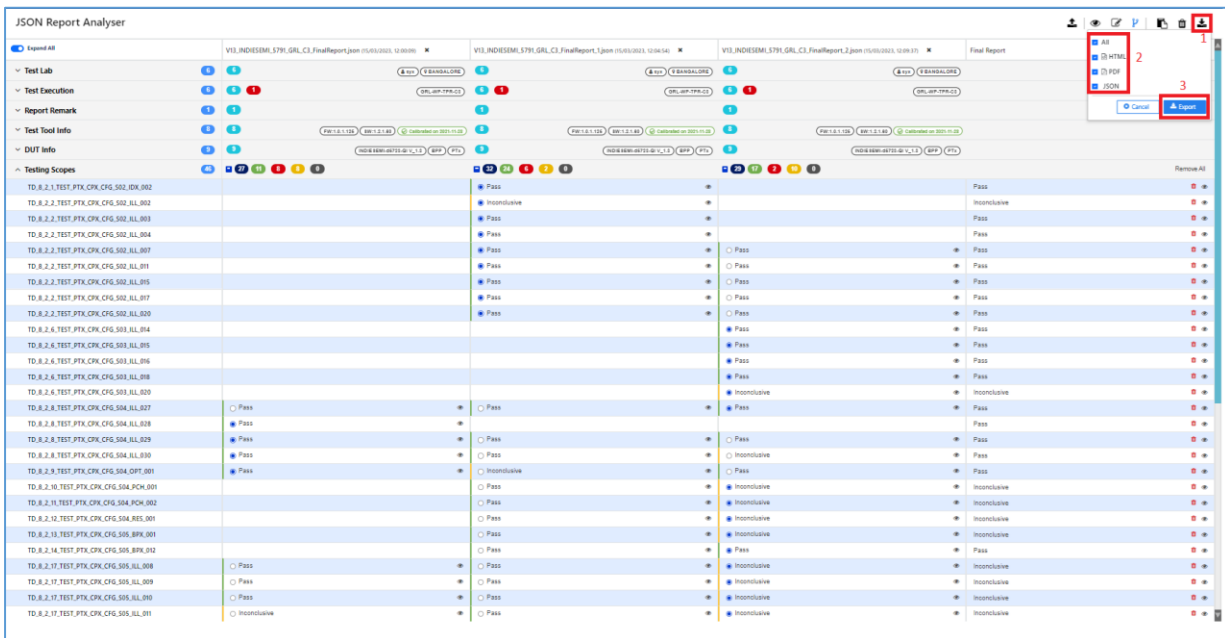


FIGURE 8.92: DOWNLOAD/EXPORT JSON REPORT FILES

8.6 Qi Authenticator Configuration & Validation

The GRL-C3 application *Qi-Authenticator* screen allows the user to configure and validate the Qi certification of a power transmitter and receiver to ensure compliance to the WPC Qi Specification Version 1.3. This is important to ensure that wireless devices are Qi certified for wireless transmission and charging.

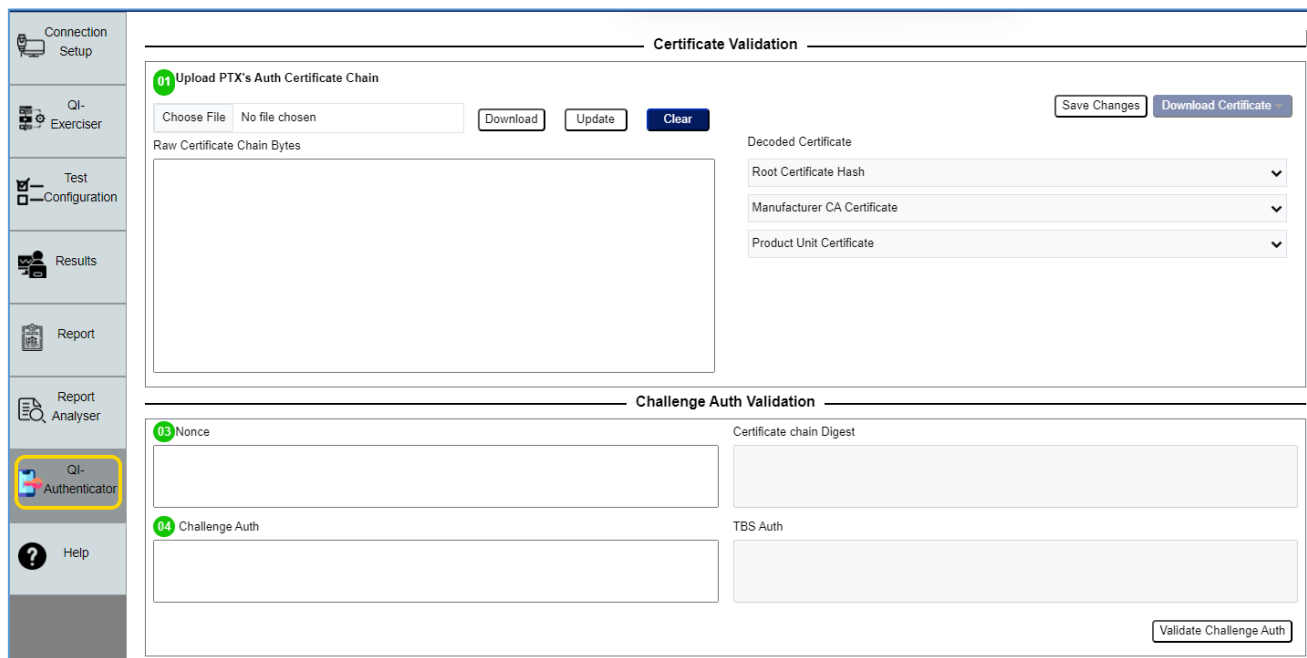


FIGURE 8.93: QI-AUTHENTICATOR SCREEN

8.6.1 Validate Qi Certificate of Power Transmitter

Use the **Certificate Validation** panel to select and perform decoding/configuration of an existing certificate of a Qi wireless power transmitter.

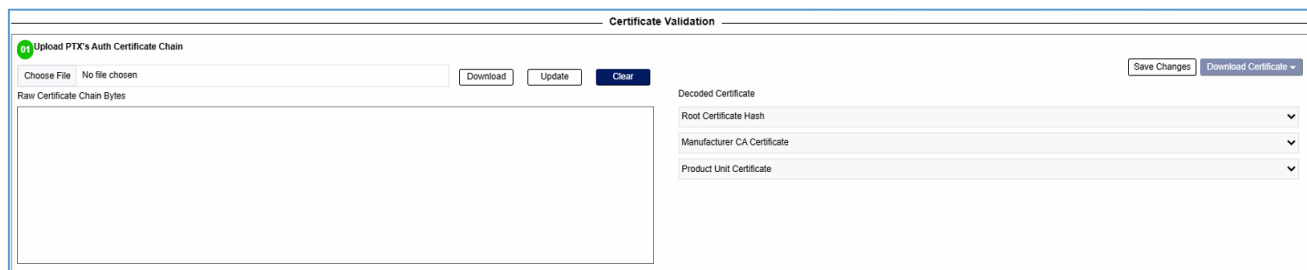


FIGURE 8.94: CERTIFICATE VALIDATION PANEL FOR POWER TRANSMITTER

1. Click on **Choose File** to select an existing Auth Certificate Chain file of the power transmitter to be evaluated. The raw certificate chain bytes of the selected file will then be populated. See example below:

*Note: Make sure the **Header byte** is removed from the chain bytes when populating the raw certificate chain bytes.*


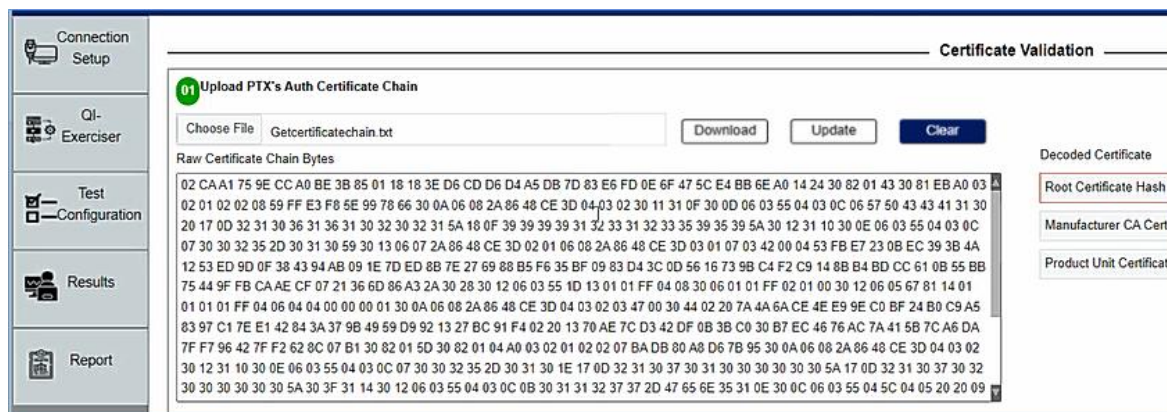


FIGURE 8.95: UPLOAD POWER TRANSMITTER AUTH CERTIFICATE CHAIN FILE EXAMPLE

2. To remove the selected Auth Certificate Chain file in any case, click on the **Clear** button. To download or update the file, click on the **Download** button or **Update** button respectively.
3. User can configure or perform decoding of the selected Auth Certificate Chain file in the “Decoded Certificate” panel on the right. Select from the **Root Certificate Hash**, **Manufacturer CA Certificate** or **Product Unit Certificate** drop-down panel to configure each respective field as required.

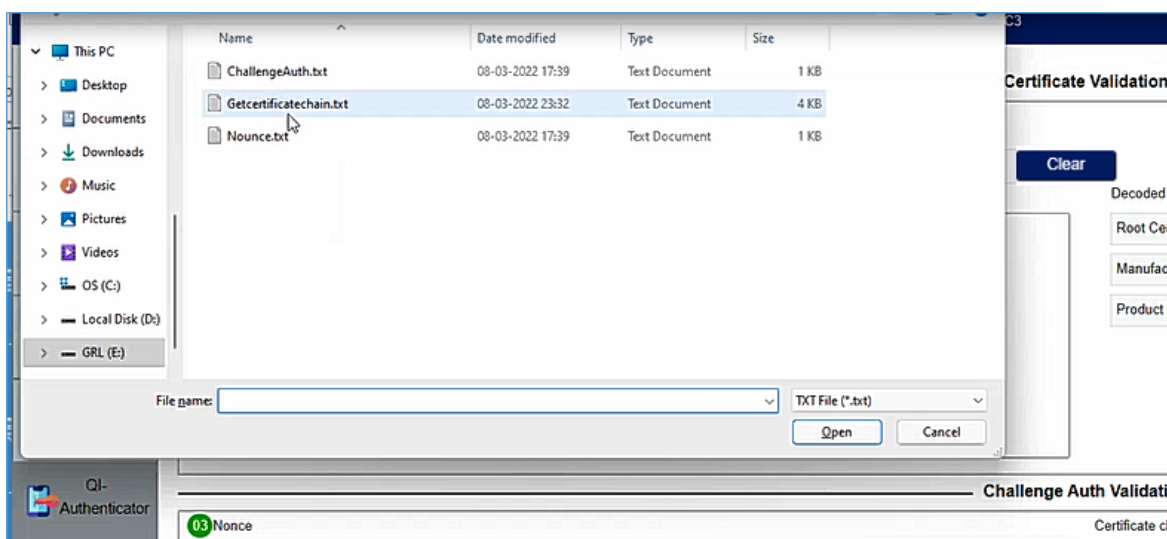

Decoded Certificate

Root Certificate Hash


02 Upload WPC Certificate

Choose File No file chosen Clear

Root Cert Bytes

0xA1, 0x75, 0x9E, 0xCC, 0xA0, 0xBE, 0x3B, 0x85, 0x01, 0x18, 0x18, 0x3E, 0xD6, 0xCD, 0xD6, 0xD4, 0xA5, 0xDB, 0x7D, 0x83, 0xE6, 0xFD, 0x0E, 0x6F, 0x47, 0x5C, 0xE4, 0xBB, 0x6E, 0xA0, 0x14, 0x24

FIGURE 8.96: ROOT CERTIFICATE HASH DROP-DOWN PANEL

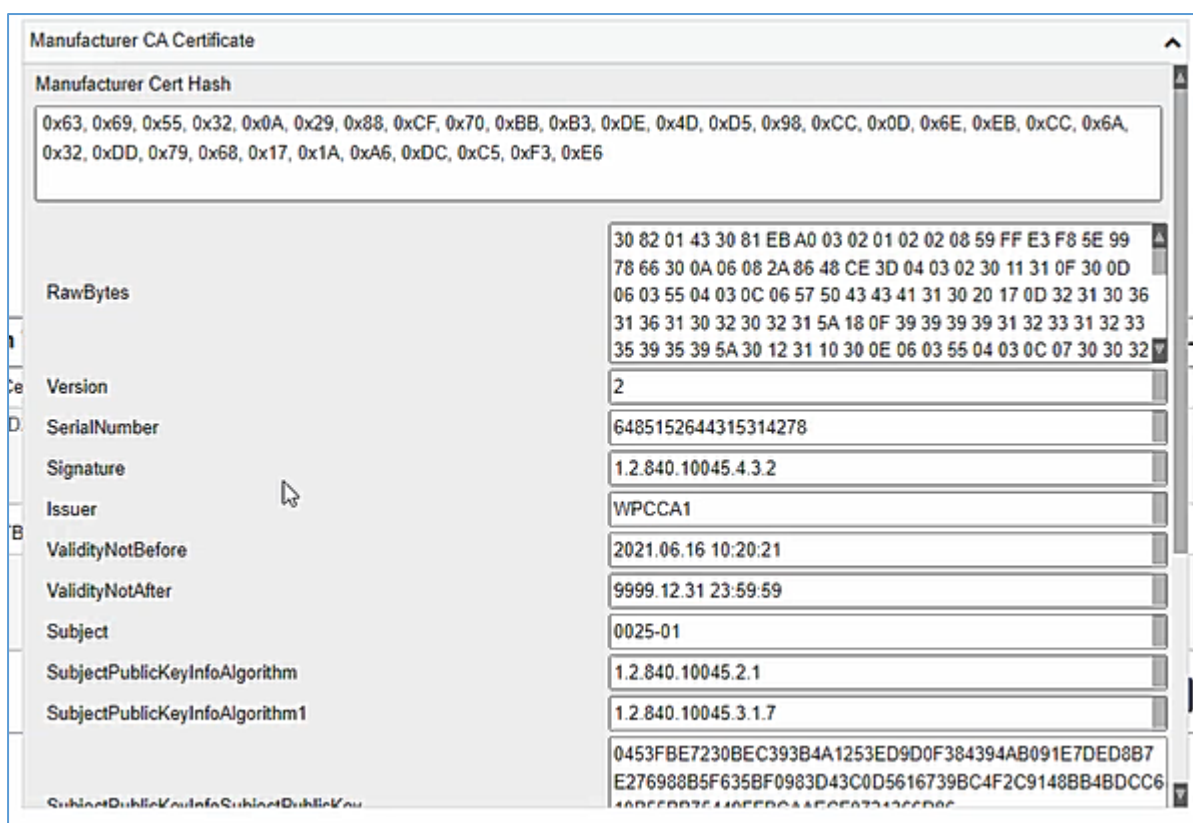

Manufacturer CA Certificate

Manufacturer Cert Hash

0x63, 0x69, 0x55, 0x32, 0x0A, 0x29, 0x88, 0xCF, 0x70, 0xBB, 0xB3, 0xDE, 0x4D, 0xD5, 0x98, 0xCC, 0x0D, 0x6E, 0xEB, 0xCC, 0x6A, 0x32, 0xDD, 0x79, 0x68, 0x17, 0x1A, 0xA6, 0xDC, 0xC5, 0xF3, 0xE6

RawBytes

30 82 01 43 30 81 EB A0 03 02 01 02 02 08 59 FF E3 F8 5E 99 78 66 30 0A 06 08 2A 86 48 CE 3D 04 03 02 30 11 31 0F 30 0D 06 03 55 04 03 0C 06 57 50 43 43 41 31 30 20 17 0D 32 31 30 36 31 36 31 30 32 30 32 31 5A 18 0F 39 39 39 39 31 32 33 31 32 33 35 39 35 39 5A 30 12 31 10 30 0E 06 03 55 04 03 0C 07 30 30 32

Version

2

SerialNumber

6485152644315314278

Signature

1.2.840.10045.4.3.2

Issuer

WPCCA1

ValidityNotBefore

2021.06.16 10:20:21

ValidityNotAfter

9999.12.31 23:59:59

Subject

0025-01

SubjectPublicKeyInfoAlgorithm

1.2.840.10045.2.1


SubjectPublicKeyInfoAlgorithm1

1.2.840.10045.3.1.7

SubjectPublicKeyInfoSubjectPublicKey

0453FBE7230BEC393B4A1253ED9D0F384394AB091E7DED8B7 E276988B5F635BF0983D43C0D5616739BC4F2C9148BB4BDC66 40B55B35140F5B0A150F0731326806

FIGURE 8.97: MANUFACTURER CA CERTIFICATE DROP-DOWN PANEL

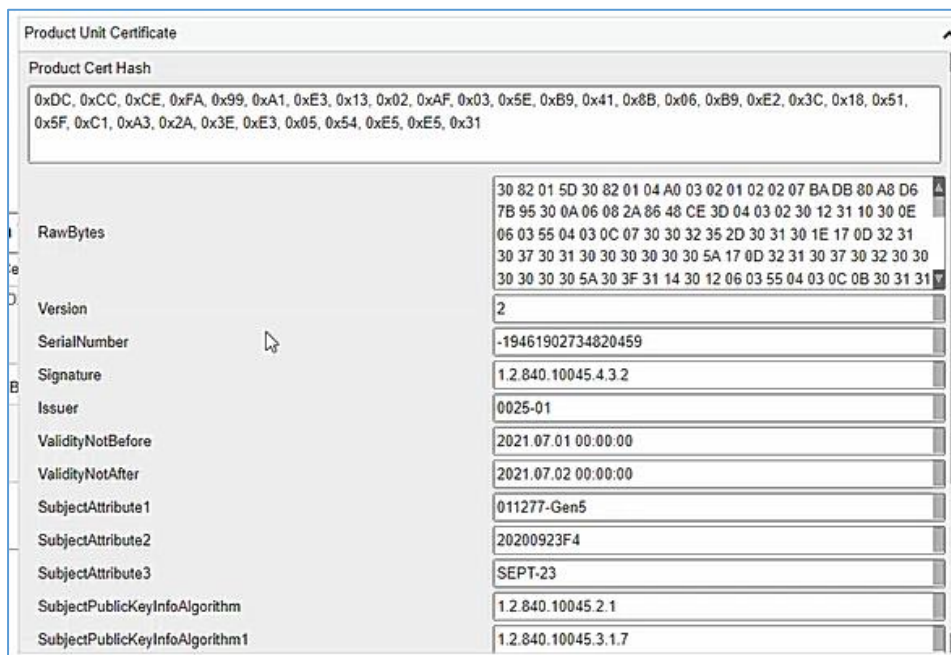

Product Unit Certificate

Product Cert Hash

0xDC, 0xCC, 0xCE, 0xFA, 0xA1, 0xE3, 0x13, 0x02, 0xAF, 0x03, 0x5E, 0xB9, 0x41, 0x8B, 0x06, 0xB9, 0xE2, 0x3C, 0x18, 0x51, 0x5F, 0xC1, 0xA3, 0x2A, 0x3E, 0x05, 0x54, 0xE5, 0xE5, 0x31

RawBytes

30 82 01 5D 30 82 01 04 A0 03 02 01 02 02 07 BA DB 80 A8 D6 7B 95 30 0A 06 08 2A 86 48 CE 3D 04 03 02 30 12 31 10 30 0E 06 03 55 04 03 0C 07 30 30 32 35 2D 30 31 30 1E 17 0D 32 31 30 37 30 31 30 30 30 30 30 5A 17 0D 32 31 30 37 30 32 30 30 30 30 30 5A 30 3F 31 14 30 12 06 03 55 04 03 0C 0B 30 31 31

Version

2

SerialNumber

-19461902734820459

Signature

1.2.840.10045.4.3.2

Issuer

0025-01

ValidityNotBefore

2021.07.01 00:00:00

ValidityNotAfter

2021.07.02 00:00:00

SubjectAttribute1

011277-Gen5

SubjectAttribute2

20200923F4

SubjectAttribute3

SEPT-23

SubjectPublicKeyInfoAlgorithm

1.2.840.10045.2.1

SubjectPublicKeyInfoAlgorithm1


1.2.840.10045.3.1.7

FIGURE 8.98: PRODUCT UNIT CERTIFICATE DROP-DOWN PANEL

- Once configured, click on the **Save Changes** button at the top right of the screen. This will overwrite the existing certificate details with the new configuration/changes. The new changes will also be reflected in the “Raw Certificate Chain Bytes” panel where applicable.
- User can download the newly configured certificate file by clicking on the **Download Certificate** button at the top right of the screen.

8.6.2 Validate Challenge Authentication for Power Receiver

Use the **Challenge Auth Validation** panel to validate the Challenge-Response Authentication which is authentication based on a challenge/response principle. This is to ensure that a wireless power receiver is connected to a recognized power transmitter.

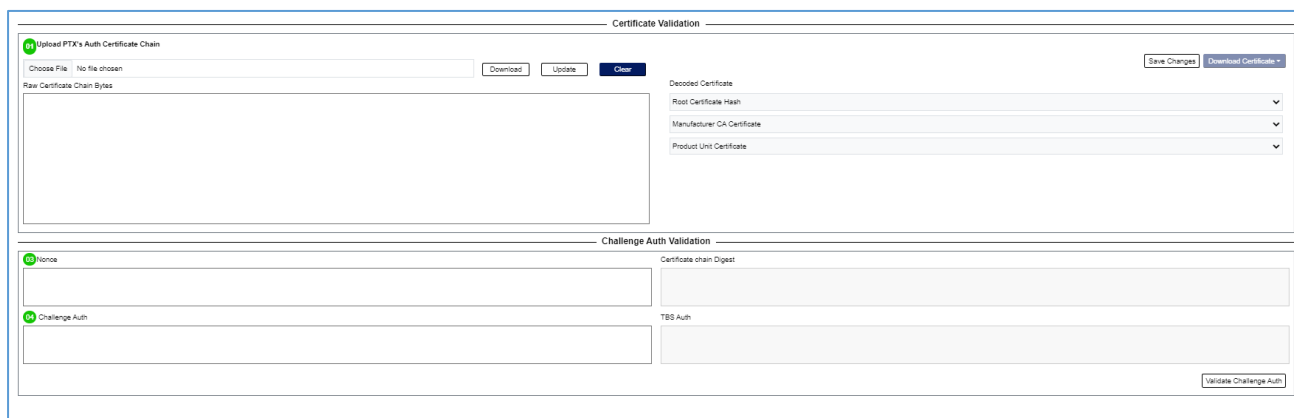

Certificate Validation

Upload PTK's Auth Certificate Chain

Choose File | No file chosen | Download | Update | Clear

Raw Certificate Chain Bytes

Decoded Certificate

Root Certificate Hash

Manufacturer CA Certificate

Product Unit Certificate

Challenge Auth Validation

Nonce

Challenge Auth

Certificate chain Digest

TB0 Auth

Validate Challenge Auth

FIGURE 8.99: CHALLENGE AUTH VALIDATION PANEL

1. Select and open an existing **Nonce** file of the wireless device to be evaluated. Copy the contents of the Nonce file and paste them into the “Nonce” panel. See example below:

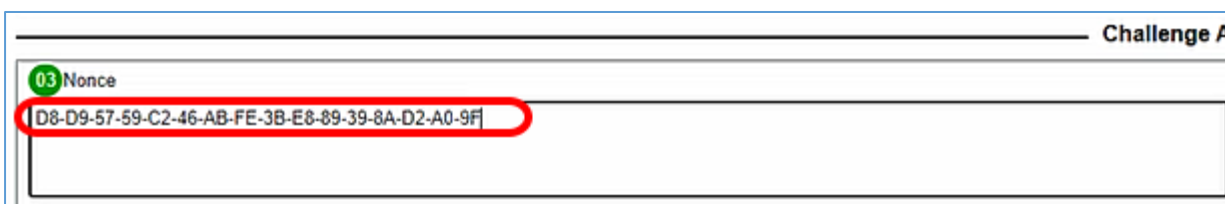
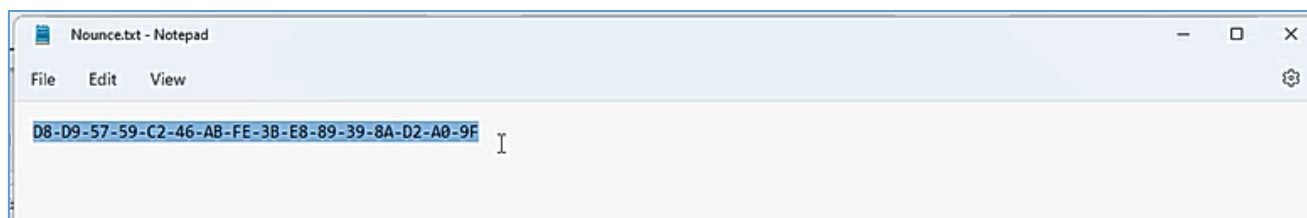
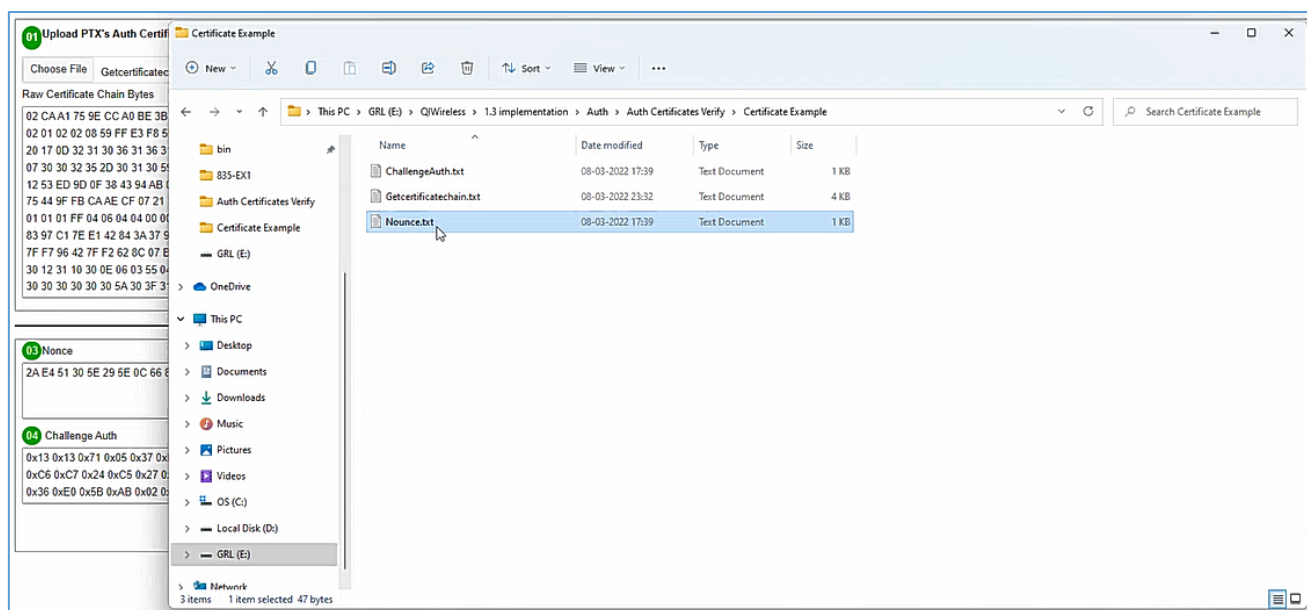


FIGURE 8.100: SELECT AND PASTE CONTENTS OF NONCE FILE

2. The “Certificate Chain Digest” panel on the right of the Nonce panel will be auto populated.
3. Select and open an existing **Challenge Auth** file, and copy the contents of the Challenge Auth file and paste them into the “Challenge Auth” panel. See example below:

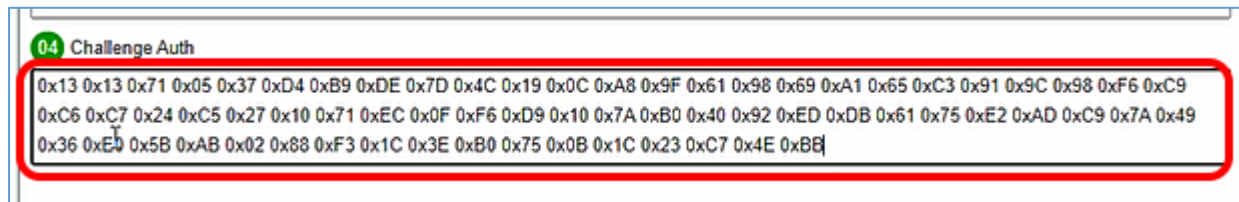
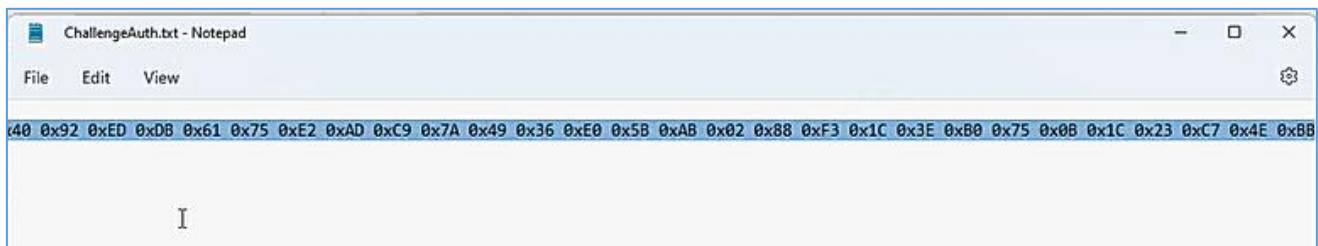
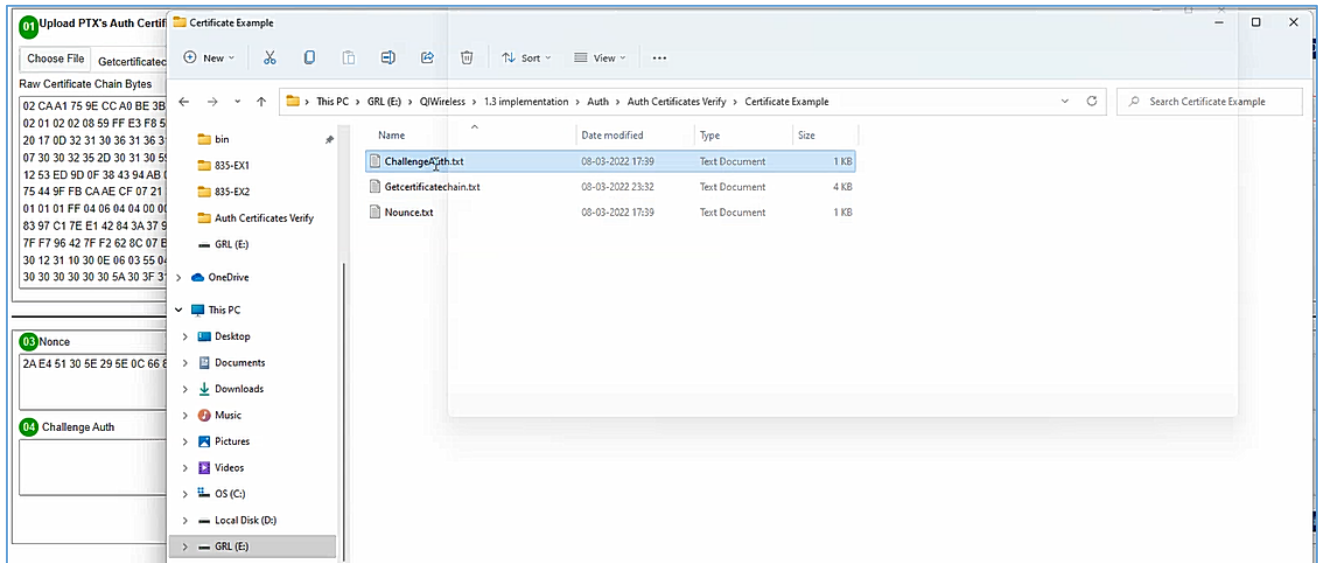


FIGURE 8.101: SELECT AND PASTE CONTENTS OF CHALLENGE AUTH FILE

4. Click on the **Validate Challenge Auth** button at the bottom right of the screen. Upon successful validation, the “TBS Auth” panel will be auto populated, and the **Challenge Signature Valid** status will appear. See example below:

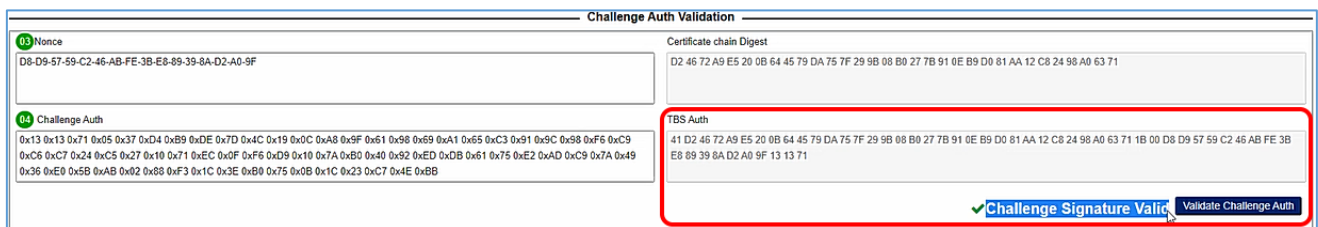


FIGURE 8.102: SUCCESSFUL CHALLENGE AUTH VALIDATION

9 GRL-C3 Information and Help

The GRL-C3 application *Help* screen allows the user to view the current version of the GRL-C3 application as well as a brief description of the GRL-C3 tester hardware. The user can also access customer support or download debug logs using the links provided.

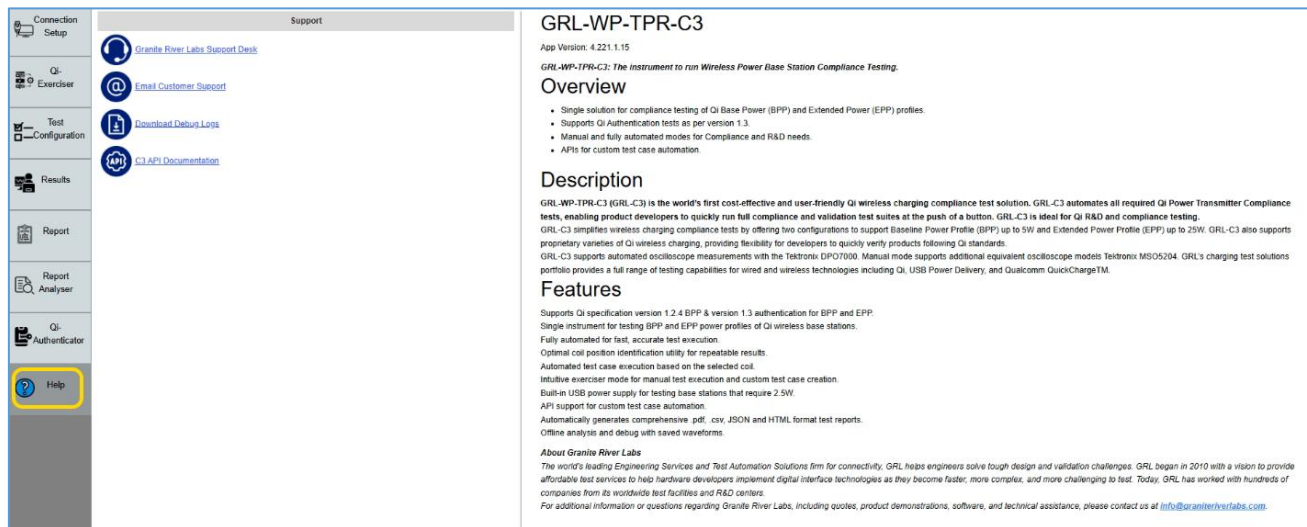


FIGURE 9.1: HELP SCREEN

END_OF_DOCUMENT